


INSTRUCTIONS FOR INSTALLATION AND MAINTENANCE

ECODIVER

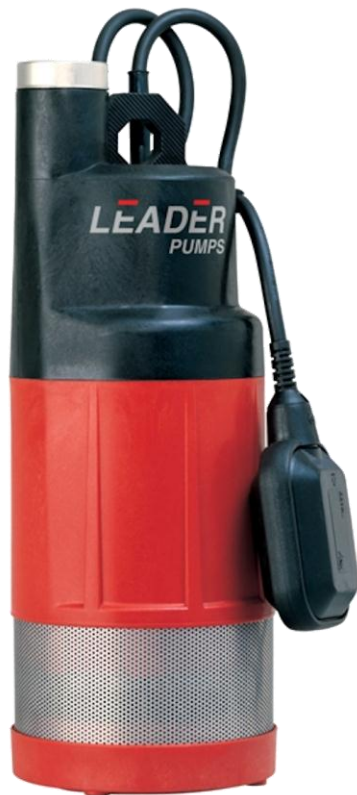

CONTENTS		page
1.	SAFETY MEASURES	1
2.	USE	1
3.	STARTING THE PUMP	2
4.	RECOMMENDATIONS	2
5.	TROUBLESHOOTING	3
6.	DISPOSAL	4
7.	GUARANTEE	4

1. SAFETY MEASURES

Before starting the pump, read this instruction booklet carefully and keep it in a safe place for future reference



The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

(CEI EN 60335-1 : 08)



The power cord must never be used to carry or move the pump. Always use the pump's handle.



When handling the pump, while it is connected to the electric power supply, you should avoid all contact with water.



Never remove the plug by pulling on the power cord.



Before taking any action on the pump, always remove the plug from the power socket.



There should be no individuals present in the liquid that is being pumped while the pump is in use.



If the power supply cord has been damaged, it must be replaced by the manufacturer or his authorized customer support service in order to avoid all risks.



The pump is equipped with a thermal overload safety device. In the event of any overheating of the motor, this device automatically switches off the pump. The cooling time is roughly 15 to 20 minutes, then the pump automatically comes on again. If the overload cutout is tripped, it is essential to identify and deal with the cause of the overheating. See Troubleshooting.

2. USE

Multi-impeller submersible pumps with 2, 3 or 4 impellers ideal for rain water and mains irrigation systems, for pumping water from tanks, ponds and wells and other applications that require high pressure.

The multistage submersible pumps must only be used in clean water.

The pump should ideally be completely submersed for it to operate correctly, but can be used at a minimum suction height of 1"1/2 for very short periods.

- Available in an automatic version with a float switch for automatic starting and stopping of the pump.

Characteristics:

- Optimum motor cooling that allows the pump to be used also when it is only partially submersed. □
- Stainless steel anti-deposit filter
- Non-return valve and 4-way connector.



The temperature of the fluid being pumped must never exceed 95°F



The pump must not be used to pump salt water, sewage, flammable, corrosive or explosive liquids (e.g. petroleum oil, petrol, and thinners), grease, oils or foodstuffs.



Comply with the rules and regulations of the local water authority when using the pump for the supply of domestic water.

3. STARTING THE PUMP



Given the different provisions applicable to the safety of electric systems in different countries, make sure that the pump system, as concerns its intended use, is in accordance with current legislation.



Before starting the pump, make sure that:

- The voltage and frequency specified on the pump's nameplate coincide with those of the available power supply;
- there are no signs of damage to the pump or its power cord;
- The electric connection is made in a dry place, protected against any risk of flooding;
- The electric system is complete with a residual current circuit-breaker GFI Ground fault Indicator (I An S 30 mA) and an efficient earthing connection;
- Any extension cords must comply with the requirements of the DIN VDE Standard 0620

Insert the plug of the power cable into a suitable power socket.

Automatic operation:

The floating switch starts and stops the pump automatically.

The water level that prompts the starting and stopping of the pump can be adjusted by changing the length of cable of the float between the holder and the float.

NB The length of the float cable must never be shorter than 1/2".

Manual operation:

- a) The floating switch must be lifted in order to start pumps with a float.
- b) For pumps without a float, insert the plug.

4. RECOMMENDATIONS

To ensure the proper operation of the pump, it is important to comply with the following recommendations:



The pump must never be allowed to run dry.



Never leave the pump in operation when the delivery pipe is clogged.

- The pump must only be used when it is immersed in water. If the water runs out, the pump must be stopped immediately by removing the plug from the power supply.
- Pay careful attention when the pump is operated in manual mode.
- The pump must be placed in a stable position inside a trap or in the lowest part of the place where it is installed.
- The float must be able to move freely while the pump is running therefore the advised dimensions of the trap are 1"1/4 x 1"1/4.
Periodically, it is advisable to make sure the no dirt (leaves, sand, etc) has accumulated in the collection trap or around the suction grid.

MAINTENANCE AND CLEANING

It is absolutely essential to prevent any risk of the pump freezing. In the event of freezing temperatures, remove the pump from the liquid, empty it and keep it in a place where it cannot freeze.

The pump must be disconnected from the mains before performing any cleaning operation.

The pump is maintenance free.

5. TROUBLESHOOTING



Before taking any troubleshooting action, disconnect the pump from the power supply. If there is any damage to the power cord or pump, any necessary repairs or replacements must be handled by the manufacturer or his authorized customer support service. or by an equally-qualified party, In order to prevent all risks.

FAULT	CAUSE	SOLUTION
The motor does not start or makes no noise	1) The motor is not powered. 2) There is no water (pump not Enabled by the float switch)	1) Check if power is supplied to the socket and that the plug is correctly inserted 2) Check the water level, make sure the float can move freely.
The pump delivers no water	1) The suction grid or piping are clogged 2) The impeller is worn or stuck 3) The required head is too high for the characteristics of the pump. 4) Water level under the suction minimum	1) Remove the obstruction correctly sealed and start the pump again. 2) Replace the impeller or remove the obstruction.
The pump does not stop (automatic version only)	1) The pump is not disabled by the float	1) Make sure the float can move freely
Flow rate to low	1) The suction grid or pipe work is partially clogged. 2) The impeller is partially clogged or fouled	1) Remove any obstruction. 2) Remove any obstruction.
The Pump stops running (possible intervention of the overload switch).	Make sure the fluid being pumped is not too dense, causing the motor to overheat. - Make sure the temperature of the water is not too high. - Make sure there is no solid body obstructing the impeller. - Power supply doesn't comply with the name plate's data.	Disconnect the power cord, correct the reason for overheating; then wait until the pump is cooled, plug the cord and resume operation.

ELECTRICAL DATA

Model	P1 Watt	P1 Hp	Max Flow GPM	Voltage Volt	Frequency Hz	Head Max Ft
ECODIVER 750 / 750A	750	1/2	25	115	60	79
ECODIVER 1000 / 1000A	1000	3/4	25	115	60	118
ECODIVER 1200 / 1200A	1100	1	25	115	60	157

6. DISPOSAL

This product or its parts must be disposed of in accordance with the laws regarding the environment; Use the local, public or private, refuse collection services.

7. GUARANTEE

Any material or manufacturing defects will be corrected during the guarantee period established by current law in the country where the product is purchased. It is up to the manufacturer to decide whether to repair or replace any faulty parts.

The manufacturers guarantee covers all substantial defects attributable to manufacturing or material defects, providing the product has been used correctly and in compliance with the instructions.

The guarantee becomes null and void in the event of the following:

- unauthorized attempts to repair the appliance;
- unauthorized technical changes to the appliance;
- use of non-original spare parts;
- manhandling;
- inappropriate use. e.g. for industrial purposes.

The guarantee does not cover:

- parts liable to rapid wear and tear.

For any action under guarantee, contact an authorized customer support service, presenting your receipt for the purchase of the product.

The manufacturer accepts no liability for any inaccuracies in the present booklet due to printing or copying errors. The manufacturer reserves the right to make any changes to the product he deems necessary or useful, without affecting its essential features.

LEADER[®]
PUMPS



DAB PUMPS INC.
3226 BENCHMARK DRIVE
LADSON, SC 29456 USA

TEL: 1-843-797-5002
FAX: 1-843-797-3366