

## Multifunctional Serial to Ethernet converter

(USR-TCP232-E2)

(USR-TCP232-ED2)

(USR-TCP232-410)

File version: V1.0.5



Jinan USR IOT Technology Co., Ltd. works on LAN and WAN and wireless for MCU to Ethernet Solutions, Ethernet, WIFI, GPRS, and Wireless modules, we can supply custom design for those usage, looking forward to cooperate with you.

## Contents

|                                                       |    |
|-------------------------------------------------------|----|
| Multifunctional Serial to Ethernet converter.....     | 1  |
| 1. Introduction.....                                  | 4  |
| 1.1. Overview.....                                    | 4  |
| 1.2 Features.....                                     | 4  |
| 1.2. Applications.....                                | 5  |
| 1.3. Order information.....                           | 5  |
| 1.4. Electrical characteristics.....                  | 6  |
| 1.5. Difference between E45 series and M4 series..... | 7  |
| 2. Module Test.....                                   | 7  |
| 2.1. Hardware connection.....                         | 7  |
| 2.2. Login.....                                       | 9  |
| 2.3. Default parameter test.....                      | 10 |
| 3. Work mode.....                                     | 12 |
| 3.1. UDP mode.....                                    | 12 |
| 3.2. TCP Client mode.....                             | 13 |
| 3.3. UDP Server mode.....                             | 15 |
| 3.4. TCP Server mode.....                             | 16 |
| 3.5. Httpd Client mode.....                           | 18 |
| 4. Hardware.....                                      | 20 |
| 4.1. USR-TCP232-E2.....                               | 21 |
| 4.1.1. Hardware.....                                  | 21 |
| 4.1.2. Power and other pin.....                       | 21 |
| 4.1.3. LED status.....                                | 23 |
| 4.1.4. Serial(TTL) interface.....                     | 23 |
| 4.2. USR-TCP232-ED2.....                              | 24 |
| 4.2.1. Hardware.....                                  | 24 |
| 4.2.2. Power.....                                     | 24 |
| 4.2.3. LED status.....                                | 24 |
| 4.2.4. Serial(TTL) interface.....                     | 25 |
| 4.2.5. hardware connection.....                       | 27 |
| 4.3. USR-TCP232-410.....                              | 28 |
| 4.3.1. Hardware.....                                  | 28 |
| 4.3.2. Power.....                                     | 28 |
| 4.3.3. LED status.....                                | 29 |
| 4.3.4. RS232 interface.....                           | 29 |
| 4.3.5. RS485 interface.....                           | 29 |
| 4.4. RJ45 interface.....                              | 30 |

---

|                                                                       |    |
|-----------------------------------------------------------------------|----|
| 4.5. Reload.....                                                      | 31 |
| 5. Paramters configuration.....                                       | 31 |
| 5.1. Web page.....                                                    | 31 |
| 5.2. Serial port.....                                                 | 31 |
| 5.3. network command(setup software).....                             | 31 |
| 6. Specific functions.....                                            | 32 |
| 6.1. ModbusRTU to ModbusTCP.....                                      | 32 |
| 6.2. Hardware flow control(RTS/CTS).....                              | 34 |
| 6.3. User MAC address.....                                            | 34 |
| 6.4. Firmupdate.....                                                  | 35 |
| 6.5. Common questions.....                                            | 38 |
| 6.5.1. Work across network segment.....                               | 38 |
| 6.5.2. Ping is OK but can not open web pages.....                     | 38 |
| 6.5.3. After firm update, can not open web page.....                  | 38 |
| 6.5.4. When connection established, server received serval chars..... | 38 |
| 6.5.5. Every serval seconds, module reconnect.....                    | 38 |
| 7. Contact us.....                                                    | 39 |
| 8. Modified history.....                                              | 40 |

# 1. Introduction

## 1.1. Overview

The USR-TCP232-M4 product series is an intelligent plug-and-play RS232/RS485/UART to Ethernet adapter that enables any device or machine with a serial port, to become Ethernet network and Internet enabled, and have network data transmit ability. It features a powerful built-in device server, so you can access your serial device from anywhere in the world over internet! The USR-TCP232-M4 is easily configured via local network, or through the serial port and web pages.

We Provide Network products and the best service to our customers.

• Chips • Modules • Software • Products

## 1.2 Features

1. New Cortex-M4 kernel, industrial working temperature range(-40~85℃), elaborate optimization TCP/IP protocol stack, stable and reliable.
2. selectable RS232/RS485/UART port, Different port can be used together, work independently, distinguish the connected serial port via port number.
3. Auto-MIDX function, discretionarily connect cross-over or direct network cable, automatic switching.
4. Support TCP Server, TCP Client, UDP, UDP Server, HTTPD Client,websocket, various of ethernet protocols.
5. Support virtual serial port, provide corresponding software.
6. Serial port highest baud rate from 300bps to 1024000bps(COM0 only max 256000bps).
7. wide voltage input, more applications.
8. Support DHCP, automatically access IP, can inquire the facility within network through the UDP broadcast protocol(using software USR-TCP232-E45 Setup).
9. Supply the protocol for VIP customers
10. Provide PC TCP/IP SOCKET programming example, VB, C++, Delphi, Android, IOS.
11. A built-in web page, also parameter setting via web, can customize web pages for users.
12. Can also set via UDP broadcast, provide the set up protocol.
13. Reload button, a key restore default Settings.
14. RJ45 status indicator light, RJ45 interface built-in isolation transformer, 2 KV isolation.

15. The global unique MAC address bought from IEEE, the user can define MAC address (please state when you make order).
16. Support upgrade firmware via network.
17. Support visit IP and domain name at the same time
18. Support up to 8 link from client when act as TCP Server, same data will be send to all client.
19. Can modify http server port from default port 80 for module built-in http server.
20. Support Keepalive, detect a dead link quickly and make sure the connection more stable.

## 1.2. Applications

- Fire and Security Panels
- Vending Machines
- Point of Sale Terminals
- Remote equipment management
- IT management services
- Access Control
- Industrial Control
- Home Automation
- Instrumentation
- Building Control
- Power Management

## 1.3. Order information

| Type                         | Part Numbers   | Electric interface   |
|------------------------------|----------------|----------------------|
| Serial to Ethernet Converter | USR-TCP232-E2  | 2 * TTL232           |
| Serial to Ethernet Converter | USR-TCP232-ED2 | 3 * TTL232           |
| Serial to Ethernet Converter | USR-TCP232-410 | 1 * RS232, 1 * RS485 |
|                              |                |                      |

Diagram 1-1 Order information

Note:

For webpages: PORT0, PORT1 and PORT2, represent below:

TCP232-E2: PORT0 represent UART0, PORT1 represent UART1, PORT2 not available in hardware;

TCP232-ED2: PORT0 represent UART0, PORT1 represent UART1, PORT2 represent UART2;

TCP232-410: PORT0 represent RS232, PORT1 represent RS485, PORT2 not available;

## 1.4. Electrical characteristics

All the data is get at tempture 25°C, network cable plug in, max data transmission(10ms, 20 byte, sending data constantly).

Working temptemperature range: -40~85°C.

Unpowered storage temperature and humidity range: -65~150°C, 5~95%RH

|            | Input Voltage range | Current cosumption at 3.3V | Current cosumption at 5V | Current cosumption at 12V |
|------------|---------------------|----------------------------|--------------------------|---------------------------|
| TCP232-E2  | DC3.3 or 5V         | 120mA(115-125)             | 120mA(115-125)           | Not available             |
| TCP232-ED2 | DC3.3 or 5V         | 120mA(115-125)             | 120mA(115-125)           | Not available             |
| TCP232-410 | DC5~18V             | Not available              | 86.5mA(85-87.9)          | 44.3mA(43.7-45.1)         |
|            |                     |                            |                          |                           |

## 1.5. Difference between E45 series and M4 series

The new M4 series is a function full-compatible product to the old E45 series product, but there are still difference.

|                |                             |                           |
|----------------|-----------------------------|---------------------------|
| difference     | TCP232-E45                  | TCP232-M4                 |
| frequency      | 50MHz                       | 120MHz                    |
| Flash size     | 256Kbyte                    | 512Kbyte                  |
| RAM size       | 64Kbyte                     | 256Kbyte                  |
| current        | 180~190mA (-E)              | 120mA (-E2)               |
| 485 connector  | 3.81-2                      | 5.08-2                    |
| size           |                             | ultra-tiny product USR-K3 |
| LEDs           | No                          | LED holder, more tight    |
| webpage        | No change                   | New web page style        |
| Setup software | Use V1.x.x.x setup software | V2.x.x.x or higher        |
| Comm number    | 3                           | 3(have 1 and more Model)  |

## 2. Module Test

If you have any question, please contact us the in the client support center:

<http://h.usriot.com/index.php?c=frontTicket&m=sign>

### 2.1. Hardware connection

The picture below is a serial device server of TCP232-410. It have 1 RS232 and 1 RS485, they can work independently, now we are going to test it's RS232 function.



Diagram 2-1 TCP232-410 with case

Power 410 with DC5V adaptor(make sure you can supply at least 200mA current at DC5V)

Connect 410's RJ45 to PC directly with network cable(No need to distinguish cross or direct connect cable), or connect the module and PC via switch or router and set the PC's ip address to 192.168.0.201(must be a format of 192.168.0.xxx), netmask 255.255.255.0.

Connect 410 and PC's comm port together, with a standard female-female extend cable(default cross-over cable).

Here is TCP232-410's default net configuration,

IP address: 192.168.0.7

Subnet mask: 255.255.255.0

The default gateway: 192.168.0.1



## 2.2. Login


Open a browser, type and Login above IP address <http://192.168.0.7>, you will enter module's setup web pages.

User name and password are both “admin”, this can be modified after login into the system.

Default user name: admin

Default password: admin

After you have login, you can see webpage as follow, this is config page for TCP232-410

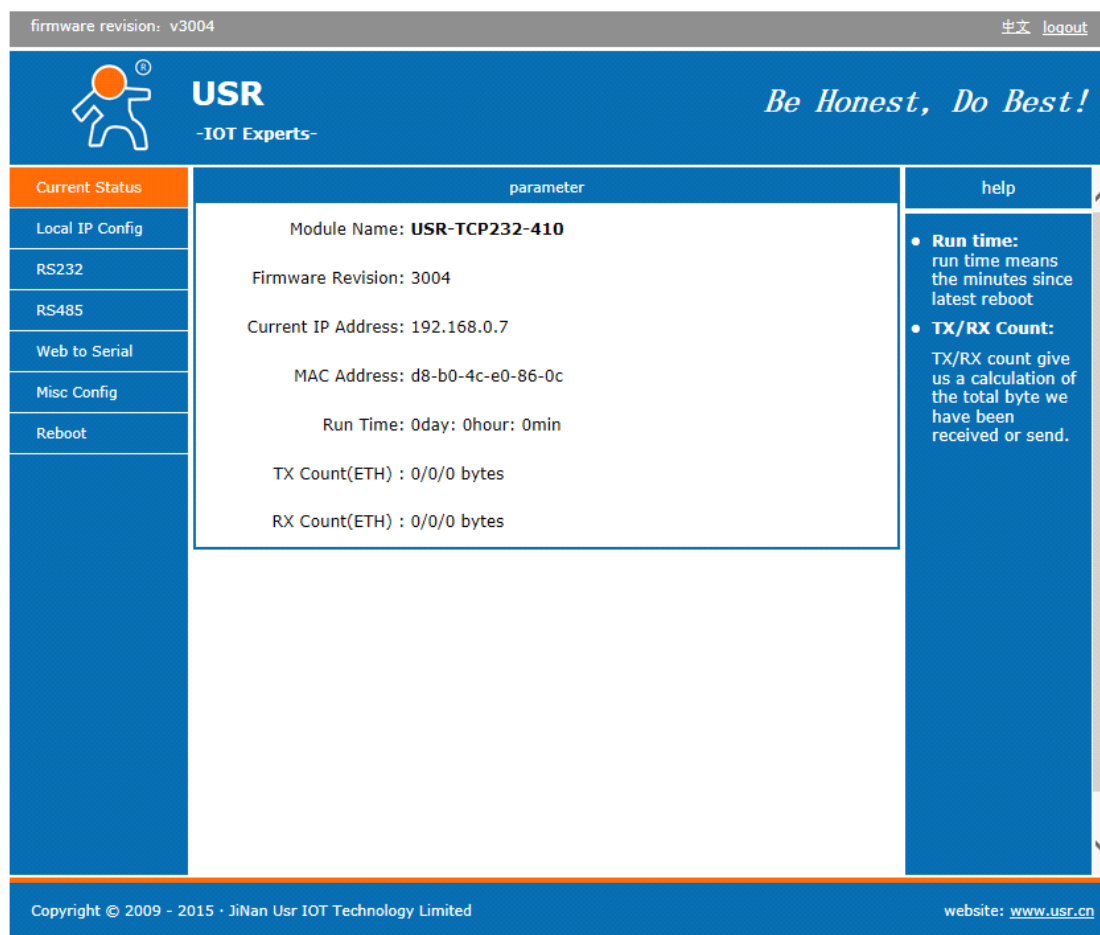

| Current Status  | parameter                          | help                                                                                                                                                                                                                                      |
|-----------------|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local IP Config | Module Name: <b>USR-TCP232-410</b> | <ul style="list-style-type: none"> <li><b>Run time:</b><br/>run time means the minutes since latest reboot</li> <li><b>TX/RX Count:</b><br/>TX/RX count give us a calculation of the total byte we have been received or send.</li> </ul> |
| RS232           | Firmware Revision: 3004            |                                                                                                                                                                                                                                           |
| RS485           | Current IP Address: 192.168.0.7    |                                                                                                                                                                                                                                           |
| Web to Serial   | MAC Address: d8-b0-4c-e0-86-0c     |                                                                                                                                                                                                                                           |
| Misc Config     | Run Time: 0day: 0hour: 0min        |                                                                                                                                                                                                                                           |
| Reboot          | TX Count(ETH) : 0/0/0 bytes        |                                                                                                                                                                                                                                           |
|                 | RX Count(ETH) : 0/0/0 bytes        |                                                                                                                                                                                                                                           |

Copyright © 2009 - 2015 · JiNan Usr IOT Technology Limited      website: [www.usr.cn](http://www.usr.cn)

Diagram 2-2 page after login

Current config and status: include display of firmware revision, ip address and mac address.

RS232: represent RS232 port config.

Port1 settings: represent RS485 port config.

Port2 settings: not available.

Web to serial: websocket function which enable you send and receive data between webpage and comm port 0(Port 0 only).

Miscellaneous settings: used to set key parameters such as module IP and module name, also include reset and reload button in webpage.

## 2.3. Default parameter test

To test briefly in default working mode, on the foundation of the hardware connection, use the matched software USR-TCP232-Test to make transmitting and receiving test. The left side is

---

serial port, use software default settings, the right side is the network part, set to TCP Client and server to be IP 192.168.0.7, port 23.

By default, the two COM port to be set as TCP Server mode, port is 23/26.

This illustration shows the 10 ms two-way simultaneous automatically transmit screenshots. As the allocated memory of the display control is limited, in order to test large amount of data transceiver, here will suspend the receive display, only statistical data. Below is the effect after testing for a few hours, and transmitting millions of bytes. Stable and reliable, without a byte loss.

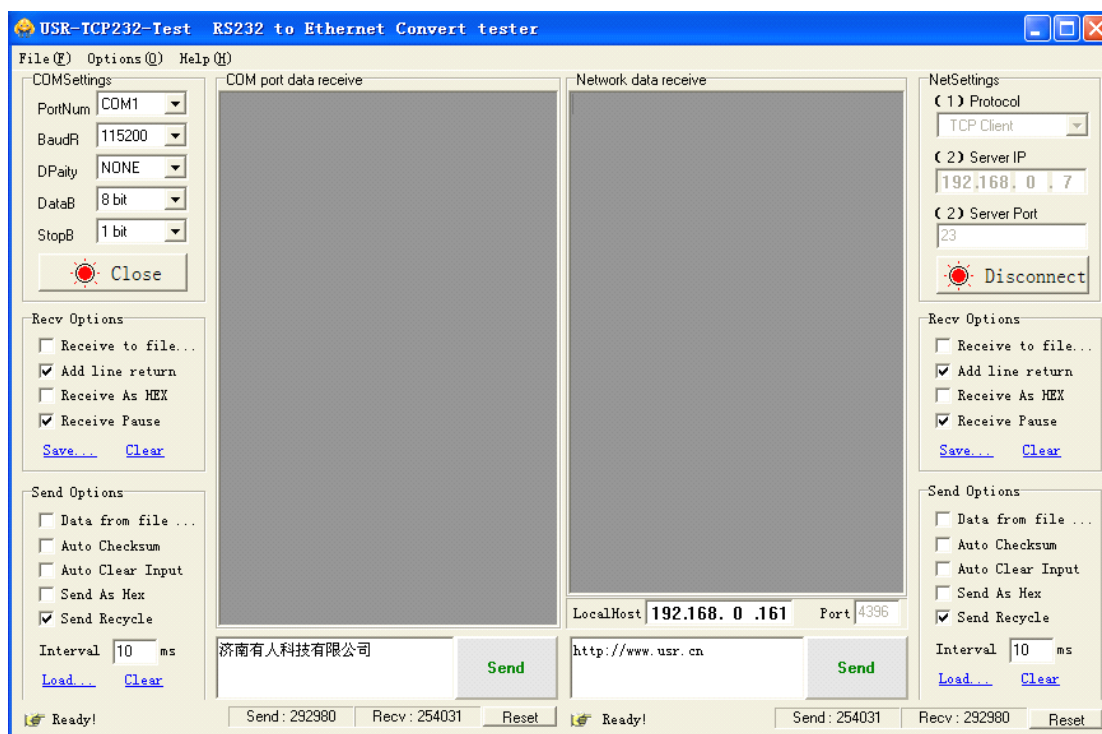


Diagram 2-3 default working mode communication

## 3. Work mode

### 3.1. UDP mode

When in UDP mode, after power on, module will connect to remote server's specific port.

When received data from the remote server, module will send it to serial port; otherwise, when data is received from serial port, send it to ethernet.

The assist software can be download from link below:

<http://www.usriot.com/Download/199.html>

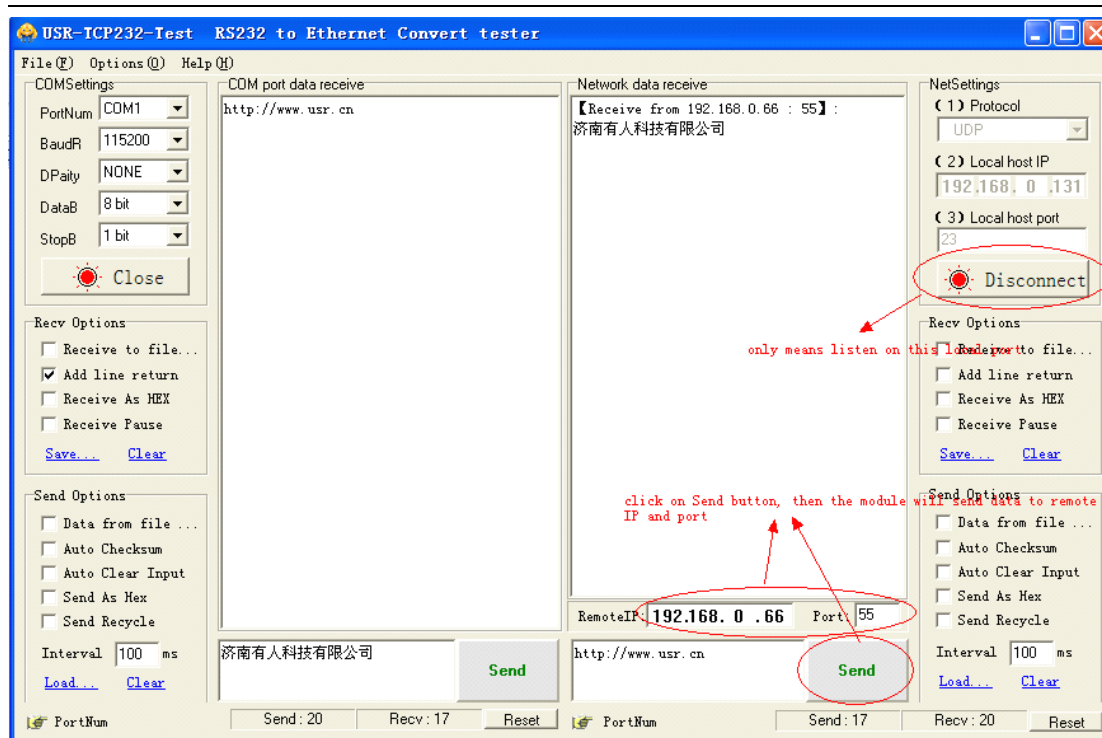


Diagram 3-1 UDP mode communication test

Note:

- 1) local port and remote port can be different.
- 2) Max UDP send length(ethernet to serial) is 1472 bytes. If you want to send more than 1472 Bytes, please div it into shorter packet.

## 3.2. TCP Client mode

Open web pages and config module to

Telnet Mode: TCP Client

Remote port number: 23

Telnet Server Addr: 192.168.0.131

parameter

Baud Rate:  bps

Data Size:  bit

Parity:

Stop Bits:  bit

Flow Control and RS485:

Local Port Number:

Remote Port Number:

Work Mode:

Remote Server Addr:  [ 0.0.0.0 ]

Timeout:  seconds (< 256, 0 for no timeout)

UART packet Time:  ms (< 256)

UART packet length:  chars (<= 1460, 0 for no use)

Sync Baudrate(RF2217 similar): ☒

Diagram 3-2 TCP Client mode

Use USR-TCP232-Test,

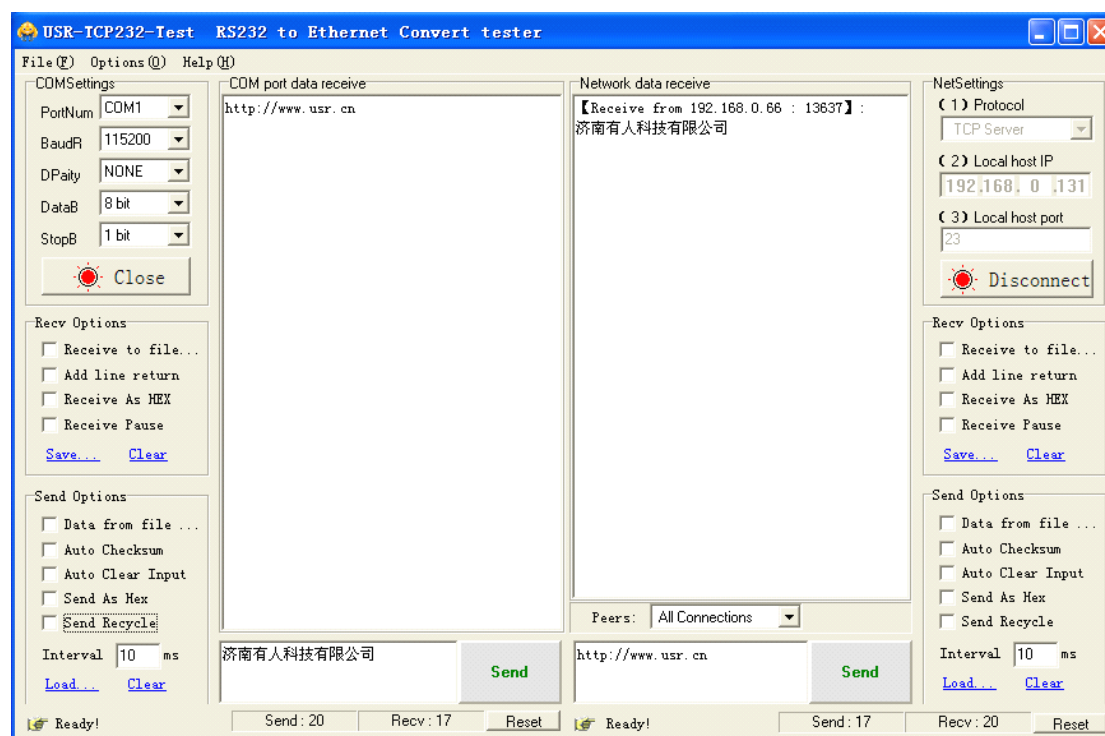


Diagram 3-3 TCP Client communication test

### 3.3. UDP Server mode

Like the socket UDP server in pc API. Many to one data transfer supported, the data from uart/232/485 part will be transformed to the last UDP packet's address.

Here show 2 UDP client communicate with server, server send data to the last client communicates with it.

| parameter                      |                                     |
|--------------------------------|-------------------------------------|
| Baud Rate:                     | 115200 bps                          |
| Data Size:                     | 8 bit                               |
| Parity:                        | None                                |
| Stop Bits:                     | 1 bit                               |
| Flow Control and RS485:        | RS485                               |
| Local Port Number:             | 8888                                |
| Remote Port Number:            | 23                                  |
| Work Mode:                     | UDP Server                          |
| Remote Server Addr:            | 192.168.0.131 [ N/A ]               |
| Timeout:                       | 0 seconds (< 256, 0 for no timeout) |
| UART packet Time:              | 10 ms (< 256)                       |
| UART packet length:            | 512 chars (<= 1460, 0 for no use)   |
| Sync Baudrate(RF2217 similar): | <input checked="" type="checkbox"/> |

Save

Cancel

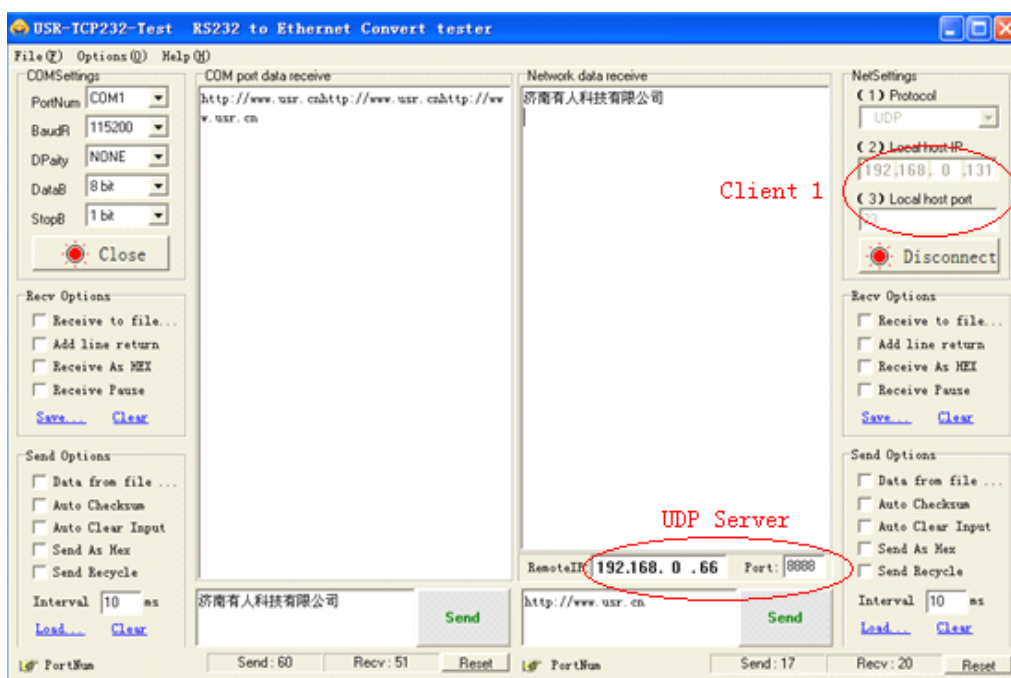


Diagram 3-4 Client 1 <-> server

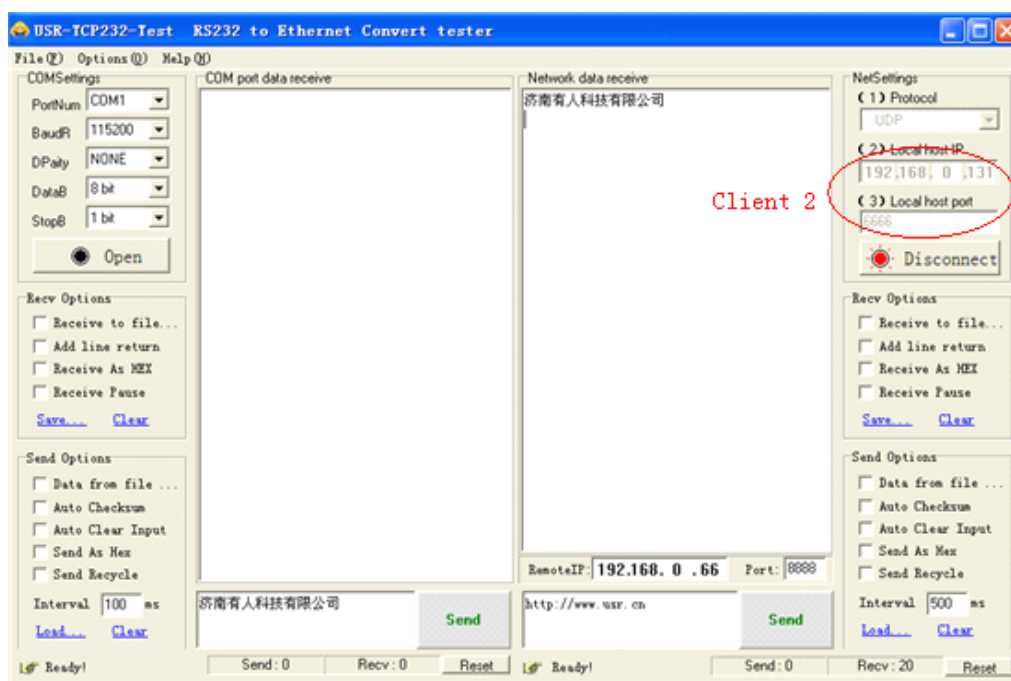


Diagram 3-5 Client 2 <-> server

### 3.4. TCP Server mode

TCP Server mode have max 8 client connected at max;  
When act as TCP server, only local port matters,



parameter

Baud Rate:  bps

Data Size:  bit

Parity:

Stop Bits:  bit

Flow Control and RS485:

Local Port Number:

Remote Port Number:

Work Mode:

TCP Server detail:  type

Remote Server Addr:  [ N/A ]

Timeout:  seconds (< 256, 0 for no timeout)

UART packet Time:  ms (< 256)

UART packet length:  chars (<= 1460, 0 for no use)

Sync Baudrate(RF2217 similar): ☒

Diagram 3-6 select workmode TCP server

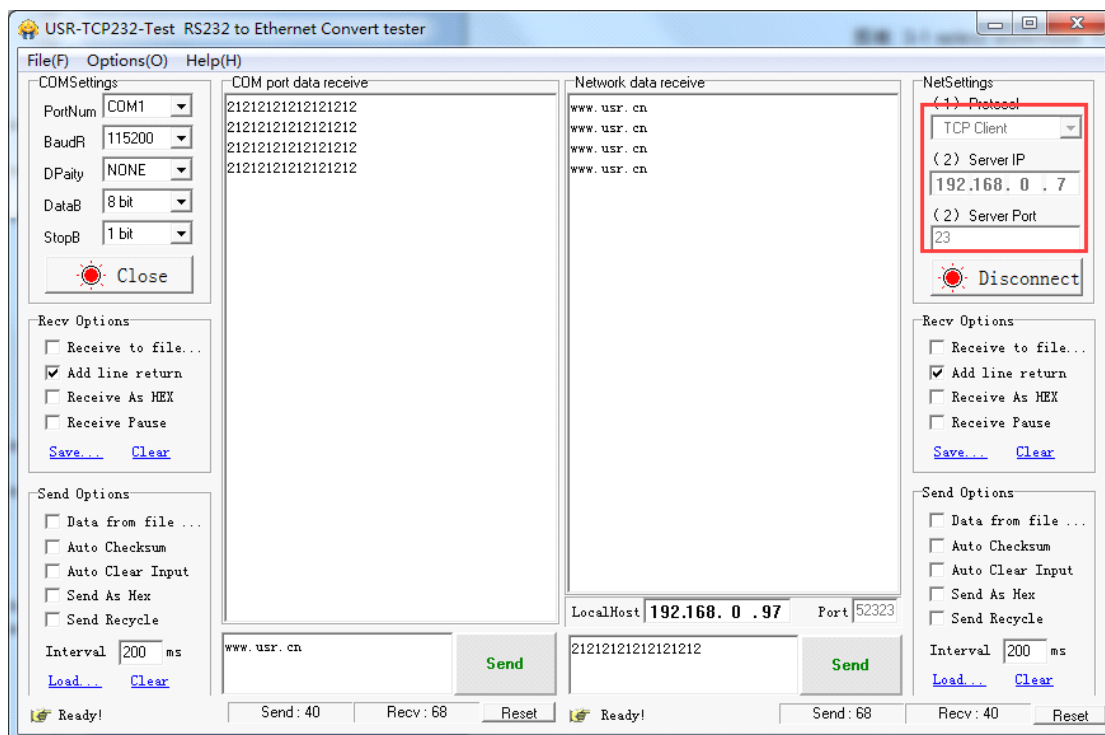


Diagram 3-7 test result, we can establish more than 1 client to test

### 3.5. Httpd Client mode

This function is easier used for web page developer. We establish one web server page, add this:

```
[<?php echo $_GET['data']; ?>]
```

Means we can GET data from HTTP client's request. Open this URL:

www.usr.cn/1.php?data=12345, the web page is downbelow, we can see that the web server have got the data(12345),

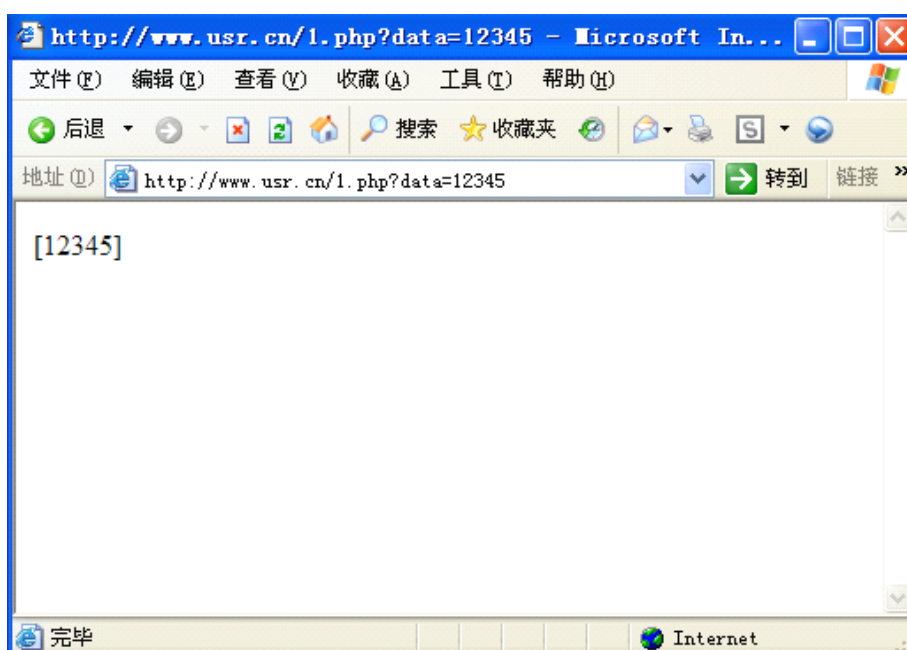


Diagram 3-8 Request **www.usr.cn/1.php?** and upload data

Then we take another way, set module Work mode HTTPD Client, Target address **www.usr.cn**, Target port 80.

parameter

Baud Rate:  bps

Data Size:  bit

Parity:

Stop Bits:  bit

Flow Control and RS485:

Local Port Number:

Remote Port Number:

Work Mode:

HTTPD Client header: 

GET /1.php?data=\$ HTTP/1.1  
Host: www.usr.cn

Remote Server Addr:  [ N/A ]

Timeout:  seconds (< 256, 0 for no timeout)

UART packet Time:  ms (< 256)

UART packet length:  chars (<= 1460, 0 for no use)

Sync Baudrate(RF2217 similar): ☒

Diagram 3-9 config HTTPD Client

Open USR-TCP232-Test, and type in a string such as "12345", then send via comm port to TCP232-410, and see the response from [www.usr.cn](http://www.usr.cn).

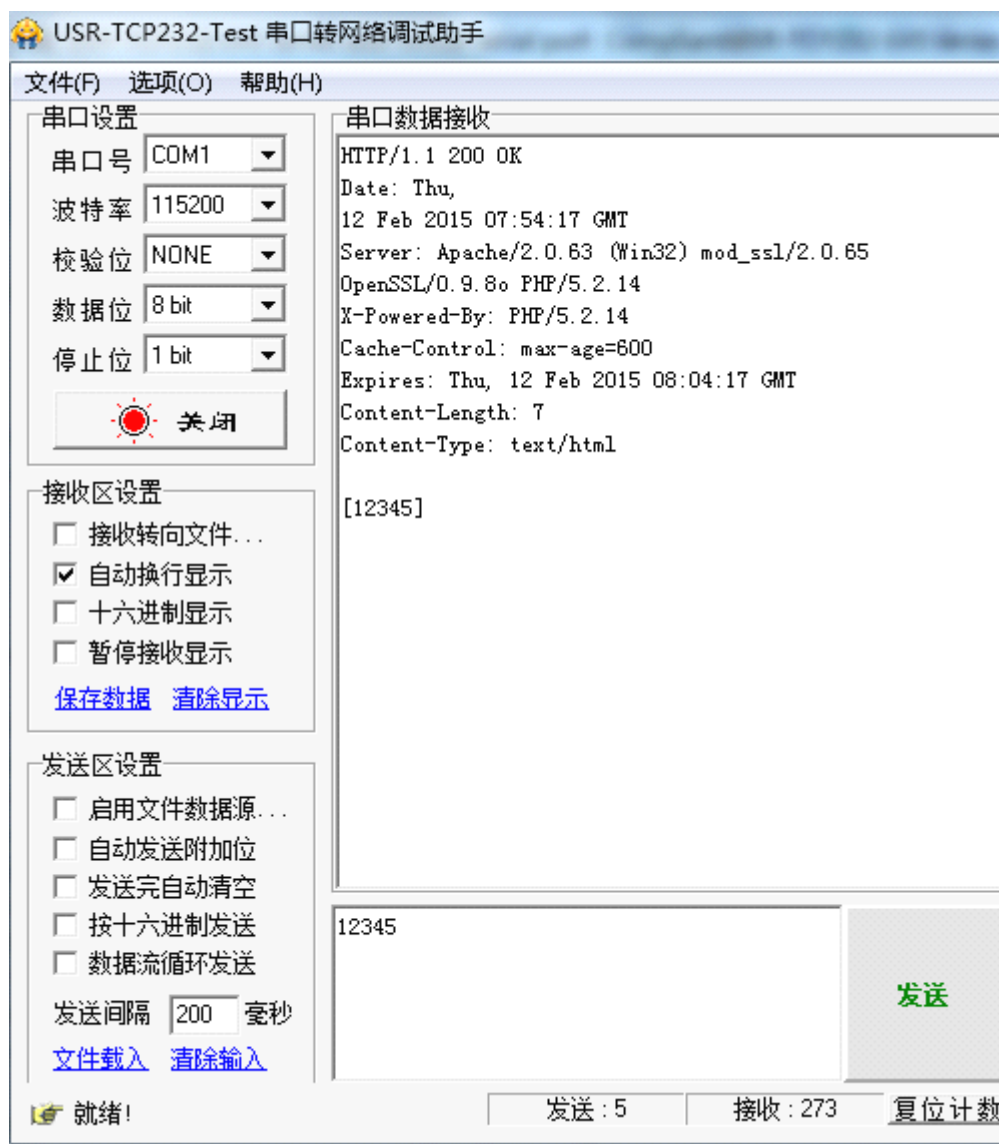


Diagram 3-10 module act as HTTPD Client

In the response, all the data returned, but the http header from server will be returned, too. the user may need to parse this to get your data.

## 4. Hardware

About the new PCB libraries file, we can download it from website

<http://www.usriot.com/Download/221.html> .

## 4.1. USR-TCP232-E2

### 4.1.1. Hardware

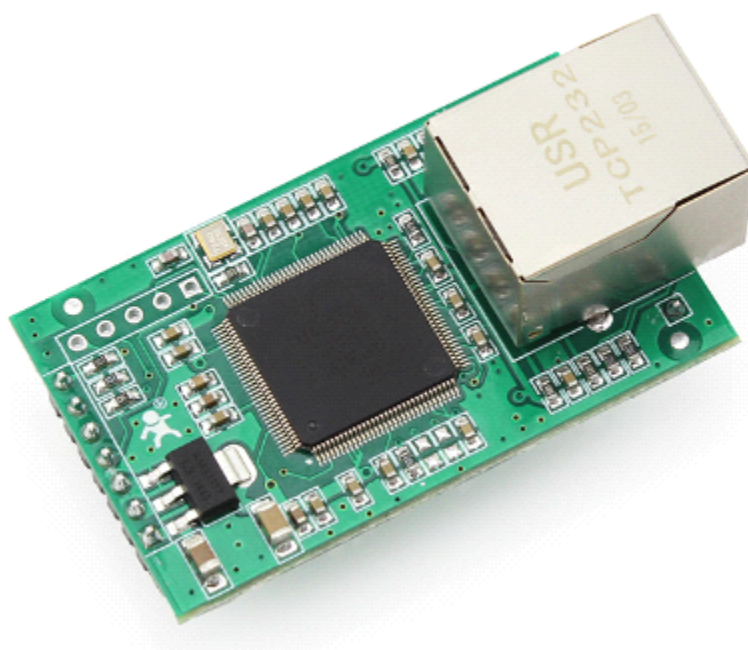


Diagram 4-1 USR-TCP232-E2

- 1) Mechanical dimension: (L×W×H): 55×30×23.2(mm) including RJ45 and connector;
- 2) PCB dimension(L×W): 50.4×30.0(mm);
- 3) 5V 3.3V double power input, choose 1 input
  - 1) 2 \* serial port (2 \* TTL, 3.3V)
  - 2) TTL serial port 0 support hardware flow control(RTS/CTS)

### 4.1.2. Power and other pin

Power supply socket, The input voltage range 3.3V or 5V, average current both 120 MA. We default supply customer with high quality 5 V / 1 A power adapter.

if your MCU's signal is 5V, pls add a signal convert between 3.3V and 5V

| id | name | description                                              |
|----|------|----------------------------------------------------------|
| 1  | VDD  | DC5V(you must choose only one supply between 5V or 3.3V) |

|    |        |                                                                                                                                                        |
|----|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2  | VCC    | DC3.3V(you must choose only one supply between 5V or 3.3V)                                                                                             |
| 3  | GND    | ground                                                                                                                                                 |
| 4  | RST    | Reset pin(give a constant 200ms low level make module reset)                                                                                           |
| 5  | TXD0   | Data transmit pin for comm port 0                                                                                                                      |
| 6  | RXD0   | Data receive pin for comm port 0                                                                                                                       |
| 7  | Reload | Pin to make module back to factory default parameters(take this pin to low , then power off and on, keep this pin down for 2 seconds, then release it) |
| 8  | WORK   | WORK LED indicate, it will toggle every 1 second                                                                                                       |
| 9  | CTS0   | Clear to send                                                                                                                                          |
| 10 | RTS0   | Request to send(also muxed as RS485 enable tx pin, enable it from software in )                                                                        |
| 11 | RXD1   | Data receive pin for comm port 1                                                                                                                       |
| 12 | TXD1   | Data transmit pin for comm port 1                                                                                                                      |

Diagram 4-2 pin description

Download is pin position for TCP232-E2, if you want accurate footprint, please see the pcb library file <http://www.usriot.com/Download/221.html>

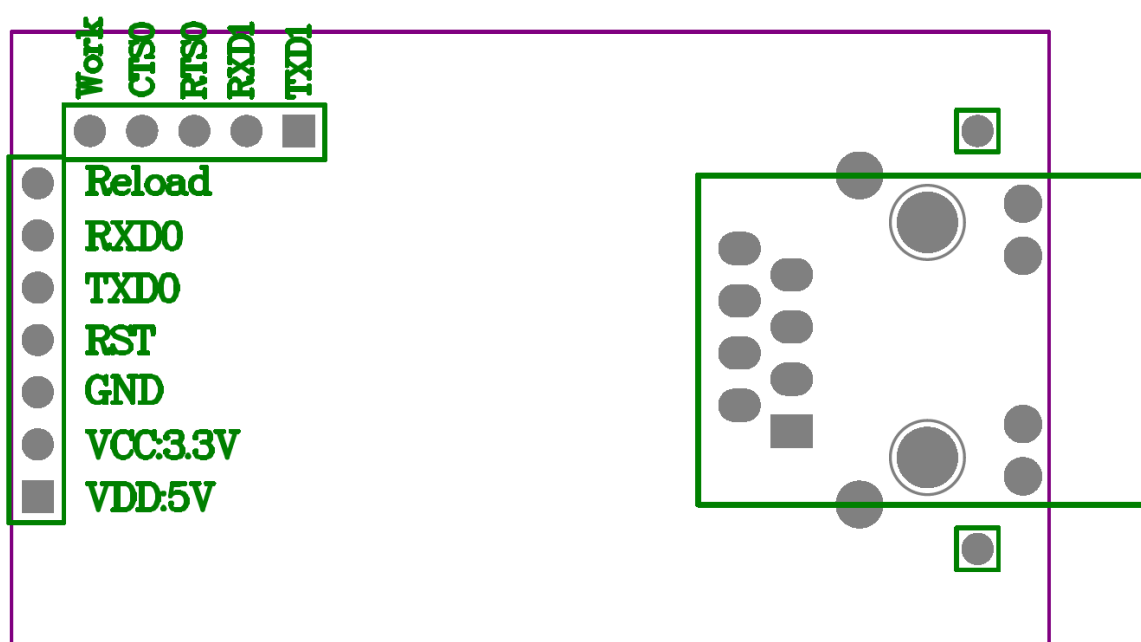


Diagram 4-3 pin position

### 4.1.3. LED status

besides Link and Data LED of RJ45, there is one work LED pin interface reserved on board.

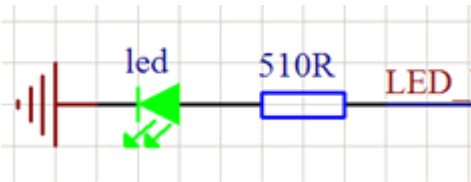
| ID | name         | Description                                                                                                                                                                                                  |
|----|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | Work         | <p>Just interface pin, have no LED on module,<br/>If you need it, take this pin with LED and 510 ohm resistor to GND.</p>  |
| 2  | Link(green)  | On RJ45, when ethernet physical link established, on.                                                                                                                                                        |
| 3  | Data(yellow) | On RJ45, when ethernet data communicate, twinkle.                                                                                                                                                            |

Diagram 4-4 LED definition

### 4.1.4. Serial(TTL) interface

There is 2 serial port on TCP232-E2, only UART0 have 485\_en pin.

The serial port is 3.3V TTL level (2 \* TTL serial port, can be directly connected to customer's MCU).

| name | Description                                                               |
|------|---------------------------------------------------------------------------|
| TXD0 | Uart0 transmit data pin                                                   |
| RXD0 | Uart0 receive data pin                                                    |
| CTS0 | Default unused. (can be configured as Uart0 clear to send)                |
| RTS0 | Default as 485_en for UART0, (can be configured as Uart0 require to send) |
| RXD1 | Uart1 receive data pin                                                    |
| TXD1 | Uart1 transmit data pin                                                   |

Diagram 4-5 connector interface

## 4.2. USR-TCP232-ED2

### 4.2.1. Hardware

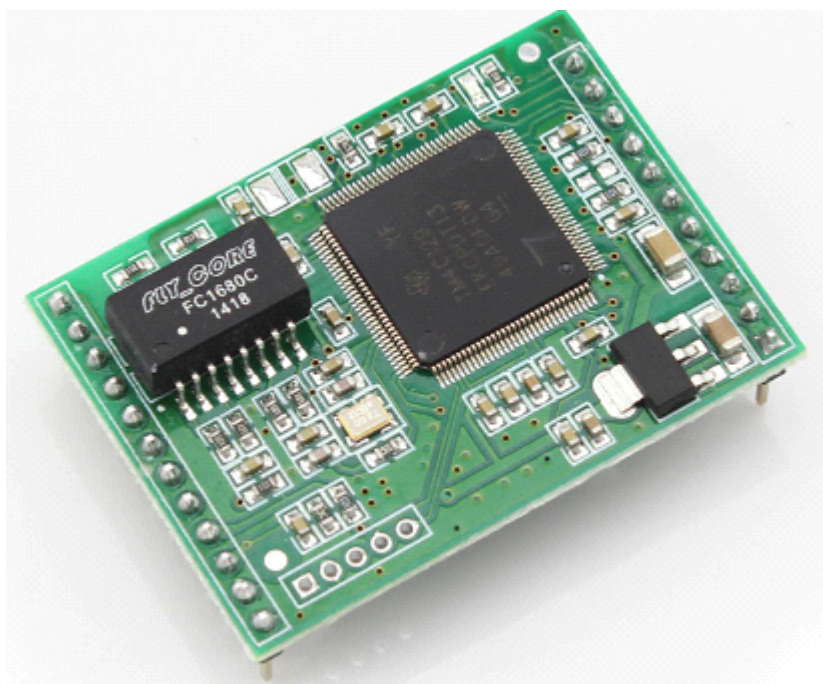


Diagram 4-6 USR-TCP232-ED2

- 1) Mechanical dimension: (L×W×H)44.45×31.75×15.4(mm) including RJ45 and connector.
- 2) PCB dimension(L×W): 44.45×31.75(mm).
- 3) 5V 3.3V double power input, you can only choose 1 of them as input.
- 4) 3 \* serial(3 \* TTL, 3.3V).
- 5) TTL serial port support hardware flow control(RTS/CTS).

### 4.2.2. Power

Power supply socket, The input voltage range 3.3V or 5V, average current 120 MA. We default supply high quality 5 V / 1 A power adapter.

### 4.2.3. LED status

Except for Link and Data of RJ45, there is one work LED interface

| ID | name        | Description                                       |
|----|-------------|---------------------------------------------------|
| 1  | Work(green) | Toggle every 1 seconds, this LED already on board |



|   |              |                                                       |
|---|--------------|-------------------------------------------------------|
| 2 | Link(green)  | On RJ45, when ethernet physical link established, on. |
| 3 | Data(yellow) | On RJ45, when ethernet data communicate, toggle.      |

Diagram 4-7 LED definition

#### 4.2.4. Serial(TTL) interface

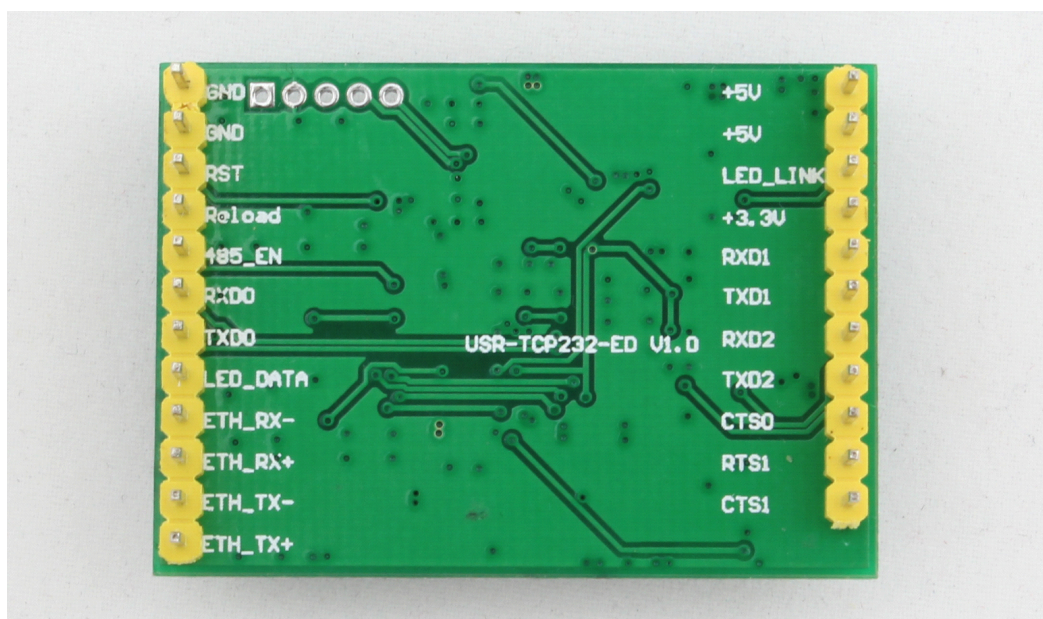


Diagram 4-8 view from bottom

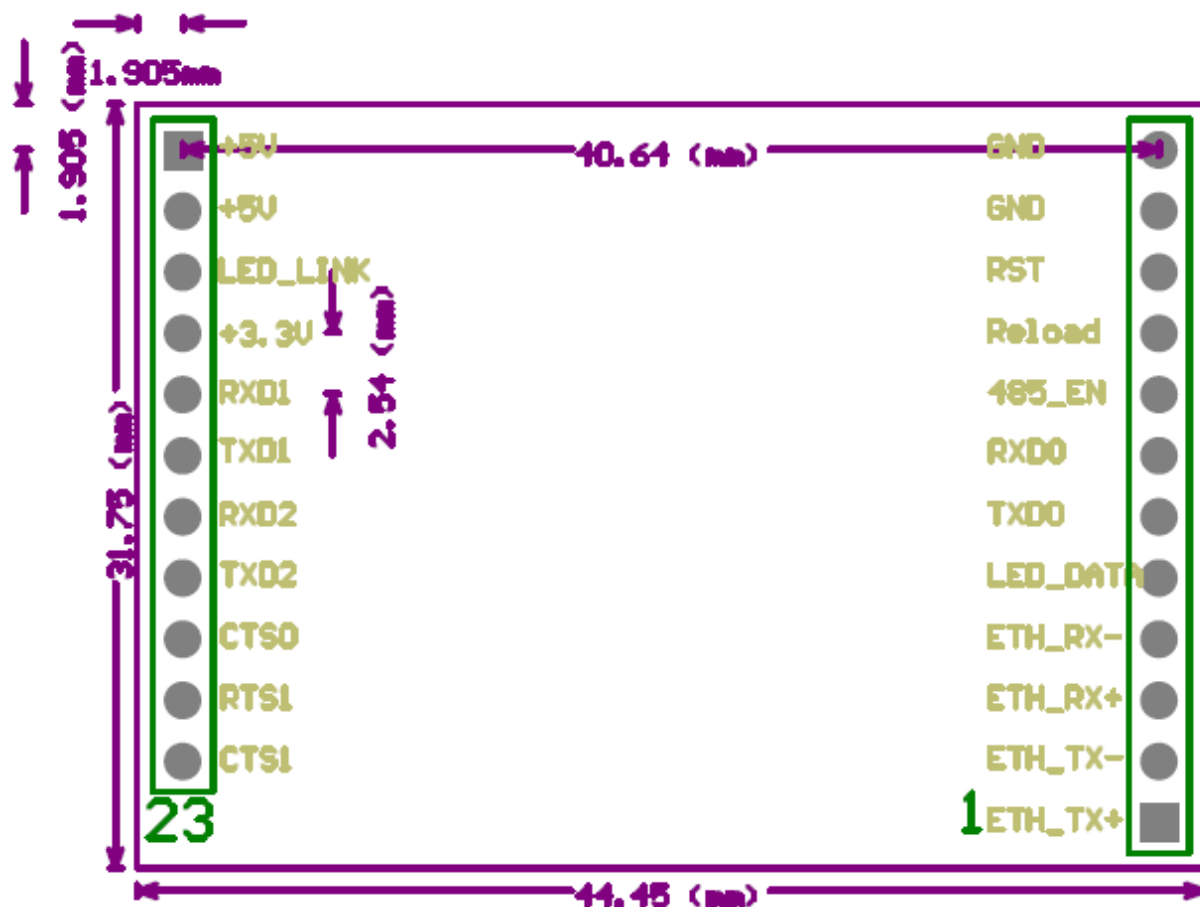


Diagram 4-9 pin diagram

The serial port is TTL level (3 \* TTL serial port, can be directly connected to MCU).

| number | name         | Description                                                                                   |
|--------|--------------|-----------------------------------------------------------------------------------------------|
| 1      | ETH_TX+      | Ethernet TX+                                                                                  |
| 2      | ETH_TX-      | Ethernet TX-                                                                                  |
| 3      | ETH_RX+      | Ethernet RX+                                                                                  |
| 4      | ETH_RX-      | Ethernet RX-                                                                                  |
| 5      | LED_DATA     | Ethernet Data LED                                                                             |
| 6      | TXD0         | Uart0 transmit data pin                                                                       |
| 7      | RXD0         | Uart0 receive data pin                                                                        |
| 8      | 485_en(RTS0) | Default as 485_en for Uart1( RS485 enable)( can be configured as RTS0, Uart0 require to send) |
| 9      | Reload       | Restore to factory                                                                            |
| 10     | RST          | Reset(give a 200ms low pulse will make module reset)                                          |
| 11     | GND          | ground                                                                                        |
| 12     | GND          | ground                                                                                        |
| 13     | +5V          | +5V power                                                                                     |

|    |          |                                                    |
|----|----------|----------------------------------------------------|
| 14 | +5V      | +5V power                                          |
| 15 | LED_LINK | Ethernet link LED                                  |
| 16 | +3.3V    | +3.3V power                                        |
| 17 | RXD1     | Uart1 receive data pin                             |
| 18 | TXD1     | Uart1 transmit data pin                            |
| 19 | RXD2     | Uart2 receive data pin                             |
| 20 | TXD2     | Uart2 transmit data pin                            |
| 21 | CTS0     | Default no use. Uart0 clear to send                |
| 22 | RTS1     | Default as 485_en for Uart1, Uart1 require to send |
| 23 | CTS1     | Default no use. Uart1 clear to send                |

Diagram 4-10 connector interface(include uart0, uart1, uart3)

Note:

- 1) There is no RTS2 and CTS2 pin for UART2 on this module, so that means, you can not use Hardware flow control(RTSC TS), or RS485 tx and rx control pin for the last serial port.

#### 4.2.5. hardware connection

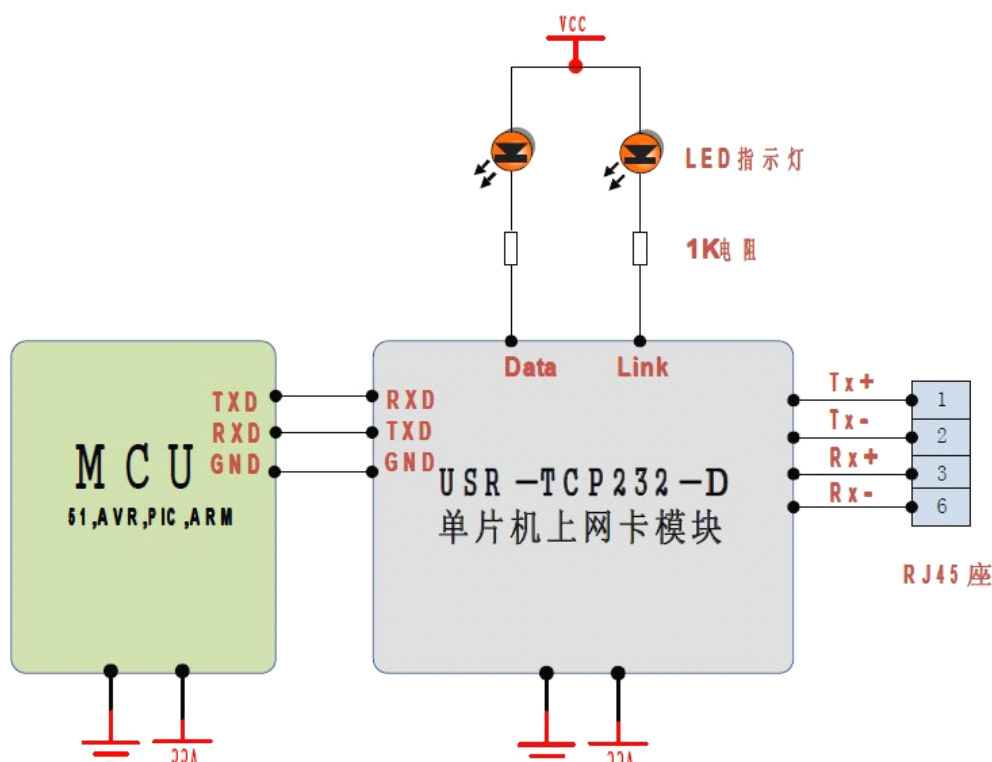


Diagram 4-11 a connection sample

Note

ED2 already have a network transformer on board.

## 4.3. USR-TCP232-410

### 4.3.1. Hardware

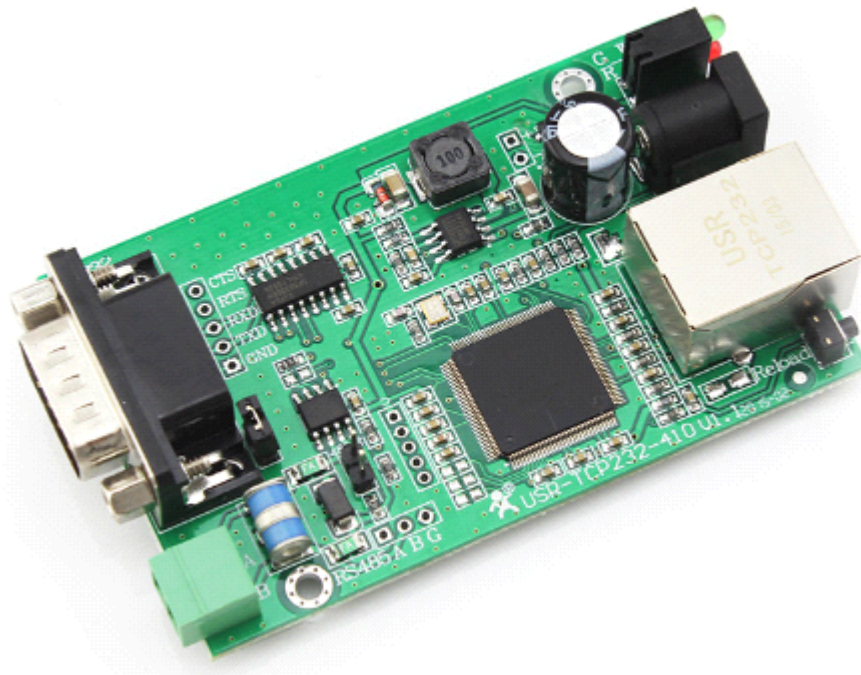


Diagram 4-12 USR-TCP232-410

- 1) Mechanical dimension: (L×W×H)90×84×25(mm) including RJ45 and connector.
- 2) PCB dimension(L×W): 80.3×50.3(mm).
- 3) DC+5 ~ +18V power input.
- 4) DC power plug(can be customized to 5.08 connector power input).
- 5) 1 \* RS232 support hardware flow control(RTS/CTS).
- 6) 1 \* RS485.

### 4.3.2. Power

This system default use a Power supply socket, we can also customized for 5.08-2 terminal.

The Power supply socket, outer diameter 5.5 mm inner 2.1 mm standard size, inside plus, outside minus. The input voltage range DC5 ~ 18 V, average current 120 MA. We default supply high quality 5 V / 1 A power adapter.

### 4.3.3. LED status

Equipment have 4 indicator lights in total, sequence from left to right.

| ID | name         | Description                                           |
|----|--------------|-------------------------------------------------------|
| 1  | Work         | Twinkle every 1 seconds                               |
| 2  | Power        | On after power up                                     |
| 3  | Link(green)  | On RJ45, when ethernet physical link established, on. |
| 4  | Data(yellow) | On RJ45, when ethernet data communicate, twinkle.     |

Diagram 4-13 LED definition

### 4.3.4. RS232 interface

The serial port is male (needle), RS232 level (can be directly connected to computer serial via a RS232 extend wire), When connected with the computer, we need to use cross cable (2-3 cross, 7-8 cross, 5-5 direct Otherwise, it might lead to irregularly work).

| Number | RS232 | Description                    |
|--------|-------|--------------------------------|
| 1      | -     | -                              |
| 2      | RXD   | RS232 device receive data pin  |
| 3      | TXD   | RS232 device transmit data pin |
| 4      | -     | -                              |
| 5      | GND   | Signal ground                  |
| 6      | -     | -                              |
| 7      | RTS   | RS232 require to send          |
| 8      | CTS   | RS232 clear to send            |
| 9      | -     | -                              |

Diagram 4-14 DB9 interface

### 4.3.5. RS485 interface

RS485 two wirings terminal, A (DATA +), B (DATA -), when connected with RS485, A (+) to A (+), B (-) to B (-).

parameter

Baud Rate:  bps

Data Size:  bit

Parity:

Stop Bits:

Flow Control and RS485:

Local Port Number:

Remote Port Number:

Work Mode:

TCP Server detail:  type

Remote Server Addr:  [ N/A ]

Timeout:  seconds (< 256, 0 for no timeout)

UART packet Time:  ms (< 256)

UART packet length:  chars (<= 1460, 0 for no use)

Sync Baudrate(RF2217 similar): ☒

Diagram 4-15 check RS485 selection if you want RS485(default selected)

## 4.4. RJ45 interface

module network interface is 10 M / 100 M adaptive, support AUTO - MDIX, can discretionarily connect cross-over or direct network cable. That is to say, you can use either kind of cable to connect with computer or other network device .

| Pin | Name | Description       |
|-----|------|-------------------|
| 1   | TX+  | Transceiver Data+ |
| 2   | TX-  | Transceiver Data- |
| 3   | RX+  | Receive Data+     |
| 4   | n/c  | Not connected     |
| 5   | n/c  | Not connected     |
| 6   | RX-  | Receive Data-     |
| 7   | n/c  | Not connected     |
| 8   | n/c  | Not connected     |

Diagram 4-16 RJ45 interface

## 4.5. Reload

This button is used to restore factory settings. Press the button, keep it pressed, then power on, after 2 second, free this Reload button, device will be back to factory settings.

Default settings main parameters as follows

Address type: static IP  
Static IP Address: 192.168.0.7  
User name: admin  
password: admin

## 5. Paramters configuration

### 5.1. Web page

Usually, this series of TCP232 module is configured through web pages.

### 5.2. Serial port

1. This function. Which we mean Config module's param via serial port, need the coordination of reload pin as a config pin.

2. For further information, see protocol pdf: <http://www.usriot.com/Download/222.html>

### 5.3. network command(setup software)

1. through software ;
2. Network command(need to ask for protocol).

Down below is the Setup, <http://www.usriot.com/Download/90.html>



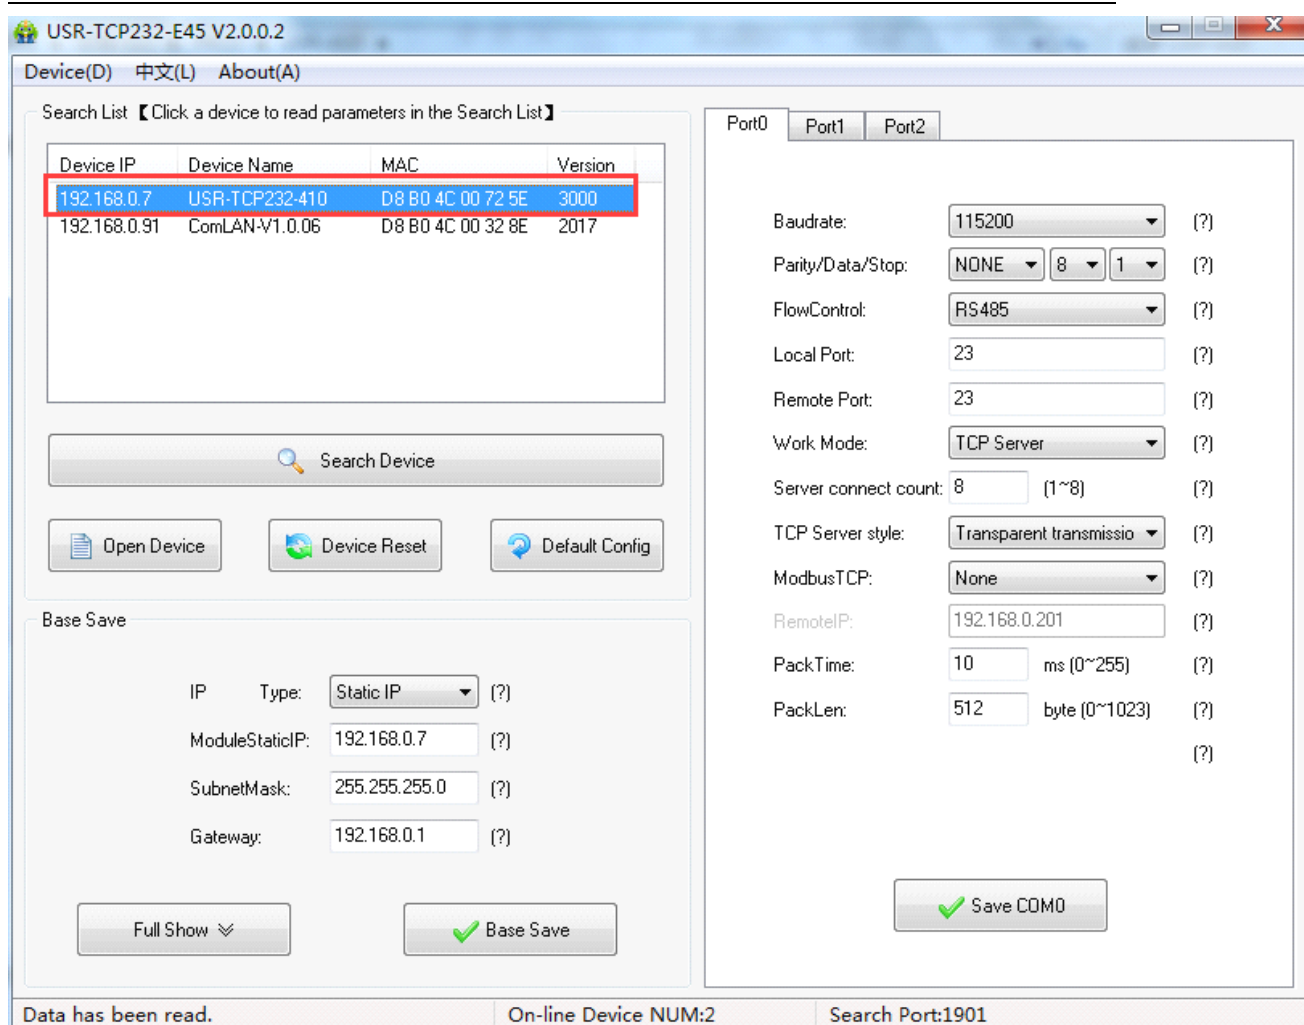


Diagram 5-1 Setup software

- (1)click 'Search Device';
- (2)Select device in search list;
- (3)Modified paramters such as static ip;
- (4)Click 'Base Save' or Save COMx, paramters will be saved;
- (5)After 2 second, Search again, module will appear in new paramters.

## 6. Specific functions

### 6.1. ModbusRTU to ModbusTCP

The whole series product support ModbusRTU to ModbusTCP. When you use it, you have to select the protocols, just here:



parameter

Baud Rate:  bps

Data Size:  bit

Parity:

Stop Bits:  bit

Flow Control and RS485:

Local Port Number:

Remote Port Number:

Work Mode:

TCP Server detail:  type

Remote Server Addr:  [ N/A ]

Timeout:  seconds (< 256, 0 for no timeout)

UART packet Time:  ms (< 256)

UART packet length:  chars (<= 1460, 0 for no use)

Sync Baudrate(RF2217 similar): ☒

Diagram 6-1 setup of ModbusTCP

Here, the usement and function is presented below.

- Selection None, that indicate we are using Transparent mode, no protocol conversion.
- Selection ModbusTCP, means we use protocol conversion from Modbus RTU to ModbusTCP.
- In the comm side(RS232 or RS485), it's ModbusRTU protocol , the ethernet side is ModbusTCP.
- The ethernet side must be a Master, who send query frame first, and the Modbus RTU device respond with data to the command.

The function acts as below.

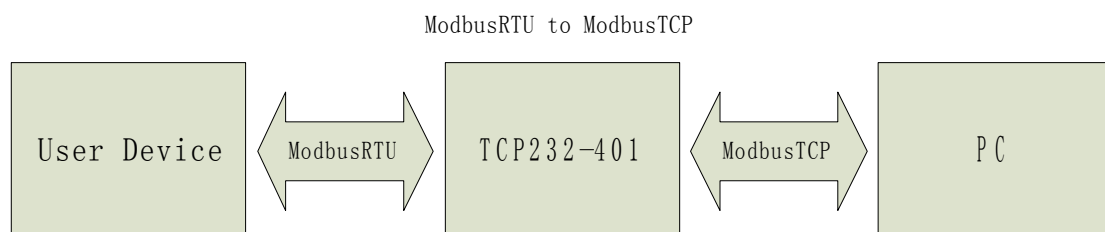


Diagram 6-2 function description for ModbusTCP to modbus RTU

## 6.2. Hardware flow control(RTS/CTS)

If you want to use Hardware flow control, select it before using.

RS232 interface support hardware flowcontrol (RTS/CTS)

| Pin name | Description     | IO type | Operater           |
|----------|-----------------|---------|--------------------|
| RTS      | Request to Send | O       | module             |
| CTS      | Clear to Send   | I       | Outside device(PC) |

Diagram 6-3 Pin description

When RTS = 0, enable the other side to send, at this time, TTL is 0 volt, RS232 is -3V ~ -15V.

When CTS = 0, represent module is enabled to send, at this time, TTL is 0 volt, and RS232 is -3V ~ -15V.

When the logic is reverse, represent that disable the other side to send or was disabled the module to send.

When connect with PC's RS232 interface, we can use the serial cable(cross).

## 6.3. User MAC address

In Current config and status, can see the currently MAC address in use. Diagram below is using the factory MAC.

| parameter                          |
|------------------------------------|
| Module Name: <b>USR-TCP232-410</b> |
| Firmware Revision: 3004            |
| Current IP Address: 192.168.0.7    |
| MAC Address: d8-b0-4c-e0-86-0c     |
| Run Time: 0day: 0hour: 14min       |
| TX Count(ETH) : 0/0/0 bytes        |
| RX Count(ETH) : 0/0/0 bytes        |

Diagram 6-4 currently MAC in use

## 6.4. Firmupdate

Use search and config software  **USR-TCP232-M4&E45 V2.1.0.38** to update firmware, only once for one time, can not cross network segment.

1. Search and select one module

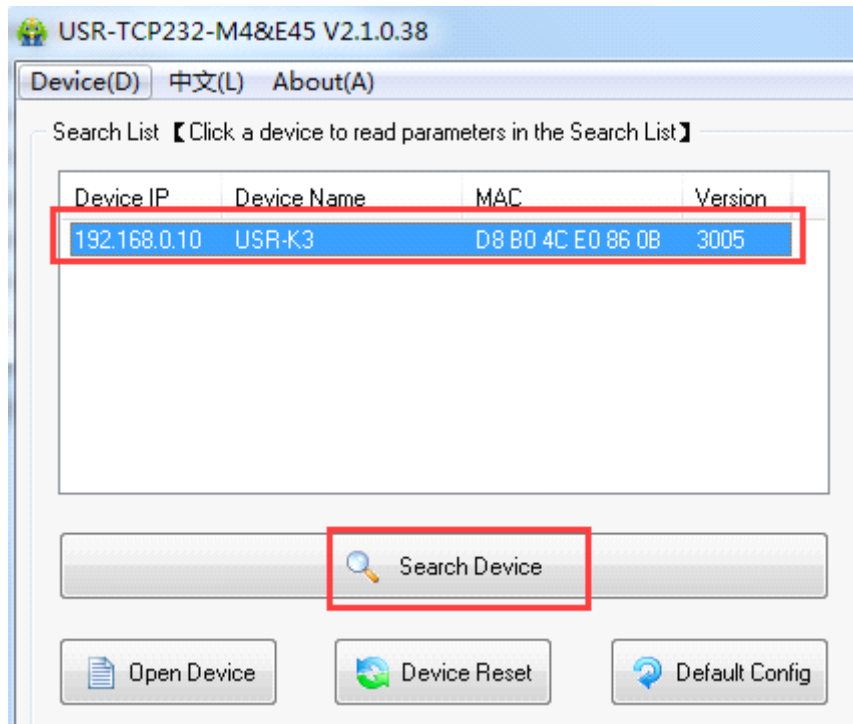


Diagram 6-5 search and select

2. 'Device' -> firmware update

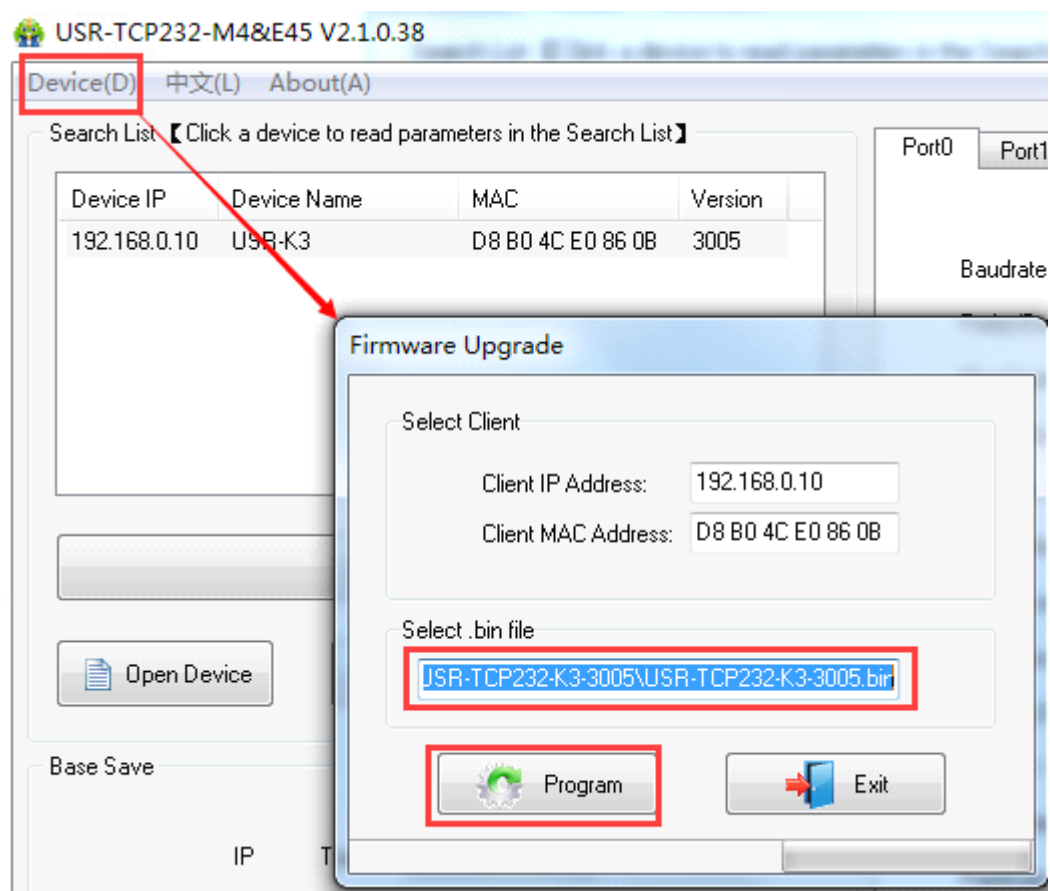


Diagram 6-6 firmware update

Click  to start update progress.

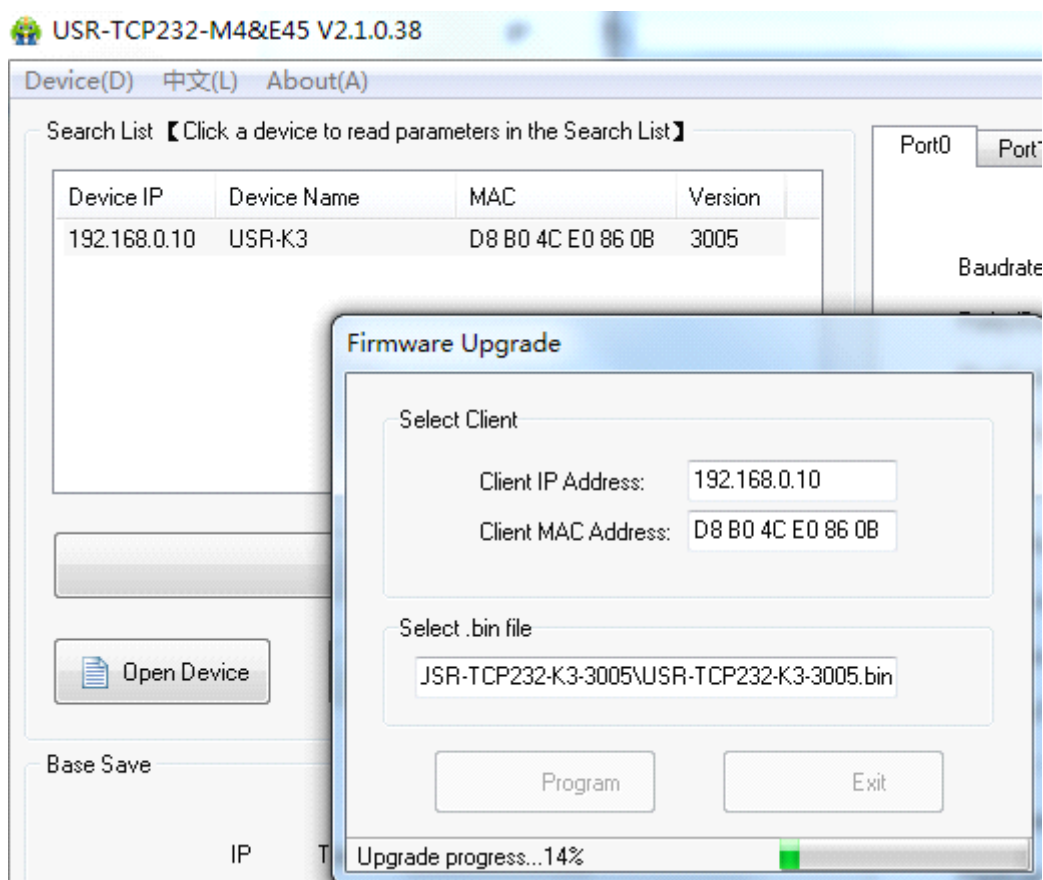


Diagram 6-7 in update progress

- Update success, click exit.

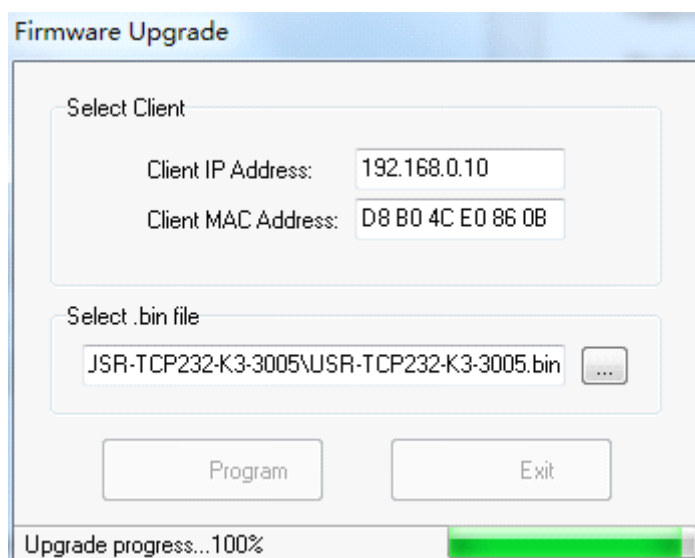


Diagram 6-8 success

Note. After update, if can not search module, restore to factory will fix this problem.

## 6.5. Common questions

### 6.5.1. Work across network segment

If your TCP232 device's IP is 192.168.0.7, and remote PC's IP is 192.168.1.7, we need to config.

Subnet mask of TCP232 device, PC, and router to 255.255.0.0, if not, the TCP232 module will not communicate normally.

### 6.5.2. Ping is OK but can not open web pages

Some possible causes

1. Module is set a static ip and conflicts with another ethernet device.
2. Cross network and false subnet mask .
3. HTTP server port is modified(default 80).

Solutions:

1. Set another static or use DHCP.
2. Set correct subnet mask.
3. Set this port to 80 or open web page with correct port.

### 6.5.3. After firm update, can not open web page

Reload this module back to factory settings.

### 6.5.4. When connection established, server received serval chars

Possible causes.

- 1) Module id type is not 0.

Solutions.

- 1) Module id type set 0.

### 6.5.5. Every serval seconds, module reconnect

Maybe there is a network device which is same ip to module, pls check if ip conflict.

## 7. Contact us

Company: Jinan USR IOT Technology Co., Ltd

Address: 1-724--728, Huizhan Guoji Cheng, Gaoxin Qu, Jinan, Shandong, China

Tel: 86-531-55507297 86-531-88826739-803

Web: <http://www.usriot.com/>

Skype: lisausr

Support: <http://h.usriot.com/index.php?c=frontTicket&m=sign>

Email: sales@usr.cn    tec@usr.cn

## 8. Modified history

- 1) V1.0.1 doc established by Huibin Li
- 2) V1.0.3 correct website link and picture mistake
- 3) V1.0.5 add support center website