



FHSAC1-UNV-40C

SPECIFICATIONS



The logo consists of the letters 'RJ' in a bold, italicized font, followed by a registered trademark symbol (®), and the letters 'US' in a bold, italicized font. Below 'RJ' is the text 'E313578'.

LED Driver with integrated emergency backup
Universal Voltage: 120-277V ~, 50/60Hz
Output Wattage: 40W Max.
Output Current: 250-1400mA


Output voltage range of 11-55V
Compact case with side leads
Meets UL 924 & NFPA 101

This Driver Will Operate The Following LED Modules: Any LED module designed to accept input voltage range of 11-55VDC and can operate up to current of 250-1400mA.

General Specifications

| | |
|---|--|
| Input Voltage | 120-277VAC, 50/60Hz |
| Input Current | 0.43A @ 120VAC |
| Input Power | 54W |
| Power Factor | >0.9 |
| THD | <20% |
| Standby Input Power | <0.85W |
| Driver Type | Constant Current |
| Output Current | 250-1400mA [TPSB 100 (Program Box), Figure 1] ; Record New Setting On 1"x0.5" Lable |
| Output Voltage Range | 11-28VDC (250-1400mA), 11-40VDC (250-1000mA), 11-55VDC (250-730mA) |
| Output Power | 40W Max. (Figure 1) 5W or 10W @ Emergency Mode (Min. 180 Minutes @ 5W , Min. 90Minutes @ 10W) |
| Number of Output Channels | 1 Channel |
| Dimming Controller Type / Dimming Range | 0-10V / 100% - 1%,% (Figure 2) / Custom Dimming Curve / Dimmed To Off |
| RFI/EMI | FCC Part 15A Non-Consumer |
| Output Type | LED Class 2 |
| Battery Type | LiFePO4 6.4VDC (Part# FHSBATL2-3.2L) |
| Battery Capacity Available | 3200mA |
| Battery Recharge Time | 12 Hours |
| Max. Case Temperature | 85°C(185°F) |
| Ambient Operating Temperature Range | 0°C to 48°C(32°F to 118.4°F) |
| Sound Rating | A |
| Input Surge Protection | Line-Neutral 3kV , Line & Neutral-Gound 6kV , Ring Wave ANSI/IEE62.41 |
| Protections | Input Current Protection Output Open Circuit Protection Overload Protection Over Temperature Protection Output Short Circuit Protection Output To Ground Short Circuit Protection |
| Service Life | 50,000 hours |
| Approvals / Class | RoHS , cURus , CEC , Dry or Damp Locations |

MECHANICAL DATA

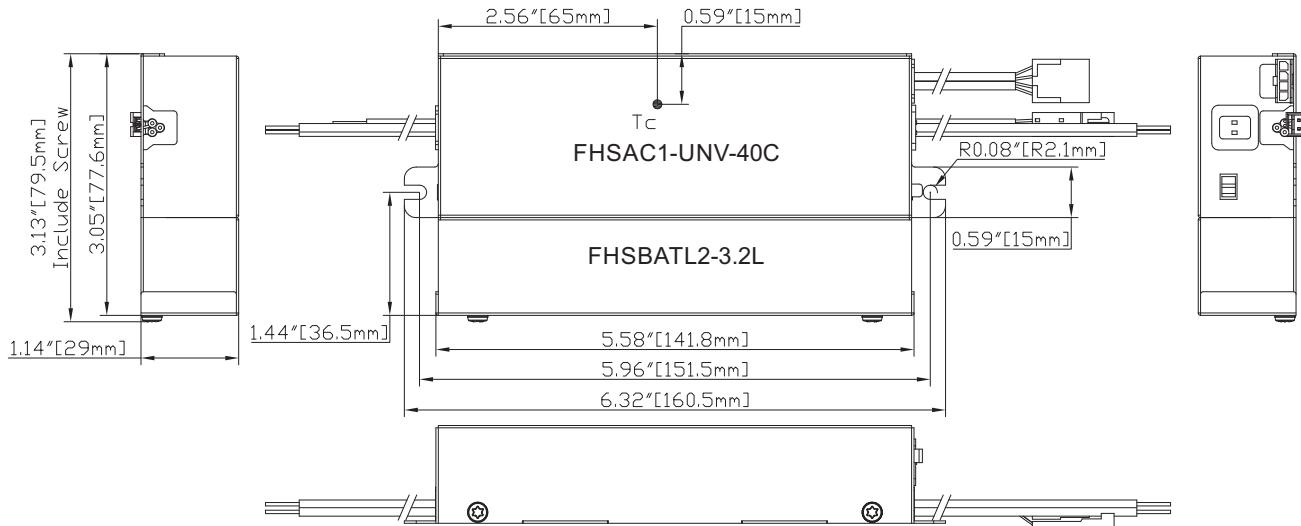

Case Tolerance=? .02"

Fulham extends a limited warranty to the original purchaser or first user for a period of 5 years@Tc 63°C from the date of manufacture when properly installed and operated under normal conditions of use. The usage of appropriate series connected Surge Protection Device (SPD) is required in high risk applications. For complete terms and conditions, please refer to the Warranty Center at www.fulham.com. Specifications subject to change without notice.

Figure 1

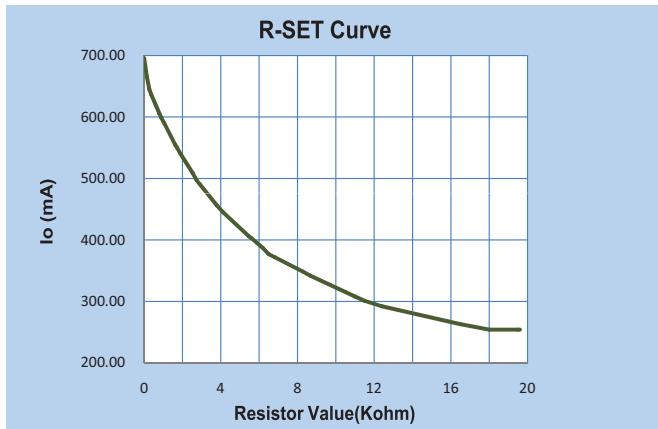


Figure 2

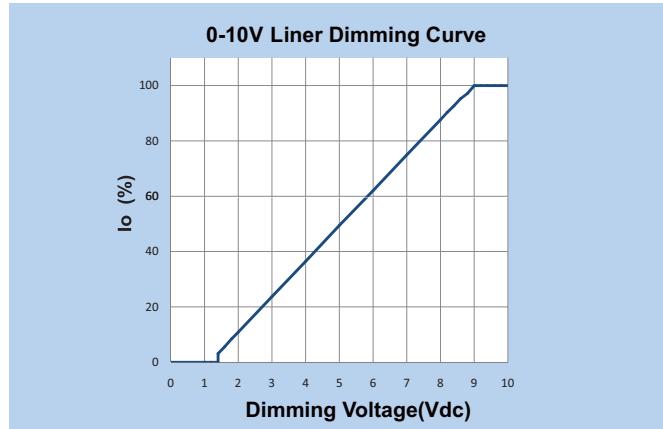


Figure 3

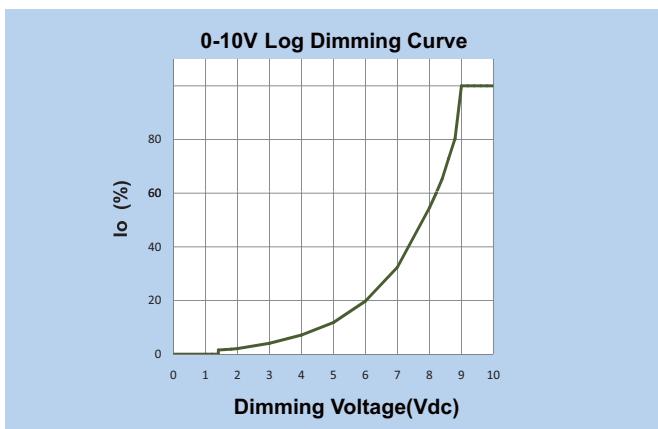


Figure 4

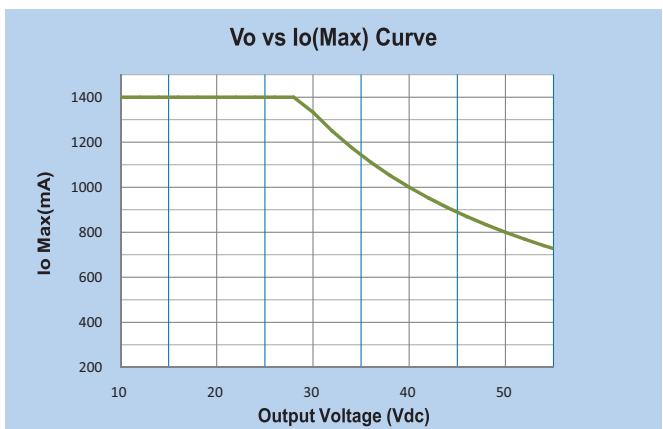


Figure 5


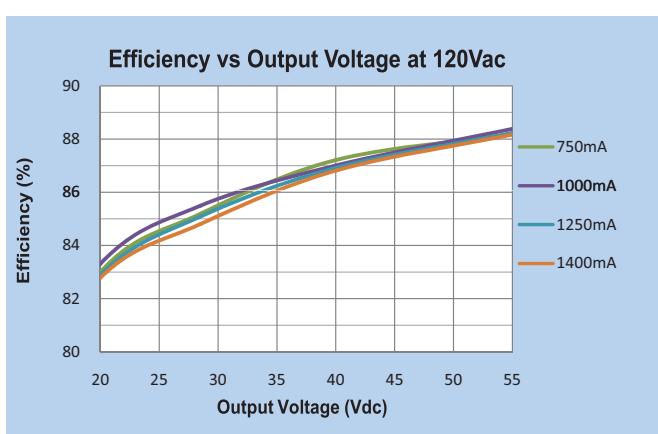


Figure 6

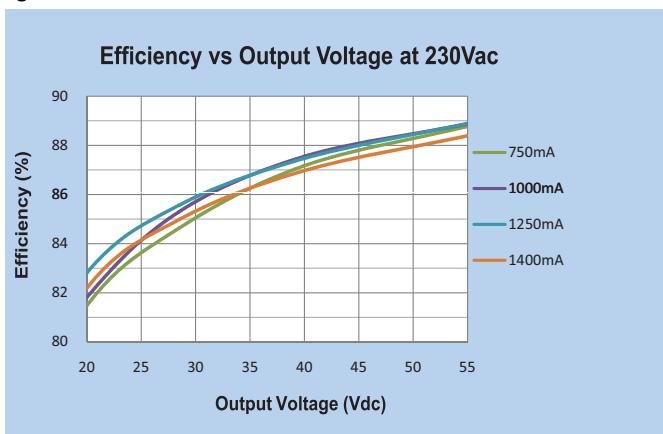

Fulham extends a limited warranty to the original purchaser or first user for a period of 5 years@Tc 63°C from the date of manufacture when properly installed and operated under normal conditions of use. The usage of appropriate series connected Surge Protection Device (SPD) is required in high risk applications. For complete terms and conditions, please refer to the Warranty Center at www.fulham.com. Specifications subject to change without notice.

Figure 7

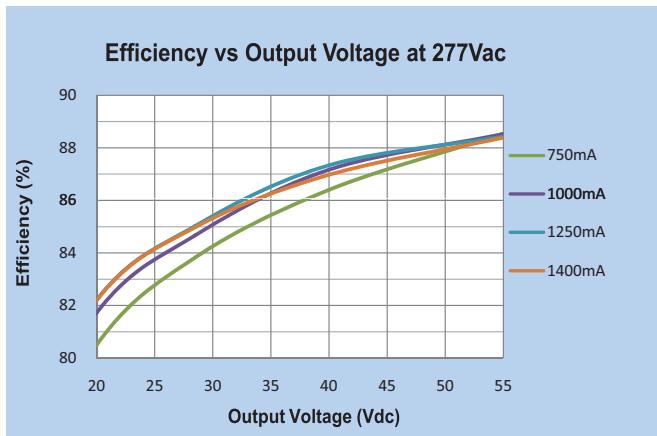


Figure 8

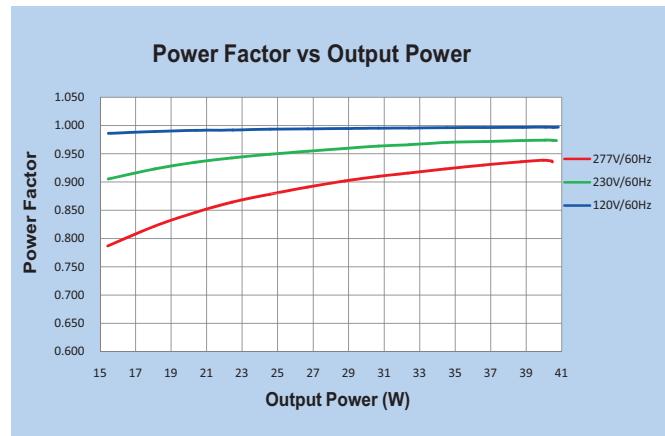


Figure 9

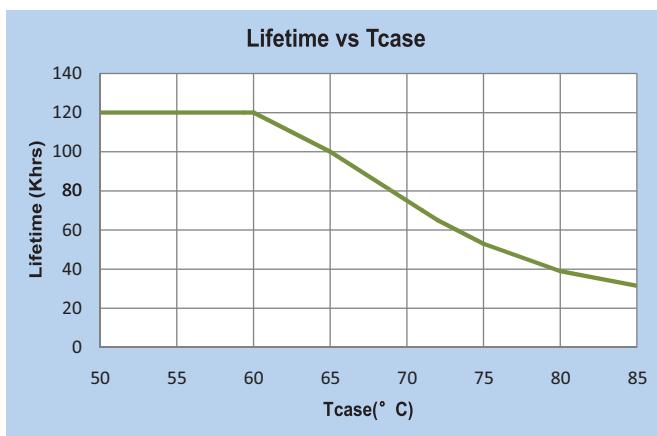


Figure 10

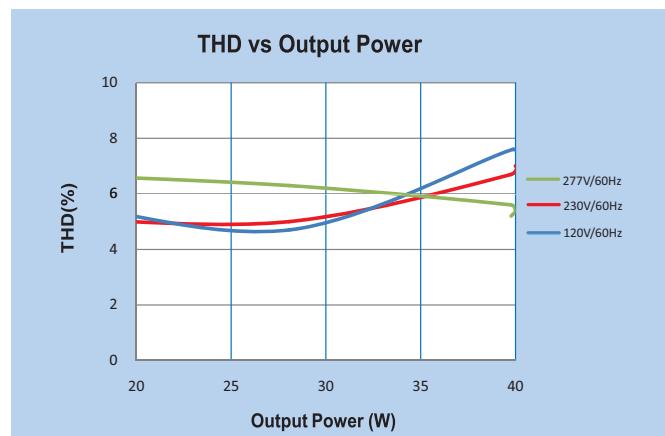


Figure 11



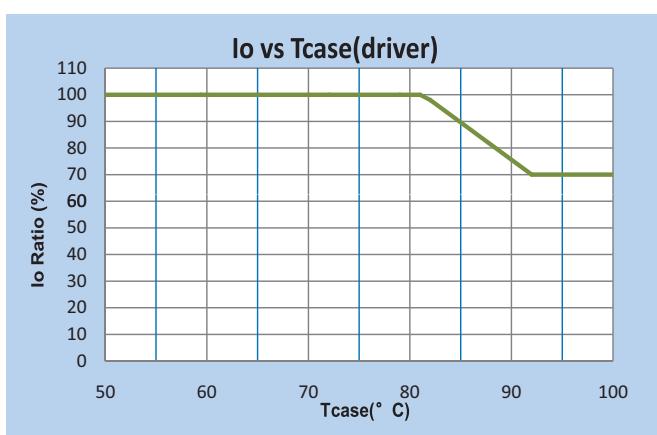


Figure 12

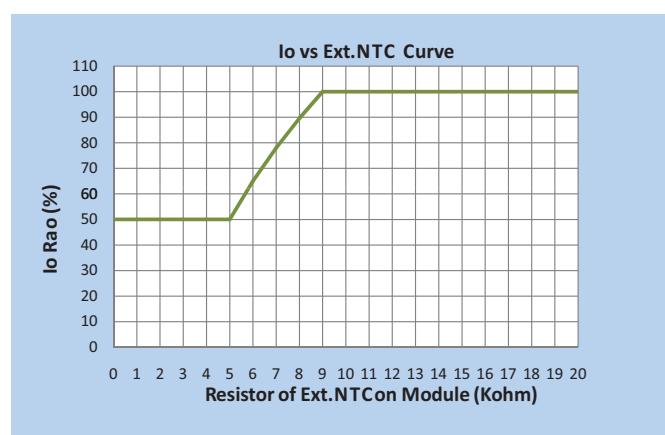

Fulham extends a limited warranty to the original purchaser or first user for a period of 5 years@Tc 63°C from the date of manufacture when properly installed and operated under normal conditions of use. The usage of appropriate series connected Surge Protection Device (SPD) is required in high risk applications. For complete terms and conditions, please refer to the Warranty Center at www.fulham.com. Specifications subject to change without notice.

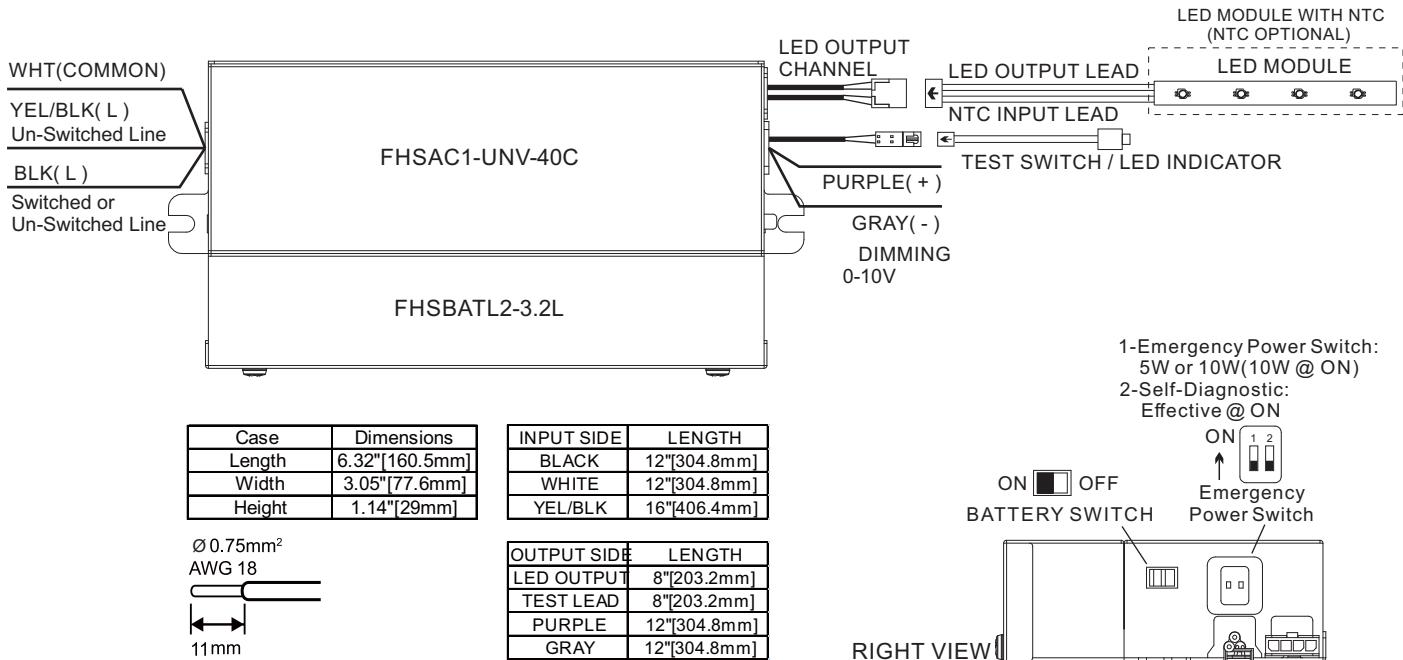

NOTE: 1. The driver must be grounded.
 2. Once assembly, installation or servicing is complete, set the BATTERY SWITCH to the ON position.

SELF DIAGNOSTIC INSTRUCTIONS / OPERATION:

If Dip Switch 2 (Self-Diagnostic Switch) is set to the OFF position:

The self diagnostic feature is disable. A functionality test shall be manually conducted every thirty(30) days to ensure the emergency LED light source illuminates as intended. A full discharge test shall be conducted once a year; the LED light source shall illuminate for a minimum of ninety (90) minutes for the 10W load (Dip Switch 1 is set to the ON position) or one hundred eighty (180) minutes for 5W load (Dip Switch 1 is set to the OFF position).

If Dip Switch 2 (Self-Diagnostic Switch) is set to the ON position:

The self diagnostic feature is enable .The emergency LED driver will conduct a self check for thirty (30) seconds every thirty (30) days; and ninety (90) minutes or one hundred eighty (180) minutes self check every 12 months. After every self check the LED indicator light will indicate a status signal. A single self-diagnostic test can be activated by pressing the test switch three (3) times. Refer to Indicators Status Table for details.

When user toggle the Dip Switch, the LED indicator on Switch button would flash 3 times, 2.5S ON/0.5S OFF for Enabled, while 0.5S ON/2.5S OFF for Disabled.

TEST SWITCH INDICATOR STATUS:

| LED Indicators Status | EM Driver Status/Mode |
|--|--|
| ● Solid Green | System OK/AC OK(Self-diagnostic Enabled or Disabled) |
| ● Slow Flashing Red, 4s on/1s off | Battery PACK not found, check BAT pack. |
| ● Flashing Red, 1s on/1s off | Battery PACK Failure, replace BAT pack. |
| ● Flashing Green, 1s on/1s off | Self-diagnostic process ongoing. |
| ● Fast Flashing Red, 0.1s on/0.1s off | Charging circuit abnormal / chaging process failed . |
| ● Very Slow Flashing Red, 4s on/4s off | PCB OTP/Discharging overheat. |
| ● None. Both LEDs OFF | Normal working in EM mode. |
| ● Green/Red alternative flashing, 1s green/1s red. | When LED output is OVP/NO LOAD in AC Mode. |

1. EM Test: Press and hold test button (>1s)to enter EM mode for testing in normal AC powered .
2. Manual Self-Diagnostic(When Self-Diagnostic Enabled - Dip Switch 1 set to the ON position): After charging twelve (12) hours or battery fully charged, quickly press the test button three(3) times within three(3) seconds to force the controller to enter a Self-Diagnostic cycle. To quit the self-diagnostic cycle after engaged press and hold the test button for ten(10) seconds.

Programming:

This driver can be programmed using Fulham SmartSet TPSB-100(E). Programming features include the following:

- * Output Current : 250-1400mA
- * Dimming Curve
- * LED NTC Thermal Protection



Important Safety Instructions

When using electrical equipment and this lighting device basic safety precaution should be followed at all times including but not limited to the following:

PLEASE READ CAREFULLY AND FOLLOW ALL INSTRUCTIONS FOR YOUR OWN SAFETY

- IMPORTANT:** An un-switched AC power source of 120VAC to 277VAC is required for the yellow/black and white leads.
- IMPORTANT:** A switched or un-switched AC power source of 120VAC to 277VAC is acceptable for the black lead only.
- This device is designed for use in fixtures listed for **dry and damp locations**.

CAUTION: Make sure all electrical connections conform to the National Electrical Code and all applicable local regulations.

CAUTION

CAUTION: Do not mount near gas or electric heaters.

CAUTION: Do not use this emergency driver with accessory equipment other than recommended by manufacturer; failure to follow this may cause an unsafe condition. Servicing should only be performed by qualified service personnel.

CAUTION: Do not use this emergency driver for other than intended use.

CAUTION: Battery is rechargeable LiFePO4 type and must be recycled or disposed of properly.

CAUTION: Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.

ASSEMBLY and FIELD INSTALLATION WIRING: **WARNING** AC power must be off before proceeding with assembly, installation or servicing of emergency driver. Additionally ensure that the battery is disconnected (Battery Switch set to OFF).

TESTING SYSTEM: The emergency battery requires a minimum charge time of one (1) hour before testing the circuit. A minimum of twelve (12) hours is required for a full charge.

RATED EMERGENCY OPERATION Ninety (90) minutes for the 10W load or one hundred eighty (180) minutes for the 5W load. The 10W or 5W option is determined by the position of Dip Switch 1 (Emergency Power Selection Switch).