


## **Configuring a V210P with an Exetel VoIP account.**

*Before proceeding you will need to complete the setup of all required hardware components as per the User Guide that came supplied with your V210P.*

- Ensure that you have the following information on hand. This information will be provided by Exetel.
  1. VoIP Username
  2. VoIP Password
  3. Sip Proxy Server/Domain Name
  4. Codec
- Connect your V210P to your computer. Ensure that your computer is connected to the LAN port of the VoIP ATA. The WAN port of the V210P should be connected to the ADSL/cable modem or router (Internet Source).
- Now open up your web browser (Internet Explorer or Mozilla Firefox or Safari or any other browser). In the address bar, type <http://192.168.22.1>

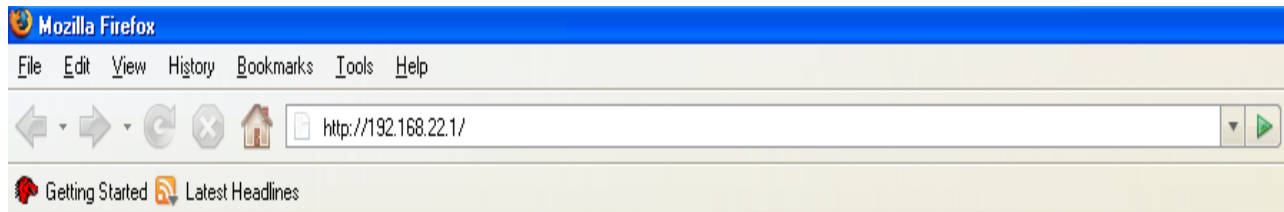

- Now Press enter or click on "go". The Login screen will now appear as per the picture below
- In the Username field, type in **admin**
- In the Password field, type in **admin**
- Click on the **Login** button

**Login V210P**

Enter your username and password to login  
V210P

Username

Password

- You will then be presented with the System Information page.  
Click on **"VoIP"** on the left hand side and then click on **"SIP Service Provider"**.

**NetComm®****V210P****NetComm®**

**Status**

- System Info
- Network Status
- VoIP Status

**Configuration**

- WAN
- LAN
- VoIP
- DDNS
- VLAN
- DMZ
- Virtual Server
- SNTP Settings
- Alarm Settings
- System Authority
- Save Settings/Reboot

**System**

- Reset factory default
- Backup/Restore
- Firmware Update
- Auto Update

## VoIP Configuration

You can configure the VoIP settings, please click the hyperlink.

**SIP Settings**

- SIP Service Provider**
- Port Settings
- Codec Settings
- Codec ID Settings
- DTMF Settings
- RPort Settings
- QoS Settings

**Phone Book**

- Phone Book

**Phone Settings**

- Call Forward
- Volume Settings
- DND Settings
- Caller ID Settings
- Dial Plan Settings
- Flash Time Settings

**Status**

- [System Info](#)
- [Network Status](#)
- [VoIP Status](#)

**Configuration**

- [WAN](#)
- [LAN](#)
- [VoIP](#)
- [DDNS](#)
- [VLAN](#)
- [DMZ](#)
- [Virtual Server](#)
- [SNTP Settings](#)
- [Alarm Settings](#)
- [System Authority](#)
- [Save Settings/Reboot](#)

**System**

- [Reset factory default](#)
- [Backup/Restore](#)
- [Firmware Update](#)
- [Auto Update](#)

## System Information

This page illustrates the system related information.

Model Name:	V210P
Firmware Version:	Wed Dec 19 14:01:17 2007
Codec Version:	Mon Jun 04 13:32:46 2007
Software Version:	RMDS1PA_70607_NET_04 (70903) - (2)

- You will now be presented with your SIP Settings. You will need to fill in the information in the required fields given by Exetel as mentioned earlier: your Exetel username, password, Sip Proxy Server/Domain Name and Codec.

1. **SIP Proxy Domain:** sip1.exetel.com.au
2. **Proxy Server:** sip1.exetel.com.au
3. **Display Name:** Exetel VoIP Phone Number
4. **User Name:** Exetel VoIP Phone Number
5. **Auth. ID:** Exetel VoIP Phone Number
6. **Auth. Password:** Exetel VoIP Password
7. **SIP Expire Time:** 240

Click on "**Submit**" at the bottom of the page to apply the settings.

## SIP Service Provider

You can set information of service domains in this page.

SIP Service Provider	
Active:	<input checked="" type="radio"/> On <input type="radio"/> Off
SIP Proxy Domain:	<input type="text" value="sip1.exetel.com.au"/>
Proxy Server:	<input type="text" value="sip1.exetel.com.au"/>
Outbound Proxy:	<input type="text"/>
Display Name:	<input type="text" value="Exetel VoIP Phone Number"/>
User Name:	<input type="text" value="Exetel VoIP Phone Number"/>
Auth. ID:	<input type="text" value="Exetel VoIP Phone Number"/>
Auth. Password:	<input type="text" value="Exetel VoIP Password"/>
Subscribe for MWI:	<input type="radio"/> On <input checked="" type="radio"/> Off
Status:	Not Registered

SIP Expire Time:	<input type="text" value="240"/> (15~86400 sec)
Use DNS SRV:	<input type="radio"/> On <input checked="" type="radio"/> Off

- Now click on **"Save Settings/Reboot"** and then click on **"Save & Reboot"**. This will save your settings in the V210P and reboot the device.

Status

- ▶ [System Info](#)
- ▶ [Network Status](#)
- ▶ [VoIP Status](#)

Configuration

- ▶ [WAN](#)
- ▶ [LAN](#)
- ▶ [VoIP](#)
- ▶ [DDNS](#)
- ▶ [VLAN](#)
- ▶ [DMZ](#)
- ▶ [Virtual Server](#)
- ▶ [SNTP Settings](#)
- ▶ [Alarm Settings](#)
- ▶ [System Authority](#)
- ▶ [Save Settings/Reboot](#)

System

- ▶ [Reset factory default](#)
- ▶ [Backup/Restore](#)
- ▶ [Firmware Update](#)
- ▶ [Auto Update](#)

## Save Settings / Reboot

You have to save settings & reboot to effect them.

Save Settings and reboot:

Save & Reboot

You can press the reboot button to restart the system.

Reboot system without saving settings:

Reboot Only

- After rebooting the V210P, check the status of the lights.  
The SIP light should turn ON. That means you are connected to Exetel. You can also check within the V210P by clicking on **"VoIP Status"** on the left hand side.

**NetComm**<sup>®</sup>**V210P****NetComm**<sup>®</sup>

**Status**

- System Info
- Network Status
- VoIP Status**

**Configuration**

- WAN
- LAN
- VoIP
- DDNS
- VLAN
- DMZ
- Virtual Server
- SNTP Settings
- Alarm Settings
- System Authority
- Save Settings/Reboot

**System**

- Reset factory default
- Backup/Restore
- Firmware Update
- Auto Update

## VoIP Service Status

The page shows current status of VoIP SIP Service provider.

VoIP Service Status	
SIP Proxy Domain:	sip1.exetel.com.au
Display Name:	Exetel VoIP Phone Number
User Name:	Exetel VoIP Phone Number
Status:	Registered

- Your V210P is now configured and you can plug in the phone set in the V210P and check for the dial tone.

**Congratulations, you now connected to Exetel's VoIP service using NetComm V210P**