



**SEW
EURODRIVE**

Manual



MOVITRAC® LTE-B/LTP-B

Accessories

Braking Resistors, Filters, Chokes, Shielding



Table of contents

1 General information	5
1.1 About this documentation	5
1.2 Rights to claim under limited warranty	5
1.3 Other applicable documentation	5
1.4 Copyright notice	5
2 Flatpack resistors.....	6
2.1 Technical data	6
2.2 Installation IP20	7
2.3 Installation IP55	9
2.3.1 Installation size 4:	9
2.3.2 Installation size 5:	11
2.4 Startup and operation	12
3 EMC components	13
4 NF line filter.....	14
4.1 Electromagnetic compatibility	14
4.2 Technical data	15
4.2.1 IP20/IP66, 1 x 200 – 250 V, 10 – 25 A.....	15
4.2.2 IP20/IP66, 3 x 220 – 500 V, 6 – 300 A.....	15
4.2.3 IP20, 3 x 600 V, 6 – 25 A.....	16
4.2.4 IP20, 3 x 690 V, 50 – 180 A.....	16
4.3 Dimensions	17
4.3.1 IP20, 1 x AC 200 – 250 V, 10 – 25 A.....	17
4.3.2 IP66, 1 x AC 200 – 250 V, 10 – 25 A.....	18
4.3.3 IP20, 3 x AC 220 – 480 V, 6 – 50 A	19
4.3.4 IP66, 3 x AC 220 – 480 V, 6 – 25 A	20
4.3.5 IP00/IP20, 3 x AC 220 – 400 V, 80 – 300 A.....	21
4.3.6 IP20, 3 x AC 600 V/690 V, 6 – 25 A.....	22
4.3.7 IP20, 3 x AC 600 V/690 V, 50 A.....	23
4.3.8 IP20, 3 x AC 600 V/690 V, 80 – 180 A.....	24
4.4 Installation	24
4.5 Startup and operation	25
5 Line chokes.....	26
5.1 General	26
5.2 Technical data	27
5.2.1 IP20, 1 x 230 V, 3 x 230 V, 6 – 36 A.....	27
5.2.2 IP00/IP20, 3 x 230 – 500 V, 50 – 300 A.....	27
5.2.3 IP66, 1 x 230 V, 3 x 230 – 600 V, 6 – 25 A.....	27
5.3 Dimensions	28
5.3.1 IP20, 1 x 230 V, 10/25 A.....	28
5.3.2 IP20, 3 x 230 – 500 V, 6/10 A.....	28
5.3.3 IP20, 3 x 230 – 500 V, 36 – 90 A.....	29
5.3.4 IP00, 3 x 230 – 500 V, 200 A.....	29
5.3.5 IP00, 3 x 230 – 500 V, 300 A.....	30

Table of contents

5.3.6	IP66, 1 x 230 V, 3 x 230 – 600 V, 6 – 25 A.....	30
5.4	Installation	31
5.5	Startup and operation	31
6	Output chokes	32
6.1	Technical data	33
6.1.1	IP20, 3 × 200 – 500 V, 8 – 75 A.....	33
6.1.2	IP00, 3 × 200 – 600 V, 180 – 300 A.....	33
6.1.3	IP66, 3 × 200 – 600 V, 8 – 18 A.....	33
6.2	Dimensions	34
6.2.1	IP20, 3 × 200 – 500 V, 8 – 75 A.....	34
6.2.2	IP00, 3 × 200 – 400 V, 180 – 300 A.....	34
6.2.3	IP66, 3 × 200 – 600 V, 8 – 18 A.....	35
6.3	Installation	35
6.4	Startup and operation	36
7	Shield plate IP20	37
7.1	Installation	37
7.2	Type designation and specification	38
7.3	Startup and operation	38
Index	39

1 General information

1.1 About this documentation

This documentation is an integral part of the product. The documentation is intended for all employees who perform assembly, installation, startup, and service work on the product.

Make sure this documentation is accessible and legible. Ensure that persons responsible for the machinery and its operation as well as persons who work on the device independently have read through the documentation carefully and understood it. If you are unclear about any of the information in this documentation or require further information, contact SEW-EURODRIVE.

1.2 Rights to claim under limited warranty

Read the information in this documentation. This is essential for fault-free operation and fulfillment of any rights to claim under limited warranty. Read the documentation before you start working with the unit!

1.3 Other applicable documentation

This document supplements the operating instructions and limits the application notes according to the following information. Use this document only together with the operating instructions.

1.4 Copyright notice

© 2015 SEW-EURODRIVE. All rights reserved.

Unauthorized reproduction, modification, distribution or any other use of the whole or any part of this documentation is strictly prohibited.

2 Flatpack resistors

A special resistor in flat design is available for MOVITRAC® LT.

Braking resistor type	Part number	LTE-B	LTP-B
BW LT 100 002 ¹⁾	18208770	X	X
HD LT 050 002 55 ²⁾	18218342	X	-
BW LT 033 005 ²⁾³⁾	18201938	-	X

1) For sizes 2 and 3.

2) No UL approval.

3) For sizes 4 and 5.

X = available

- = not available

A braking resistor connected to the MOVITRAC® LT can be used to convert braking energy generated by the motor into thermal energy. This braking resistor is suitable for applications with short deceleration ramp or high mass moment of inertia.

Function

The resistor is installed in the frequency inverter.

- The MOVITRAC® LT firmware protects the braking resistors BW LT of overload, thus no external overload relay is required.
- An internal fusible element ensures fault-free operation.
- The BW LT 100 002 can be compactly mounted in the heat sink of the MOVITRAC® LT and in this way offers an integrated solution.

2.1 Technical data

Type	BW LT 100 002	BW LT 050 002 55	BW LT 033 005	
Part number	18208770	18218342	18201938	
100% cdf	200 W	200 W	500 W	
Resistance value RBW	100 Ω ±10%	50 Ω ±10%	33 Ω ±10%	
Max. ambient temperature	50 °C	50 °C	50 °C	
Degree of protection	IP20	IP55	IP55	
Dimensions L × W × H	mm inch	188 × 41 × 9 7.402 × 1.614 × 0.354	330 × 80 × 12 12.99 × 3.150 × 0.472	330 × 80 × 10 12.99 × 3.150 × 0.394

2.2 Installation IP20

Read the corresponding operating instructions before you start working.

⚠ WARNING



Danger of electric shock. Dangerous voltage levels may still be present inside the unit and at the terminals up to 10 minutes after disconnection from the power supply.


Severe or fatal injuries.

- Before removing the supply cable, disconnect MOVITRAC® LT from the power supply and wait at least 10 minutes.

Installation:


The installations of LTE-B and LTP-B are identical. The installation is explained using the LTP-B as example.

1. Insert the braking resistor into the slot at the bottom of the frequency inverter. The flat side of the resistor must point to the front side of the frequency inverter.

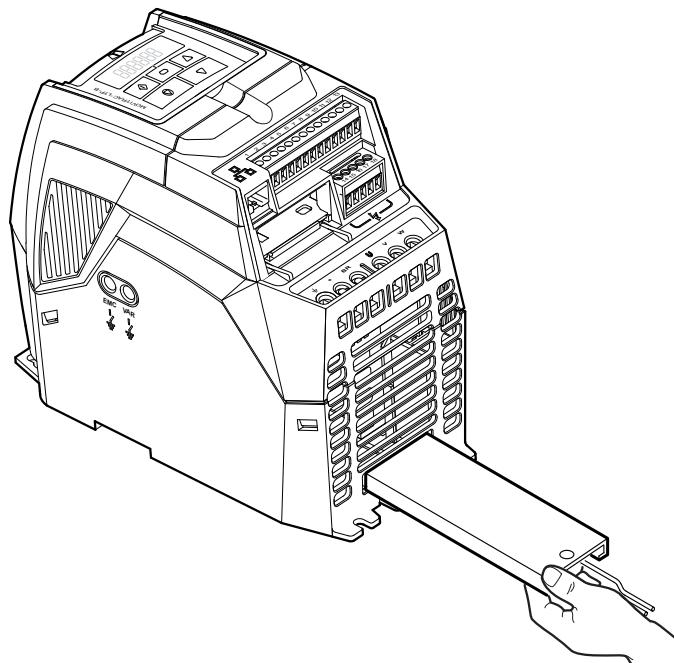


13396283147

2. Attach the resistor by inserting the 2 supplied screws into the tapped holes [A] on the backside of the frequency inverter.

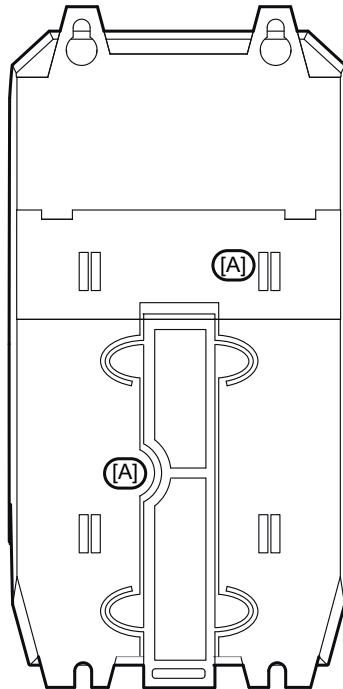

13396287755

3. Make sure that the retaining screws and spring washers are securely fixed before you start operation.
4. Break out the plastic covers over the terminals "+" and "BR".
5. Connect the braking resistor to terminals "+" and "BR" of the frequency inverter.

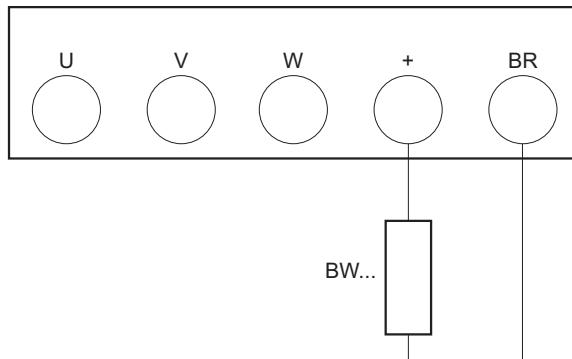

13083415179

2.3 Installation IP55

Read the corresponding operating instructions before you start working.

⚠ WARNING




Danger of electric shock. Dangerous voltage levels may still be present inside the unit and at the terminals up to 10 minutes after disconnection from the power supply.

Severe or fatal injuries.

- Before removing the supply cable, disconnect MOVITRAC® LT from the power supply and wait at least 10 minutes.


2.3.1 Installation size 4:

1. Remove the fan unit by pressing the lugs [A]. 2 on each housing side.
2. Remove the screws [C] and keep them for later use.

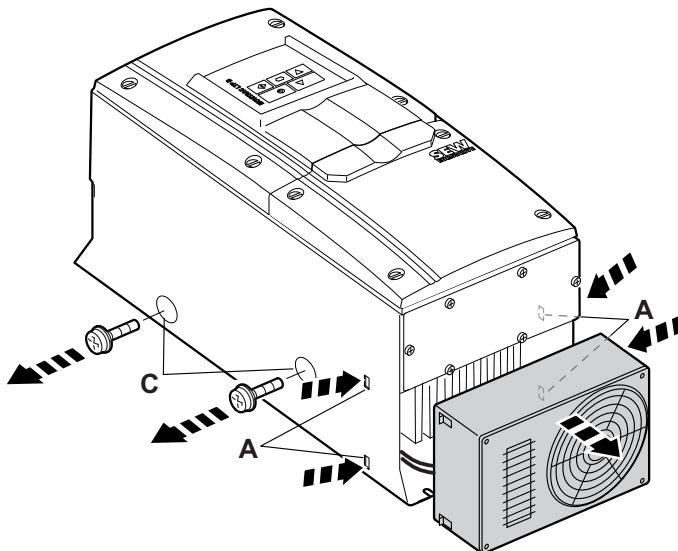

13943465227

3. Insert the braking resistor into slot [B] at the heat sink. The grooved side of the braking resistor points outwards.

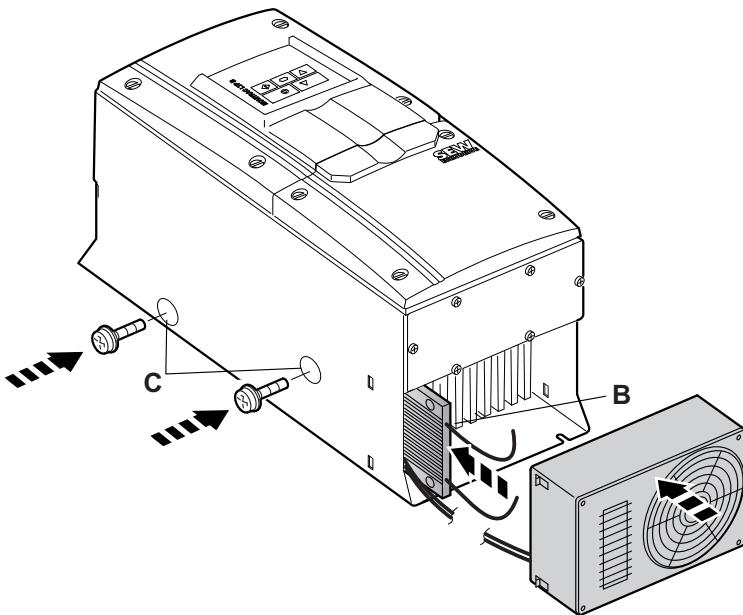


13943460363

4. Attach the braking resistor by inserting the supplied screws through the holes [C] into the tapped holes. Sufficiently tighten the screws.
5. Reattach the fan unit onto the housing and route through the connection cable.
6. Route the connection cable through the duct plate into the housing. Mount a gland seal or a suitable cable bushing in the plate if necessary.
7. Connect the braking resistor to the terminals "+" or "DC+" and "BR" of the frequency inverter. See chapter "Installation IP20" (→ 7).


2.3.2 Installation size 5:

1. Remove the fan unit by pressing the lugs [A]. 2 on each housing side.

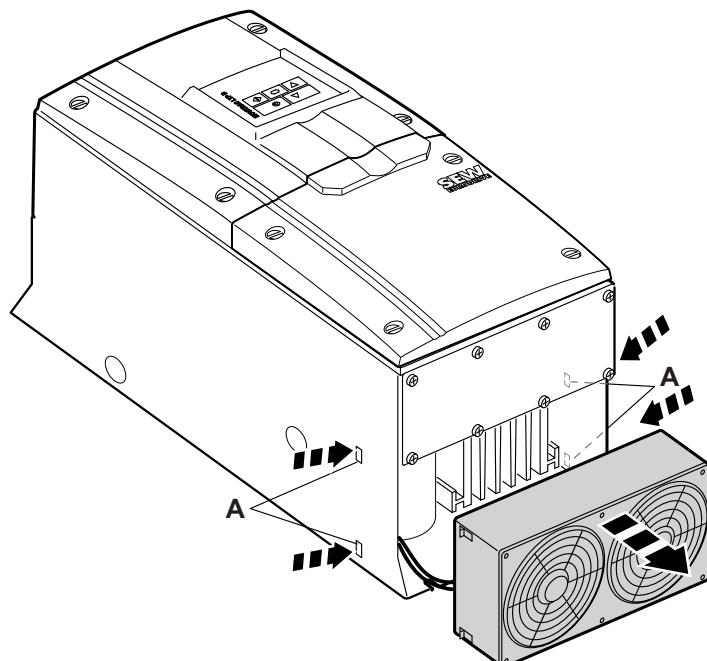

13943467659

2. Insert the braking resistor into one of the slots [B] at the heat sink. In the frequency inverter, 2 braking resistors can be connected in parallel. The grooved side of the braking resistor points outwards.

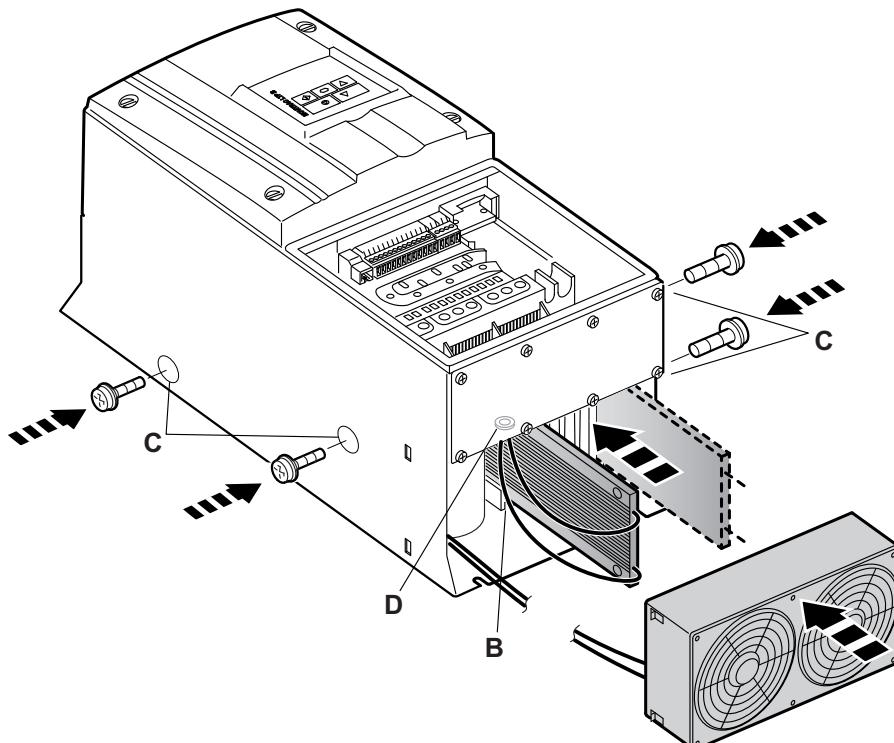

13943462795

3. Route the connection cable through the sealing grommet [D] into the housing.
4. Attach the braking resistor by inserting the supplied screws through the holes [C] into the tapped holes of the frequency inverter.

5. Reattach the fan unit onto the housing.
6. Connect the braking resistor to the terminals "+" or "DC+" and "BR" of the frequency inverter. See chapter "Installation IP20" (\rightarrow 7).

2.4 Startup and operation

For MOVITRAC® LTE-B:

- Set parameter $P-14$ to "101" to obtain access to the advanced menu.
- Set parameter $P-34$ to "1" to release the brake chopper.

For MOVITRAC® LTP-B:

- Set parameter $P1-14$ to "201" to access the advanced menu.
- Set parameter $P6-19$ braking resistance value.
- Set parameter $P6-20$ braking resistor power.


3 EMC components

You can install EMC components to improve interference immunity.

EMC components, such as line filters and output filters, require a large-area, metallic contact with the frequency inverter via a shared mounting plate.

They must be placed as close to the corresponding unit as possible in order to keep the lines short between the EMC component and the unit (max. 50 cm).

Maintain the following order of the components in the control cabinet according to the figures below:

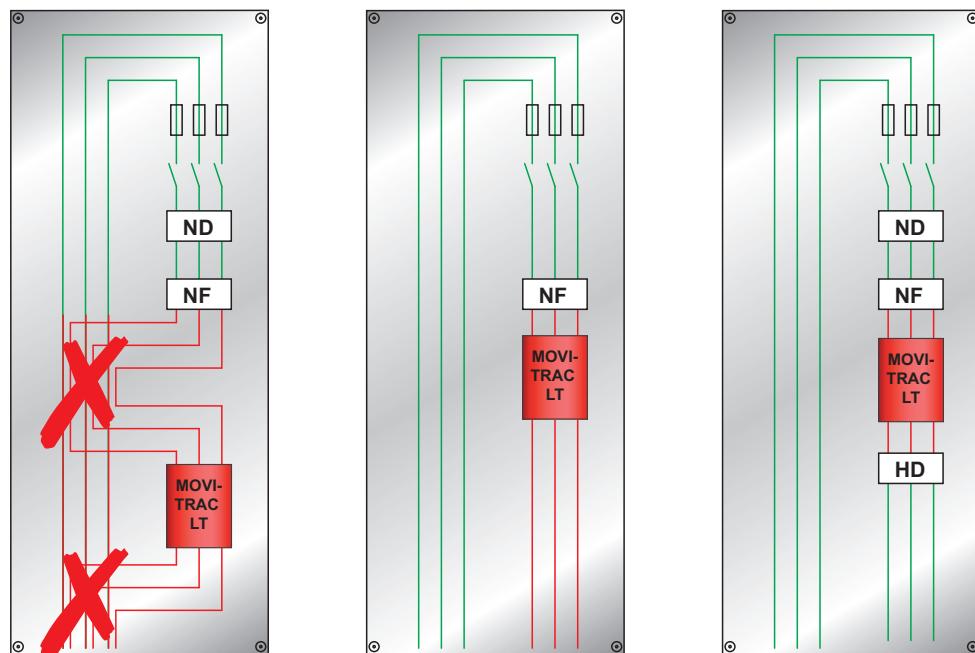

13083420171

ND = Line choke
 NF = Line filter
 HD = Output chokes

Green cable = Cable without EMC
 Red cable = Cable with EMC

Make sure that the supply cable (before the line filter) does not cross or run in parallel to the cable with EMC (between line filter and frequency inverter). Improper routing can lead to EMC interference in cables that were already filtered.

If these requirements cannot be met the use of shielded cables is recommended. To eliminate inductive coupling, no single conductors should be used for connection.

If you install EMC components on the base plate of the control cabinet due to their high weight (not ideal), you must connect the base plate with the mounting plate using an HD litz wire.

4 NF line filter

Type	Part number	LTE-B	LTP-B
NF LT xxx xxxx xx xx	1841xxxx	X	X

X = available

– = not available

A line filter reduces interference emission via the line cable, which is generated by the inverter due to its operating principle. It mainly serves to meet interference voltage limit requirements in the frequency range from 150 kHz to 30 MHz at the power supply. In addition, a line filter dampens the interference from the supply system affecting the frequency inverter.

All MOVITRAC® LT inverters are developed to minimize interference emission and to ensure a high electromagnetic compatibility for the drives.

Additional EMC filters can be installed to:

- Further reduce grid disturbances.
- Minimize the risk of interferences affecting other devices.

The line filter keeps back the interference voltages generated by the frequency inverter from the power supply system and feeds them back to the frequency inverter.

The use of line filters is recommended for the following requirements:

- Reduced interference emission via the line cable.
- Compliance with limit values.
- Reduced equipotential bonding currents.
- Reduced leakage currents in case of long motor cables.

4.1 Electromagnetic compatibility

With regard to interference emission, MOVITRAC® LT meets the limit values of the standards EN 61800-3 and EN 55014 and can therefore be used in the industry and for household applications (light industry).

The tables below specify the conditions for using MOVITRAC® LT in inverter applications with internal filter:

Inverter type with filter	Cat. C1 (class B)	Cat. C2 (class A)	Cat. C3
			According to EN 61800-3
230 V, 1-phase LTE-B xxxx 2B1-x-xx LTP-B xxxx 2B1-x-xx	No additional filtering required. Use a shielded motor cable.		
230 V, 3-phase LTE-B xxxx 2A3-x-xx LTP-B xxxx 2A3-x-xx 400 V, 3-phase LTE-B xxxx 5A3-x-xx LTP-B xxxx 5A3-x-xx	Use an external filter of the type NF LT xxx xxx. Use a shielded motor cable.	No additional filtering required. Use a shielded motor cable.	

An external filter and a shielded motor cable must be used to meet the requirements for inverters without internal filter:

Inverter type without filter	Cat. C1 (class B)	Cat. C2 (class A)	Cat. C3
230 V, 1-phase LTE-B xxxx 201-x-xx	Use an external filter of the type: NF LT xxx xxx. Use a shielded motor cable.		
230 V, 3-phase LTE-B xxxx 203-x-xx			
400 V, 3-phase LTE-B xxxx 503-x-xx			
575 V, 3-phase LTP-B xxxx 603-x-xx	If necessary, use a line filter of the type NF LT xxx to minimize the electromagnetic interference emission. However, compliance with the limit classes cannot be guaranteed. Use a shielded motor cable.		

4.2 Technical data

4.2.1 IP20/IP66, 1 x 200 – 250 V, 10 – 25 A

Type	Unit	NF LT 010 201-20	NF LT 025 201-20	NF LT 010 201-66	NF LT 025 201-66
Part number		18411029	18411037	18411134	18411142
Nominal voltage U _N (according to EN 50160)	V		1 x AC 200 – 250, 48 – 62 Hz		
Rated current I _N	A	10	25	10	25
Leakage current I	mA		<5		
Operating temperature	°C		-25 to +40		
Degree of protection		IP20		IP66	
Weight	kg / lb	1.32 / 2.91	1.5 / 3.31	1.4 / 3.09	1.6 / 3.53
Assignment for: LTE-B: AC 230 V LTP-B: AC 230 V		0004 0008	0008 – 0022 0015 / 0022	0004 0008	0008 – 0022 0015 / 0022
UL / cUL approval		No / No	No / No	No / No	No / No

4.2.2 IP20/IP66, 3 x 220 – 500 V, 6 – 300 A

Type	Unit	NF LT 006 503-20	NF LT 016 503-20	NF LT 025 503-20
Part number		18411045	18411053	18411061
Nominal voltage U _N (according to EN 50160)	V		3 x AC 220 – 480, 48 – 62 Hz	
Rated current I _N	A	6	16	25
Leakage current I	mA	<10	<35	<35
Operating temperature	°C		-25 to +40	
Degree of protection		IP20		
Weight	kg / lb	1.58 / 3.48	2.5 / 5.51	2.7 / 5.95
Assignment for LTE-B: AC 230 V AC 400 V		0004 / 0008 0008 / 0015	0015 – 0022 0022 – 0055	0040 0075
Assignment for LTP-B: AC 230 V AC 400 V		0008 0008 – 0022	0015 – 0030 0040 / 0055	0040 / 0055 0075 / 0110
UL / cUL approval		No / No	No / No	No / No

Type	Unit	NF LT 006 503-66	NF LT 016 503-66	NF LT 025 503-66
Part number		18411150	18411169	18411177
Nominal voltage U_N (according to EN 50160)	V		3 x AC 220 – 480, 48 – 62 Hz	
Rated current I_N	A	6	16	25
Leakage current I	mA	<10	<35	<35
Operating temperature	°C		-25 to +40	
Degree of protection			IP66	
Weight	kg / lb	1.6 / 3.53	2.5 / 5.51	2.7 / 5.95
Assignment for LTE-B: AC 230 V AC 400 V		0004 / 0008	0015 – 0022	0040
		0008 / 0015	0022 – 0055	0075
Assignment for LTP-B: AC 230 V AC 400 V		0008	0015 – 0030	0040 / 0055
		0008 – 0022	0040 / 0055	0075 / 0110
UL / cUL approval		No / No	No / No	No / No

Type	Unit	NF LT 050 503-20	NF LT 080 503-20	NF LT 180 503-20	NF LT 300 503-00
Part number		18411088	18411096	18411118	18411126
Nominal voltage U_N (according to EN 50160)	V	3 x AC 220 – 480, 48 – 62 Hz	3 x AC 220 – 500, 48 – 62 Hz	3 x AC 220 – 440, 48 – 62 Hz	
Rated current I_N	A	50	80	180	300
Leakage current I	mA	<100	<100	<180	<180
Operating temperature	°C		-25 to +40		
Degree of protection			IP20		IP00
Weight	kg / lb	2.63 / 5.80	7.35 / 16.20	9.98 / 22.00	17.5 / 38.58
Assignment for LTE-B: AC 400 V		0110	-	-	-
		0075 / 0110	0150 / 0185	0220 – 0450	0550 / 0750
Assignment for LTP-B: AC 230 V AC 400 V		0150 – 0220	0300 / 0370	0450 – 0750	0900 – 1600
UL / cUL approval		Yes / No	Yes / No	Yes / No	Yes / No

4.2.3 IP20, 3 x 600 V, 6 – 25 A


Type	Unit	NF LT 006 603-20	NF LT 016 603-20	NF LT 025 603-20
Part number		18411223	18411231	18411258
Nominal voltage U_N (according to EN 50160)	V		3 x AC 600, 48 – 62 Hz	
Rated current I_N	A	6	16	25
Leakage current I	mA	<10	<35	<35
Operating temperature	°C		-25 to +40	
Degree of protection			IP20	
Weight	kg / lb		2.7 / 5.95	
Assignment for LTP-B: AC 600 V		0008 – 0022	0040 – 0075	0110
		No / No	No / No	No / No

4.2.4 IP20, 3 x 690 V, 50 – 180 A

Type		NF LT 050 603-20	NF LT 080 603-20	NF LT 180 603-20
Part number		18411266	18411274	18411282
Nominal voltage U_N (according to EN 50160)	V		3 x AC 690, 48 – 62 Hz	
Rated current I_N	A	50	80	180
Leakage current I	mA	<80	<100	<100
Operating temperature	°C		-25 to +40	
Degree of protection			IP20	
Weight	kg / lb	3.38 / 7.45	5.67 / 12.50	6.99 / 15.41
Assignment for LTP-B: AC 690 V		0150 – 0300	0370 / 0450	0550 – 1100
		No / No	No / No	No / No

4.3 Dimensions


4.3.1 IP20, 1 x AC 200 – 250 V, 10 – 25 A

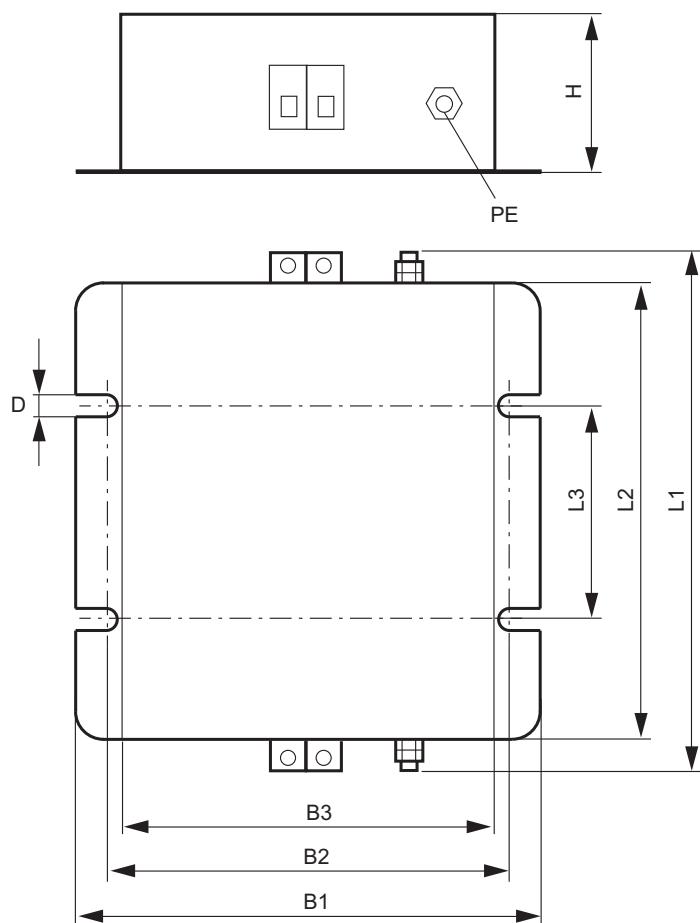

12694590091

Part number	PE connection	L1 mm	L2 mm	L3 mm	B1 mm	B2 mm	B3 mm	H mm	D mm
NF LT 010 201-20	2 x M6	180	160	150	70	45	12.5	65	6.2
NF LT 025 201-20	2 x M6	250	236	220	70	45	12.5	65	6.2


4.3.2 IP66, 1 x AC 200 – 250 V, 10 – 25 A

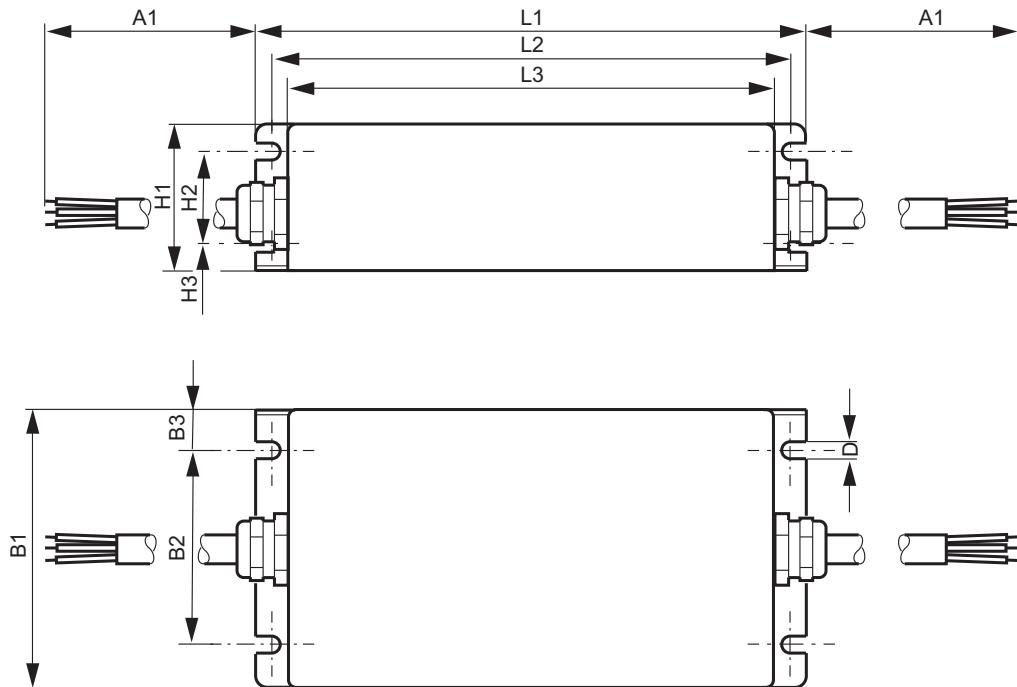

12263312139

Part number	PE connection	L1 mm	L2 mm	L3 mm	B1 mm	B2 mm	B3 mm	H1 mm	H2 mm	H3 mm	D mm	A1 mm
NF LT 010 201-66	3G2.5	180	166	150	70	45	12.5	65	40	12.5	6.2	500
NF LT 025 201-66	3G4.0	250	236	220	70	45	12.5	65	40	12.5	6.2	500

4.3.3 IP20, 3 x AC 220 – 480 V, 6 – 50 A

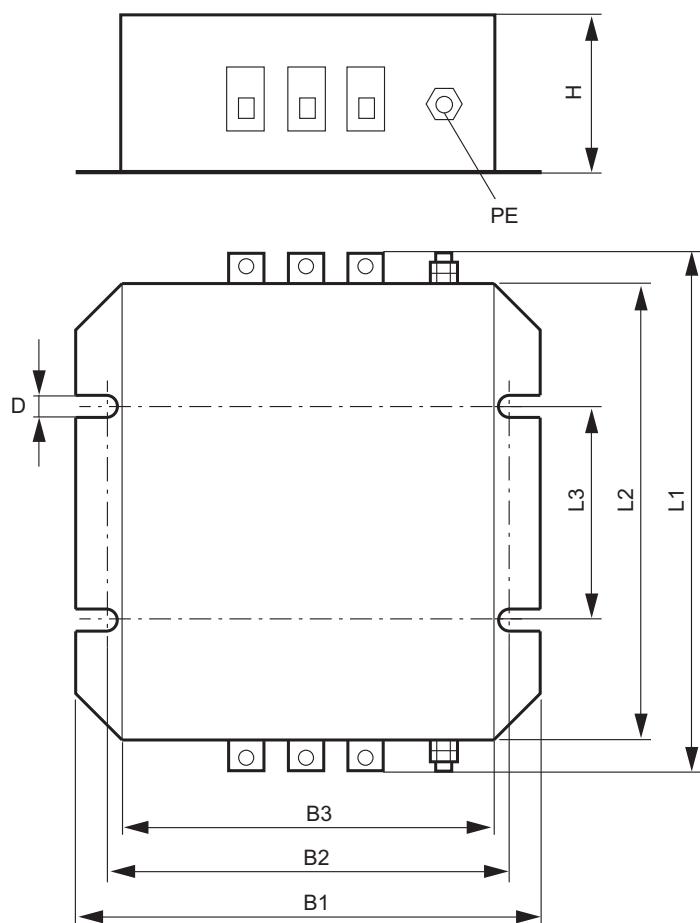


12263306379

Part number	PE connection	L_1 mm	L_2 mm	L_3 mm	B_1 mm	B_2 mm	B_3 mm	H mm	D mm
NF LT 006 503-20	2 x M6	210	196	180	85	55	15	60	6.2
NF LT 016 503-20	2 x M6	230	216	200	120	80	20	65	6.2
NF LT 025 503-20	2 x M6	230	216	200	120	80	20	65	6.2
NF LT 050 503-20	2 x M6	247	200	115	150	136	120	65	6.2


4.3.4 IP66, 3 x AC 220 – 480 V, 6 – 25 A

NF LT 006 503-66, NF LT 016 503-66

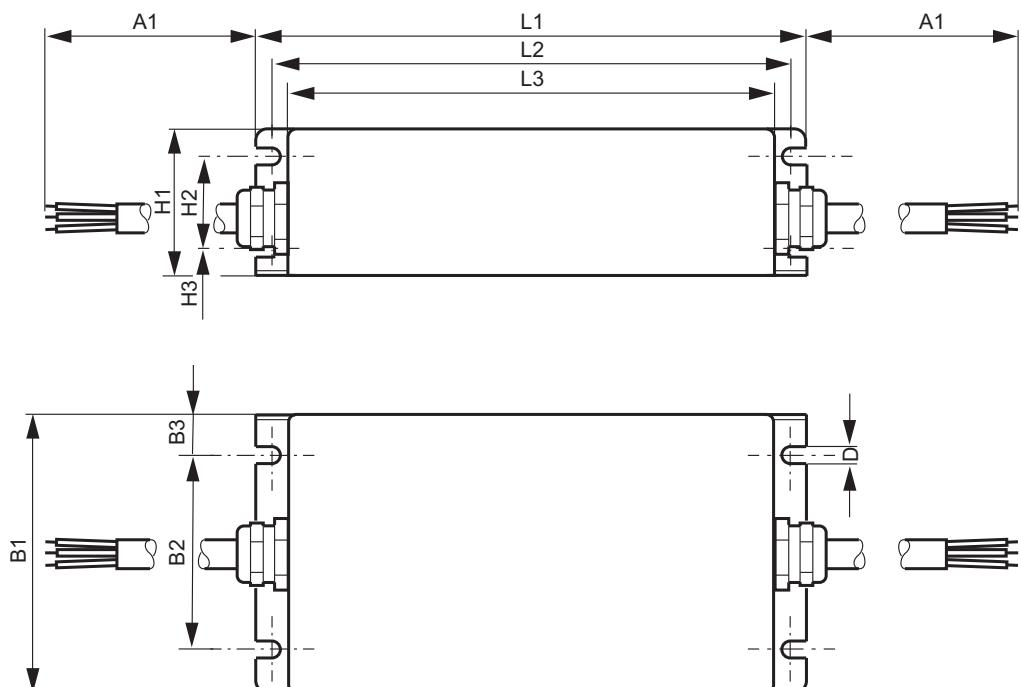

12263312139


NF LT 025 503-66

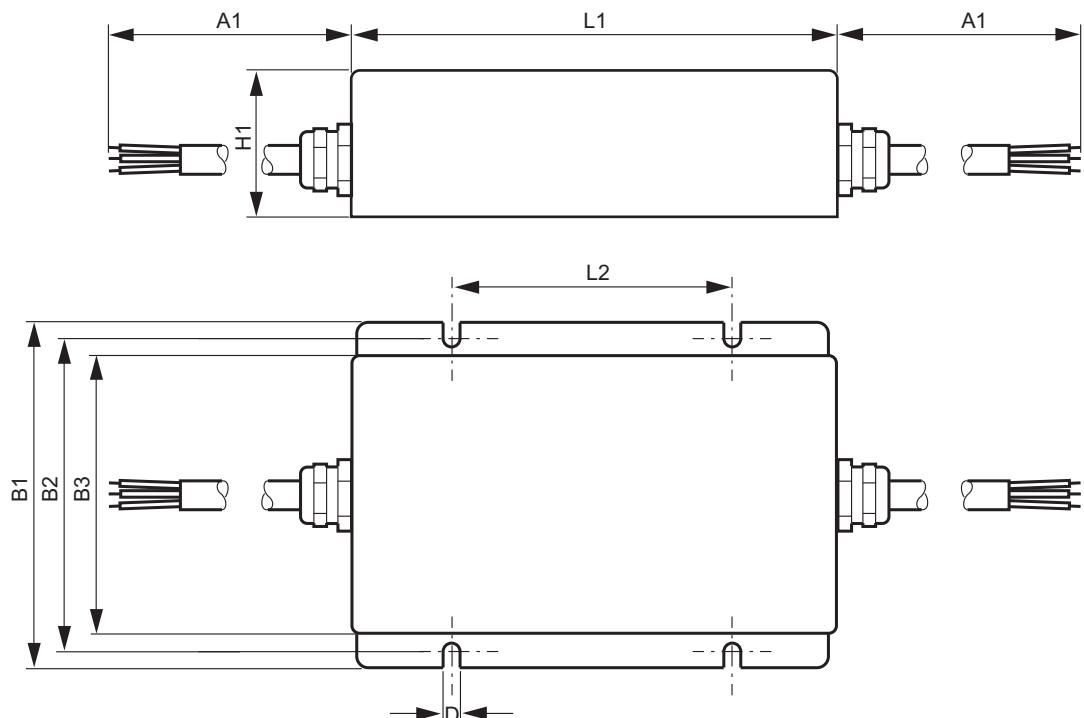

12686783883

Part number	PE connection	L1 mm	L2 mm	L3 mm	B1 mm	B2 mm	B3 mm	H1 mm	H2 mm	H3 mm	D mm	A1 mm
NF LT 006 503-66	4G1.5	210	196	180	85	55	15	60	40	10	6.2	500
NF LT 016 503-66	4G2.5	230	216	200	120	80	20	65	40	12.5	6.2	500
NF LT 025 503-66	4G4.0	200	115	-	150	136	120	65	-	-	6.2	500


4.3.5 IP00/IP20, 3 x AC 220 – 400 V, 80 – 300 A

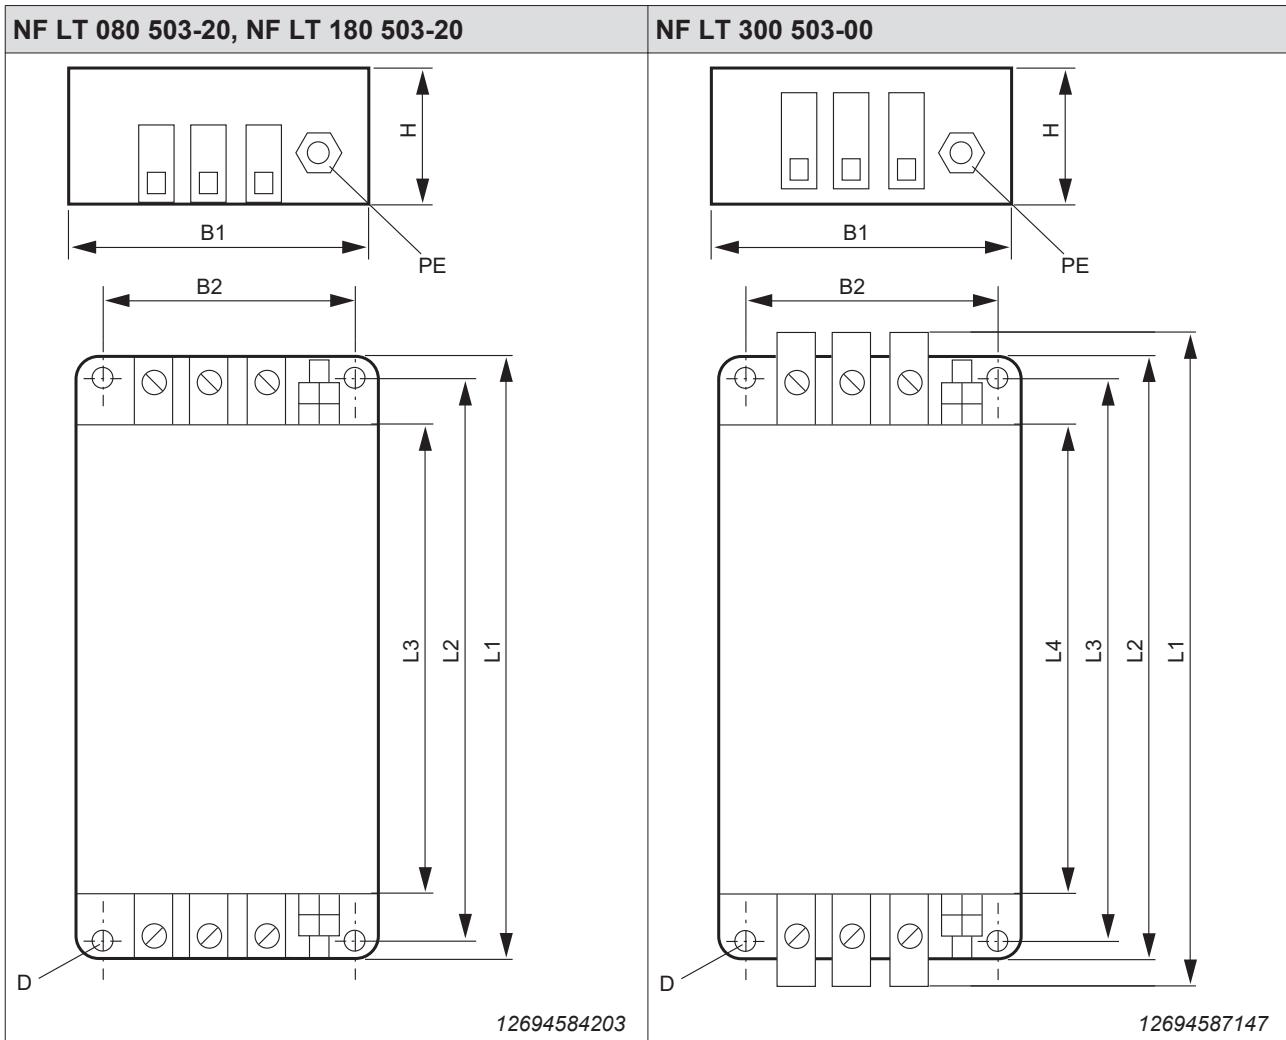

Part number	PE connection	L1 mm	L2 mm	L3 mm	L4 mm	B1 mm	B2 mm	H mm	D mm
NF LT 080 503-20	2 x M10	400	373	350	-	170	130	90	8.5
NF LT 180 503-20	2 x M10	510	470	360	-	180	156	115	10
NF LT 300 503-00	2 x M10	730	700	660	530	260	220	130	12

4.3.6 IP20, 3 x AC 600 V/690 V, 6 – 25 A


NF LT 006 603-20, NF LT 016 603-20, NF LT 025 603-20

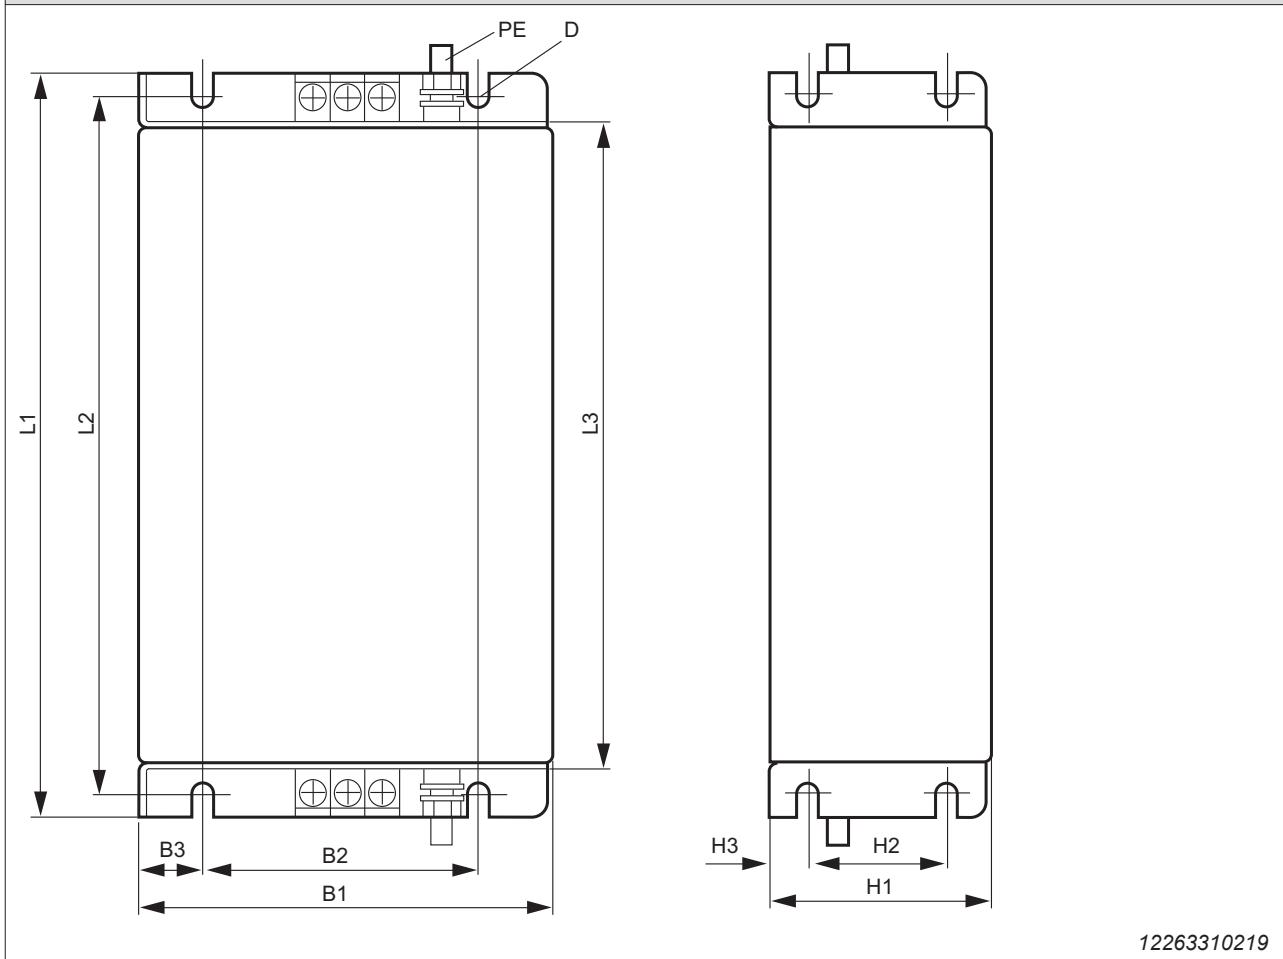

Part number	PE connection	L1 mm	L2 mm	L3 mm	B1 mm	B2 mm	B3 mm	H1 mm	H2 mm	H3 mm	D mm
NF LT 006 603-20	2 x M6	210	196	180	85	55	15	60	40	10	6.2
NF LT 016 603-20	2 x M6	230	216	200	120	80	20	65	40	12.5	6.2
NF LT 025 603-20	2 x M6	230	216	200	120	80	20	65	40	12.5	6.2


4.3.7 IP20, 3 x AC 600 V/690 V, 50 A

NF LT 050 603-20

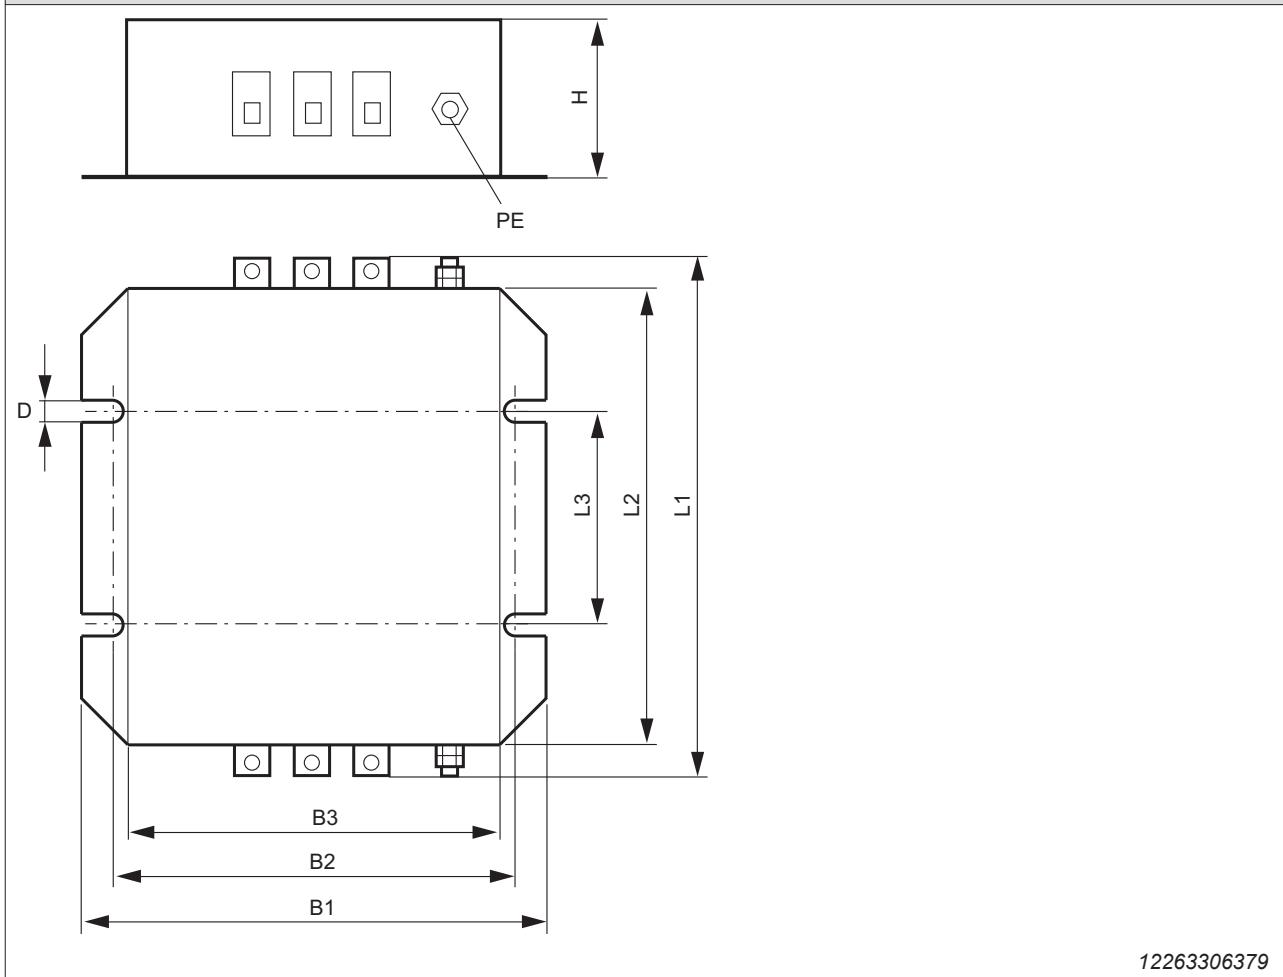

Part number	PE connection	L1 mm	L2 mm	L3 mm	B1 mm	B2 mm	B3 mm	H1 mm	H2 mm	H3 mm	D mm
NF LT 050 603-20	2 x M6	270	240	160	148	130	120	70	-	-	7

4.3.8 IP20, 3 x AC 600 V/690 V, 80 – 180 A

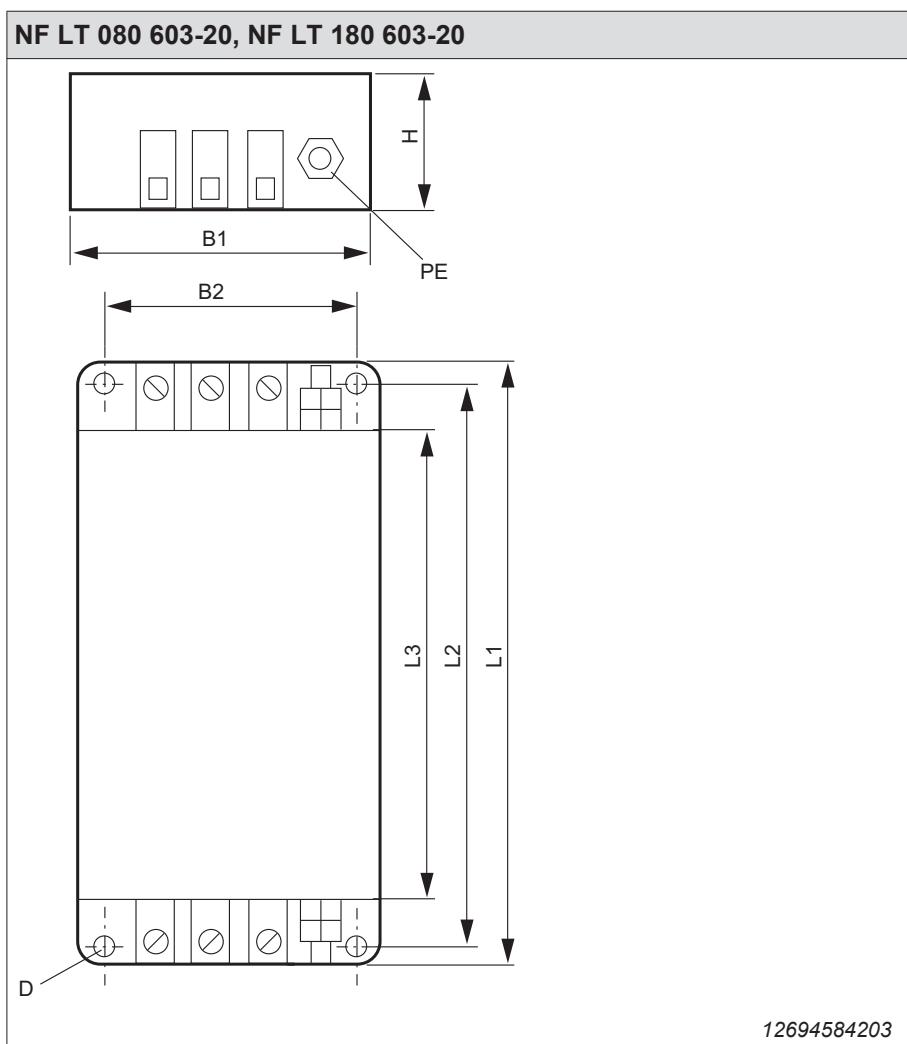

Part number	PE connection	L1 mm	L2 mm	L3 mm	B1 mm	B2 mm	B3 mm	H1 mm	H2 mm	H3 mm	D mm
NF LT 080 603-20	2 x M10	400	373	350	170	130	-	90	-	-	8.5
NF LT 180 603-20	2 x M10	510	470	360	180	156	-	115	-	-	10

4.4 Installation

Disconnect the MOVITRAC® LT from the supply system before starting the installation. Observe the corresponding operating instructions.

⚠ WARNING



Danger of electric shock. Dangerous voltage levels may still be present inside the unit and at the terminals up to 10 minutes after disconnection from the power supply.

Severe or fatal injuries.

- Before removing the supply cable, disconnect MOVITRAC® LT from the power supply and wait at least 10 minutes.

- Install one line filter just before each frequency inverter.
- As an alternative, you can also use a shared line filter for the entire control cabinet. The common line filter is selected on the basis of the total current of all frequency inverters.
- Do not install any switching element (e.g. contactor) between the line filter and the frequency inverter.
- The voltage supply is connected to the filter. The ground conductor (PE) of the supply system must be connected to the filter, otherwise the filter will not work.
- Capacitors are installed between phase and ground in the filter, thus a leakage current is flowing during normal operation. A proper grounding must therefore be ensured. It needs to be connected before voltage is applied to the filter.

For information about the EMC components, refer to chapter "EMC components" (→ 13).

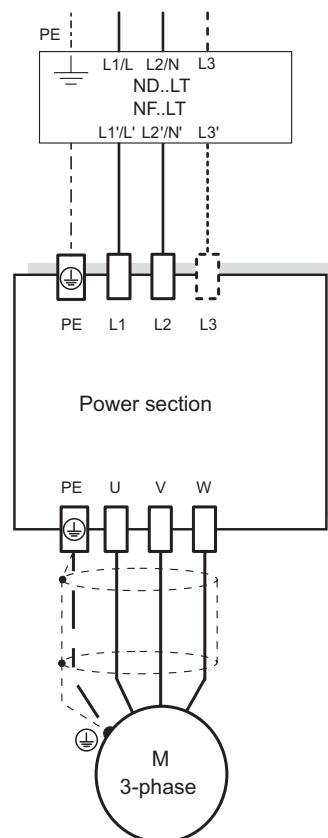

14631693707

4.5 Startup and operation

No additional parameterization is required.

5 Line chokes

Using line chokes is optional in the following instances:

- Reduction of harmonic distortions in the power supply.
- To support overvoltage protection.
- To smoothen the line current, to reduce harmonics.
- Protection in the event of distorted line voltage.
- To limit the charging current when several inverters are connected together in parallel on the input end with shared line contactors (nominal current of line choke = total of inverter currents).

The following units are equipped with a DC choke and thus do not necessarily need an external choke:


- 240 V, BG 5 – 7
- 480 V, BG 5 – 7

5.1 General

Braking resistor type	Part number	LTE-B	LTP-B
ND LT 0xx xxx xx xx	1820xxxx	X	X

X = available

- = not available

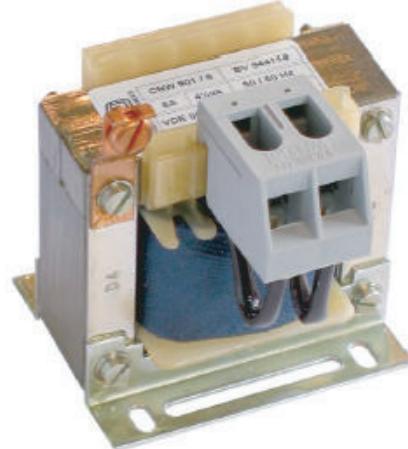

3186112011

Note: 600 V inverters do not have a built-in choke.

5.2 Technical data

5.2.1 IP20, 1 x 230 V, 3 x 230 V, 6 – 36 A

Type	Unit	ND LT 010 290 21	ND LT 025 110 21	ND LT 006 480 53	ND LT 010 290 53	ND LT 036 081 53
Part number		18201644	18201652	18201660	18201679	18201687
Nominal voltage U_N (according to EN 50160)	V	1 x AC 230, 50/60 Hz		3 x AC 230 – 500, 50/60 Hz		
Rated current I_N	A	16	25	6	10	36
Inductance L_N	mH	1.8	1.1	4.8	2.9	0.81
Ambient temperature	°C			-25 to +45		
IP degree of protection				IP20 (EN 60529)		
Weight	kg / lb	1.1 / 2.43	1.8 / 3.97	1.3 / 2.87	2.5 / 5.51	7.2 / 15.87
Assignment for LTE-B: AC 230 V AC 400 V		0004 – 0015	0022	0004 / 0008	0015	0022 / 0040
		-	-	0008 / 0015	0022	0040 – 0110
Assignment for LTP-B: AC 230 V AC 400 V		0008 / 0015	0022	0008	0015	0022 – 0055
		-	-	0008 / 0015	0022 / 0040	0055 – 0150
UL / cUL approval		Yes / Yes	Yes / Yes	Yes / Yes	Yes / Yes	Yes / Yes

5.2.2 IP00/IP20, 3 x 230 – 500 V, 50 – 300 A


Type	Unit	ND LT 050 058 53-20	ND LT 090 032 53-20	ND LT 200 735 53-00	ND LT 300 049 53-00
Part number		18410936	18410944	18410952	18410960
Nominal voltage U_N (according to EN 50160)	V		3 x AC 230 – 500, 50/60 Hz		
Rated current I_N	A	50	90	200	300
Inductance L_N	mH	0.58	0.32	0.0735	0.049
Ambient temperature	°C			-25 to +40	
IP degree of protection			IP20 (EN 60529)		IP00 (EN 60529)
Weight	kg / lb	8.7 / 19.8	16 / 35.27	35 / 77.16	48 / 105.82
Assignment for LTP-B: AC 230 V AC 400 V		0075 – 0110	0150 – 0185	0220 – 0450	0550 / 0750
		0185 – 0220	0300 – 0370	0450 – 0900	1100 – 1600
UL / cUL approval		No / No	No / No	No / No	No / No

5.2.3 IP66, 1 x 230 V, 3 x 230 – 600 V, 6 – 25 A

Type	Unit	ND LT 016 183 21-55	ND LT 025 117 21-55	ND LT 006 613 63-55	ND LT 010 386 63-55	ND LT 020 183 63-55
Part number		18217680	18217699	18217702	18217710	18217729
Nominal voltage U_N (according to EN 50160)	V	1 x AC 230, 50/60 Hz		3 x AC 230 – 600, 50/60 Hz		
Rated current I_N	A	16	25	6	10	18
Inductance L_N	mH	1.83	1.17	4.8	3.86	2.04
Ambient temperature	°C			-25 to +40		
IP degree of protection				IP66 (EN 60529)		
Weight	kg / lb	1 / 2.21	1.3 / 2.87	1.6 / 3.53	3.5 / 7.72	7 / 15.43
Assignment for LTE-B: AC 230 V AC 400 V		0004 – 0015	0022	0004 / 0008	0015	0022 / 0040
		-	-	0008 / 0015	0022	0040 – 0110
Assignment for LTP-B: AC 230 V AC 400 V AC 575 V		0008 / 0015	0022	0008	0015	0022 / 0030
		-	-	0008 / 0015	0022	0040 / 0055
		-	-	0008 – 0022	0040	0055 / 0075
UL / cUL approval		Yes / Yes	Yes / Yes	Yes / Yes	Yes / Yes	Yes / Yes

5.3 Dimensions


5.3.1 IP20, 1 × 230 V, 10/25 A

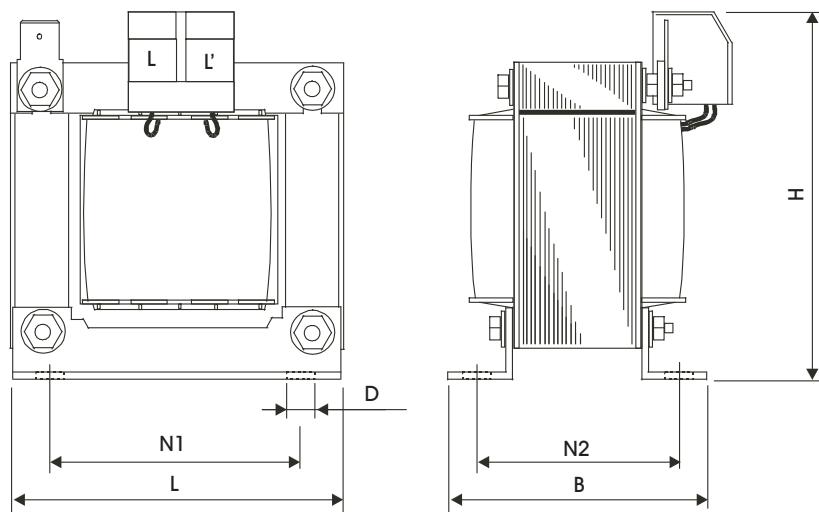

9007202440854667

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
ND LT 010 290 21	78	3.07	78	3.07	80	3.15	56	2.20	49	1.92	4.8	0.18
ND LT 025 110 21	85	3.34	76	2.99	158	6.22	100	3.93	55	2.16	5	0.19


5.3.2 IP20, 3 × 230 – 500 V, 6/10 A

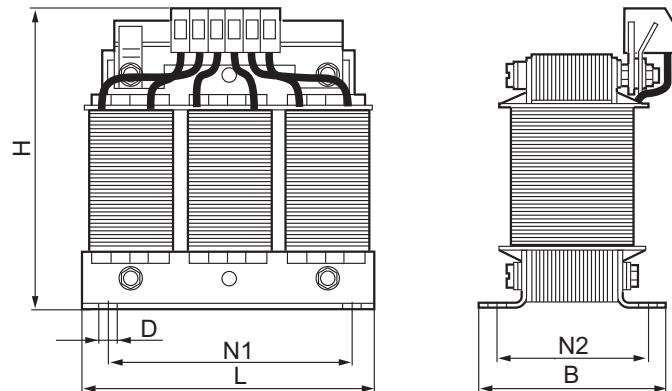

9453581067

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
ND LT 006 480 53	95	3.7	56	2.20	107	4.21	56	2.20	43	1.69	5 x 9	0.19 x 0.35
ND LT 010 290 53	125	4.92	71	2.79	127	5	100	3.93	55	2.16	5 x 8	0.19 x 0.31


5.3.3 IP20, 3 × 230 – 500 V, 36 – 90 A

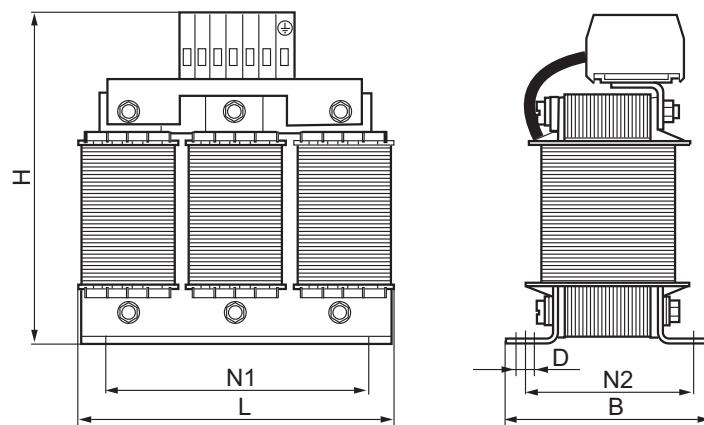

9453583371

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
ND LT 036 081 53	190	7.48	82	3.22	205	8.07	170	6.69	58	2.28	8 x 12	0.31 x 0.47
ND LT 050 058 53-20	190	7.48	102	4.01	220	8.66	170	6.69	78	3.07	8 x 12	0.31 x 0.47
ND LT 090 032 53-20	240	9.44	107	4.21	280	11.02	185	7.28	85	3.34	10x18	0.39 x 0.70

5.3.4 IP00, 3 × 230 – 500 V, 200 A

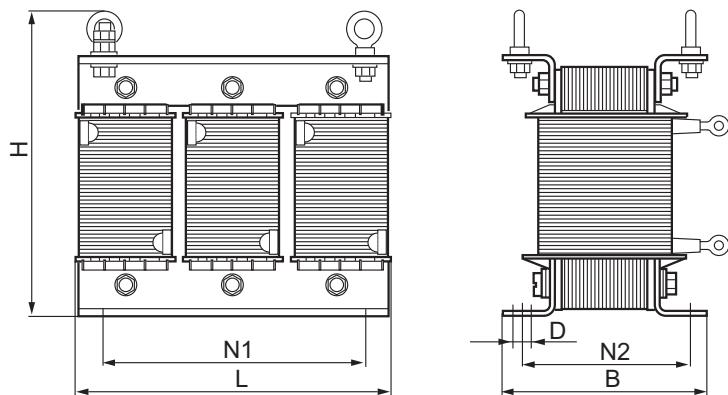

9453586059


Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
ND LT 200 735 53-00	310	12.2	180	7.08	260	10.24	224	8.81	117	4.60	10x18	0.39 x 0.70

5

Line chokes

Dimensions


5.3.5 IP00, 3 × 230 – 500 V, 300 A

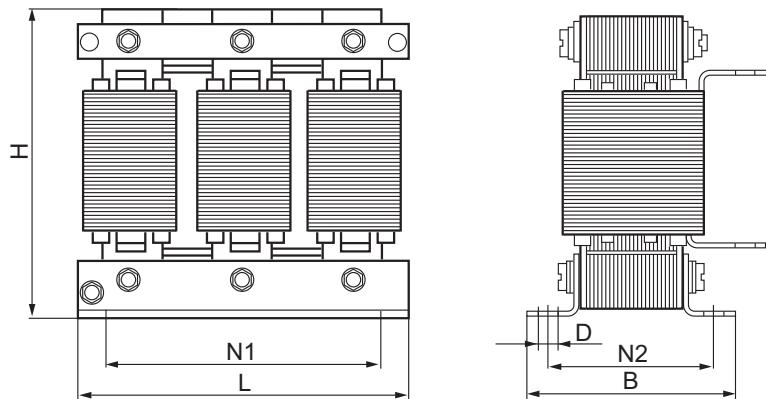

9453588107

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
ND LT 300 049 53-00	370	14.57	180	7.08	310	12.2	248	9.76	139	5.47	10x18	0.39 x 0.70

5.3.6 IP66, 1 × 230 V, 3 × 230 – 600 V, 6 – 25 A

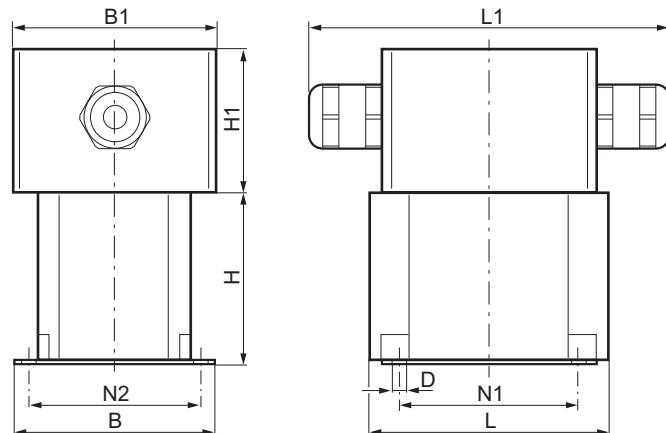

9453666955

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
ND LT 016 183 21-55	82	3.22	70	2.75	70	2.75	70	2.75	58	2.28	6	0.23
ND LT 025 117 21-55	90	3.54	84	3.30	75	2.95	84	3.30	72	2.83	6	0.23
ND LT 006 613 63-55	115	4.52	74	2.91	88	3.46	80	3.15	60	2.36	5.5x7	0.21x0.27
ND LT 010 386 63-55	175	6.89	99	3.89	137	5.39	130	5.11	79	3.11	5.5x12	0.21x0.47
ND LT 020 183 63-55	175	6.89	114	4.48	137	5.39	130	5.11	94	3.70	5.5x12	0.21x0.47

Type	L1		B1		H1	
	mm	in	mm	in	mm	in
ND LT 016 183 21-55	151	5.94	85	3.34	60	2.36
ND LT 025 117 21-55	151	5.94	85	3.34	60	2.36
ND LT 006 613 63-55	151	5.94	85	3.34	60	2.36
ND LT 010 386 63-55	151	5.94	85	3.34	60	2.36
ND LT 020 183 63-55	151	5.94	85	3.34	60	2.36

5.4 Installation

Disconnect the MOVITRAC® LT from the supply system before starting the installation. Observe the corresponding operating instructions.

⚠ WARNING




Danger of electric shock. Dangerous voltage levels may still be present inside the unit and at the terminals up to 10 minutes after disconnection from the power supply.

Severe or fatal injuries.

- Before removing the supply cable, disconnect MOVITRAC® LT from the power supply and wait at least 10 minutes.
- Install one line choke just before each frequency inverter.
- As an alternative, you can also use a shared line choke for the entire control cabinet. The common line choke is selected on the basis of the total current of all frequency inverters.

The voltage supply is connected to the choke. Connect the protective earth (PE) of the supply system to the choke.

For information about the EMC components, refer to chapter "EMC components" (→ 13).

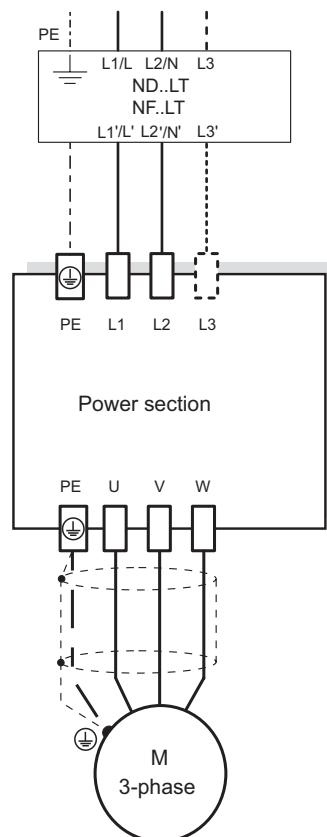

14631693707

5.5 Startup and operation

No additional parameterization is required.

6 Output chokes

Type	Part number	LTE-B	LTP-B
HD LT xxx xxx xx xx	18xxxxxx	X	X

X = available

- = not available



3186116363

Output chokes improve the quality of the output wave shape. When an output choke is used, the maximum cable length can be doubled. For information on cable length, refer to the technical data in the manual or in the catalog of the frequency inverter MOVITRAC® LT.

The frequency inverter has unfiltered outputs. In most applications, a satisfactory performance is achieved this way. However, for some applications, an output filter is highly recommended to improve the functionality, reliability and service life of the system. These applications include:

- Long motor cables up to 300 m (the nominal length can be doubled when using an output choke), requires PWM frequency ≤ 4 kHz.
- High capacity motor cable (e.g. "Pyro" wire for fire protection).
- Several motors connected in parallel.
- Motors without insulation suited for inverters (usually older motors).

A series of high-quality output chokes with the following main features are available for the frequency inverter:

- Limiting the output voltage drop, usually < 200 V/ μ s.
- Limiting transient overvoltage at the motor terminals, usually < 1000 V.
- Suppressing line-related interference in low frequency ranges.
- Compensating capacitive load currents.
- Reducing HF interference emission of the motor cable.
- Reducing motor losses and audible noise caused by ripple.

6.1 Technical data

6.1.1 IP20, 3 × 200 – 500 V, 8 – 75 A

Type	Unit	HD LT 008 200 53	HD LT 012 130 53	HD LT 030 050 53	HD LT 075 022 53
Part number		18201695	18201709	18201717	18201725
Nominal voltage U_N (according to EN 50160)	V		3 x AC 200 – 500		
Rated current I_N	A	8	12	30	75
Inductance L_N	mH	2	1.3	0.5	0.22
Degree of protection (EN 60529)			IP20		
Weight	kg / lb	1.5 / 3.31	2.8 / 6.17	4.2 / 9.26	8.6 / 18.96
Assignment for LTE-B:		0004 – 0015	0022	0040	-
AC 230 V		0008 – 0022	0040	0055 – 0110	-
AC 400 V					
Assignment for LTP-B:		0008 / 0015	0022	0030 – 0075	0110 – 0185
AC 230 V		0008 – 0022	0040	0055 – 0150	0185 – 0370
UL / cUL approval		Yes / Yes	Yes / Yes	Yes / Yes	No / No

6.1.2 IP00, 3 × 200 – 600 V, 180 – 300 A


Type	Unit	HD LT 180 009 53	HD LT 250 007 53	HD LT 300 530 53
Part number		18201733	18201741	18408133
Nominal voltage U_N (according to EN 50160)	V		3 x AC 200 – 400	
Rated current I_N	A	180	250	300
Inductance L_N	mH	0.09	0.065	0.053
Degree of protection (EN 60529)			IP00	
Weight	kg / lb	30 / 66.14	35 / 77.16	48 / 105.82
Assignment for LTP-B:		0220 – 0450	0550 / 0750	-
AC 230 V		0450 – 0900	1100/1320	1600
AC 400 V				
UL / cUL approval		No / No	No / No	No / No

6.1.3 IP66, 3 × 200 – 600 V, 8 – 18 A

Type	Unit	HD LT 008 200 63-55	HD LT 012 120 63-55	HD LT 018 090 63-55
Part number		18216757	18216765	18216773
Nominal voltage U_N (according to EN 50160)	V		3 x AC 200 – 600	
Rated current I_N	A	8	12	18
Inductance L_N	mH	2	1.2	0.9
Degree of protection (EN 60529)			IP66	
Weight	kg / lb	1.7 / 3.75	3.2 / 7.05	3.2 / 7.05
Assignment for LTE-B:		0004 – 0015	0022	0040
AC 230 V		0008 – 0022	0040	0055 / 0075
AC 400 V				
Assignment for LTP-B:		0008 / 0015	0022	0030 / 0040
AC 230 V		0008 – 0022	0040	0055 / 0075
AC 400 V		0008 – 0040	0055 / 0075	0110
AC 575 V				
UL / cUL approval		Yes / Yes	Yes / Yes	Yes / Yes

6.2 Dimensions


6.2.1 IP20, 3 × 200 – 500 V, 8 – 75 A

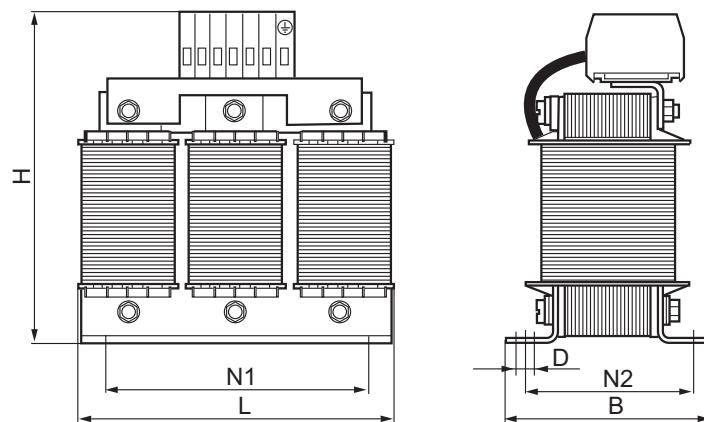

9453583371

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
HD LT 008 200 53	95	3.7	61	2.4	107	4.21	56	2.2	43	1.69	4	0.15
HD LT 012 130 53	125	4.92	76	2.99	158	6.22	100	3.93	55	2.16	5	0.19
HD LT 030 050 53	155	6.1	66	2.59	185	7.28	130	5.11	57	2.24	8	0.31
HD LT 075 022 53	190	7.48	92	3.62	223	8.77	170	6.69	68	2.67	8	0.31


6.2.2 IP00, 3 × 200 – 400 V, 180 – 300 A

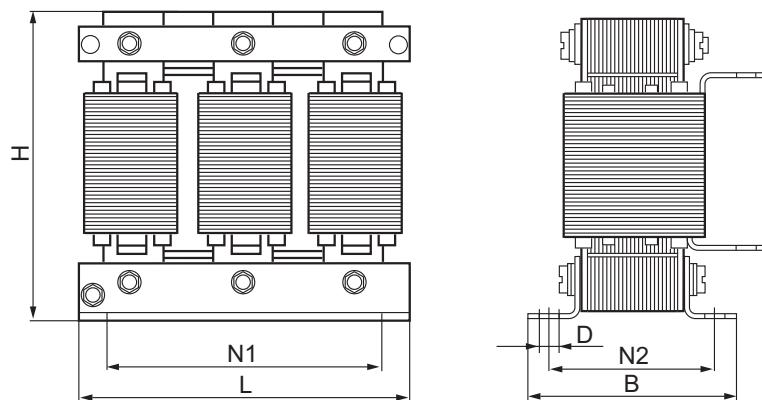

9453588107

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
HD LT 180 009 53	360	14.17	180	7.08	263	10.35	264	10.39	122	4.8	10x18	0.39x0.7
HD LT 250 007 53	310	12.2	180	7.08	260	10.23	224	8.81	117	4.6	10x18	0.39x0.7
HD LT 300 530 53	380	14.96	180	7.08	310	12.2	248	9.76	139	5.47	10x18	0.39x0.7

6.2.3 IP66, 3 × 200 – 600 V, 8 – 18 A

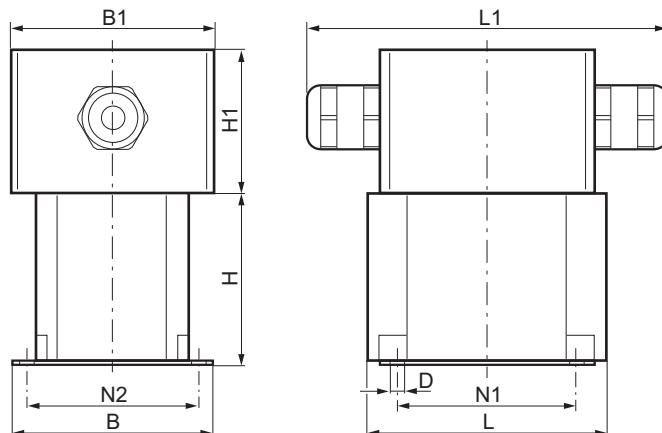

9453666955

Type	L		B		H		N1		N2		D	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
HD LT 008 200 63-55	115	4.52	74	2.91	85	3.34	80	3.14	60	2.36	5.5x7	0.21x0.27
HD LT 012 120 63-55	140	5.51	87	3.42	110	4.33	100	3.93	70	2.75	5.5x12	0.21x047
HD LT 018 090 63-55	140	5.51	87	3.42	110	4.33	100	3.93	70	2.75	5.5x12	0.21x047

Type	L1		B1		H1	
	mm	in	mm	in	mm	in
HD LT 008 200 63-55	151	5.94	85	3.34	60	2.36
HD LT 012 120 63-55	151	5.94	85	3.34	60	2.36
HD LT 018 090 63-55	151	5.94	85	3.34	60	2.36

6.3 Installation

Disconnect the MOVITRAC® LT from the supply system before installation. Observe the corresponding operating instructions.

⚠ WARNING


Danger of electric shock. Dangerous voltage levels may still be present inside the unit and at the terminals up to 10 minutes after disconnection from the power supply.

Severe or fatal injuries.

- Before removing the supply cable, disconnect MOVITRAC® LT from the power supply and wait at least 10 minutes.
- Install the output choke as close to the MOVITRAC® LT as possible. Maintain the minimum distance.

For information about the EMC components, refer to chapter "EMC components" (→ 13).

Connect the protective earth (PE) of the supply system to the choke.

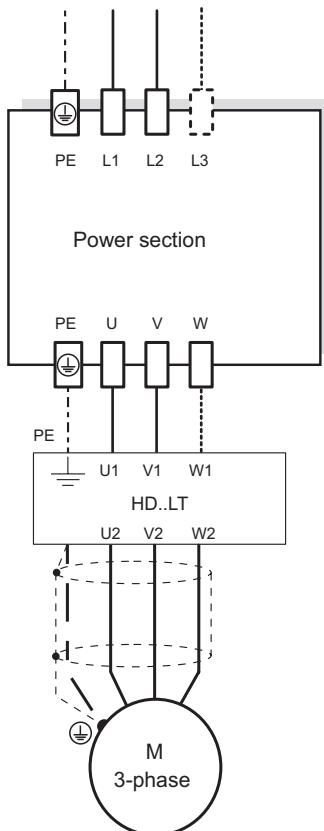

14644523659

6.4 Startup and operation

Do not set the PWM frequency of the drive higher than 4 kHz.

- Set parameter *P-17* for LTE-B and *P2-24* for LTP-B to 2 or 4 kHz.


7 Shield plate IP20

Type	Part number	LTE-B	LTP-B
LTZ SB LTX	28214994	X ¹⁾	X ¹⁾

1) Only for sizes 2 and 3.

X = available

- = not available

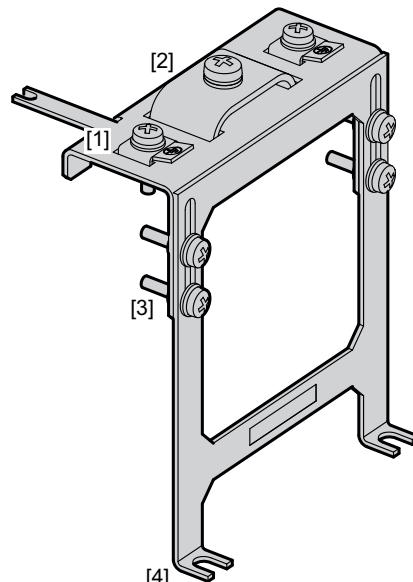

13406635275

- [1] Earth connection
- [2] Terminal for motor cable
- [3] Adjustment screw for BG 2 and 3
- [4] Connection for back panel installation

7.1 Installation

Disconnect the MOVITRAC® LT from the supply system before the installation. Observe the corresponding operating instructions.

⚠ WARNING



Danger of electric shock. Dangerous voltage levels may still be present inside the unit and at the terminals up to 10 minutes after disconnection from the power supply.

Severe or fatal injuries.

- Before removing the supply cable, disconnect MOVITRAC® LT from the power supply and wait at least 10 minutes.

The shield plate can be used optionally for size 2 and 3 of the IP20 design. Proceed as follows to adjust:

1. Loosen the 4 screws on the slotted holes.
2. Move the plate up to the stop according to the required size.
3. Tighten the screws again.

Make sure that the shield plate is correctly attached to the PE connection.

Apply the shield plate with the frequency inverter as follows:

- Insert the shield plate into the PE terminal.



11908692619

[1] Terminal for motor cable shield and encoder cable shield

[2] PE terminal

[3] Adjusting screws for BG 2 and 3

- Tighten the screw.
- Mount the shield plate to the back panel.
- Connect the motor cable via the shield plate.
- Connect the earth connection to the PE terminal.

7.2 Type designation and specification

To enhance the interference immunity use the optional shield connection for MOVITRAC® LT, IP20 in sizes 2 and 3. The use of shield connections is recommended for LTX applications.

7.3 Startup and operation

No additional parameterization is required.

Index

C

Copyright notice 5

E

Electromagnetic compatibility

Interference emission 14

EMC components

Arrangement in the control cabinet 13

Line filter 14

F

Filter

Line filter 14

Flatpack resistors 6

I

Installation

Braking resistor IP20 integrated 7, 9

L

Line chokes 26

Installation 31

Technical data 27

Line filter 14

N

NF line filter

Dimensions 17

Installation 24

Technical data 15

O

Output chokes 32

Dimensions 34

Installation 35

Technical data 33

R

Rights to claim under limited warranty 5

S


Shield plate 37


Startup


Braking resistor 12



Line chokes 31

NF line filter	25
Output choke	36
Shielding	38

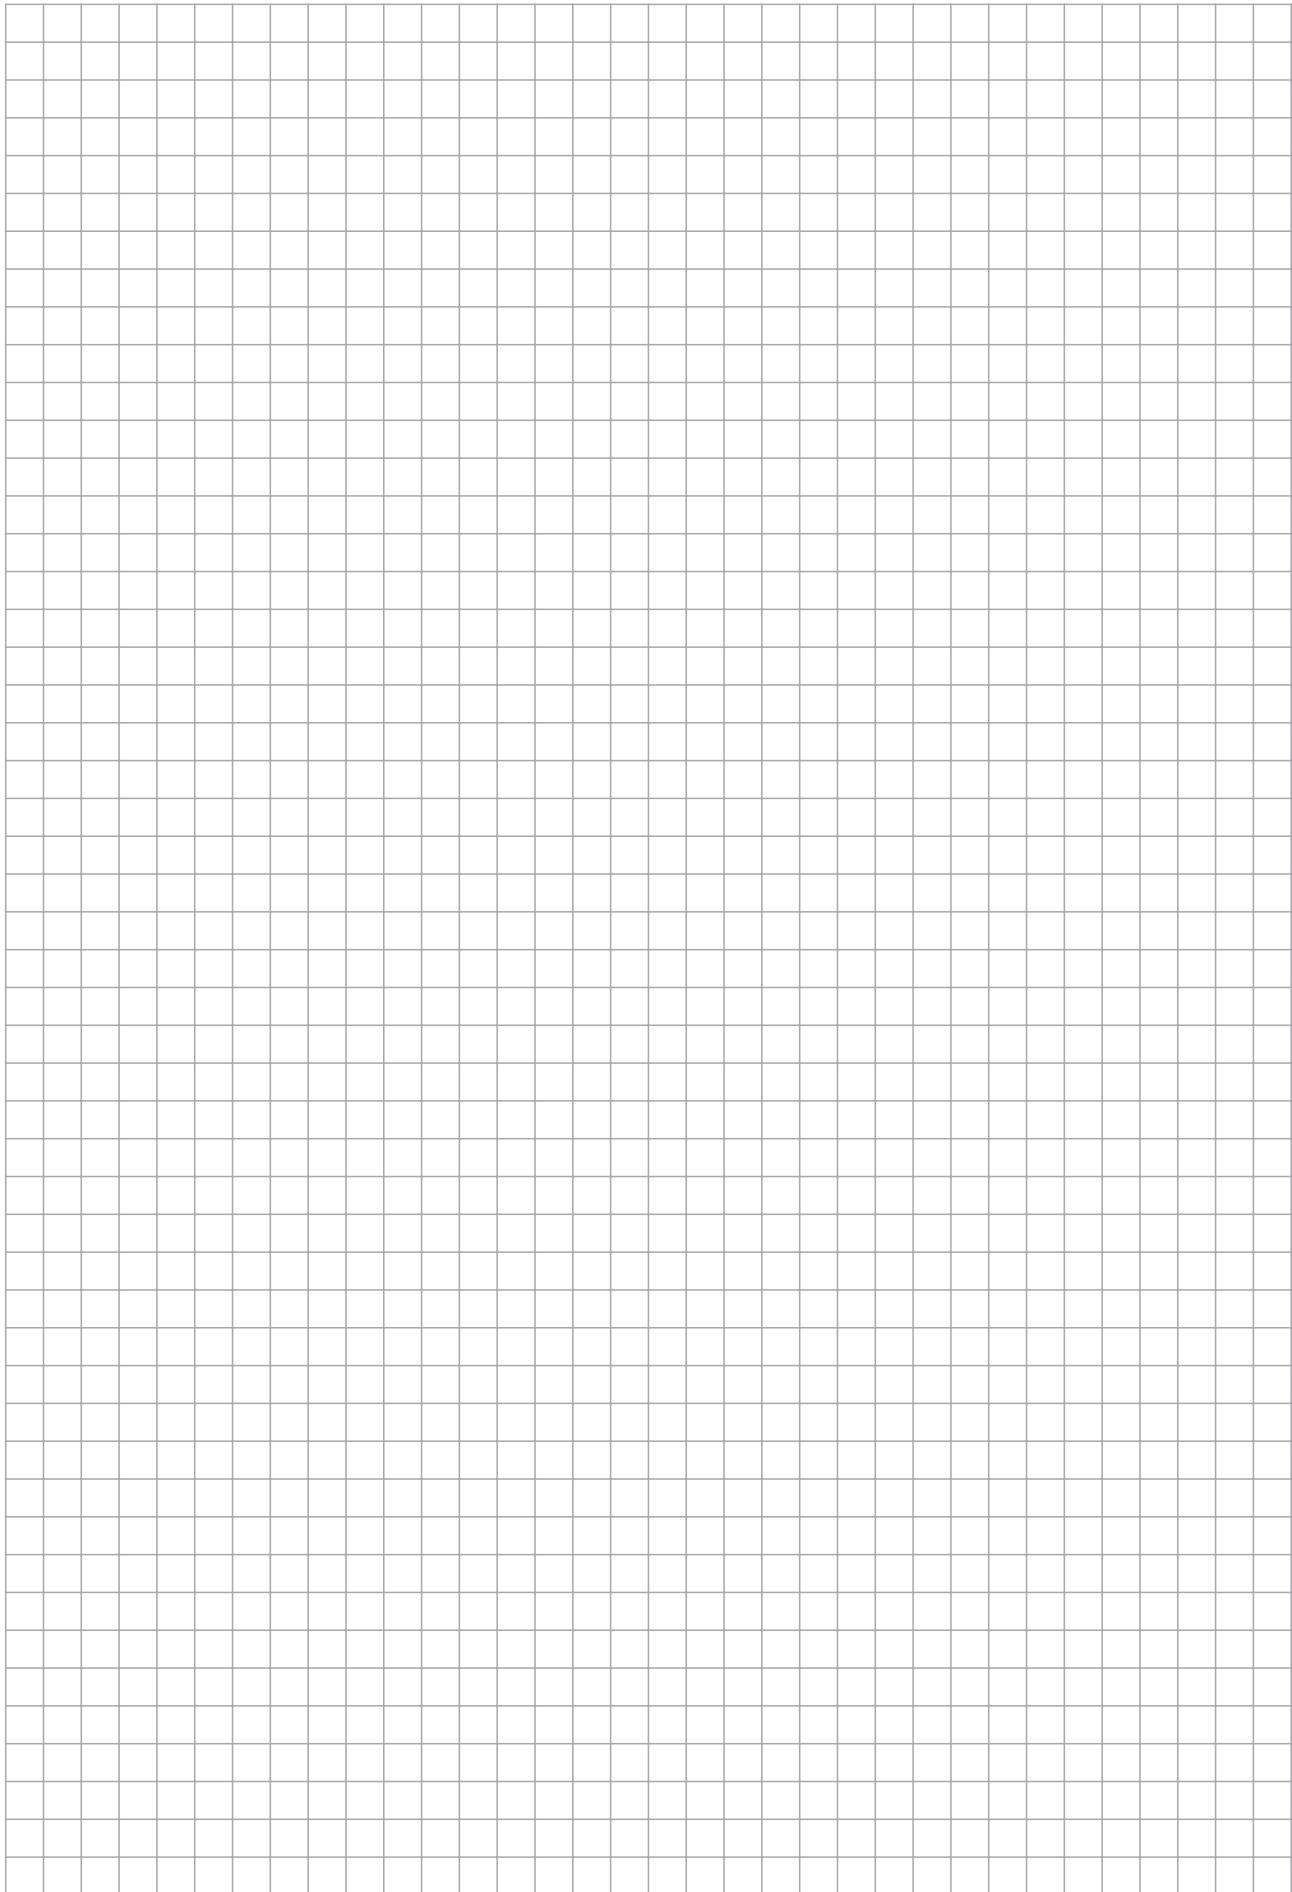

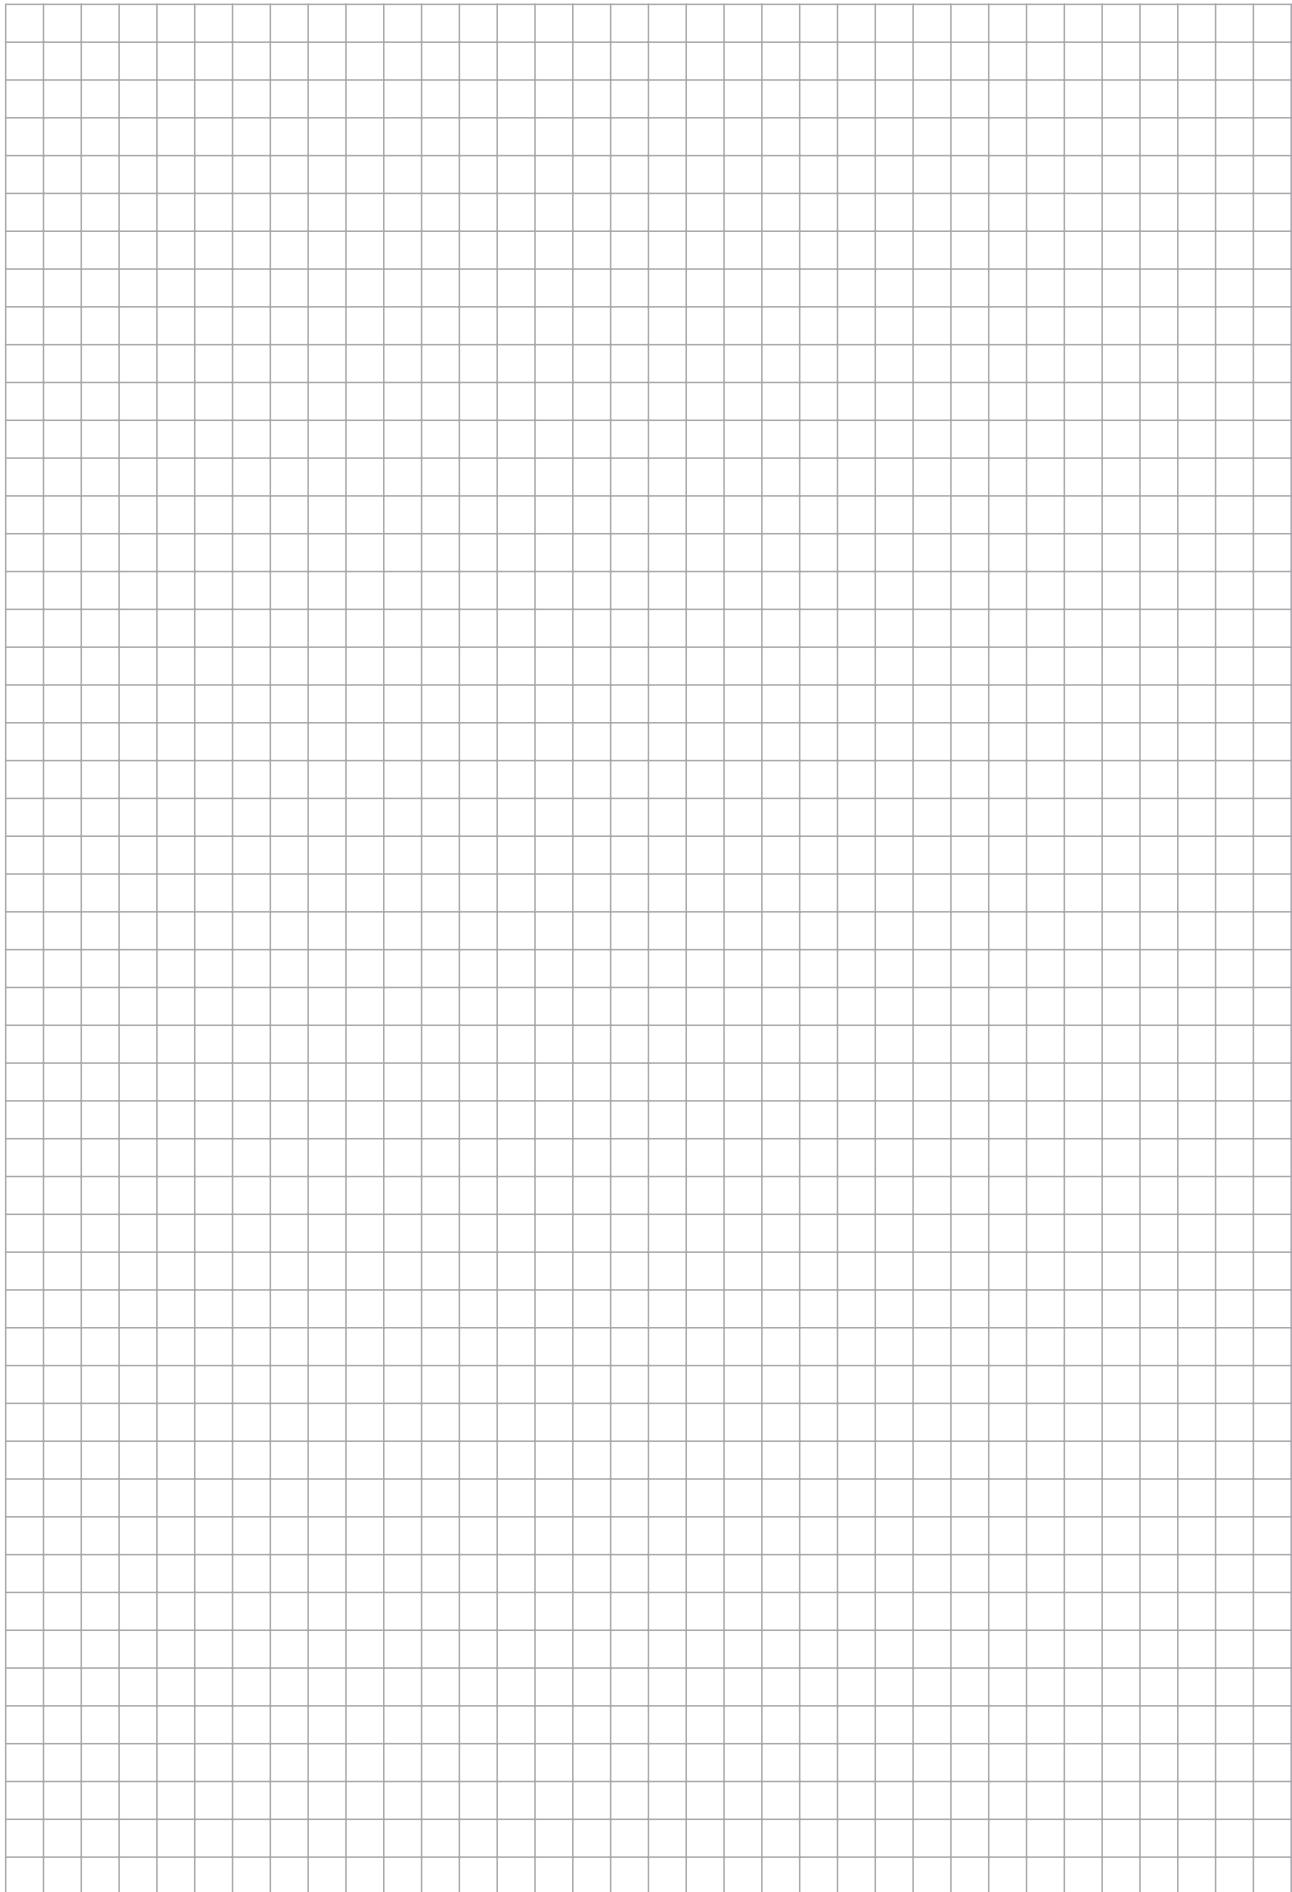

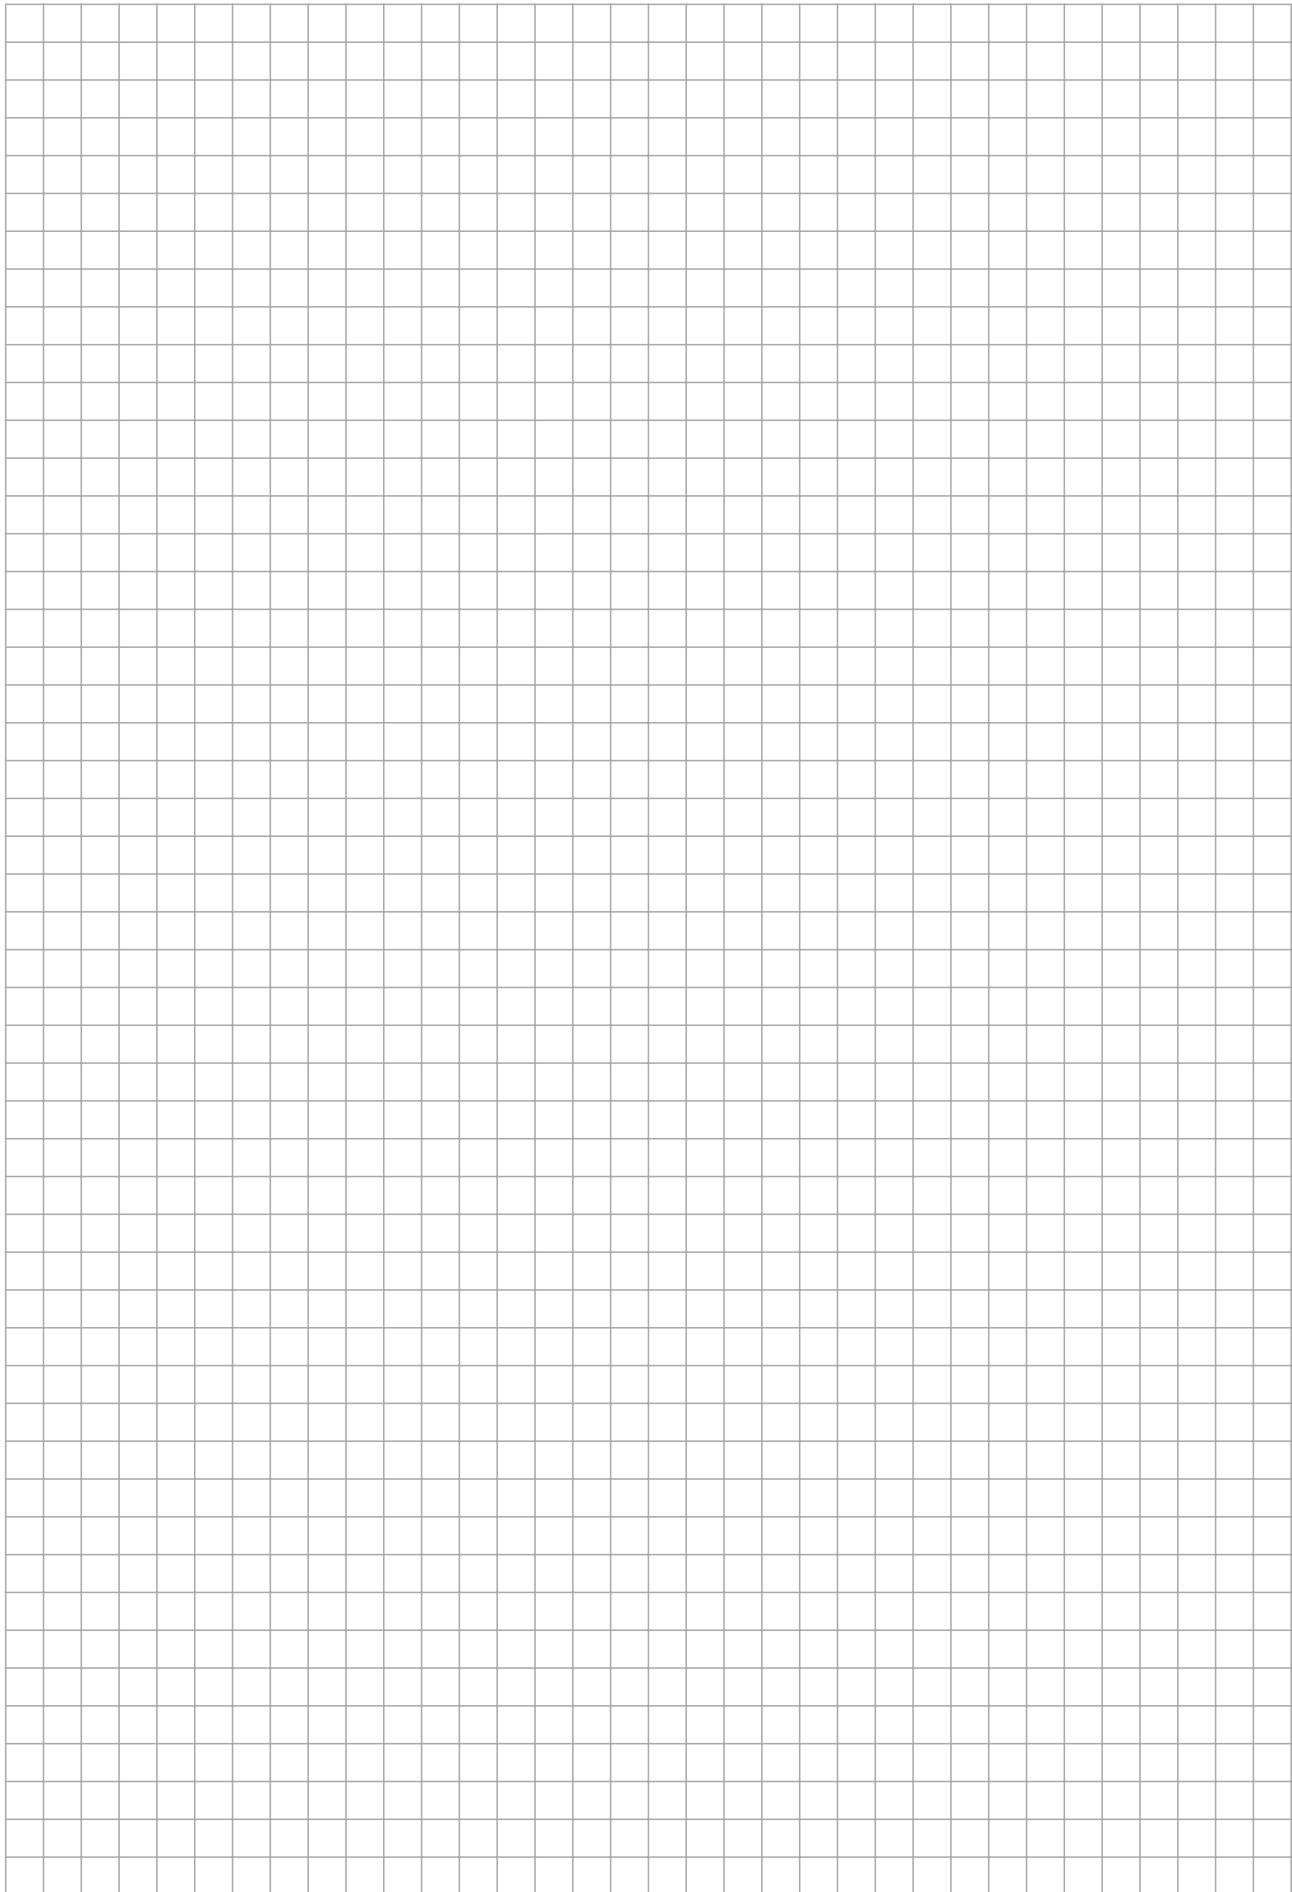

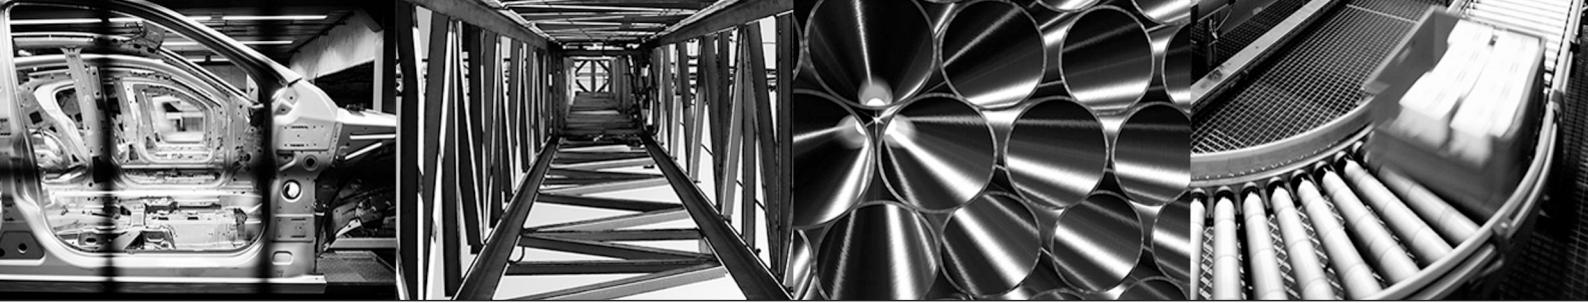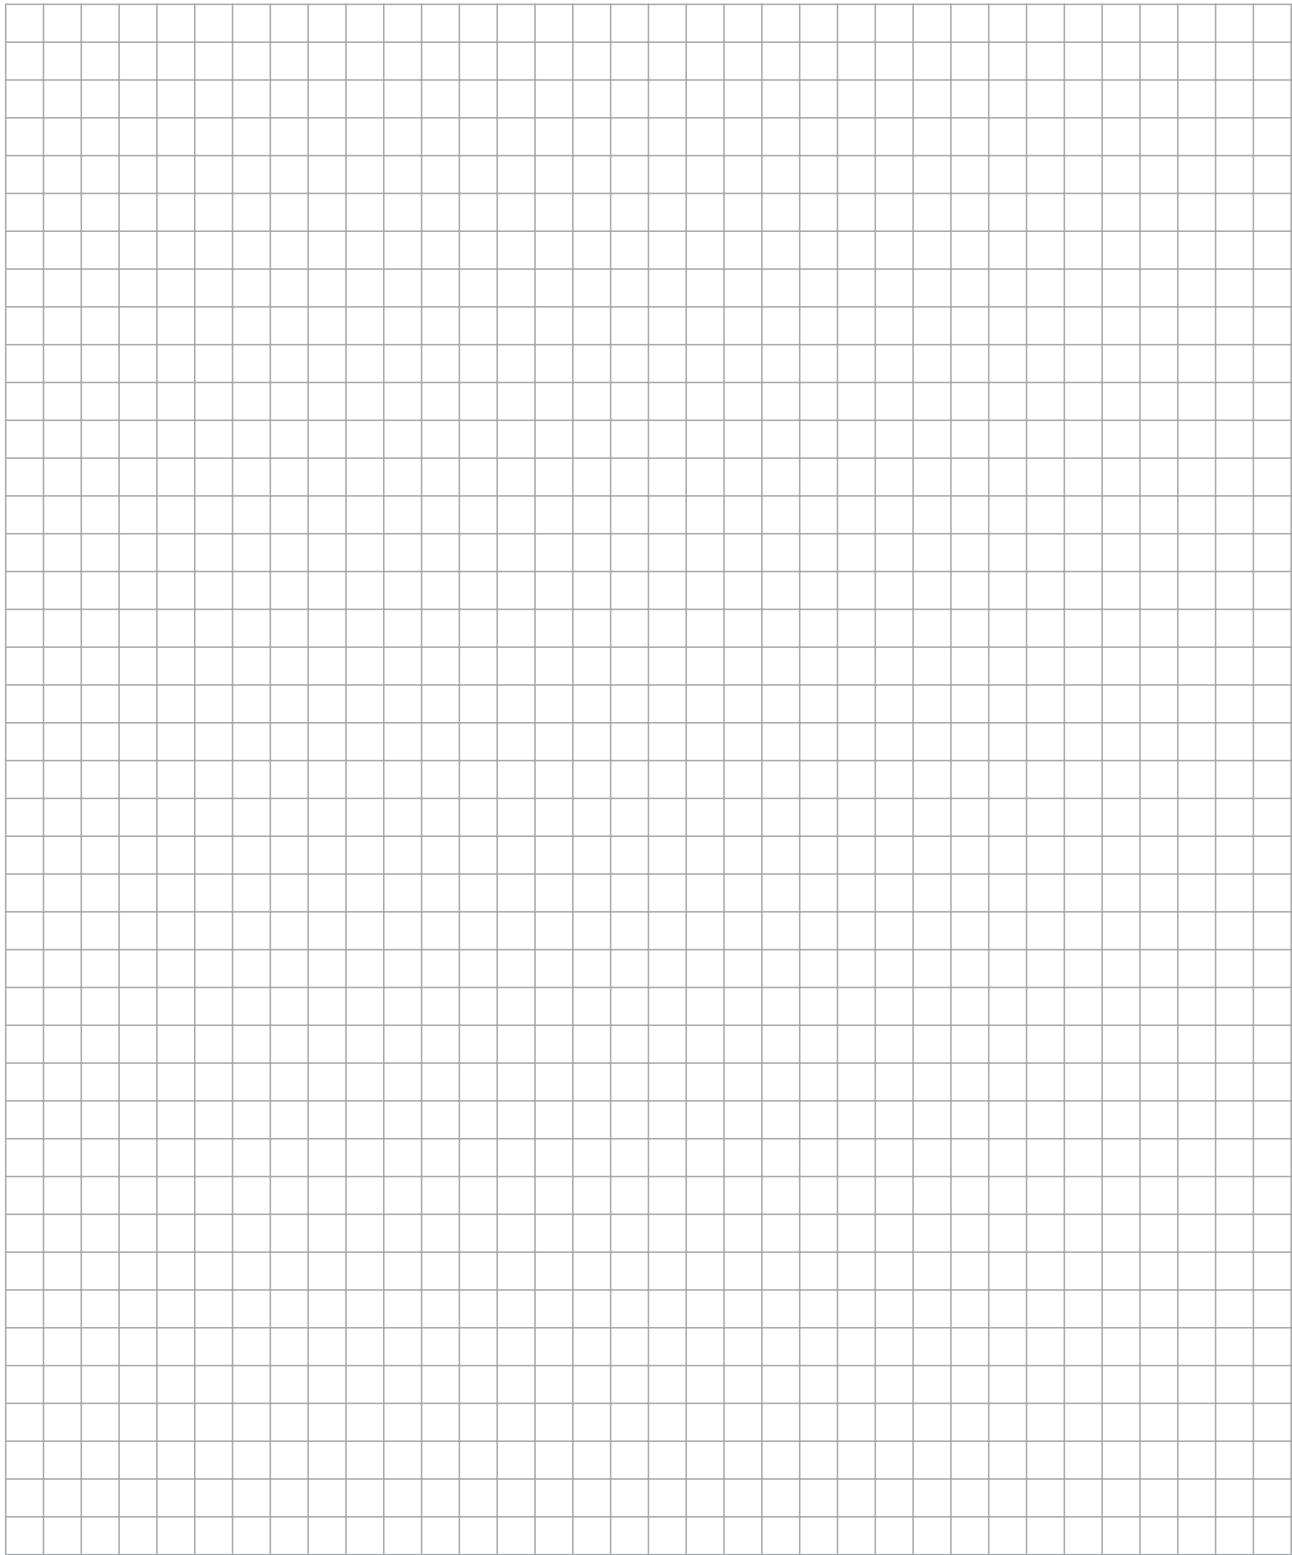



SEW-EURODRIVE
Driving the world

**SEW
EURODRIVE**

SEW-EURODRIVE GmbH & Co KG
P.O. Box 3023
76642 BRUCHSAL
GERMANY
Phone +49 7251 75-0
Fax +49 7251 75-1970
sew@sew-eurodrive.com
→ www.sew-eurodrive.com