

# Technical Information

## Proline Promag P 500

Electromagnetic flowmeter



The flowmeter for highest medium temperatures, as remote version with up to 4 I/Os

### Application

- The measuring principle is virtually independent of pressure, density, temperature and viscosity
- Dedicated for chemical and process applications with corrosive liquids and high medium temperatures

### Device properties

- Nominal diameter: max. DN 600 (24")
- All common Ex approvals
- Liner made of PTFE or PFA
- Remote version with up to 4 I/Os
- Backlit display with touch control and WLAN access
- Standard cable between sensor and transmitter

### Your benefits

- Versatile applications – wide variety of wetted materials
- Energy-saving flow measurement – no pressure loss due to cross-section constriction
- Maintenance-free – no moving parts
- Full access to process and diagnostic information – numerous, freely combinable I/Os and fieldbuses
- Reduced complexity and variety – freely configurable I/O functionality
- Integrated verification – Heartbeat Technology

## Table of contents







<b>Document information</b> . . . . .	<b>4</b>	Vibration resistance . . . . .	48
Symbols used . . . . .	4	Shock resistance . . . . .	48
<b>Function and system design</b> . . . . .	<b>5</b>	Impact resistance . . . . .	48
Measuring principle . . . . .	5	Mechanical load . . . . .	48
Measuring system . . . . .	6	Electromagnetic compatibility (EMC) . . . . .	48
Equipment architecture . . . . .	7	<b>Process</b> . . . . .	<b>48</b>
Safety . . . . .	8	Medium temperature range . . . . .	48
<b>Input</b> . . . . .	<b>9</b>	Conductivity . . . . .	49
Measured variable . . . . .	9	Pressure-temperature ratings . . . . .	49
Measuring range . . . . .	9	Pressure tightness . . . . .	51
Operable flow range . . . . .	10	Flow limit . . . . .	52
Input signal . . . . .	10	Pressure loss . . . . .	52
<b>Output</b> . . . . .	<b>12</b>	System pressure . . . . .	52
Output and input variants . . . . .	12	Thermal insulation . . . . .	53
Output signal . . . . .	13	Vibrations . . . . .	53
Signal on alarm . . . . .	16	<b>Mechanical construction</b> . . . . .	<b>53</b>
Ex connection data . . . . .	18	Dimensions in SI units . . . . .	53
Low flow cut off . . . . .	19	Dimensions in US units . . . . .	58
Galvanic isolation . . . . .	19	Weight . . . . .	62
Protocol-specific data . . . . .	19	Measuring tube specification . . . . .	63
<b>Power supply</b> . . . . .	<b>25</b>	Materials . . . . .	63
Terminal assignment . . . . .	25	Fitted electrodes . . . . .	66
Device plugs available . . . . .	26	Process connections . . . . .	66
Pin assignment, device plug . . . . .	26	Surface roughness . . . . .	66
Supply voltage . . . . .	27	<b>Operability</b> . . . . .	<b>66</b>
Power consumption . . . . .	27	Operating concept . . . . .	66
Current consumption . . . . .	27	Languages . . . . .	66
Power supply failure . . . . .	27	Local operation . . . . .	66
Electrical connection . . . . .	27	Remote operation . . . . .	67
Potential equalization . . . . .	34	Service interface . . . . .	70
Terminals . . . . .	36	Supported operating tools . . . . .	71
Cable entries . . . . .	36	HistoROM data management . . . . .	72
Cable specification . . . . .	36	<b>Certificates and approvals</b> . . . . .	<b>74</b>
<b>Performance characteristics</b> . . . . .	<b>40</b>	CE mark . . . . .	74
Reference operating conditions . . . . .	40	C-Tick symbol . . . . .	74
Maximum measured error . . . . .	40	Ex approval . . . . .	74
Repeatability . . . . .	40	Functional safety . . . . .	76
Influence of ambient temperature . . . . .	40	HART certification . . . . .	76
<b>Installation</b> . . . . .	<b>41</b>	FOUNDATION Fieldbus certification . . . . .	76
Mounting location . . . . .	41	Certification PROFIBUS . . . . .	77
Orientation . . . . .	42	Modbus RS485 certification . . . . .	77
Inlet and outlet runs . . . . .	42	Radio approval . . . . .	77
Adapters . . . . .	43	Other standards and guidelines . . . . .	77
Length of connecting cable . . . . .	43	<b>Ordering information</b> . . . . .	<b>78</b>
Mounting the transmitter housing . . . . .	45	<b>Application packages</b> . . . . .	<b>78</b>
Special mounting instructions . . . . .	46	Diagnostics functions . . . . .	78
<b>Environment</b> . . . . .	<b>47</b>	Heartbeat Technology . . . . .	78
Ambient temperature range . . . . .	47	Cleaning . . . . .	79
Storage temperature . . . . .	47	<b>Accessories</b> . . . . .	<b>79</b>
Degree of protection . . . . .	47	Device-specific accessories . . . . .	79

Communication-specific accessories . . . . .	80
Service-specific accessories . . . . .	81
System components . . . . .	81
<b>Supplementary documentation . . . . .</b>	<b>81</b>
Standard documentation . . . . .	81
Supplementary device-dependent documentation . . . . .	82
<b>Registered trademarks . . . . .</b>	<b>83</b>






## Document information

### Symbols used









#### Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Protective ground connection</b> A terminal which must be connected to ground prior to establishing any other connections.
	<b>Equipotential connection</b> A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.




#### Communication symbols

Symbol	Meaning
	<b>Wireless Local Area Network (WLAN)</b> Communication via a wireless, local network.
	<b>Bluetooth</b> Wireless data transmission between devices over a short distance.
	<b>LED</b> Light emitting diode is off.
	<b>LED</b> Light emitting diode is on.
	<b>LED</b> Light emitting diode is flashing.

#### Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Visual inspection


Symbols in graphics

Symbol	Meaning
1, 2, 3,...	Item numbers
1., 2., 3. ...	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area
	Safe area (non-hazardous area)
	Flow direction

Function and system design

Measuring principle

Following *Faraday's law of magnetic induction*, a voltage is induced in a conductor moving through a magnetic field.

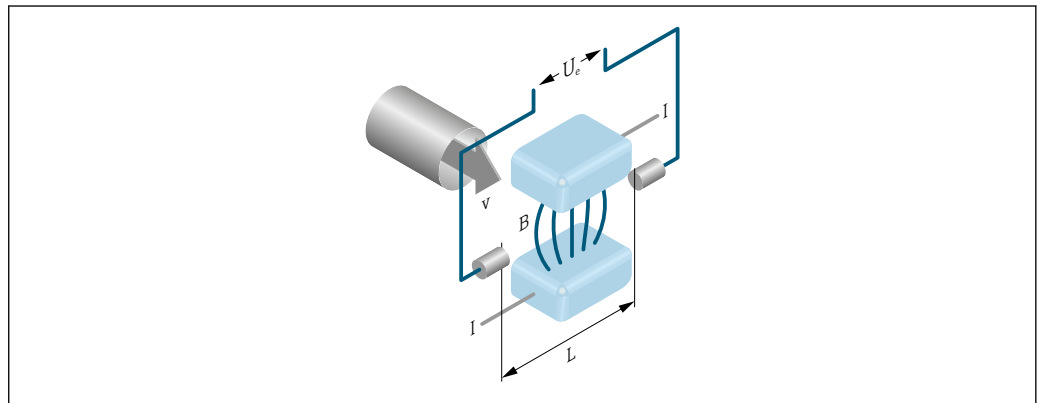

- $U_e$  Induced voltage
- $B$  Magnetic induction (magnetic field)
- $L$  Electrode spacing
- $I$  Current
- $v$  Flow velocity

In the electromagnetic measuring principle, the flowing medium is the moving conductor. The voltage induced ( $U_e$ ) is proportional to the flow velocity ( $v$ ) and is supplied to the amplifier by means of two measuring electrodes. The flow volume ( $Q$ ) is calculated via the pipe cross-section ( $A$ ). The DC magnetic field is created through a switched direct current of alternating polarity.

Formulae for calculation



- Induced voltage  $U_e = B \cdot L \cdot v$
- Volume flow  $Q = A \cdot v$

**Measuring system**

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by one or two connecting cable(s).



**Transmitter**

Two versions of the transmitter are available.

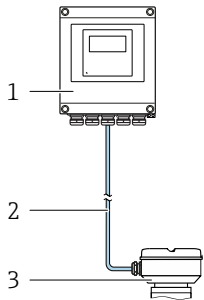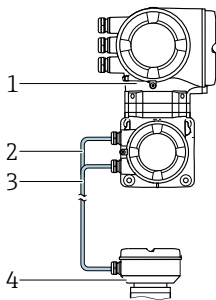
Proline 500 – digital	Proline 500
<p>For use in applications not required to meet special requirements due to ambient or operating conditions.</p>  <p>1 Transmitter 2 Connecting cable: cable, separate, standard 3 Sensor connection housing with integrated ISEM</p> <ul style="list-style-type: none"> <li>Flexible and cost-effective separate installation.</li> <li>A standard cable can be used as the connecting cable.</li> <li>Electronics in the transmitter housing, ISEM (intelligent sensor electronics module) in the sensor connection housing</li> <li>Signal transmission: digital</li> <li>Order code for "Integrated ISEM electronics", option <b>A</b> "Sensor"</li> </ul>	<p>For use in applications required to meet special requirements due to ambient or operating conditions.</p>  <p>1 Transmitter with integrated ISEM 2 Coil current cable 3 Signal cable 4 Sensor connection housing</p> <p>Application examples for sensors without electronics:</p> <ul style="list-style-type: none"> <li>Sensor in underground installations.</li> <li>Permanent immersion of sensor in water, IP68 ingress protection.</li> <li>Electronics and ISEM (intelligent sensor electronics module) in the transmitter housing</li> <li>Signal transmission: analog</li> <li>Order code for "Integrated ISEM electronics", option <b>B</b> "Transmitter"</li> </ul>
<b>Connecting cable</b> (can be ordered in various lengths → 79 )	
<ul style="list-style-type: none"> <li>Length: max. 300 m (1 000 ft)</li> <li>A standard cable with a common shield (pair-stranded)</li> <li>Not sensitive to external EMC interference.</li> </ul>	<ul style="list-style-type: none"> <li>Length: max. 200 m (656 ft), depending on the medium conductivity</li> <li>Two connecting cables: <ul style="list-style-type: none"> <li>One cable for coil current with a common shield (1 pair)</li> <li>One cable for signal transmission with a common shield and individual shielded cores (2 pairs)</li> </ul> </li> </ul>
<b>Ex zone</b>	
<p>Use in: Ex Zone 2, Class 1, Division 2</p> <p>Mixed installation is possible:</p> <ul style="list-style-type: none"> <li>Sensor: Ex Zone 1, Class I, Division 1</li> <li>Transmitter: Ex Zone 1, Class I, Division 1; Ex Zone 2, Class I, Division 2</li> </ul>	<p>Use in: Ex Zone 1 and 2, Class 1, Division 2 and Class 1, Division 1</p>
<b>Device versions and materials</b>	
<ul style="list-style-type: none"> <li>Transmitter housing <ul style="list-style-type: none"> <li>Aluminum, coated: aluminum, AlSi10Mg, coated</li> <li>Material: polycarbonate</li> </ul> </li> <li>Material of window in transmitter housing <ul style="list-style-type: none"> <li>Aluminum, coated: glass</li> <li>Polycarbonate: plastic</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>Transmitter housing <ul style="list-style-type: none"> <li>Aluminum, coated: aluminum, AlSi10Mg, coated</li> <li>Cast, stainless: cast, stainless steel, 1.4409 (CF3M) similar to 316L</li> </ul> </li> <li>Window material: glass</li> </ul>
<b>Configuration</b>	
<ul style="list-style-type: none"> <li>External operation via 4-line, backlit, graphic local display with touch control and guided menus ("Make-it-run" wizards) for application-specific commissioning.</li> <li>Via service interface or WLAN interface: <ul style="list-style-type: none"> <li>Operating tools (e.g. FieldCare, DeviceCare)</li> <li>Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)</li> </ul> </li> </ul>	

**Sensor connection housing**

Different versions of the connection housing are available.

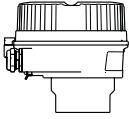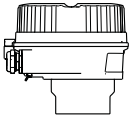
	Order code for "Sensor connection housing", option <b>A</b> , "Aluminum, coated": Aluminum, AlSi10Mg, coated
	Order code for "Sensor connection housing", option <b>L</b> , "Cast, stainless": 1.4409 (CF3M) similar to 316L

**Sensor**
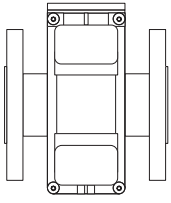
<p><b>Promag P</b></p>  <p style="text-align: right; font-size: small;">A0017703</p>	<p>Nominal diameter range: DN 15 to 600 (½ to 24")</p> <p>Materials:</p> <ul style="list-style-type: none"> <li>■ Sensor housing:                         <ul style="list-style-type: none"> <li>- Aluminum, AlSi10Mg, coated</li> <li>- DN 15 to 300 (½ to 12"): aluminum, AlSi10Mg, coated</li> <li>- DN 350 to 600 (14 to 24"): carbon steel with protective varnish</li> </ul> </li> <li>■ Measuring tubes<sup>1)</sup>: stainless steel, 1.4301/1.4306</li> <li>■ Liner: PFA, PTFE</li> <li>■ Electrodes: stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium</li> <li>■ Process connections: stainless steel, 1.4404<sup>2)</sup>/1.4571/F316L; carbon steel, A105/FE410WB/HII/S235JRG2/S275JR; Alloy C22, 2.4602 (UNS N06022)</li> <li>■ Seals: as per DIN EN 1514-1</li> <li>■ Ground disks: stainless steel, 1.4435 (316L); Alloy C22, 2.4602 (UNS N06022); tantalum; titanium</li> </ul>
---	--

- 1) For flanges made of carbon steel with Al/Zn protective coating (DN 15 to 300 (½ to 12")) or protective varnish (DN 350 to 600 (14 to 24"))
- 2) With Al/Zn protective coating (DN 15 to 300 (½ to 12")) or protective varnish (DN 350 to 600 (14 to 24"))

**Equipment architecture**

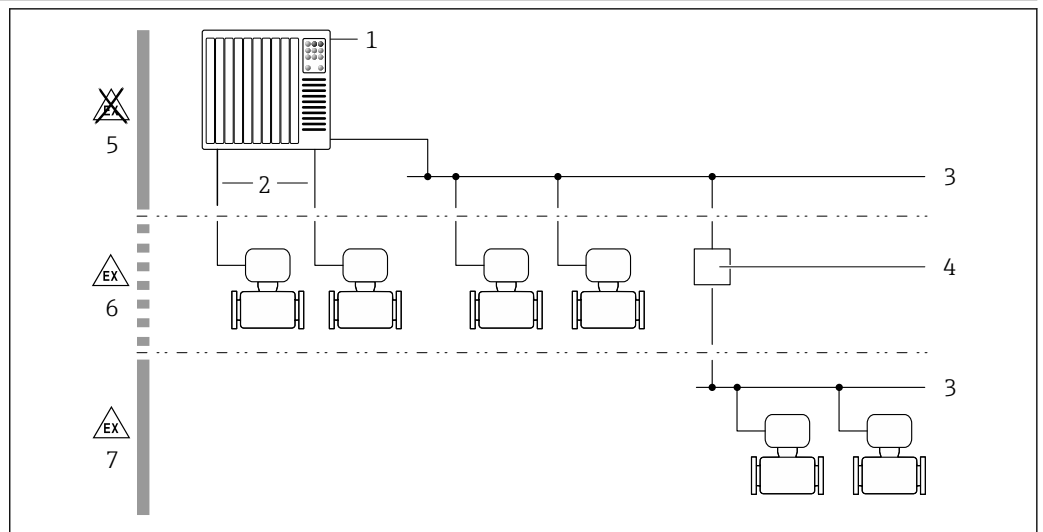

1 Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Segment coupler
- 5 Non-hazardous area
- 6 Non-hazardous area and Zone 2/Div. 2
- 7 Hazardous area and Zone 1/Div. 1

**Safety****IT security**

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

**Device-specific IT security**

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

*Protecting access via hardware write protection*

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

*Protecting access via a password*

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- **User-specific access code**  
Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Is equivalent to hardware write protection in terms of functionality.
- **WLAN passphrase**  
The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

*User-specific access code*

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

*WLAN passphrase*

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

*General notes on the use of passwords*

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.

*Access via fieldbus*

When communicating via fieldbus, access to the device parameters can be restricted to "Read only" access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.



Additional information: "Description of Device Parameters" document pertaining to the device  
→ 82.

*Access via Web server*

The device can be operated and configured via a Web browser with the integrated Web server . The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

 Additional information: "Description of Device Parameters" document pertaining to the device →  82.

## Input

**Measured variable**

**Direct measured variables**

- Volume flow (proportional to induced voltage)
- Electrical conductivity

**Calculated measured variables**

- Mass flow
- Corrected volume flow

**Measuring range**

Typically  $v = 0.01$  to  $10$  m/s ( $0.03$  to  $33$  ft/s) with the specified accuracy

*Flow characteristic values in SI units*



Nominal diameter		Recommended flow min./max. full scale value ( $v \sim 0.3/10$ m/s)	Factory settings		
[mm]	[in]		Current output full scale value <sup>1)</sup> ( $v \sim 2.5$ m/s)	Pulse value <sup>1)</sup> ( $\sim 2$ pulse/s)	Low flow cut off ( $v \sim 0.04$ m/s)
		[dm <sup>3</sup> /min]	[dm <sup>3</sup> /min]	[dm <sup>3</sup> ]	[dm <sup>3</sup> /min]
15	½	4 to 100	25	0.2	0.5
25	1	9 to 300	75	0.5	1
32	–	15 to 500	125	1	2
40	1 ½	25 to 700	200	1.5	3
50	2	35 to 1100	300	2.5	5
65	–	60 to 2000	500	5	8
80	3	90 to 3000	750	5	12
100	4	145 to 4700	1200	10	20
125	–	220 to 7500	1850	15	30
150	6	20 to 600 m <sup>3</sup> /h	150 m <sup>3</sup> /h	0.03 m <sup>3</sup>	2.5 m <sup>3</sup> /h
200	8	35 to 1100 m <sup>3</sup> /h	300 m <sup>3</sup> /h	0.05 m <sup>3</sup>	5 m <sup>3</sup> /h
250	10	55 to 1700 m <sup>3</sup> /h	500 m <sup>3</sup> /h	0.05 m <sup>3</sup>	7.5 m <sup>3</sup> /h
300	12	80 to 2400 m <sup>3</sup> /h	750 m <sup>3</sup> /h	0.1 m <sup>3</sup>	10 m <sup>3</sup> /h
350	14	110 to 3300 m <sup>3</sup> /h	1000 m <sup>3</sup> /h	0.1 m <sup>3</sup>	15 m <sup>3</sup> /h
400	16	140 to 4200 m <sup>3</sup> /h	1200 m <sup>3</sup> /h	0.15 m <sup>3</sup>	20 m <sup>3</sup> /h
450	18	180 to 5400 m <sup>3</sup> /h	1500 m <sup>3</sup> /h	0.25 m <sup>3</sup>	25 m <sup>3</sup> /h
500	20	220 to 6600 m <sup>3</sup> /h	2000 m <sup>3</sup> /h	0.25 m <sup>3</sup>	30 m <sup>3</sup> /h
600	24	310 to 9600 m <sup>3</sup> /h	2500 m <sup>3</sup> /h	0.3 m <sup>3</sup>	40 m <sup>3</sup> /h

1) HART only

## Flow characteristic values in US units

Nominal diameter		Recommended flow min./max. full scale value (v ~ 0.3/10 m/s)	Factory settings		
[in]	[mm]		Current output full scale value <sup>1)</sup> (v ~ 2.5 m/s)	Pulse value <sup>1)</sup> (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
		[gal/min]	[gal/min]	[gal]	[gal/min]
½	15	1.0 to 27	6	0.1	0.15
1	25	2.5 to 80	18	0.2	0.25
1 ½	40	7 to 190	50	0.5	0.75
2	50	10 to 300	75	0.5	1.25
3	80	24 to 800	200	2	2.5
4	100	40 to 1250	300	2	4
6	150	90 to 2650	600	5	12
8	200	155 to 4850	1200	10	15
10	250	250 to 7500	1500	15	30
12	300	350 to 10600	2400	25	45
14	350	500 to 15000	3600	30	60
16	400	600 to 19000	4800	50	60
18	450	800 to 24000	6000	50	90
20	500	1000 to 30000	7500	75	120
24	600	1400 to 44000	10500	100	180

1) HART only

 To calculate the measuring range, use the *Applicator* sizing tool →  81

### Recommended measuring range

"Flow limit" section →  52

**Operable flow range** Over 1000 : 1

### Input signal

#### Input and output versions

→  12

#### External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring device:

- Fluid temperature to increase the accuracy of the electrical conductivity (e.g. iTEMP)
- Reference density for calculating the corrected volume flow

 Various pressure transmitters and temperature measuring devices can be ordered from Endress +Hauser: see "Accessories" section →  81

It is recommended to read in external measured values to calculate the following measured variables:  
Corrected volume flow

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

*Current input*

The measured values are written from the automation system to the measuring device via the current input →  11.

*Digital communication*

The measured values can be written from the automation system to the measuring via:

- FOUNDATION Fieldbus
- PROFIBUS PA
- Modbus RS485

**Current input 0/4 to 20 mA**

<b>Current input</b>	0/4 to 20 mA (active/passive)
<b>Current span</b>	<ul style="list-style-type: none"> <li>■ 4 to 20 mA (active)</li> <li>■ 0/4 to 20 mA (passive)</li> </ul>
<b>Resolution</b>	1 µA
<b>Voltage drop</b>	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
<b>Maximum input voltage</b>	≤ 30 V (passive)
<b>Open-circuit voltage</b>	≤ 28.8 V (active)
<b>Possible input variables</b>	<ul style="list-style-type: none"> <li>■ Pressure</li> <li>■ Temperature</li> <li>■ Density</li> </ul>

**Status input**

<b>Maximum input values</b>	<ul style="list-style-type: none"> <li>■ DC -3 to 30 V</li> <li>■ If status input is active (ON): <math>R_i &gt; 3 \text{ k}\Omega</math></li> </ul>
<b>Response time</b>	Adjustable: 5 to 200 ms
<b>Input signal level</b>	<ul style="list-style-type: none"> <li>■ Low signal: DC -3 to +5 V</li> <li>■ High signal: DC 12 to 30 V</li> </ul>
<b>Assignable functions</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Reset the individual totalizers separately</li> <li>■ Reset all totalizers</li> <li>■ Flow override</li> </ul>

## Output

### Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 4. The table must be read vertically (↓).

Example: If the option **BA** (current output 4 to 20 mA HART) was selected for output/input 1, one of the options **A, B, D, E, F, H, I** or **J** is available for output 2 and one of the options **A, B, D, E, F, H, I** or **J** is available for output 3 and 4.

Order code for "Output; input 1" (020) →	Possible options						
Current output 4 to 20 mA HART	<b>BA</b>						
Current output 4 to 20 mA HART Ex i	↓	<b>CA</b>					
FOUNDATION Fieldbus		↓	<b>SA</b>				
FOUNDATION Fieldbus Ex i			↓	<b>TA</b>			
PROFIBUS PA				↓	<b>GA</b>		
PROFIBUS PA Ex i					↓	<b>HA</b>	
Modbus RS485						↓	<b>MA</b>
Order code for "Output; input 2" (021) →	↓	↓	↓	↓	↓	↓	↓
Not assigned	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Current output 0/4 to 20 mA	<b>B</b>		<b>B</b>		<b>B</b>		<b>B</b>
Current output 0/4 to 20 mA (Ex i)		<b>C</b>		<b>C</b>		<b>C</b>	
User configurable input/output <sup>1)</sup>	<b>D</b>		<b>D</b>		<b>D</b>		<b>D</b>
Pulse/frequency/switch output	<b>E</b>		<b>E</b>		<b>E</b>		<b>E</b>
Double pulse output <sup>2)</sup>	<b>F</b>						<b>F</b>
Pulse/frequency/switch output (Ex i)		<b>G</b>		<b>G</b>		<b>G</b>	
Relay output	<b>H</b>		<b>H</b>		<b>H</b>		<b>H</b>
Current input 0/4 to 20 mA	<b>I</b>		<b>I</b>		<b>I</b>		<b>I</b>
Status input	<b>J</b>		<b>J</b>		<b>J</b>		<b>J</b>
Order code for "Output; input 3" (022), "Output; input 4" (023) <sup>3)</sup> →	↓	↓	↓	↓	↓	↓	↓
Not assigned	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Current output 0/4 to 20 mA	<b>B</b>						<b>B</b>
Current output 0/4 to 20 mA (Ex i)		<b>C</b>					
User configurable input/output	<b>D</b>						<b>D</b>
Pulse/frequency/switch output	<b>E</b>						<b>E</b>
Double pulse output (slave) <sup>2) 4)</sup>	<b>F</b>						<b>F</b>
Pulse/frequency/switch output (Ex i)		<b>G</b>					
Relay output	<b>H</b>						<b>H</b>
Current input 0/4 to 20 mA	<b>I</b>						<b>I</b>
Status input	<b>J</b>						<b>J</b>

1) A specific input or output can be assigned to a user configurable input/output → 16.

2) If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022).

3) The order code for "Output; input 4" (023) is only available for the Proline 500 – digital transmitter.

4) The double pulse output (F) option is not available for input/output 4.

**Output signal****HART current output**

<b>Current output</b>	4 to 20 mA HART
<b>Current span</b>	Can be set to: 4 to 20 mA (active/passive)
<b>Open-circuit voltage</b>	DC 28.8 V (active)
<b>Maximum input voltage</b>	DC 30 V (passive)
<b>Load</b>	250 to 700 $\Omega$
<b>Resolution</b>	0.38 $\mu$ A
<b>Damping</b>	Adjustable: 0.07 to 999 s
<b>Assignable measured variables</b>	<ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Flow velocity</li> <li>■ Conductivity</li> <li>■ Corrected conductivity</li> <li>■ Temperature</li> <li>■ Electronic temperature</li> </ul>

**PROFIBUS PA**

<b>PROFIBUS PA</b>	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
<b>Data transfer</b>	31.25 KBit/s
<b>Current consumption</b>	10 mA
<b>Permitted supply voltage</b>	9 to 32 V
<b>Bus connection</b>	With integrated reverse polarity protection

**FOUNDATION Fieldbus**

<b>FOUNDATION Fieldbus</b>	H1, IEC 61158-2, galvanically isolated
<b>Data transfer</b>	31.25 KBit/s
<b>Current consumption</b>	10 mA
<b>Permitted supply voltage</b>	9 to 32 V
<b>Bus connection</b>	With integrated reverse polarity protection

**Modbus RS485**

<b>Physical interface</b>	RS485 in accordance with EIA/TIA-485 standard
<b>Terminating resistor</b>	Integrated, can be activated via DIP switches

**Current output 0/4 to 20 mA**

<b>Current output</b>	0/4 to 20 mA
<b>Maximum output values</b>	22.5 mA
<b>Current span</b>	Can be set to: <ul style="list-style-type: none"> <li>■ 4 to 20 mA (active)</li> <li>■ 0/4 to 20 mA (passive)</li> </ul>
<b>Open-circuit voltage</b>	DC 28.8 V (active)
<b>Maximum input voltage</b>	DC 30 V (passive)

<b>Load</b>	0 to 700 $\Omega$
<b>Resolution</b>	0.38 $\mu$ A
<b>Damping</b>	Adjustable: 0.07 to 999 s
<b>Assignable measured variables</b>	<ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Flow velocity</li> <li>▪ Conductivity</li> <li>▪ Corrected conductivity</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> </ul>

#### Pulse/frequency/switch output

<b>Function</b>	Can be set to pulse, frequency or switch output
<b>Version</b>	Open collector Can be set to: <ul style="list-style-type: none"> <li>▪ Active</li> <li>▪ Passive</li> </ul>
<b>Maximum input values</b>	DC 30 V, 250 mA (passive)
<b>Open-circuit voltage</b>	DC 28.8 V (active)
<b>Voltage drop</b>	For 22.5 mA: $\leq$ DC 2 V
<b>Pulse output</b>	
<b>Maximum input values</b>	DC 30 V, 250 mA (passive)
<b>Maximum output current</b>	22.5 mA (active)
<b>Open-circuit voltage</b>	DC 28.8 V (active)
<b>Pulse width</b>	Adjustable: 0.05 to 2 000 ms
<b>Maximum pulse rate</b>	10 000 Impulse/s
<b>Pulse value</b>	Adjustable
<b>Assignable measured variables</b>	<ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> </ul>
<b>Frequency output</b>	
<b>Maximum input values</b>	DC 30 V, 250 mA (passive)
<b>Maximum output current</b>	22.5 mA (active)
<b>Open-circuit voltage</b>	DC 28.8 V (active)
<b>Output frequency</b>	Adjustable: end value frequency 2 to 10 000 Hz ( $f_{\max} = 12\,500$ Hz)
<b>Damping</b>	Adjustable: 0 to 999 s
<b>Pulse/pause ratio</b>	1:1
<b>Assignable measured variables</b>	<ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Flow velocity</li> <li>▪ Conductivity</li> <li>▪ Corrected conductivity</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> </ul>
<b>Switch output</b>	
<b>Maximum input values</b>	DC 30 V, 250 mA (passive)
<b>Open-circuit voltage</b>	DC 28.8 V (active)
<b>Switching behavior</b>	Binary, conductive or non-conductive

<b>Switching delay</b>	Adjustable: 0 to 100 s
<b>Number of switching cycles</b>	Unlimited
<b>Assignable functions</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> <li>■ Diagnostic behavior</li> <li>■ Limit value: <ul style="list-style-type: none"> <li>- Off</li> <li>- Volume flow</li> <li>- Mass flow</li> <li>- Corrected volume flow</li> <li>- Flow velocity</li> <li>- Conductivity</li> <li>- Corrected conductivity</li> <li>- Totalizer 1-3</li> <li>- Temperature</li> <li>- Electronic temperature</li> </ul> </li> <li>■ Flow direction monitoring</li> <li>■ Status <ul style="list-style-type: none"> <li>- Empty pipe detection</li> <li>- Low flow cut off</li> </ul> </li> </ul>

#### Double pulse output

<b>Function</b>	Double pulse
<b>Version</b>	Open collector Can be set to: <ul style="list-style-type: none"> <li>■ Active</li> <li>■ Passive</li> </ul>
<b>Maximum input values</b>	DC 30 V, 250 mA (passive)
<b>Open-circuit voltage</b>	DC 28.8 V (active)
<b>Voltage drop</b>	For 22.5 mA: ≤ DC 2 V
<b>Output frequency</b>	Adjustable: 0 to 1 000 Hz
<b>Damping</b>	Adjustable: 0 to 999 s
<b>Pulse/pause ratio</b>	1:1
<b>Assignable measured variables</b>	<ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Flow velocity</li> <li>■ Conductivity</li> <li>■ Corrected conductivity</li> <li>■ Temperature</li> <li>■ Electronic temperature</li> </ul>

#### Relay output

<b>Function</b>	Switch output
<b>Version</b>	Relay output, galvanically isolated
<b>Switching behavior</b>	Can be set to: <ul style="list-style-type: none"> <li>■ NO (normally open), factory setting</li> <li>■ NC (normally closed)</li> </ul>

<b>Maximum switching capacity (passive)</b>	<ul style="list-style-type: none"> <li>■ DC 30 V, 0.1 A</li> <li>■ AC 30 V, 0.5 A</li> </ul>
<b>Assignable functions</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> <li>■ Diagnostic behavior</li> <li>■ Limit value: <ul style="list-style-type: none"> <li>- Off</li> <li>- Volume flow</li> <li>- Mass flow</li> <li>- Corrected volume flow</li> <li>- Flow velocity</li> <li>- Conductivity</li> <li>- Corrected conductivity</li> <li>- Totalizer 1-3</li> <li>- Temperature</li> <li>- Electronic temperature</li> </ul> </li> <li>■ Flow direction monitoring</li> <li>■ Status <ul style="list-style-type: none"> <li>- Empty pipe detection</li> <li>- Low flow cut off</li> </ul> </li> </ul>

### User configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### HART current output

<b>Device diagnostics</b>	Device condition can be read out via HART Command 48
---------------------------	--

#### PROFIBUS PA

<b>Status and alarm messages</b>	Diagnostics in accordance with PROFIBUS PA Profile 3.02
<b>Error current FDE (Fault Disconnection Electronic)</b>	0 mA

#### FOUNDATION Fieldbus

<b>Status and alarm messages</b>	Diagnostics in accordance with FF-891
<b>Error current FDE (Fault Disconnection Electronic)</b>	0 mA

#### Modbus RS485

<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ NaN value instead of current value</li> <li>■ Last valid value</li> </ul>
---------------------	---

**Current output 0/4 to 20 mA**

*4 to 20 mA*

<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ 4 to 20 mA in accordance with NAMUR recommendation NE 43</li> <li>■ 4 to 20 mA in accordance with US</li> <li>■ Min. value: 3.59 mA</li> <li>■ Max. value: 22.5 mA</li> <li>■ Freely definable value between: 3.59 to 22.5 mA</li> <li>■ Actual value</li> <li>■ Last valid value</li> </ul>
---------------------	--

*0 to 20 mA*

<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ Maximum alarm: 22 mA</li> <li>■ Freely definable value between: 0 to 20.5 mA</li> </ul>
---------------------	---

**Pulse/frequency/switch output**

<b>Pulse output</b>	
<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ Actual value</li> <li>■ No pulses</li> </ul>
<b>Frequency output</b>	
<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ Actual value</li> <li>■ 0 Hz</li> <li>■ Defined value (<math>f_{max} \geq 2</math> to 12 500 Hz)</li> </ul>
<b>Switch output</b>	
<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ Current status</li> <li>■ Open</li> <li>■ Closed</li> </ul>

**Relay output**

<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ Current status</li> <li>■ Open</li> <li>■ Closed</li> </ul>
---------------------	---

**Local display**

<b>Plain text display</b>	With information on cause and remedial measures
<b>Backlight</b>	Red backlighting indicates a device error.

 Status signal as per NAMUR recommendation NE 107

**Interface/protocol**

- Via digital communication:
  - HART protocol
  - FOUNDATION Fieldbus
  - PROFIBUS PA
  - Modbus RS485
- Via service interface

Plain text display	With information on cause and remedial measures
--------------------	---

 Additional information on remote operation →  67

#### Web server

Plain text display	With information on cause and remedial measures
--------------------	---

#### Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes The following information is displayed depending on the device version: <ul style="list-style-type: none"> <li>▪ Supply voltage active</li> <li>▪ Data transmission active</li> <li>▪ Device alarm/error has occurred</li> </ul>
--------------------	---

#### Ex connection data

#### Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option BA	Current output 4 to 20 mA HART	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$	
Option GA	PROFIBUS PA	$U_{nom} = 32\text{ V}$ $U_{max} = 250\text{ V}$	
Option MA	Modbus RS485	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$	
Option SA	FOUNDATION Fieldbus	$U_{nom} = 32\text{ V}$ $U_{max} = 250\text{ V}$	

Order code for "Output; input 2"; "Output; input 3" "Output; input 4"	Output type	Safety-related values					
		Output; input 2		Output; input 3		Output; input 4 <sup>1)</sup>	
		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option B	Current output 4 to 20 mA	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$					
Option D	User configurable input/output	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$					
Option E	Pulse/frequency/switch output	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$					
Option F	Double pulse output	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$					
Option H	Relay output	$U_{nom} = 30\text{ V}$ $I_{nom} = 100\text{ mA DC}/500\text{ mA AC}$ $U_{max} = 250\text{ V}$					
Option I	Current input 4 to 20 mA	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$					
Option J	Status input	$U_{nom} = 30\text{ V}$ $U_{max} = 250\text{ V}$					

1) The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

**Intrinsically safe values**

Order code for "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"	
		26 (+)	27 (-)
Option <b>CA</b>	Current output 4 to 20 mA HART Ex i	$U_i = 30\text{ V}$ $I_i = 100\text{ mA}$ $P_i = 1.25\text{ W}$ $L_i = 0$ $C_i = 0$	
Option <b>HA</b>	PROFIBUS PA Ex i	<b>Ex ia</b> <sup>1)</sup> $U_i = 30\text{ V}$ $I_i = 570\text{ mA}$ $P_i = 8.5\text{ W}$ $L_i = 10\text{ }\mu\text{H}$ $C_i = 5\text{ nF}$	<b>Ex ic</b> <sup>2)</sup> $U_i = 32\text{ V}$ $I_i = 570\text{ mA}$ $P_i = 8.5\text{ W}$ $L_i = 10\text{ }\mu\text{H}$ $C_i = 5\text{ nF}$
Option <b>TA</b>	FOUNDATION Fieldbus Ex i	<b>Ex ia</b> <sup>1)</sup> $U_i = 30\text{ V}$ $I_i = 570\text{ mA}$ $P_i = 8.5\text{ W}$ $L_i = 10\text{ }\mu\text{H}$ $C_i = 5\text{ nF}$	<b>Ex ic</b> <sup>2)</sup> $U_i = 32\text{ V}$ $I_i = 570\text{ mA}$ $P_i = 8.5\text{ W}$ $L_i = 10\text{ }\mu\text{H}$ $C_i = 5\text{ nF}$

- 1) Only available for the Zone 1, Class I, Division 1 version
- 2) Only available for the Zone 2, Class I, Division 2 version and only for the Proline 500 – digital transmitter

Order code for "Output; input 2"; "Output; input 3" "Output; input 4"	Output type	Intrinsically safe values					
		Output; input 2		Output; input 3		Output; input 4 <sup>1)</sup>	
		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option <b>C</b>	Current output 4 to 20 mA Ex i	$U_i = 30\text{ V}$ $I_i = 100\text{ mA}$ $P_i = 1.25\text{ W}$ $L_i = 0$ $C_i = 0$					
Option <b>G</b>	Pulse/frequency/switch output Ex i	$U_i = 30\text{ V}$ $I_i = 100\text{ mA}$ $P_i = 1.25\text{ W}$ $L_i = 0$ $C_i = 0$					

- 1) The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

**Low flow cut off** The switch points for low flow cut off are user-selectable.

**Galvanic isolation** The outputs are galvanically isolated from one another and from earth (PE).



**Protocol-specific data** **HART**

<b>Manufacturer ID</b>	0x11
<b>Device type ID</b>	0x3C
<b>HART protocol revision</b>	7
<b>Device description files (DTM, DD)</b>	Information and files under: <a href="http://www.endress.com">www.endress.com</a>
<b>HART load</b>	Min. 250 $\Omega$

<b>Dynamic variables</b>	<p>Read out the dynamic variables: HART command 3 The measured variables can be freely assigned to the dynamic variables.</p> <p><b>Measured variables for PV (primary dynamic variable)</b></p> <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Flow velocity</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> </ul> <p><b>Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)</b></p> <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Flow velocity</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> <li>▪ Totalizer 1</li> <li>▪ Totalizer 2</li> <li>▪ Totalizer 3</li> </ul>
<b>Device variables</b>	<p>Read out the device variables: HART command 9 The device variables are permanently assigned.</p> <p>A maximum of 8 device variables can be transmitted:</p> <ul style="list-style-type: none"> <li>▪ 0 = volume flow</li> <li>▪ 1 = mass flow</li> <li>▪ 2 = corrected volume flow</li> <li>▪ 3 = flow velocity</li> <li>▪ 4 = conductivity</li> <li>▪ 5 = corrected conductivity</li> <li>▪ 6 = temperature</li> <li>▪ 7 = electronic temperature</li> <li>▪ 8 = totalizer 1</li> <li>▪ 9 = totalizer 2</li> <li>▪ 10 = totalizer 3</li> </ul>

**PROFIBUS PA**

<b>Manufacturer ID</b>	0x11
<b>Ident number</b>	0x156C
<b>Profile version</b>	3.02
<b>Device description files (GSD, DTM, DD)</b>	<p>Information and files under:</p> <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.profibus.org">www.profibus.org</a></li> </ul>

<p><b>Output values</b> (from measuring device to automation system)</p>	<p><b>Heartbeat Technology Application Package</b> Additional measured variables are available with the Heartbeat Technology application package:</p> <p><b>Analog input 1 to 4</b></p> <ul style="list-style-type: none"> <li>▪ Volume flow</li> <li>▪ Mass flow</li> <li>▪ Corrected volume flow</li> <li>▪ Flow velocity</li> <li>▪ Conductivity</li> <li>▪ Corrected conductivity</li> <li>▪ Temperature</li> <li>▪ Electronic temperature</li> <li>▪ Current input</li> </ul> <p><b>Digital input 1 to 2</b></p> <ul style="list-style-type: none"> <li>▪ Empty pipe detection</li> <li>▪ Low flow cut off</li> <li>▪ Status verification</li> </ul> <p><b>Totalizer 1 to 3</b></p> <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Corrected volume flow</li> </ul>
<p><b>Input values</b> (from automation system to measuring device)</p>	<p><b>Analog output 1 to 2 (fixed assignment)</b></p> <ul style="list-style-type: none"> <li>▪ Analog output 1: external density</li> <li>▪ Analog output 2: external temperature</li> </ul> <p><b>Digital output 1 to 3 (fixed assignment)</b></p> <ul style="list-style-type: none"> <li>▪ Digital output 1: switch positive zero return on/off</li> <li>▪ Digital output 2: start verification</li> <li>▪ Digital output 3: relay output non-conductive/conductive</li> </ul> <p><b>Totalizer 1 to 3</b></p> <ul style="list-style-type: none"> <li>▪ Totalize</li> <li>▪ Reset and hold</li> <li>▪ Preset and hold</li> <li>▪ Operating mode configuration: <ul style="list-style-type: none"> <li>- Net flow total</li> <li>- Forward flow total</li> <li>- Reverse flow total</li> <li>- Last valid value</li> </ul> </li> </ul>
<p><b>Supported functions</b></p>	<ul style="list-style-type: none"> <li>▪ Identification &amp; Maintenance Simplest device identification on the part of the control system and nameplate</li> <li>▪ PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download</li> <li>▪ Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur</li> </ul>
<p><b>Configuration of the device address</b></p>	<ul style="list-style-type: none"> <li>▪ DIP switches on the I/O electronics module</li> <li>▪ Local display</li> <li>▪ Via operating tools (e.g. FieldCare)</li> </ul>
<p><b>Compatibility with earlier model</b></p>	<p>If the device is replaced, the Promag 500 measuring device supports the compatibility of the cyclic data with earlier models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promag 500 GSD file.</p> <p>Earlier models:</p> <ul style="list-style-type: none"> <li>▪ Promag 50 PROFIBUS PA <ul style="list-style-type: none"> <li>- ID No.: 1525 (hex)</li> <li>- Extended GSD file: EH3x1525.gsd</li> <li>- Standard GSD file: EH3_1525.gsd</li> </ul> </li> <li>▪ Promag 53 PROFIBUS PA <ul style="list-style-type: none"> <li>- ID No.: 1527 (hex)</li> <li>- Extended GSD file: EH3x1527.gsd</li> <li>- Standard GSD file: EH3_1527.gsd</li> </ul> </li> </ul> <p> Description of the function scope of compatibility: Operating Instructions →  82.</p>

## FOUNDATION Fieldbus


<b>Manufacturer ID</b>	0x452B48
<b>Ident number</b>	0x103C
<b>Device revision</b>	1
<b>DD revision</b>	Information and files under:
<b>CFF revision</b>	<ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.fieldbus.org">www.fieldbus.org</a></li> </ul>
<b>Interoperability Test Kit (ITK)</b>	Version 6.1.2
<b>ITK Test Campaign Number</b>	Information: <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.fieldbus.org">www.fieldbus.org</a></li> </ul>
<b>Link Master capability (LAS)</b>	Yes
<b>Choice of "Link Master" and "Basic Device"</b>	Yes Factory setting: Basic Device
<b>Node address</b>	Factory setting: 247 (0xF7)
<b>Supported functions</b>	The following methods are supported: <ul style="list-style-type: none"> <li>▪ Restart</li> <li>▪ ENP Restart</li> <li>▪ Diagnostic</li> </ul>
<b>Virtual Communication Relationships (VCRs)</b>	
<b>Number of VCRs</b>	44
<b>Number of link objects in VFD</b>	50
<b>Permanent entries</b>	1
<b>Client VCRs</b>	0
<b>Server VCRs</b>	10
<b>Source VCRs</b>	43
<b>Sink VCRs</b>	0
<b>Subscriber VCRs</b>	43
<b>Publisher VCRs</b>	43
<b>Device Link Capabilities</b>	
<b>Slot time</b>	4
<b>Min. delay between PDU</b>	8
<b>Max. response delay</b>	20

## Transducer Blocks

Block	Contents	Output values
Setup Transducer Block (TRDSUP)	All parameters for standard commissioning.	No output values
Advanced Setup Transducer Block (TRDASUP)	All parameters for more accurate measurement configuration.	No output values
Display Transducer Block (TRDDISP)	Parameters for configuring the local display.	No output values
HistoROM Transducer Block (TRDHROM)	Parameters for using the HistoROM function.	No output values




Block	Contents	Output values
Diagnostic Transducer Block (TRDDIAG)	Diagnostics information.	Process variables (AI Channel) <ul style="list-style-type: none"> <li>▪ Temperature (7)</li> <li>▪ Volume flow (9)</li> <li>▪ Mass flow (11)</li> <li>▪ Corrected volume flow (13)</li> <li>▪ Flow velocity (37)</li> <li>▪ Electronic temperature (39)</li> <li>▪ Conductivity (70)</li> <li>▪ Corrected conductivity (71)</li> </ul>
Expert Configuration Transducer Block (TRDEXP)	Parameters that require the user to have in-depth knowledge of the operation of the device in order to configure the parameters appropriately.	No output values
Expert Information Transducer Block (TRDEXPIN)	Parameters that provide information about the state of the device.	No output values
Service Sensor Transducer Block (TRDSRVS)	Parameters that can only be accessed by Endress+Hauser Service.	No output values
Service Information Transducer Block (TRDSRVIF)	Parameters that provide Endress+Hauser Service with information about the state of the device.	No output values
Total Inventory Counter Transducer Block (TRDTIC)	Parameters for configuring all the totalizers and the inventory counter.	Process variables (AI Channel) <ul style="list-style-type: none"> <li>▪ Totalizer 1 (16)</li> <li>▪ Totalizer 2 (17)</li> <li>▪ Totalizer 3 (18)</li> </ul>
Heartbeat Technology Transducer Block (TRDHBT)	Parameters for the configuration and comprehensive information about the results of the verification.	No output values
Heartbeat Results 1 Transducer Block (TRDHBTR1)	Information about the results of the verification.	No output values
Heartbeat Results 2 Transducer Block (TRDHBTR2)	Information about the results of the verification.	No output values
Heartbeat Results 3 Transducer Block (TRDHBTR3)	Information about the results of the verification.	No output values
Heartbeat Results 4 Transducer Block (TRDHBTR4)	Information about the results of the verification.	No output values

## Function blocks

Block	Number blocks	Execution times	Process variables (Channel)
Resource Block (RB)	1	This Block (extended functionality) contains all the data that uniquely identify the device; it is the equivalent of an electronic nameplate for the device.	–
Analog Input Block (AI)	4	7 ms	Process variables (AI Channel) <ul style="list-style-type: none"> <li>▪ Temperature (7)</li> <li>▪ Volume flow (9)</li> <li>▪ Mass flow (11)</li> <li>▪ Corrected volume flow (13)</li> <li>▪ Totalizer 1 (16)</li> <li>▪ Totalizer 2 (17)</li> <li>▪ Totalizer 3 (18)</li> <li>▪ Flow velocity (37)</li> <li>▪ Electronic temperature (39)</li> <li>▪ Conductivity (70)</li> <li>▪ Corrected conductivity (71)</li> </ul>
Discrete Input Block (DI)	2	5 ms	<ul style="list-style-type: none"> <li>▪ Switch output state (101)</li> <li>▪ Low flow cut off (103)</li> <li>▪ Empty pipe detection (104)</li> <li>▪ Status verification (105)</li> </ul>
PID Block (PID)	1	6 ms	–
Multiple Analog Output Block (MAO)	1	5 ms	Channel_0 (121) <ul style="list-style-type: none"> <li>▪ Value 1: External compensation variable, temperature</li> <li>▪ Value 2: External compensation variable, density</li> </ul> <p> The compensation variables must be transmitted to the device in the SI basic units.</p>
Multiple Digital Output Block (MDO)	1	5 ms	Channel_DO (122) <ul style="list-style-type: none"> <li>▪ Value 1: Reset totalizer 1</li> <li>▪ Value 2: Reset totalizer 2</li> <li>▪ Value 3: Reset totalizer 3</li> <li>▪ Value 4: Flow override</li> <li>▪ Value 5: Start heartbeat verification</li> <li>▪ Value 6: Status switch output</li> <li>▪ Value 7: Not assigned</li> <li>▪ Value 8: Not assigned</li> </ul>
Integrator Block (IT)	1	6 ms	–

## Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1
Response times	<ul style="list-style-type: none"> <li>▪ Direct data access: typically 25 to 50 ms</li> <li>▪ Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>
Device type	Slave
Slave address range	1 to 247
Broadcast address range	0


<b>Function codes</b>	<ul style="list-style-type: none"> <li>▪ 03: Read holding register</li> <li>▪ 04: Read input register</li> <li>▪ 06: Write single registers</li> <li>▪ 08: Diagnostics</li> <li>▪ 16: Write multiple registers</li> <li>▪ 23: Read/write multiple registers</li> </ul>
<b>Broadcast messages</b>	<p>Supported by the following function codes:</p> <ul style="list-style-type: none"> <li>▪ 06: Write single registers</li> <li>▪ 16: Write multiple registers</li> <li>▪ 23: Read/write multiple registers</li> </ul>
<b>Supported baud rate</b>	<ul style="list-style-type: none"> <li>▪ 1 200 BAUD</li> <li>▪ 2 400 BAUD</li> <li>▪ 4 800 BAUD</li> <li>▪ 9 600 BAUD</li> <li>▪ 19 200 BAUD</li> <li>▪ 38 400 BAUD</li> <li>▪ 57 600 BAUD</li> <li>▪ 115 200 BAUD</li> </ul>
<b>Data transfer mode</b>	<ul style="list-style-type: none"> <li>▪ ASCII</li> <li>▪ RTU</li> </ul>
<b>Data access</b>	<p>Each device parameter can be accessed via Modbus RS485.</p> <p> For Modbus register information</p>
<b>Compatibility with earlier model</b>	<p>If the device is replaced, the Promag 500 measuring device supports the compatibility of the Modbus registers for process variables and diagnostic information with the earlier Promag 53 model. It is not necessary to change the engineering parameters in the automation system.</p> <p> Description of the function scope of compatibility: Operating Instructions →  82.</p>

## Power supply


### Terminal assignment

#### Transmitter: supply voltage, input/outputs


##### HART

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
The terminal assignment depends on the specific device version ordered →  12.									


##### FOUNDATION Fieldbus

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
The terminal assignment depends on the specific device version ordered →  12.									

##### PROFIBUS PA

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
The terminal assignment depends on the specific device version ordered →  12.									



## Modbus RS485

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
The terminal assignment depends on the specific device version ordered →  12.									

**Transmitter and sensor connection housing: connecting cable**

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:



- Proline 500 – digital →  27
- Proline 500 →  27

**Device plugs available**

Device plugs may not be used in hazardous areas!

**Device plugs are only available for the following device versions:**

Order code for "Input; output 1"

- Option GA "PROFIBUS PA" →  26
- Option SA "FOUNDATION Fieldbus" →  26


**Order code for "Input; output 1", option GA "PROFIBUS PA"**

Order code for "Electrical connection"	Cable entry 2	Cable entry 3
L, N, P, U	Plug M12 × 1	-


**Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"**

Order code for "Electrical connection"	Cable entry 2	Cable entry 3
M, 3, 4, 5	7/8" plug	-

**Pin assignment, device plug****PROFIBUS PA**

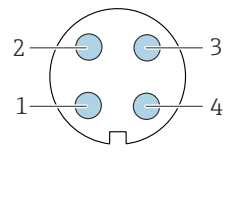	Pin	Assignment		Coding	Plug/socket	
	1	+	PROFIBUS PA +		A	Plug
	2		Grounding			
	3	-	PROFIBUS PA -			
	4		Not assigned			

**FOUNDATION Fieldbus**

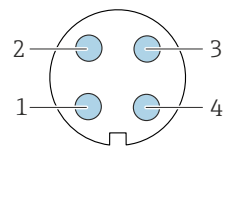	Pin	Assignment		Coding	Plug/socket	
	1	+	Signal +		A	Plug
	2	-	Signal -			
	3		Grounding			
	4		Not assigned			

Supply voltage	Order code for "Power supply"	terminal voltage		Frequency range
	Option D		DC 24 V	±20%
Option E		AC100 to 240 V	-15...+10%	50/60 Hz, ±4 Hz
Option I		DC 24 V	±20%	-
		AC100 to 240 V	-15...+10%	50/60 Hz, ±4 Hz

**Power consumption** **Transmitter**  
 Max. 10 W (active power)


**Current consumption** **Transmitter**

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

**Power supply failure**

- Totalizers stop at the last value measured.
- Configuration is retained in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.


**Electrical connection** **Connection of connecting cable: Proline 500 – digital**

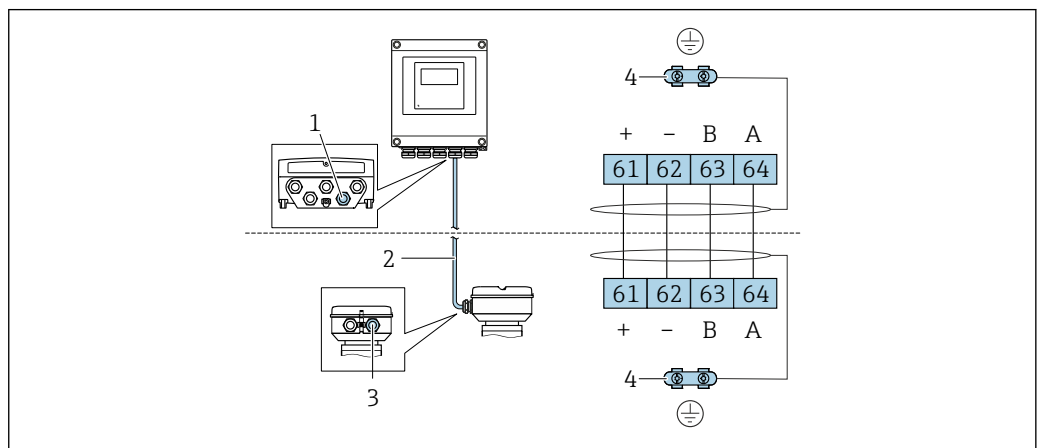

- 1 Cable entry for cable on transmitter housing
- 2 Connecting cable ISEM communication
- 3 Cable entry for cable or connection of device plug on sensor connection housing
- 4 Grounding via ground connection; on device plug versions grounding is through the plug itself.

**Connection of the connecting cable: Proline 500**

The connecting cable is connected via terminals.

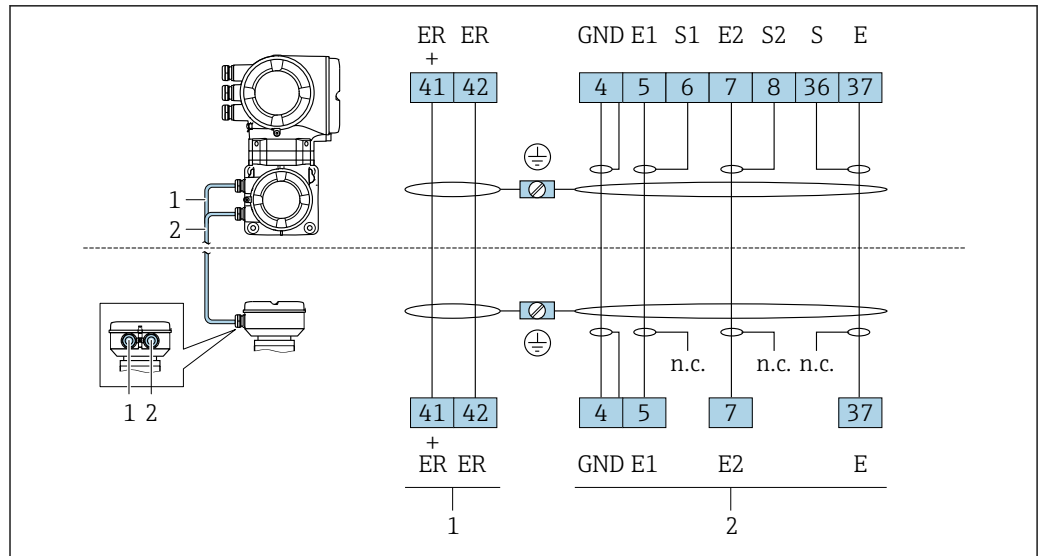


A0029145

- 1 Coil current cable
- 2 Signal cable

### Connecting the transmitter

- i** Terminal assignment → 25
- Device plug pin assignment → 26


#### Connection of the Proline 500 – digital transmitter

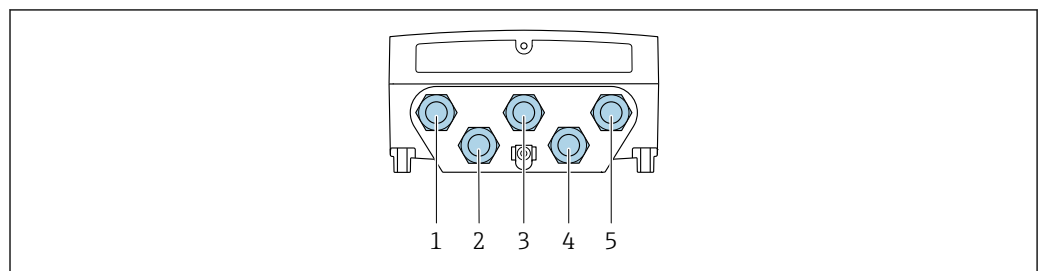

A0028200

- 1 Cable entry for supply voltage
- 2 Cable entry for cable or connection of device plug for signal transmission
- 3 Cable entry for cable or connection of device plug for signal transmission
- 4 Cable entry for sensor - transmitter connecting cable
- 5 Cable entry for cable or connection of device plug for signal transmission, optional: connection of external WLAN antenna or service connector

#### Connection of the Proline 500 transmitter

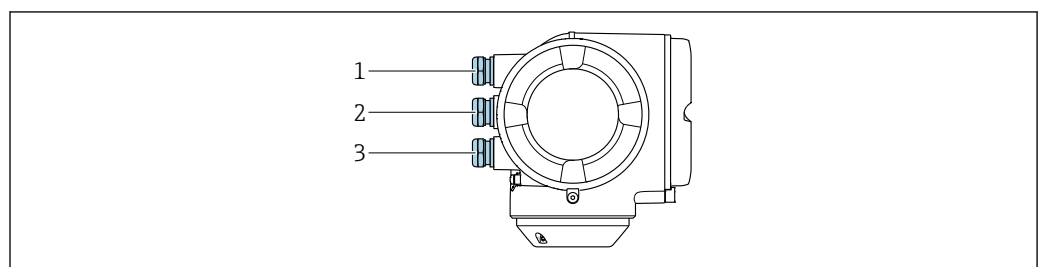


A0026781

- 1 Cable entry for supply voltage
- 2 Cable entry for input/output signal transmission
- 3 Cable entry for input/output signal transmission; optional: connection of external WLAN antenna or service connector

Connection examples


Current output 4 to 20 mA HART

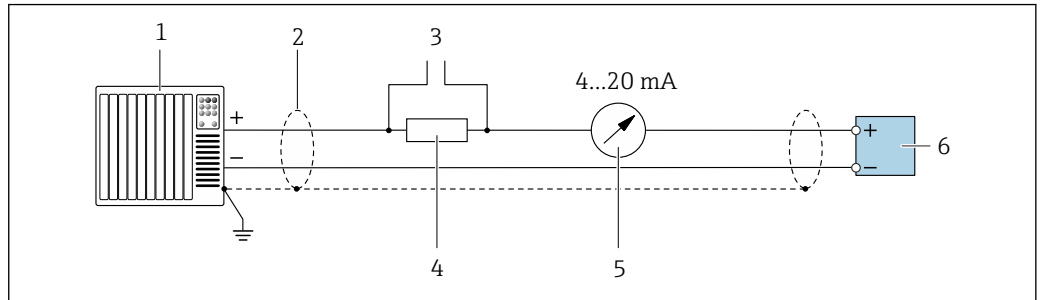

A0029055

2 Connection example for 4 to 20 mA HART current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications → 36
- 3 Connection for HART operating devices → 67
- 4 Resistor for HART communication ( $\geq 250 \Omega$ ): observe maximum load → 13
- 5 Analog display unit: observe maximum load → 13
- 6 Transmitter

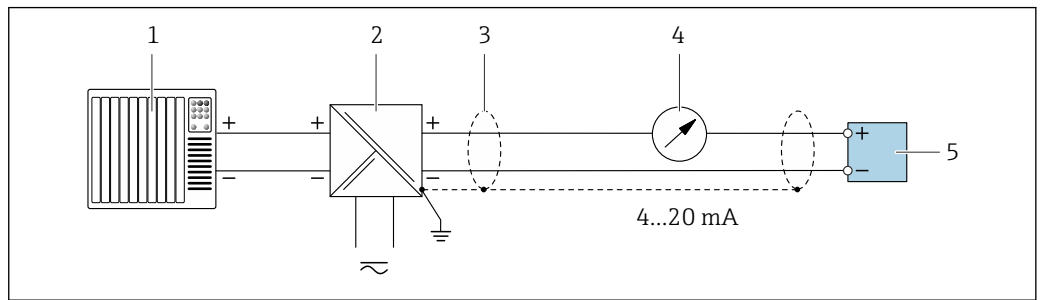


A0028762

3 Connection example for 4 to 20 mA HART current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications → 36
- 4 Analog display unit: observe maximum load → 13
- 5 Transmitter

HART input

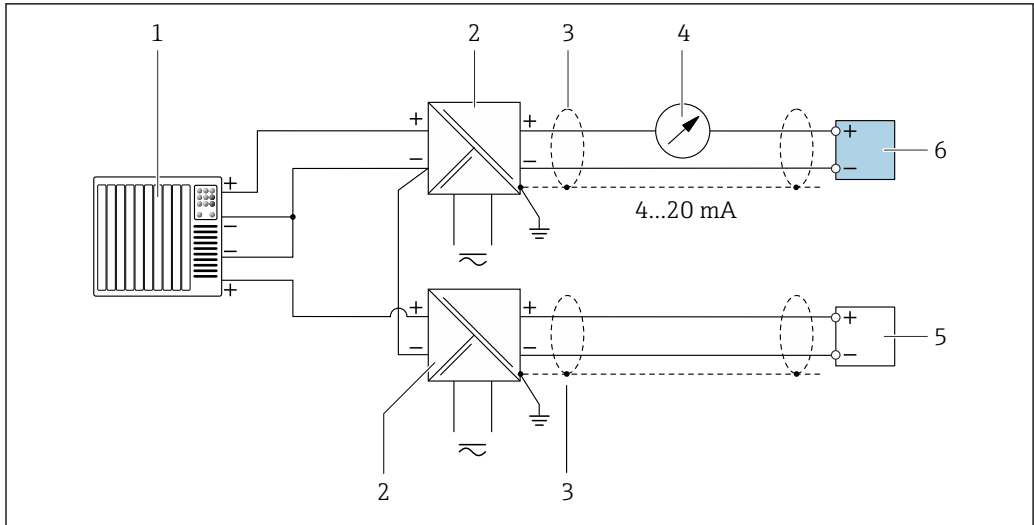


A0028763

4 Connection example for HART input with a common negative (passive)

- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load
- 5 Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter

PROFIBUS-PA

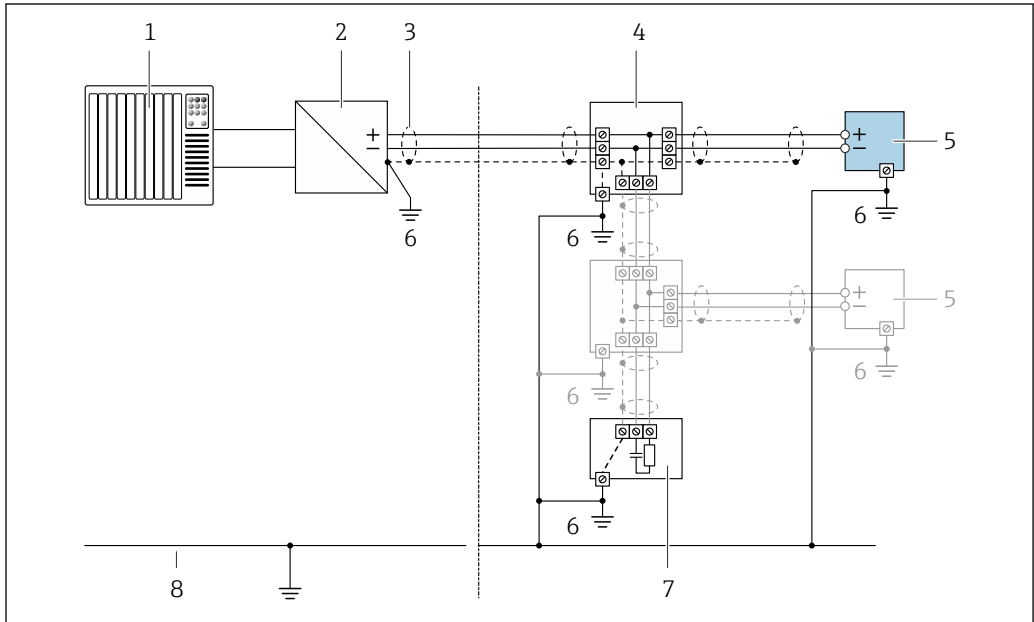


A0028768

5 Connection example for PROFIBUS-PA

- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

FOUNDATION Fieldbus

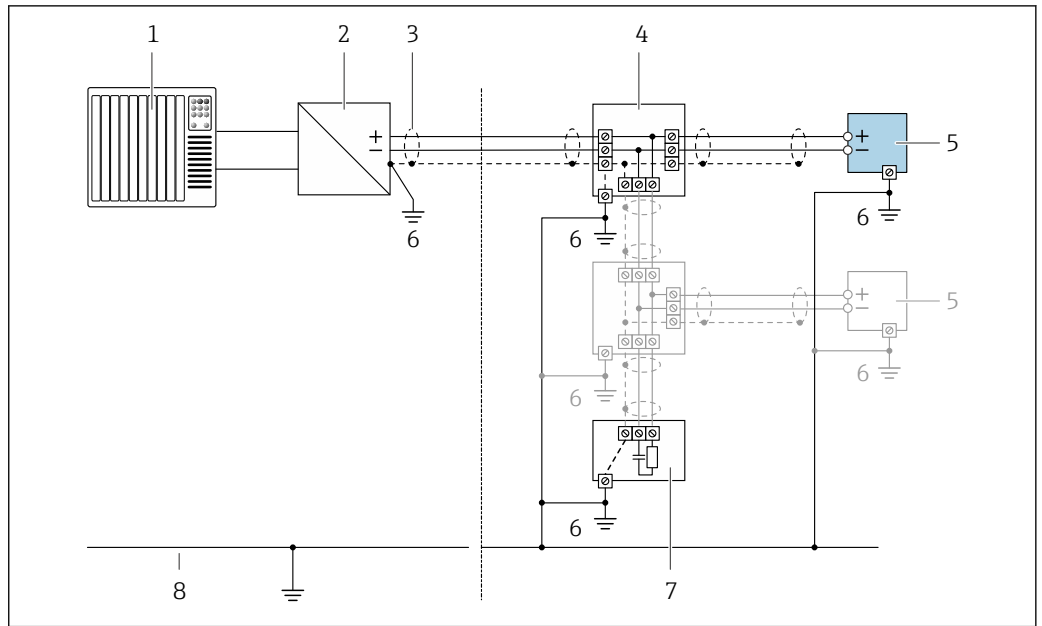


A0028768

6 Connection example for FOUNDATION Fieldbus

- 1 Control system (e.g. PLC)
- 2 Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

Modbus RS485

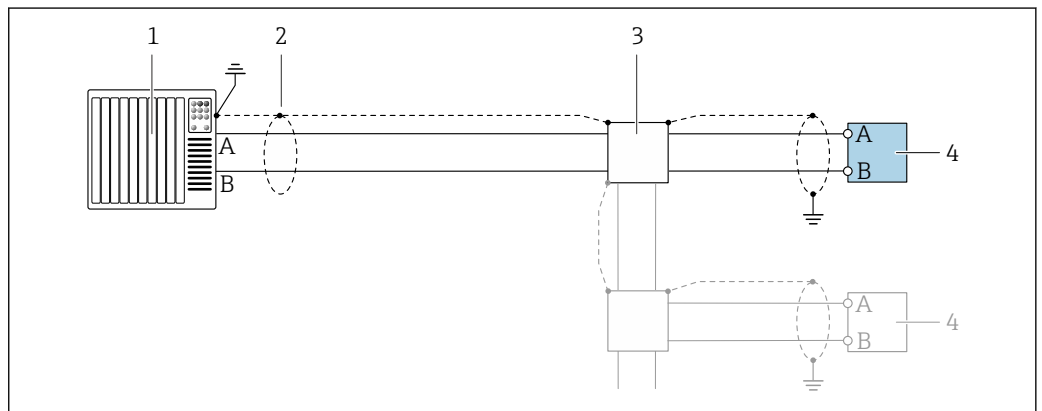


A0028765

7 Connection example for Modbus RS485, non-hazardous area and Zone 2/Div. 2

- 1 Control system (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter


Current output 4-20 mA

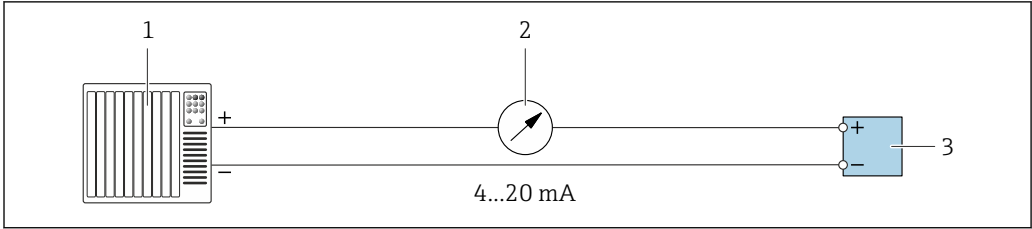

A0028758

8 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

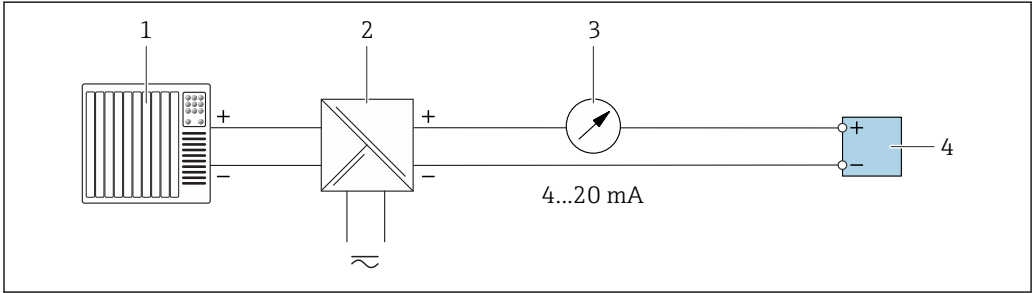


A0028759

9 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

Pulse/frequency output

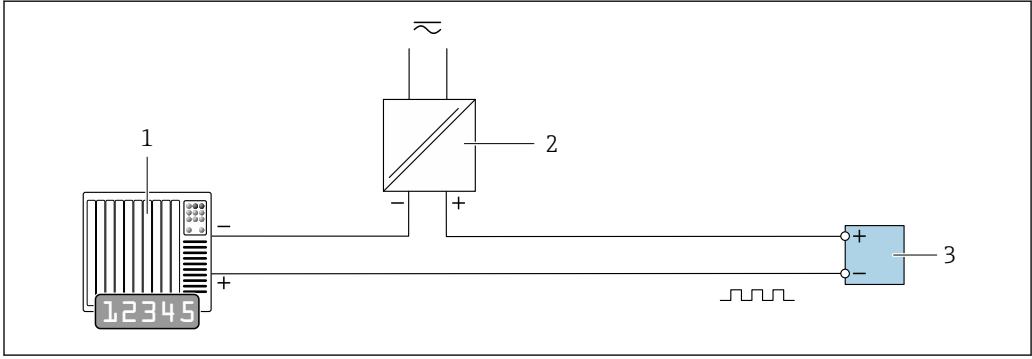


A0028761

10 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 14

Switch output

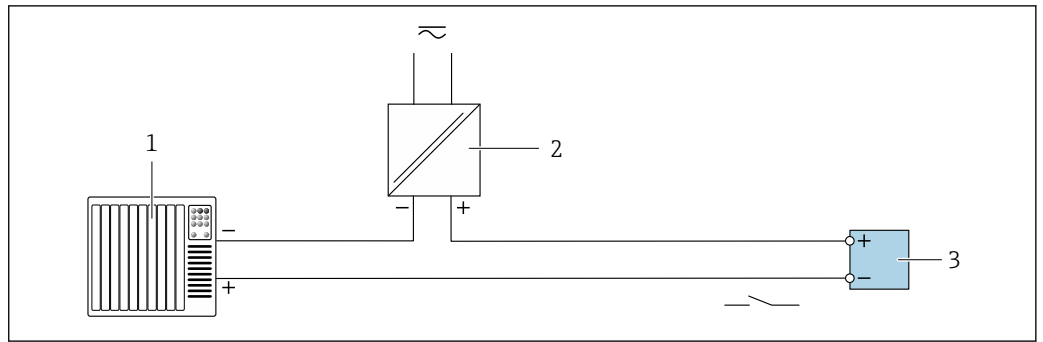


A0028760

11 Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 14


Double pulse output

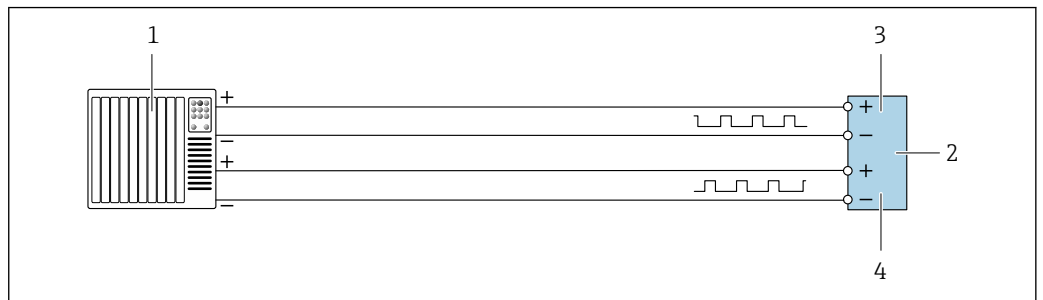

A0029280

12 Connection example for double pulse output (active)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: Observe input values → 15
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

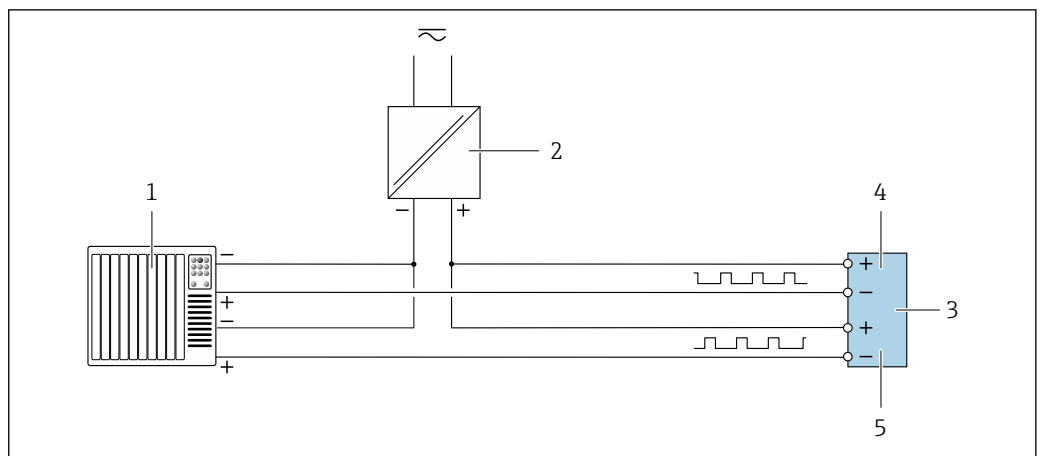


A0029279

13 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 15
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted

## Relay output

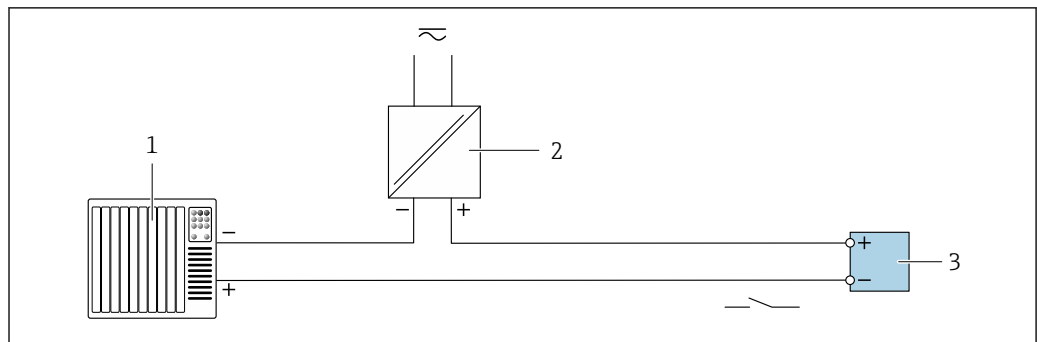


A0028760

14 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 15

## Current input

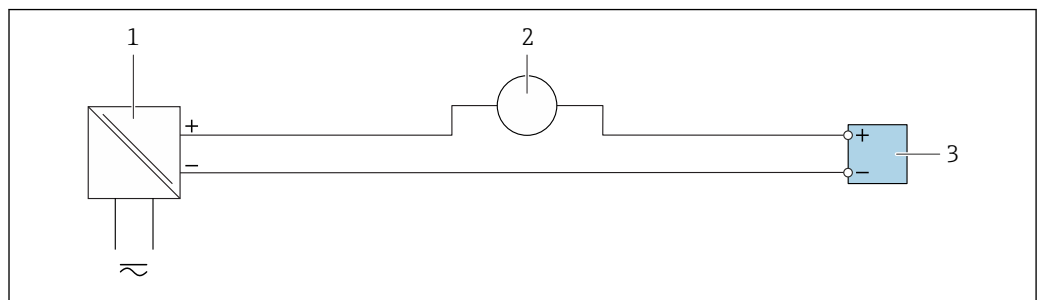


A0028915

15 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 External measuring device (for reading in pressure or temperature, for instance)
- 3 Transmitter: Observe input values

## Status input

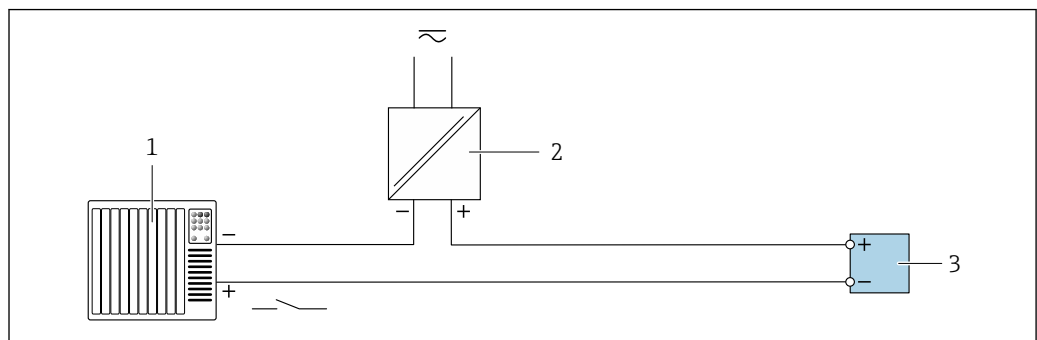

A0028764

16 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values

## Potential equalization


## Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts
- Pipe material and grounding

**Connection example, standard scenario**

*Metal, grounded pipe*

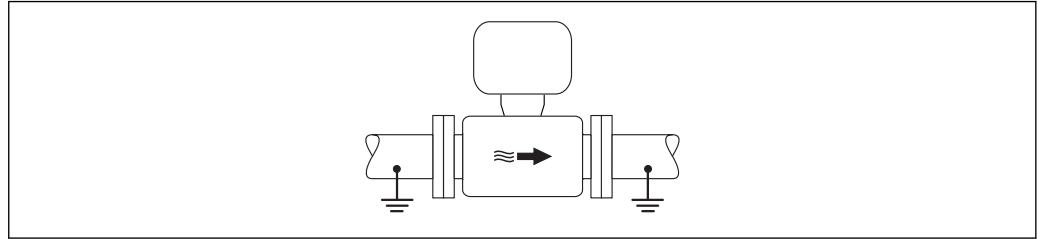

A0016315

17 Potential equalization via measuring tube


**Connection example in special situations**

*Unlined and ungrounded metal pipe*

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

<b>Ground cable</b>	Copper wire, at least 6 mm <sup>2</sup> (0.0093 in <sup>2</sup> )
---------------------	---

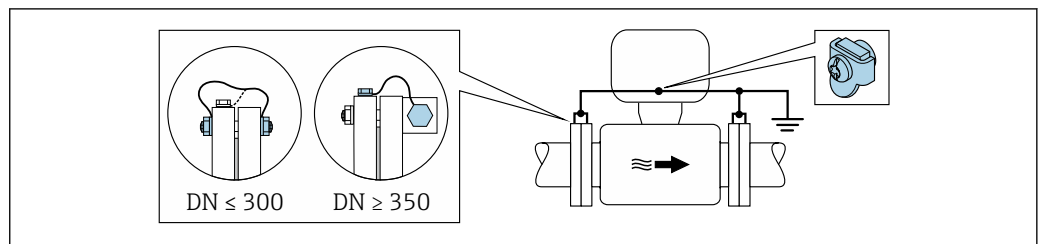

A0029338

18 Potential equalization via ground terminal and pipe flanges

Note the following when installing:

- Connect both sensor flanges to the pipe flange via a ground cable and ground them.
- Connect the connection housing of the transmitter or sensor to ground potential by means of the ground terminal provided for the purpose. To mount the ground cable:
  - If DN ≤ 300 (12"): Mount the ground cable directly on the conductive flange coating of the sensor with the flange screws.
  - If DN ≥ 350 (14"): Mount the ground cable directly on the metal transport bracket.


**i** You can order the necessary ground cable from Endress+Hauser: → 79.

*Plastic pipe or pipe with insulating liner*

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

<b>Ground cable</b>	Copper wire, at least 6 mm <sup>2</sup> (0.0093 in <sup>2</sup> )
---------------------	---

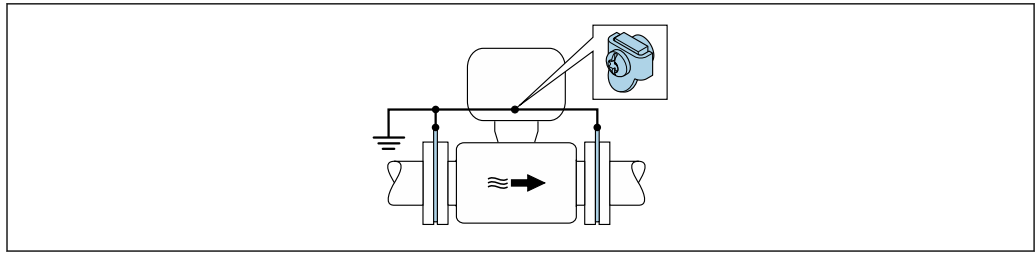

A0029339

19 Potential equalization via ground terminal and ground disks

Note the following when installing:

The ground disks must be connected to the ground terminal via the ground cable and be connected to ground potential.


**i** The ground cable and ground disks can be ordered from Endress+Hauser .

#### Pipe with a cathodic protection unit

This connection method is only used if the following two conditions are met:

- Metal pipe without liner or pipe with electrically conductive liner
- Cathodic protection is integrated in the personal protection equipment

<b>Ground cable</b>	Copper wire, at least 6 mm <sup>2</sup> (0.0093 in <sup>2</sup> )
---------------------	---

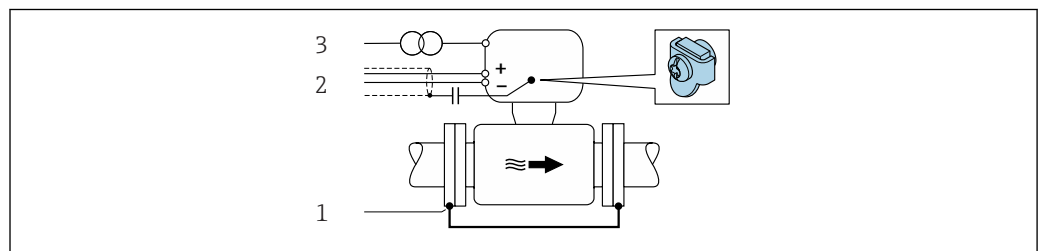

A0030377

- 1 Connection of the two flanges of the pipe via a ground cable
- 2 Signal line shielding via a capacitor
- 3 Measuring device connected to power supply such that it is floating in relation to the protective ground (isolation transformer)

Note the following when installing:

The sensor is installed in the pipe in a way that provides electrical insulation.

**i** You can order the necessary ground cable from Endress+Hauser: → 79.

#### Terminals

#### Transmitter

Spring terminals for conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG)

#### Cable entries

- Cable gland: M20 × 1.5 with cable  $\varnothing$  6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT 1/2"
  - G 1/2"
  - M20
- Device plug for digital communication: M12  
Only available for certain device versions → 26.

#### Cable specification

#### Permitted temperature range

Minimum requirement: cable temperature range  $\geq$  ambient temperature +20 K

#### Power supply cable

Standard installation cable is sufficient.

**Protective ground cable**

Cable: 2.1 mm<sup>2</sup> (14 AWG)

The grounding impedance must be less than 1 Ω.

**Signal cable**

*Current output 4 to 20 mA HART*

A shielded cable is recommended. Observe grounding concept of the plant.

*PROFIBUS PA*

Twisted, shielded two-wire cable. Cable type A is recommended .



For further information on planning and installing PROFIBUS PA networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

*FOUNDATION Fieldbus*

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

*Modbus RS485*

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

<b>Cable type</b>	A
<b>Characteristic impedance</b>	135 to 165 Ω at a measuring frequency of 3 to 20 MHz
<b>Cable capacitance</b>	< 30 pF/m
<b>Wire cross-section</b>	> 0.34 mm <sup>2</sup> (22 AWG)
<b>Cable type</b>	Twisted pairs
<b>Loop resistance</b>	≤110 Ω/km
<b>Signal damping</b>	Max. 9 dB over the entire length of the cable cross-section
<b>Shield</b>	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.

*Current output 0/4 to 20 mA*

Standard installation cable is sufficient.

*Pulse/frequency/switch output*

Standard installation cable is sufficient.

*Double pulse output*

Standard installation cable is sufficient.

*Relay output*

Standard installation cable is sufficient.

*Current input 0/4 to 20 mA*

Standard installation cable is sufficient.

*Status input*

Standard installation cable is sufficient.

**Connecting cable for sensor - transmitter: Proline 500 – digital***Standard cable*

A standard cable can be used as the connecting cable.

<b>Standard cable</b>	4 cores (2 pairs); twisted pair with common shield
<b>Shielding</b>	Tin-plated copper-braid, optical cover $\geq 85\%$
<b>Cable length</b>	Maximum 300 m (1000 ft), see the following table.

Cross-section	Cable lengths for use in	
	Non-hazardous area, Ex Zone 2, Class I, Division 2	Hazardous area, Ex Zone 1, Class I, Division 1
0.34 mm <sup>2</sup> (AWG 22)	80 m (270 ft)	50 m (165 ft)
0.50 mm <sup>2</sup> (AWG 20)	120 m (400 ft)	60 m (200 ft)
0.75 mm <sup>2</sup> (AWG 18)	180 m (600 ft)	90 m (300 ft)
1.00 mm <sup>2</sup> (AWG 17)	240 m (800 ft)	120 m (400 ft)
1.50 mm <sup>2</sup> (AWG 15)	300 m (1000 ft)	180 m (600 ft)
2.50 mm <sup>2</sup> (AWG 13)	300 m (1000 ft)	300 m (1000 ft)

*Optionally available connecting cable*


<b>Standard cable</b>	2 × 2 × 0.34 mm <sup>2</sup> (AWG 22) PVC cable with common shield (2 pairs, twisted pair)
<b>Flame resistance</b>	According to DIN EN 60332-1-2
<b>Oil resistance</b>	According to DIN EN 60811-2-1
<b>Shielding</b>	Tin-plated copper-braid, optical cover $\geq 85\%$
<b>Operating temperature</b>	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
<b>Available cable length</b>	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)

**Connecting cable for sensor - Proline 500 transmitter***Signal cable*

<b>Standard cable</b>	3 × 0.38 mm <sup>2</sup> (20 AWG) with common, braided copper shield ( $\varnothing \sim 9.5$ mm (0.37 in)) and individual shielded cores
<b>Conductor resistance</b>	$\leq 50$ $\Omega$ /km (0.015 $\Omega$ /ft)
<b>Capacitance: core/shield</b>	$\leq 420$ pF/m (128 pF/ft)
<b>Cable length (max.)</b>	Depends on the medium conductivity, max. 200 m (656 ft)
<b>Cable lengths (available for order)</b>	5 m (15 ft), 10 m (32 ft), 20 m (65 ft) or variable length up to max. 200 m (656 ft)
<b>Operating temperature</b>	$-20$ to $+80$ °C ( $-68$ to $+176$ °F)

*Coil current cable*

<b>Standard cable</b>	3 × 0.75 mm <sup>2</sup> (18 AWG) with common, braided copper shield (∅ ~ 9 mm (0.35 in)) and individual shielded cores
<b>Conductor resistance</b>	≤37 Ω/km (0.011 Ω/ft)
<b>Capacitance: core/core, shield grounded</b>	≤120 pF/m (37 pF/ft)
<b>Cable length (max.)</b>	Depends on the medium conductivity, max. 200 m (656 ft)
<b>Cable lengths (available for order)</b>	5 m (15 ft), 10 m (32 ft), 20 m (65 ft) or variable length up to max. 200 m (656 ft)
<b>Operating temperature</b>	-20 to +80 °C (-68 to +176 °F)
<b>Test voltage for cable insulation</b>	≤ AC 1433 V rms 50/60 Hz or ≥ DC 2026 V

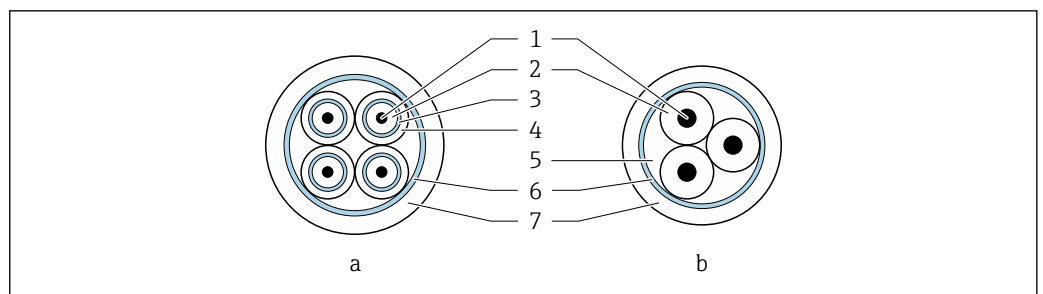

A0029151

20 Cable cross-section

- a* Electrode cable
- b* Coil current cable
- 1 Core
- 2 Core insulation
- 3 Core shield
- 4 Core jacket
- 5 Core reinforcement
- 6 Cable shield
- 7 Outer jacket

- i** A connecting cable can be ordered from Endress+Hauser for IP68:
  - Pre-terminated cables that are already connected to the sensor.
  - Pre-terminated cables, where the cables are connected by the customer onsite (incl. tools for sealing the connection compartment)

*Reinforced connecting cables*

Reinforced connecting cables with an additional, reinforcing metal braid should be used for:

- When laying the cable directly in the ground
- Where there is a risk of damage from rodents

- i** Reinforced connecting cables with an additional, reinforcing metal braid can be ordered from Endress+Hauser .

*Operation in zones of severe electrical interference*

The measuring system meets the general safety requirements → 77 and EMC specifications → 48.

Grounding is by means of the ground terminal provided for the purpose inside the connection housing. The stripped and twisted lengths of cable shield to the ground terminal must be as short as possible.

## Performance characteristics

### Reference operating conditions

- Error limits following DIN EN 29104, in future ISO 20456
- Water, typically +15 to +45 °C (+59 to +113 °F); 0.5 to 7 bar (73 to 101 psi)
- Data as indicated in the calibration protocol
- Accuracy based on accredited calibration rigs according to ISO 17025

### Maximum measured error

#### Error limits under reference operating conditions


o.r. = of reading

#### Volume flow

- $\pm 0.5\%$  o.r.  $\pm 1$  mm/s (0.04 in/s)
- Optional:  $\pm 0.2\%$  o.r.  $\pm 2$  mm/s (0.08 in/s)



Fluctuations in the supply voltage do not have any effect within the specified range.

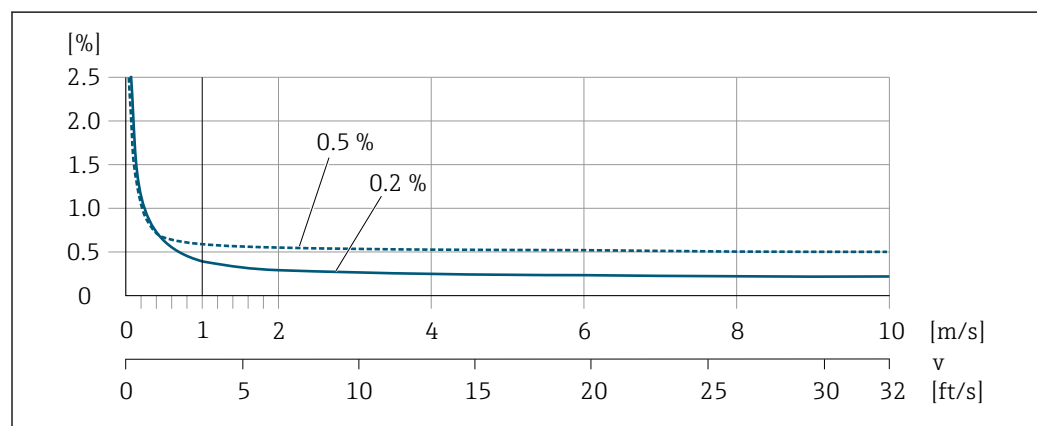

A0028974

21 Maximum measured error in % o.r.

### Electrical conductivity

Max. measured error not specified.

### Accuracy of outputs

The outputs have the following base accuracy specifications.

#### Current output

Accuracy	$\pm 5 \mu\text{A}$
----------	---------------------

#### Pulse/frequency output

o.r. = of reading

Accuracy	Max. $\pm 50$ ppm o.r. (across the entire ambient temperature range)
----------	--

### Repeatability

o.r. = of reading

#### Volume flow

Max.  $\pm 0.1\%$  o.r.  $\pm 0.5$  mm/s (0.02 in/s)

#### Electrical conductivity

Max.  $\pm 5\%$  o.r.

### Influence of ambient temperature

#### Current output

o.r. = of reading

Temperature coefficient	Typically $1 \mu\text{A}/^\circ\text{C}$
-------------------------	--


**Pulse/frequency output**

<b>Temperature coefficient</b>	No additional effect. Included in accuracy.
--------------------------------	---

**Installation**

No special measures such as supports etc. are necessary. External forces are absorbed by the construction of the device.

**Mounting location**

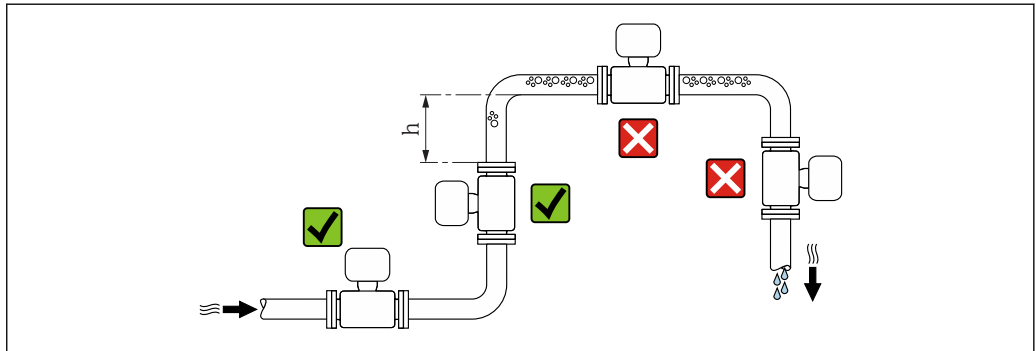

A0029343

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow:  $h \geq 2 \times DN$


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.


**Installation in down pipes**

Install a siphon with a vent valve downstream of the sensor in down pipes whose length  $h \geq 5 \text{ m}$  (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.

 For information on the liner's resistance to partial vacuum

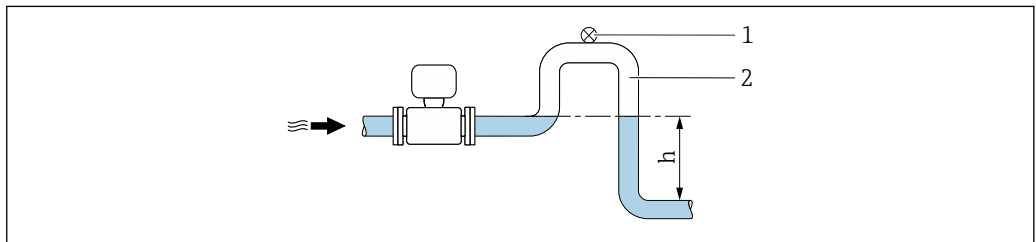


A0028981

 22 Installation in a down pipe

- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe

**Installation in partially filled pipes**

A partially filled pipe with a gradient necessitates a drain-type configuration. The empty pipe detection (EPD) function offers additional protection by detecting empty or partially filled pipes.

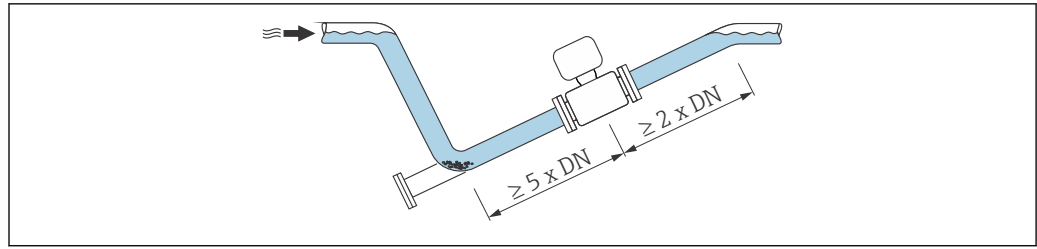

A0029257


### Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

An optimum orientation position helps avoid gas and air accumulations and deposits in the measuring tube.

The measuring device also offers the empty pipe detection function to detect partially filled measuring pipes in the event of outgassing fluids or variable process pressures.


### Vertical

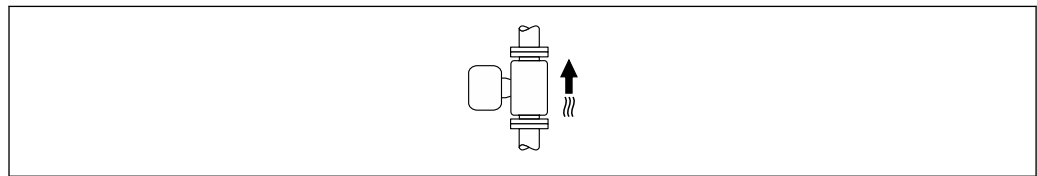

A0015591

Optimum for self-emptying pipe systems and for use in conjunction with empty pipe detection.

### Horizontal

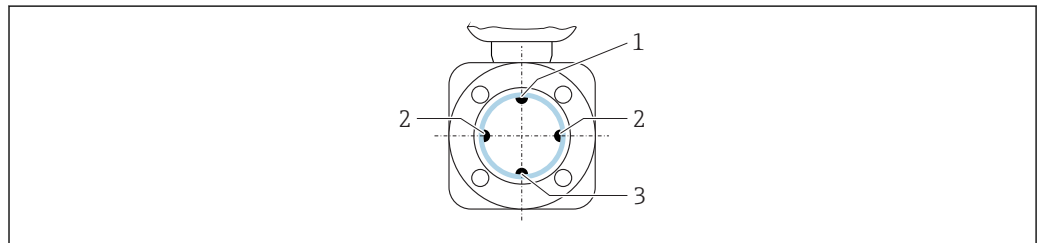

A0029344

- 1 EPD electrode for empty pipe detection
- 2 Measuring electrodes for signal detection
- 3 Reference electrode for potential equalization




- Ideally, the measuring electrode plane should be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

### Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows.

Observe the following inlet and outlet runs to comply with accuracy specifications:

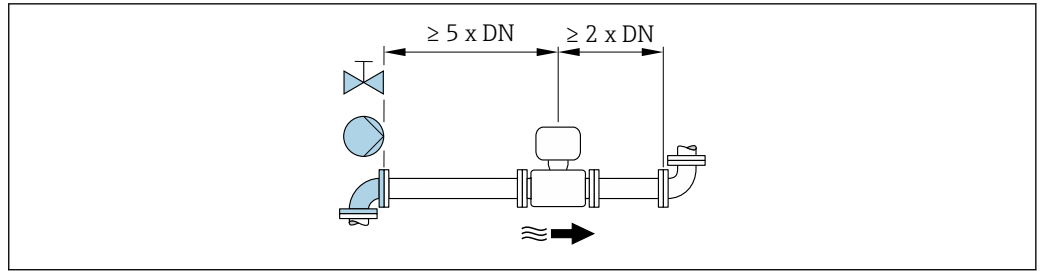


A0028997


**Adapters**

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids.

The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders:

- Calculate the ratio of the diameters  $d/D$ .
- From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the  $d/D$  ratio.


 The nomogram only applies to liquids with a viscosity similar to that of water.

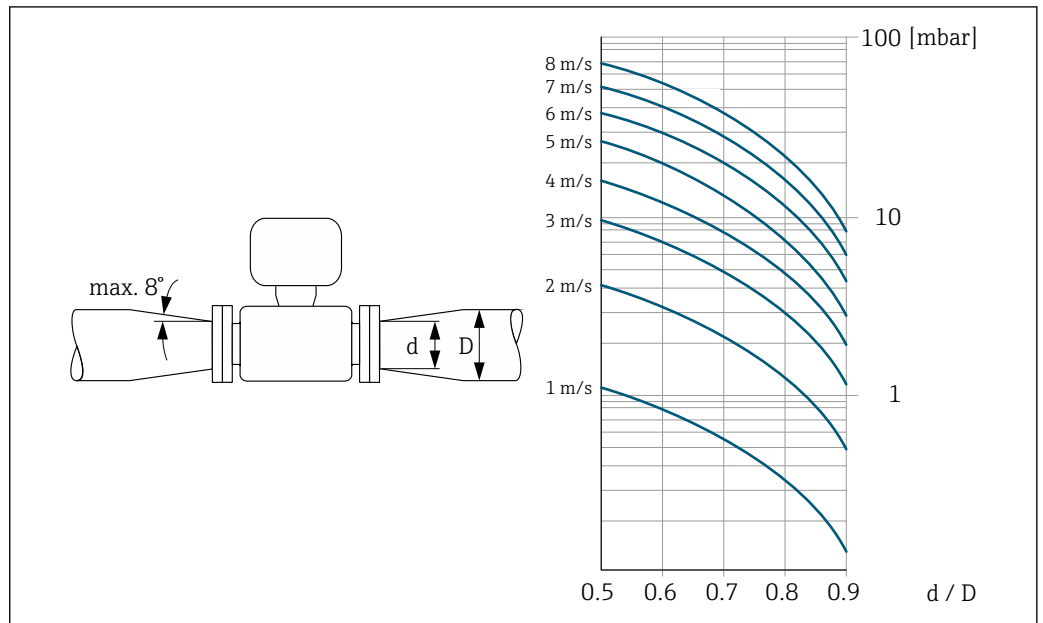

A0029002

**Length of connecting cable**

**Proline 500 – digital transmitter**


Lengths of connecting cable →  38

**Proline 500 transmitter**

Max. 200 m (650 ft)

To ensure correct measuring results, observe the maximum permitted length of the connecting cable  $L_{max}$ . This length is determined by the conductivity of the fluid.

If measuring liquids in general:  $5 \mu S/cm$

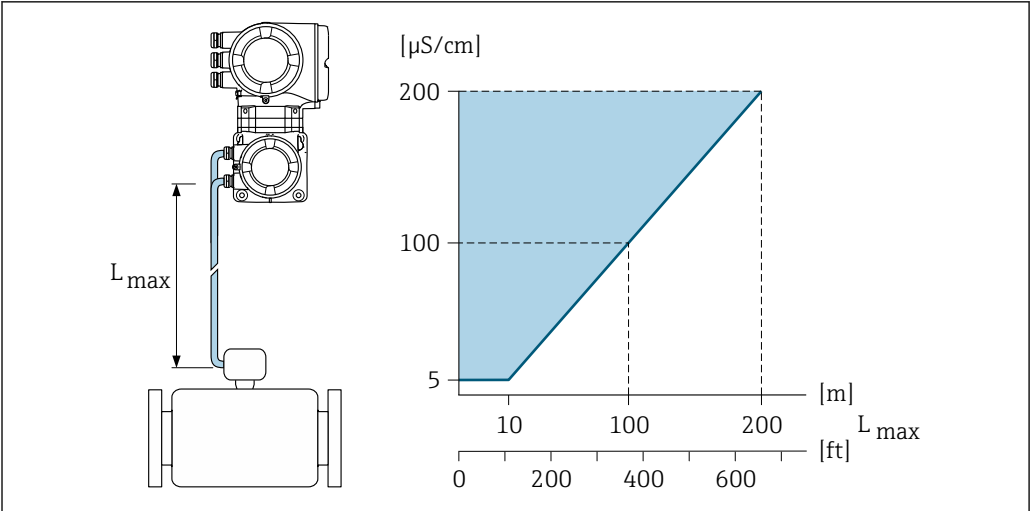

A0029158


23 Permitted length of connecting cable

Colored area = permitted range  
 $L_{max}$  = length of connecting cable in [m] ([ft])  
[ $\mu S/cm$ ] = fluid conductivity

**Mounting the transmitter housing**

**Proline 500 – digital transmitter**


*Post mounting*

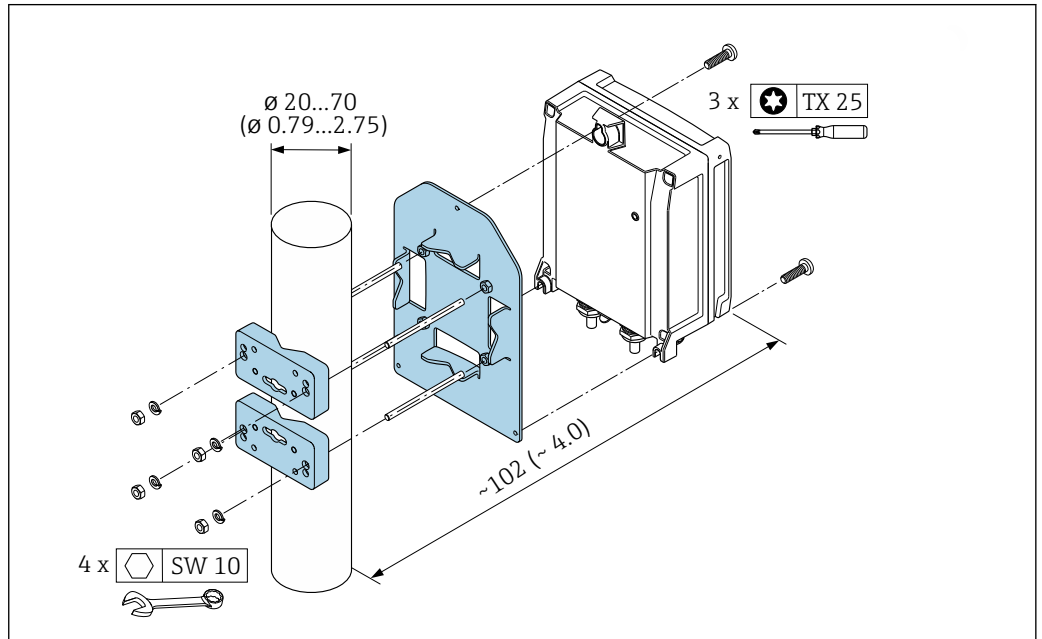

A0029051

24 Engineering unit mm (in)

*Wall mounting*

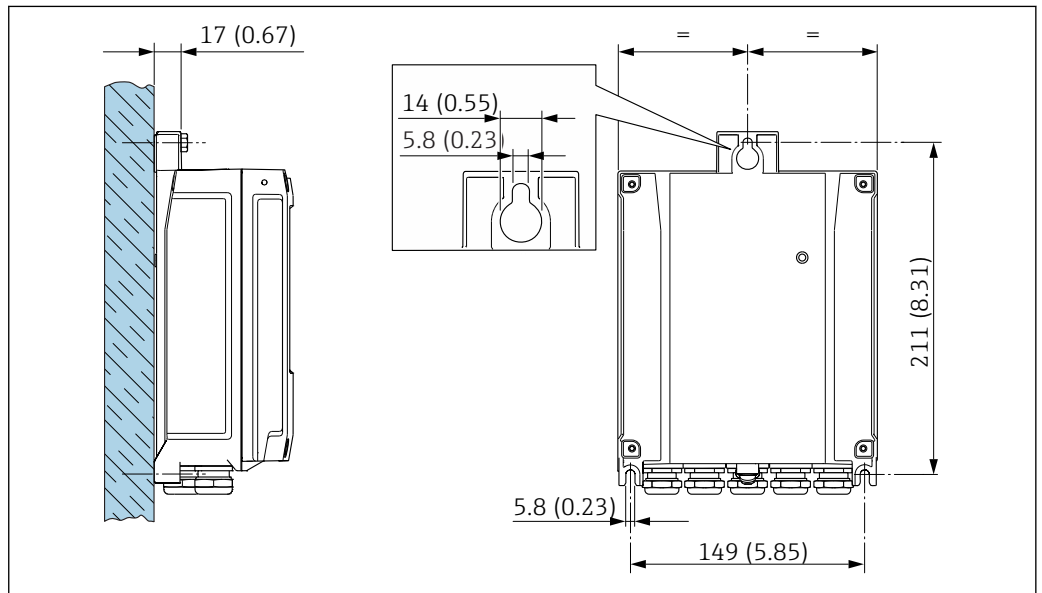

A0029054

25 Engineering unit mm (in)

**Proline 500 transmitter**


*Post mounting*



**Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.**

They are unstable if they are not mounted on a secure, fixed post.


- Only mount the transmitter on a secure, fixed post on a stable surface.

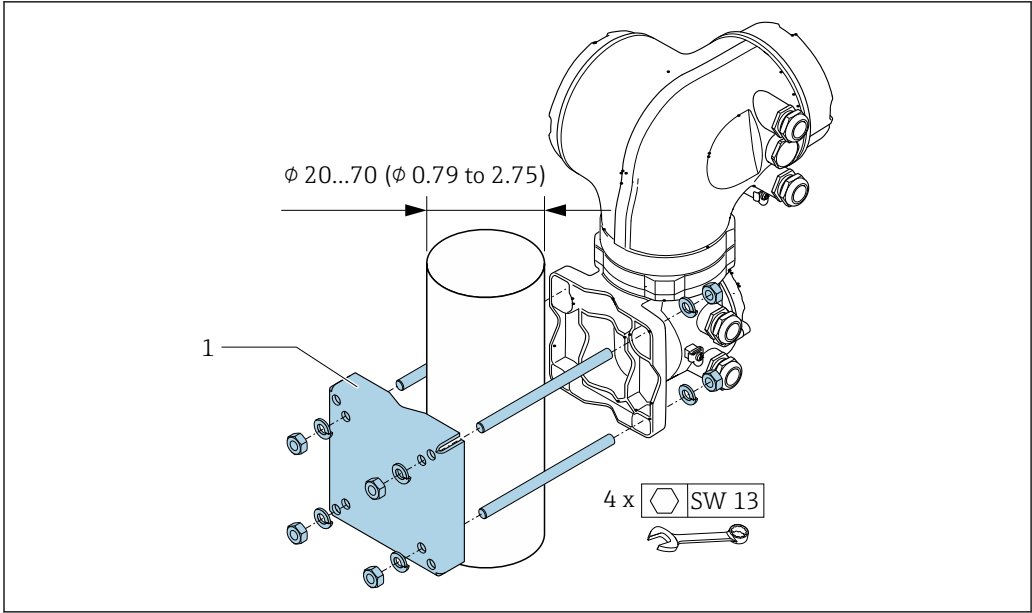

A0029057

26 Engineering unit mm (in)

Wall mounting

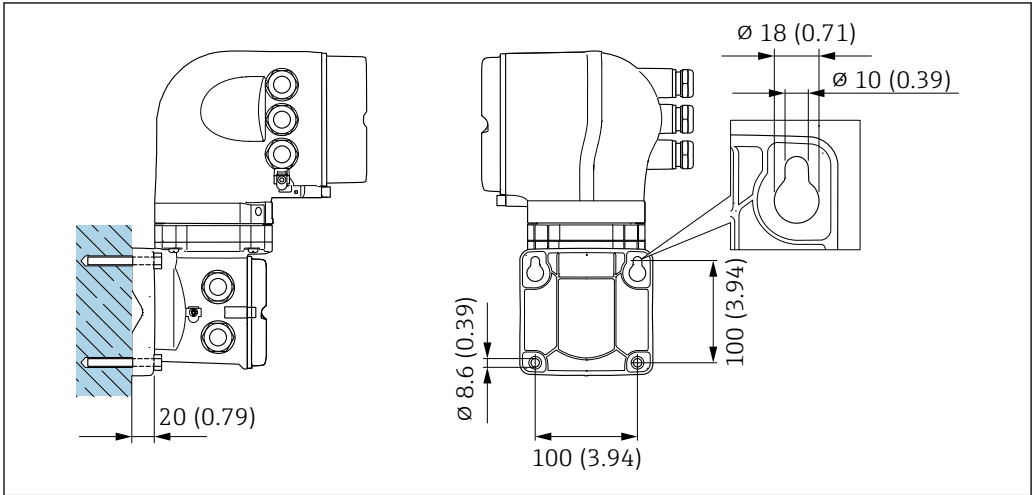


A0029068

27 Engineering unit mm (in)


Special mounting instructions

Protective cover

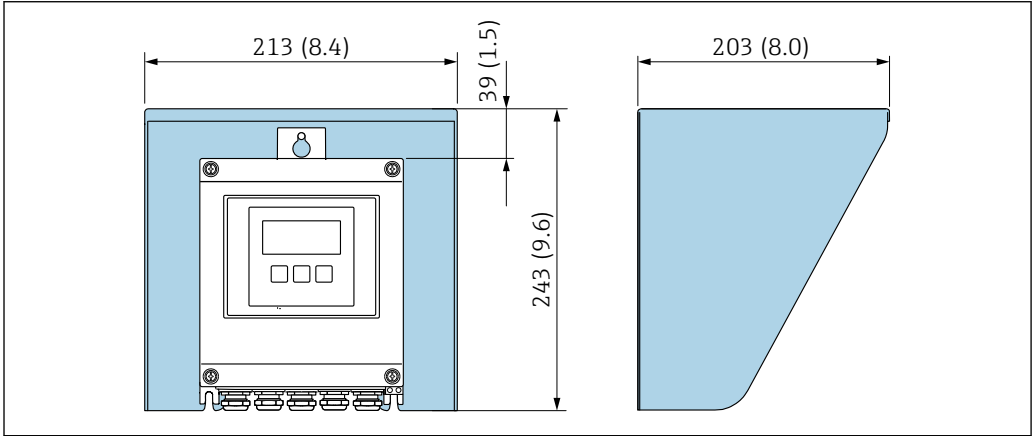

A0029552

28 Weather protection cover for Proline 500 – digital

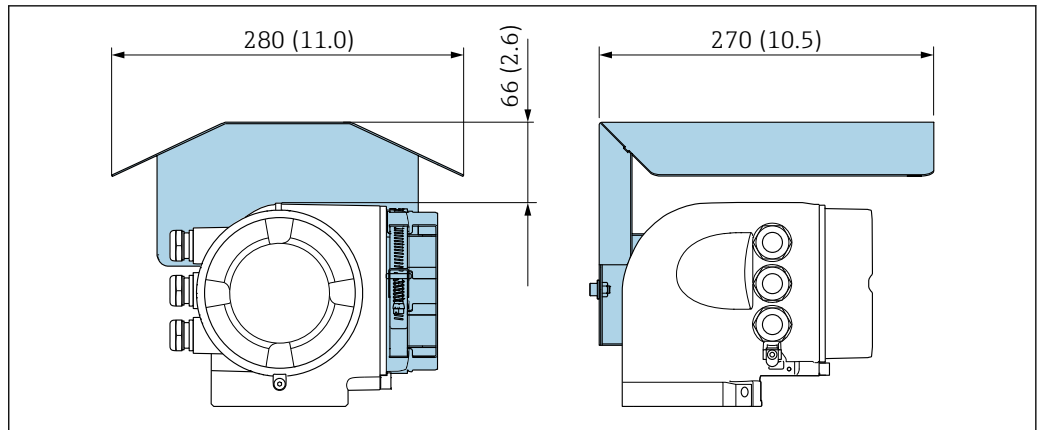

A0029553

29 Weather protection cover for Proline 500

## Environment


Ambient temperature range		
Transmitter	<ul style="list-style-type: none"> <li>Standard: -40 to +60 °C (-40 to +140 °F)</li> <li>Optional: -50 to +60 °C (-58 to +140 °F) (order code for "Test, certificate", option <b>JN</b> "Ambient temperature of transmitter -50 °C (-58 °F)")</li> </ul>	
Local display	-20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range.	
Sensor	<ul style="list-style-type: none"> <li>Process connection material, carbon steel: -10 to +60 °C (+14 to +140 °F)</li> <li>Process connection material, stainless steel: -40 to +60 °C (-40 to +140 °F)</li> </ul> <p>Mount the transmitter separately from the sensor if both the ambient and fluid temperatures are high.</p>	
Liner	Do not exceed or fall below the permitted temperature range of the liner .	

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.


Storage temperature	-50 to +80 °C (-58 to +176 °F)
	<ul style="list-style-type: none"> <li>Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.</li> <li>Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.</li> <li>If protection caps or protective covers are mounted these should never be removed before installing the measuring device.</li> </ul>

Degree of protection	<p><b>Transmitter</b></p> <ul style="list-style-type: none"> <li>As standard: IP66/67, type 4X enclosure</li> <li>When housing is open: IP20, type 1 enclosure</li> <li>Display module: IP20, type 1 enclosure</li> </ul> <p><b>Sensor</b></p> <p>As standard: IP66/67, type 4X enclosure</p> <p><b>External WLAN antenna</b></p> <p>IP67</p>
----------------------	---

<b>Vibration resistance</b>	<ul style="list-style-type: none"> <li>■ Vibration, sinusoidal according to IEC 60068-2-6 <ul style="list-style-type: none"> <li>- 2 to 8.4 Hz, 3.5 mm peak</li> <li>- 8.4 to 2 000 Hz, 1 g peak</li> </ul> </li> <li>■ Vibration broad-band random, according to IEC 60068-2-64 <ul style="list-style-type: none"> <li>- 10 to 200 Hz, 0.003 g<sup>2</sup>/Hz</li> <li>- 200 to 2 000 Hz, 0.001 g<sup>2</sup>/Hz</li> <li>- Total: 1.54 g rms</li> </ul> </li> </ul>
<b>Shock resistance</b>	Shock, half-sine according to IEC 60068-2-27 6 ms 30 g
<b>Impact resistance</b>	Rough handling shocks according to IEC 60068-2-31
<b>Mechanical load</b>	<ul style="list-style-type: none"> <li>■ Protect the transmitter housing against mechanical effects, such as shock or impact.</li> <li>■ Never use the transmitter housing as a ladder or climbing aid.</li> </ul>
<b>Electromagnetic compatibility (EMC)</b>	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)  For details, refer to the Declaration of Conformity.

## Process

<b>Medium temperature range</b>	<ul style="list-style-type: none"> <li>■ -20 to +150 °C (-4 to +302 °F) for PFA, DN 25 to 200 (1 to 8")</li> <li>■ -20 to +180 °C (-4 to +356 °F) for PFA high-temperature, DN 25 to 200 (1 to 8")</li> <li>■ -40 to +130 °C (-40 to +266 °F) for PTFE, DN 15 to 600 (½ to 24")</li> </ul>
---------------------------------	--

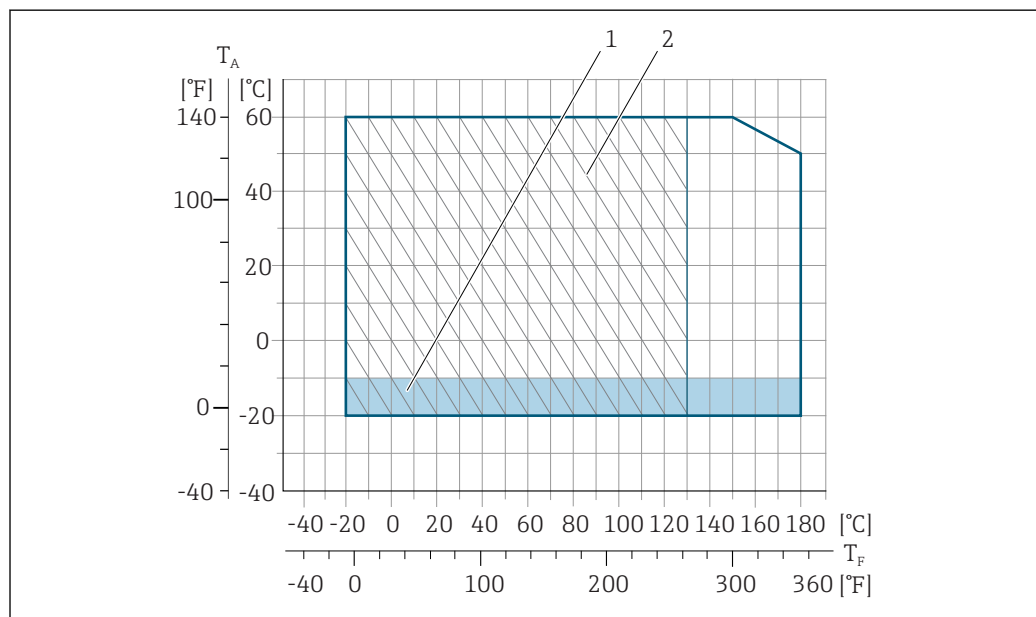


 30 PFA

$T_A$  Ambient temperature range

$T_F$  Fluid temperature

1 Colored area: the ambient temperature range -10 to -20 °C (+14 to -4 °F) applies to stainless flanges only

2 Hatched area: harsh environment IP69K only for fluid temperature range -20 to +130 °C (-4 to +266 °F)

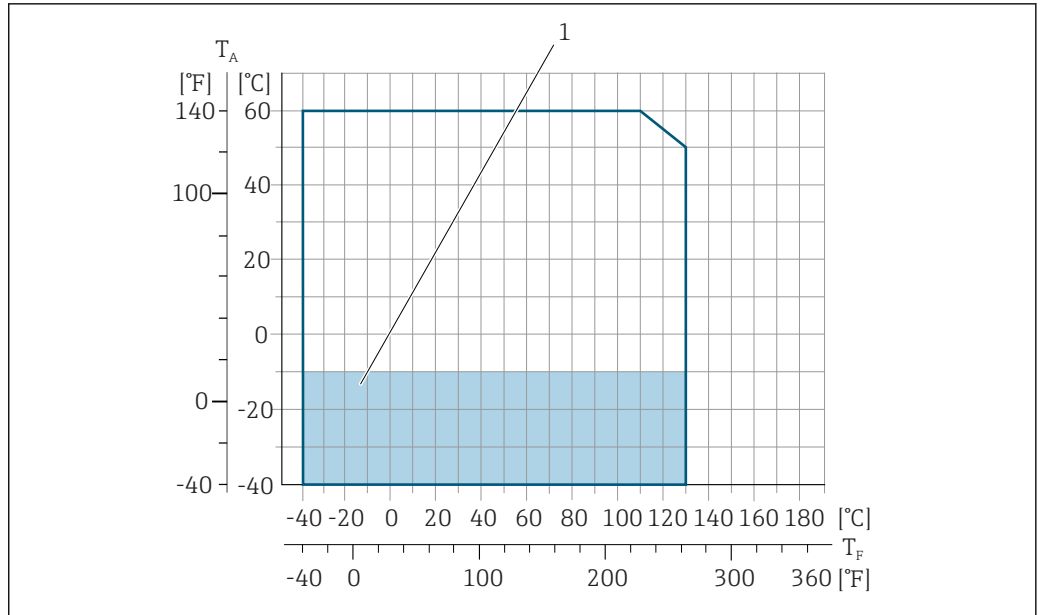

31 PTFE

$T_A$  Ambient temperature range

$T_F$  Fluid temperature

1 Colored area: the ambient temperature range of  $-10$  to  $-40$  °C ( $+14$  to  $-40$  °F) applies to stainless flanges only

A0029808

**Conductivity**

$\geq 5 \mu\text{S/cm}$  for liquids in general. Stronger filter damping is required for very low conductivity values.




Proline 500

The necessary minimum conductivity also depends on the cable length  $\rightarrow$  43.

**Pressure-temperature ratings**


The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection.

**Process connection: flange according to EN 1092-1 (DIN 2501)**

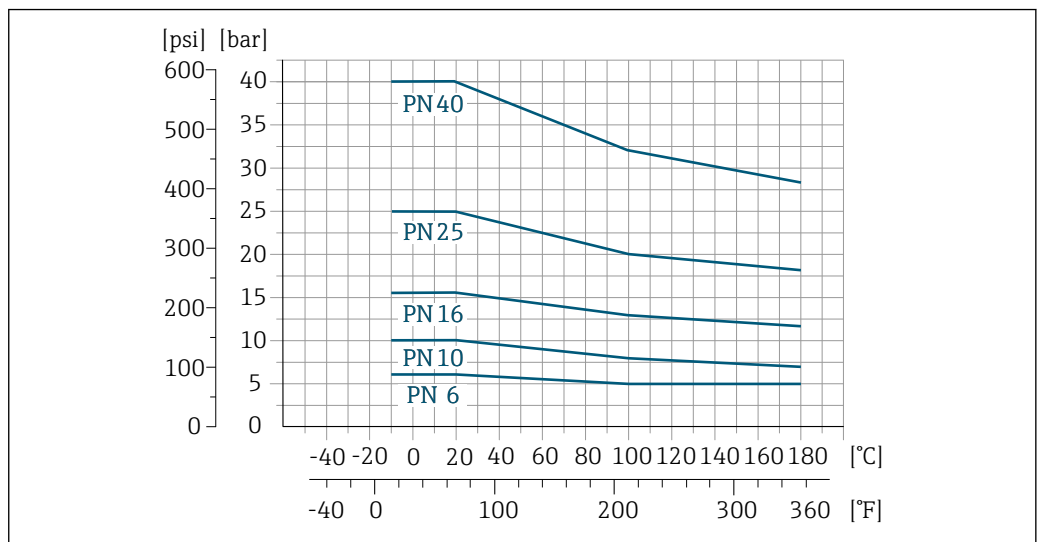

32 Process connection material: carbon steel, FE410WB/S235JRG2; Alloy C22, 2.4602 (UNS N06022)


A0029390-EN

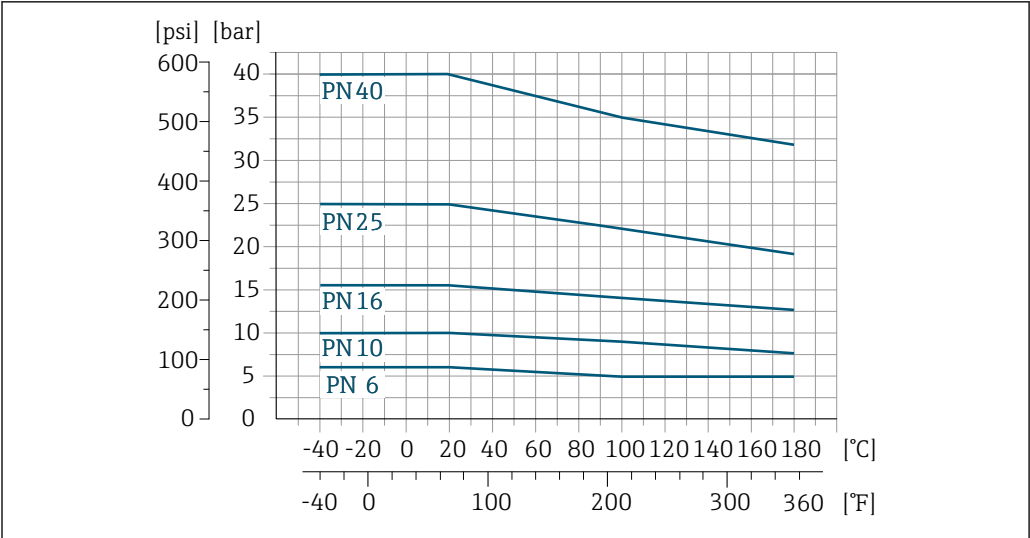

A0029391-EN


33 Process connection material: stainless steel, 1.4571 (F316L)

**Process connection: flange according to ASME B16.5**

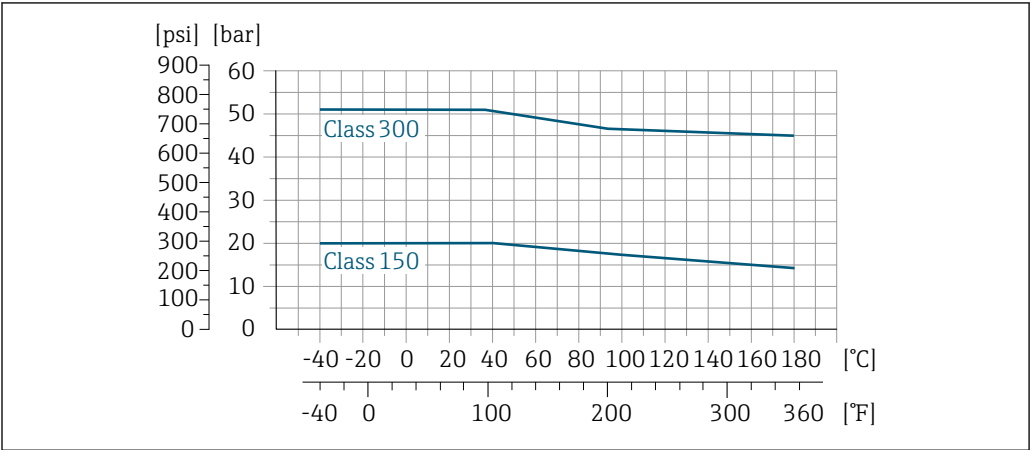

A0029393-EN


34 Process connection material: carbon steel, A105

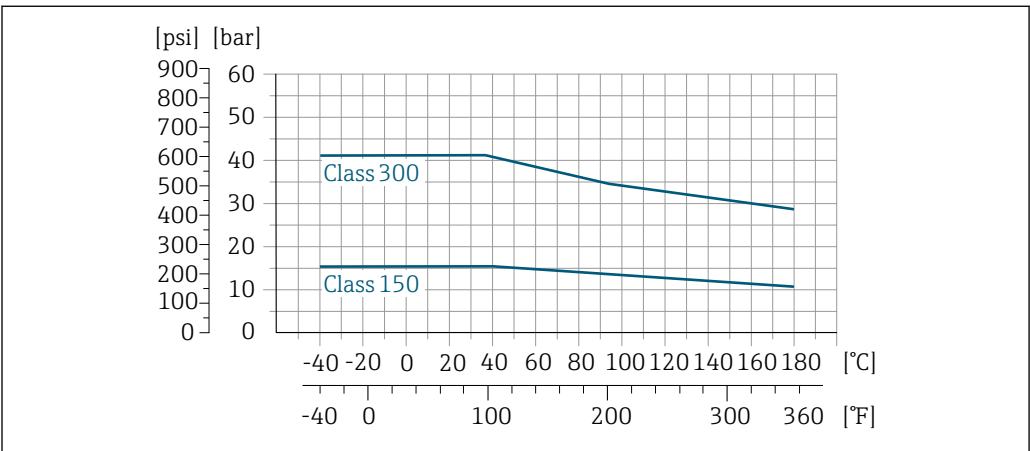

A0029394-EN

35 Process connection material: stainless steel, F316L


**Process connection: flange according to JIS B2220**

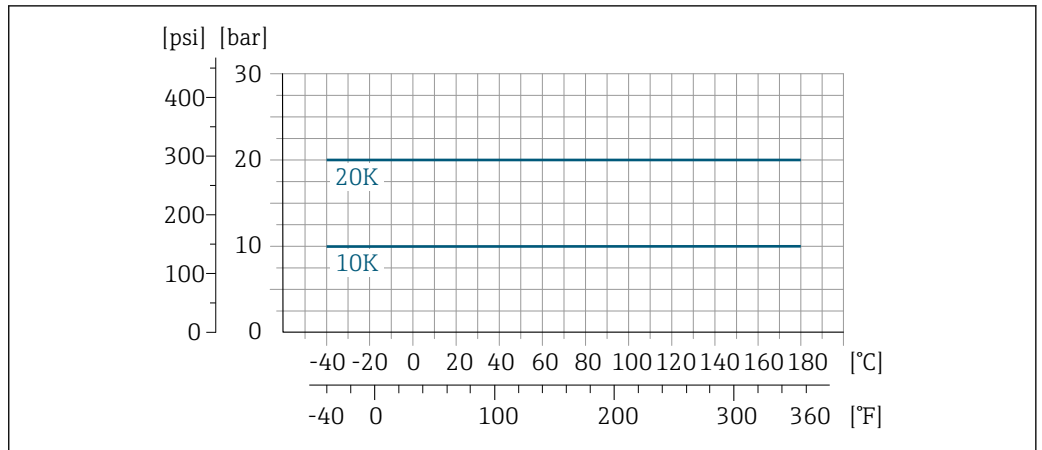

A0029397-EN

36 Process connection material: stainless steel, 1.0425 (F316L); carbon steel, S235JRG2/HII

**Process connection: flange according to AS 2129 (Table E) or AS 4087 (PN 16)**

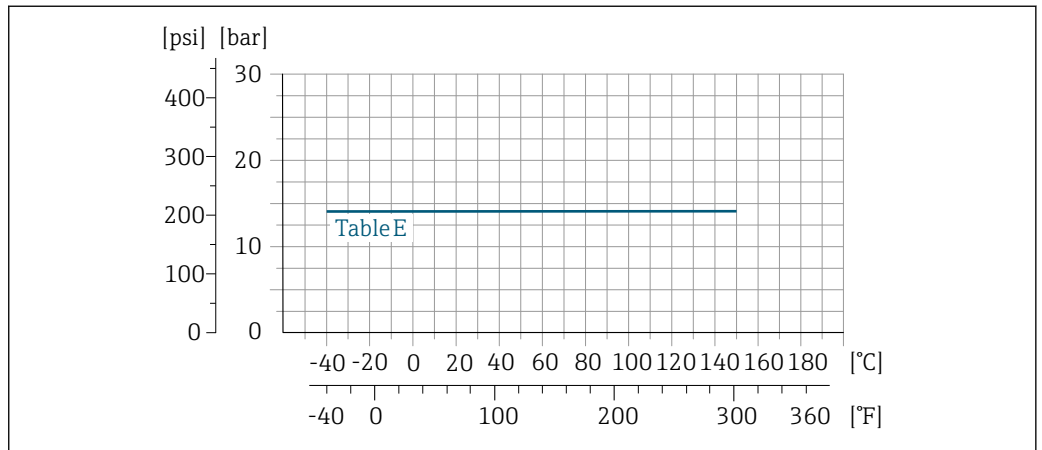

A0029398-EN

37 Process connection material: carbon steel, A105/S235JRG2/S275JR

**Pressure tightness**

"-" = no specifications possible

Liner: PFA

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:		
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 to +180 °C (+212 to +356 °F)
25	1	0 (0)	0 (0)	0 (0)
32	-	0 (0)	0 (0)	0 (0)
40	1 ½	0 (0)	0 (0)	0 (0)
50	2	0 (0)	0 (0)	0 (0)
65	-	0 (0)	-	0 (0)
80	3	0 (0)	-	0 (0)
100	4	0 (0)	-	0 (0)
125	-	0 (0)	-	0 (0)
150	6	0 (0)	-	0 (0)
200	8	0 (0)	-	0 (0)

Liner: PTFE

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:			
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 °C (+266 °F)
15	½	0 (0)	0 (0)	0 (0)	100 (1.45)
25	1	0 (0)	0 (0)	0 (0)	100 (1.45)
32	–	0 (0)	0 (0)	0 (0)	100 (1.45)
40	1 ½	0 (0)	0 (0)	0 (0)	100 (1.45)
50	2	0 (0)	0 (0)	0 (0)	100 (1.45)
65	–	0 (0)	–	40 (0.58)	130 (1.89)
80	3	0 (0)	–	40 (0.58)	130 (1.89)
100	4	0 (0)	–	135 (1.96)	170 (2.47)
125	–	135 (1.96)	–	240 (3.48)	385 (5.58)
150	6	135 (1.96)	–	240 (3.48)	385 (5.58)
200	8	200 (2.90)	–	290 (4.21)	410 (5.95)
250	10	330 (4.79)	–	400 (5.80)	530 (7.69)
300	12	400 (5.80)	–	500 (7.25)	630 (9.14)
350	14	470 (6.82)	–	600 (8.70)	730 (10.6)
400	16	540 (7.83)	–	670 (9.72)	800 (11.6)
450	18	No negative pressure permitted!			
500	20				
600	24				

**Flow limit**

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:

- $v < 2$  m/s (6.56 ft/s): for abrasive fluids (e.g. potter's clay, lime milk, ore slurry)
- $v > 2$  m/s (6.56 ft/s): for fluids producing buildup (e.g. wastewater sludge)




A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.



For an overview of the full scale values for the measuring range, see the "Measuring range" section → [9](#)

**Pressure loss**

- No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545 → [43](#)

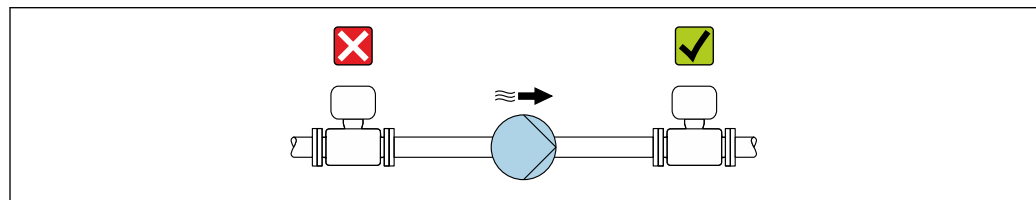**System pressure**

A0028777

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.



Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.



- For information on the liner's resistance to partial vacuum
- For information on the shock resistance of the measuring system
- For information on the vibration resistance of the measuring system


**Thermal insulation**

Pipes generally have to be insulated if they carry very hot fluids to avoid energy losses and prevent accidental contact with pipes at temperatures that could cause injury. Guidelines regulating the insulation of pipes have to be taken into account.

**⚠ WARNING**

**Electronics overheating on account of thermal insulation!**

- ▶ The housing support dissipates heat and its entire surface area must remain uncovered. Make sure that the sensor insulation does not extend past the top of the two sensor half-shells.

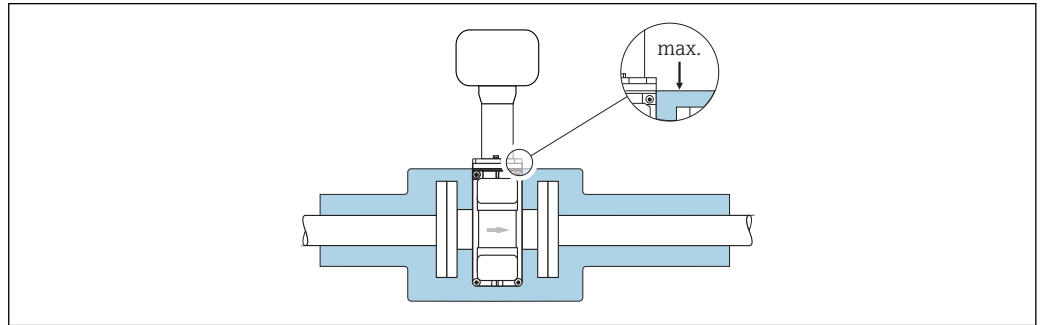


A0031216

**Vibrations**

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.



- For information on the shock resistance of the measuring system
- For information on the vibration resistance of the measuring system

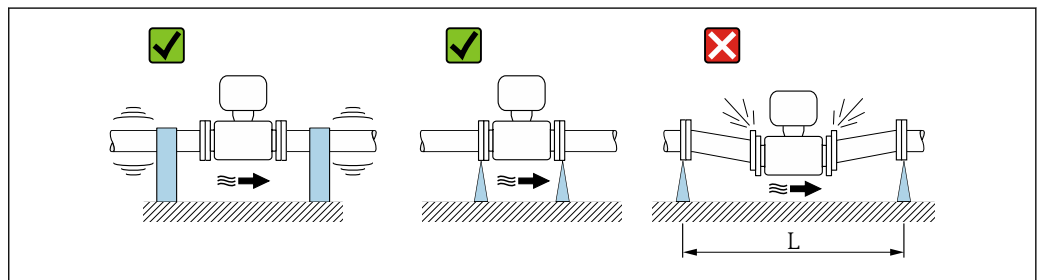


A0029004

38 Measures to avoid device vibrations ( $L > 10\text{ m}$  (33 ft))

**Mechanical construction**

**Dimensions in SI units**

**Housing of Proline 500 – digital transmitter, non-Ex, Zone 2 and Div. 2**

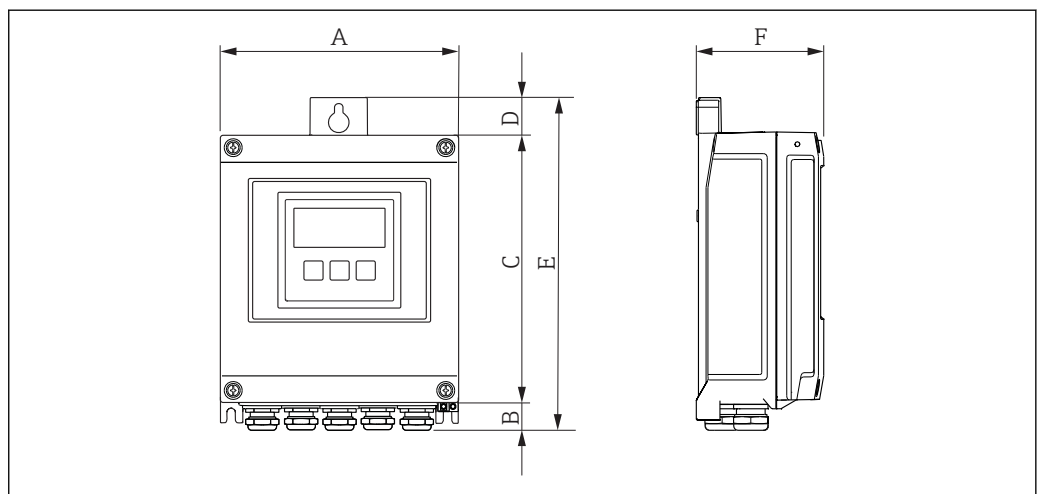

A0020522


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Digital, sensor"

A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]
167	21	187	24	232	80

Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Digital, sensor"

A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]
177	22	197	17	234	90

**Housing of Proline 500 transmitter, Zone 1/2 and Div. 1/2**

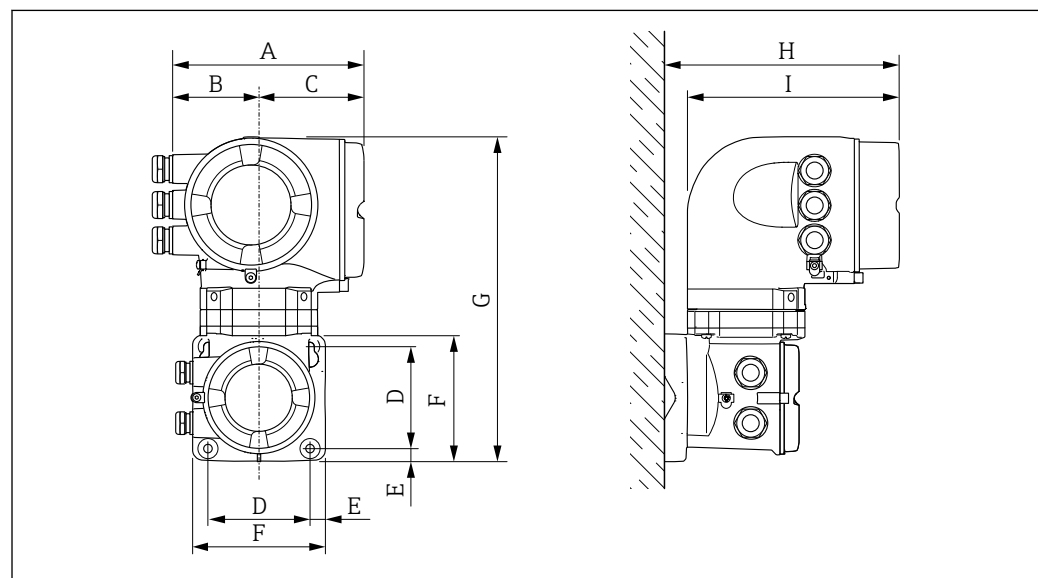

A0029140


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"

A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	G [mm]	H [mm]	I [mm]
188	85	103	100	15	130	318	239	217

Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"

A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	G [mm]	H [mm]	I [mm]
188	85	103	100	15	130	295	239	217

Sensor connection housing

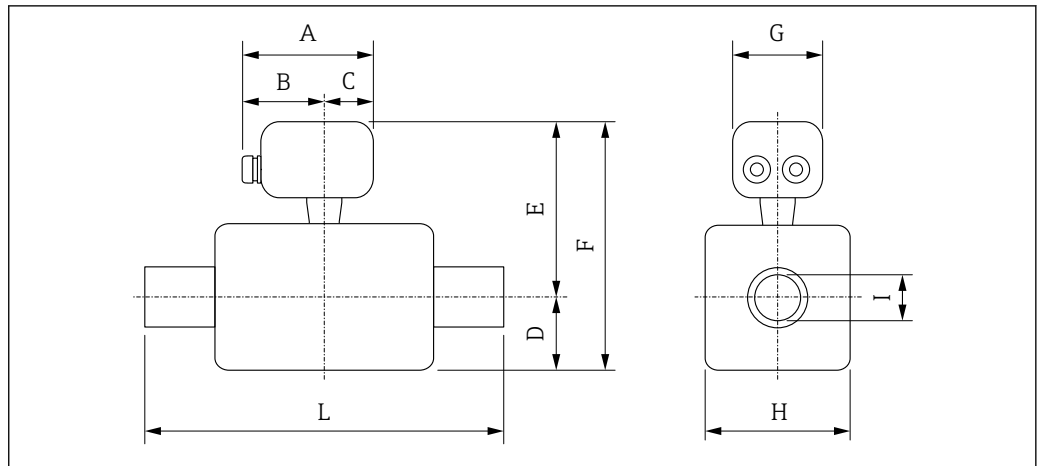

A0029685

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN [mm]	L [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E <sup>1)</sup> [mm]	F <sup>1)</sup> [mm]	G [mm]	H [mm]	I [mm]
15	200	147.5	93.5	54	84	197	281	136	120	2)
25	200	147.5	93.5	54	84	197	281	136	120	
32	200	147.5	93.5	54	84	197	281	136	120	
40	200	147.5	93.5	54	84	197	281	136	120	
50	200	147.5	93.5	54	84	197	281	136	120	
65	200	147.5	93.5	54	109	222	331	136	180	
80	200	147.5	93.5	54	109	222	331	136	180	
100	250	147.5	93.5	54	109	222	331	136	180	
125	250	147.5	93.5	54	150	262	412	136	260	
150	300	147.5	93.5	54	150	262	412	136	260	
200	350	147.5	93.5	54	180	287	467	136	324	
250	450	147.5	93.5	54	205	312	517	136	400	
300	500	147.5	93.5	54	230	337	567	136	460	
350	550	147.5	93.5	54	282	399	681	136	564	
400	600	147.5	93.5	54	308	425	733	136	616	
450	650	147.5	93.5	54	333	450	783	136	666	
500	650	147.5	93.5	54	359	476	835	136	717	
600	780	147.5	93.5	54	411	528	939	136	821	

1) For order code for "Sensor option", option CG "Sensor extension neck for insulation": values + 110 mm

2) Depends on the liner

Order code for "Sensor connection housing", option L "Cast, stainless"


DN [mm]	L [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E <sup>1)</sup> [mm]	F <sup>1)</sup> [mm]	G [mm]	H [mm]	I [mm]
15	200	172	113	59	84	235	319	136	120	2)
25	200	172	113	59	84	235	319	136	120	
32	200	172	113	59	84	235	319	136	120	

DN [mm]	L [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E <sup>1)</sup> [mm]	F <sup>1)</sup> [mm]	G [mm]	H [mm]	I [mm]
40	200	172	113	59	84	235	319	136	120	
50	200	172	113	59	84	235	319	136	120	
65	200	172	113	59	109	260	369	136	180	
80	200	172	113	59	109	260	369	136	180	
100	250	172	113	59	109	260	369	136	180	
125	250	172	113	59	150	300	450	136	260	
150	300	172	113	59	150	300	450	136	260	
200	350	172	113	59	180	325	505	136	324	
250	450	172	113	59	205	350	555	136	400	
300	500	172	113	59	230	375	605	136	460	
350	550	172	113	59	282	437	719	136	564	
400	600	172	113	59	308	463	771	136	616	
450	650	172	113	59	333	488	821	136	666	
500	650	172	113	59	359	514	873	136	717	
600	780	172	113	59	411	566	977	136	821	

- 1) For order code for "Sensor option", option CG "Sensor extension neck for insulation": values + 110 mm  
2) Depends on the liner

### Accessories


#### External WLAN antenna

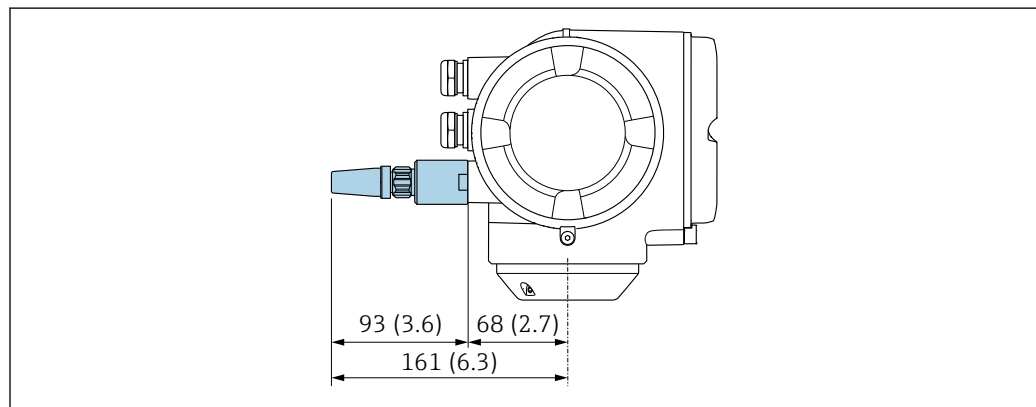

A0028923

39 Engineering unit mm (in)

Ground disk for flange connection

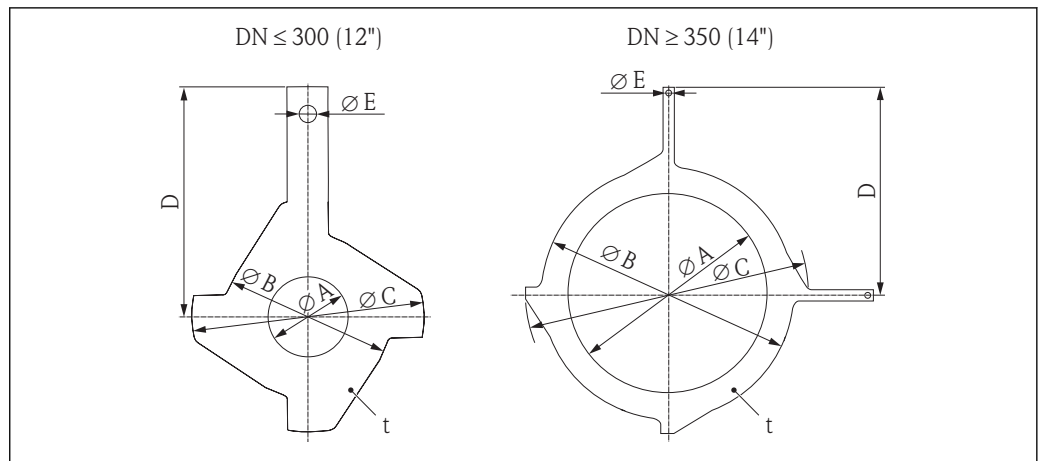


A0003221

DN <sup>1)</sup> EN (DIN), JIS, AS <sup>2)</sup> [mm]	A PFA, PTFE [mm]	B [mm]	C [mm]	D [mm]	E [mm]	t [mm]
15	16	43	61.5	73	6.5	2
25	26	62	77.5	87.5	6.5	2
32	35	80	87.5	94.5	6.5	2
40	41	82	101	103	6.5	2
50	52	101	115.5	108	6.5	2
65	68	121	131.5	118	6.5	2
80	80	131	154.5	135	6.5	2
100	104	156	186.5	153	6.5	2
125	130	187	206.5	160	6.5	2
150	158	217	256	184	6.5	2
200	206	267	288	205	6.5	2
250	260	328	359	240	6.5	2
300 <sup>3)</sup>	312	375	413	273	6.5	2
300 <sup>4)</sup>	310	375	404	268	6.5	2
350 <sup>3)</sup>	343	433	479	365	9.0	2
400 <sup>3)</sup>	393	480	542	395	9.0	2
450 <sup>3)</sup>	439	538	583	417	9.0	2
500 <sup>3)</sup>	493	592	650	460	9.0	2
600 <sup>3)</sup>	593	693	766	522	9.0	2

- 1) Ground disks DN 15 to 250 (½ to 10") can be used for all available flange standards/pressure ratings.
- 2) For flanges to AS, only DN 25 and DN 50 are available.
- 3) PN 10/16
- 4) PN 25, JIS 10K/20K

Dimensions in US units

Housing of Proline 500 – digital transmitter, non-Ex, Zone 2 and Div. 2

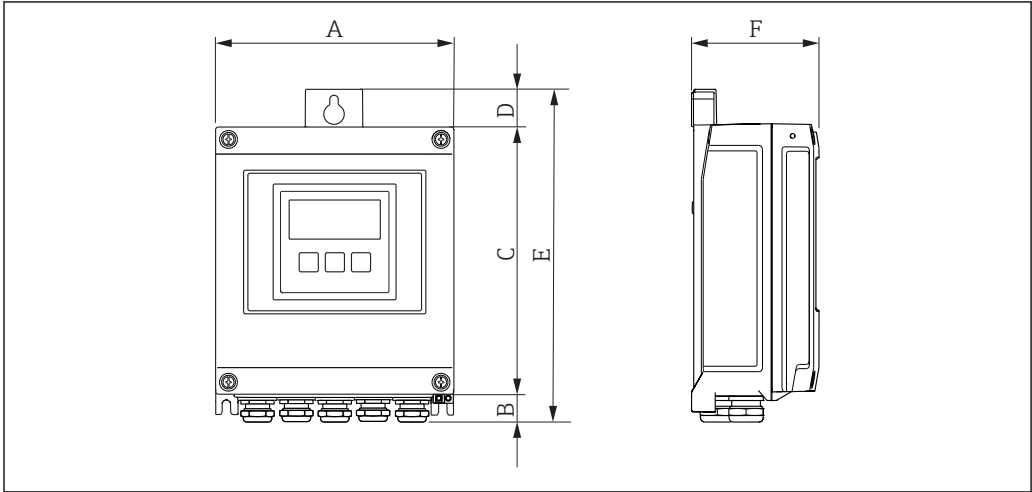

A0020522


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Digital, sensor"

A [in]	B [in]	C [in]	D [in]	E [in]	F [in]
6.57	0.83	7.36	0.94	9.13	3.15

Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Digital, sensor"

A [in]	B [in]	C [in]	D [in]	E [in]	F [in]
6.97	0.87	7.76	0.67	9.21	3.54

Housing of Proline 500 transmitter, Zone 1/2 and Div. 1/2

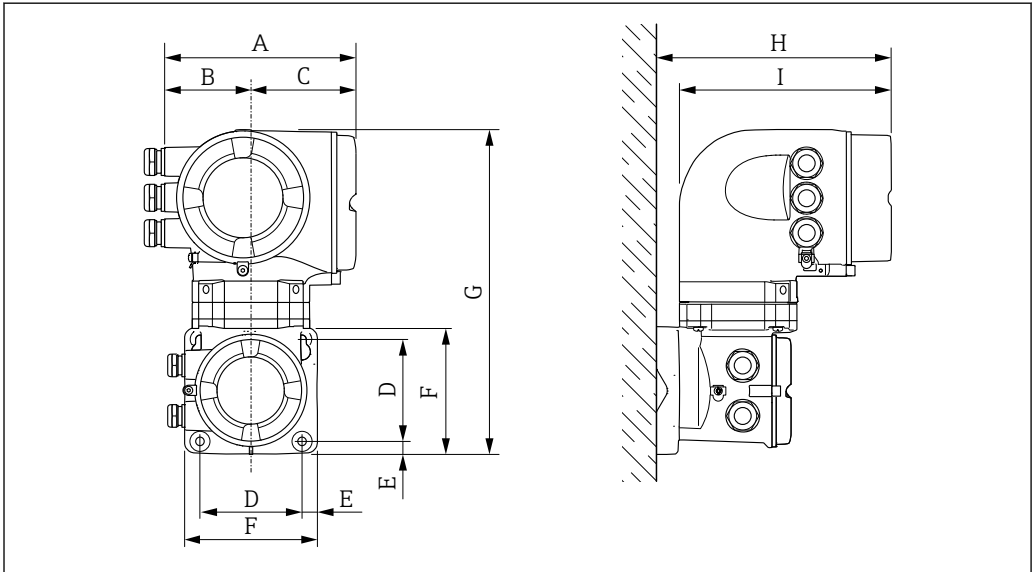

A0029140


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"

A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	G [in]	H [in]	I [in]
7.40	3.35	4.06	3.94	0.60	5.12	12.5	9.41	8.54

Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"

A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	G [in]	H [in]	I [in]
7.40	3.35	4.06	3.94	0.60	5.12	11.6	9.41	8.54

**Sensor connection housing**

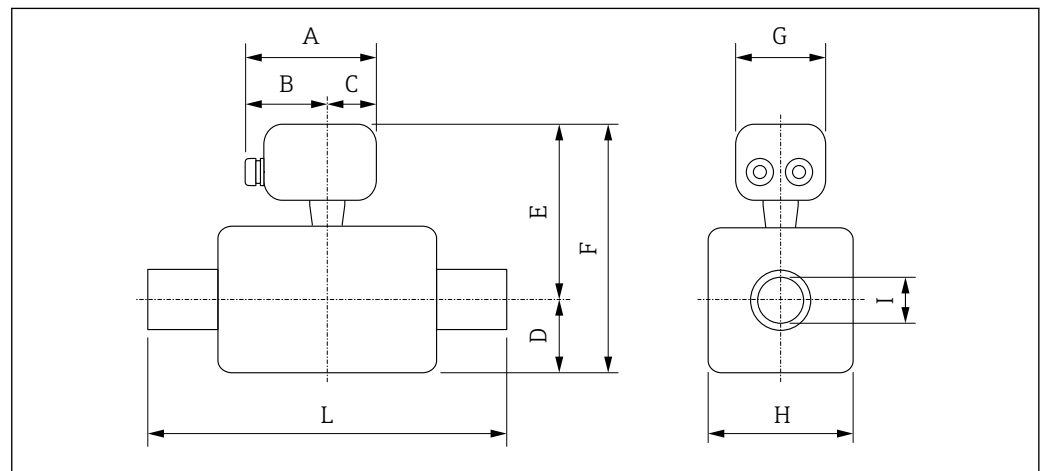

A0029685

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN [in]	L [in]	A [in]	B [in]	C [in]	D [in]	E <sup>1)</sup> [in]	F <sup>1)</sup> [in]	G [in]	H [in]	I [in]
½	7.87	5.81	3.68	2.13	3.31	7.76	11.1	5.35	4.72	2)
1	7.87	5.81	3.68	2.13	3.31	7.76	11.1	5.35	4.72	
1 ¼	7.87	5.81	3.68	2.13	3.31	7.76	11.1	5.35	4.72	
1 ½	7.87	5.81	3.68	2.13	3.31	7.76	11.1	5.35	4.72	
2	7.87	5.81	3.68	2.13	3.31	7.76	11.1	5.35	4.72	
2 ½	7.87	5.81	3.68	2.13	4.29	8.74	13.0	5.35	7.09	
3	7.87	5.81	3.68	2.13	4.29	8.74	13.0	5.35	7.09	
4	9.84	5.81	3.68	2.13	4.29	8.74	13.0	5.35	7.09	
5	11.8	5.81	3.68	2.13	5.91	10.3	16.2	5.35	10.2	
6	11.8	5.81	3.68	2.13	5.91	10.3	16.2	5.35	10.2	
8	13.8	5.81	3.68	2.13	7.09	11.3	18.4	5.35	12.8	
10	17.7	5.81	3.68	2.13	8.07	12.3	20.4	5.35	15.8	
12	19.7	5.81	3.68	2.13	9.06	13.3	22.3	5.35	18.1	
350	21.7	5.81	3.68	2.13	11.1	15.7	26.8	5.35	22.2	
400	23.6	5.81	3.68	2.13	12.1	16.7	28.9	5.35	24.3	
450	25.6	5.81	3.68	2.13	13.1	17.7	30.8	5.35	26.2	

DN	L	A	B	C	D	E <sup>1)</sup>	F <sup>1)</sup>	G	H	I
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
500	25.6	5.81	3.68	2.13	14.1	18.7	32.9	5.35	28.2	
600	30.7	5.81	3.68	2.13	16.2	20.8	37.0	5.35	32.3	

1) For order code for "Sensor option", option CG "Sensor extension neck for insulation": values + 4.33 in

2) Depends on the liner

*Order code for "Sensor connection housing", option L "Cast, stainless"*

DN	L	A	B	C	D	E <sup>1)</sup> E <sup>2)</sup> <sub>3)</sub>	F <sup>2)</sup>	G	H	I
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
½	7.87	6.77	4.45	2.32	3.31	9.25	12.6	5.35	4.72	4)
1	7.87	6.77	4.45	2.32	3.31	9.25	12.6	5.35	4.72	
1 ¼	7.87	6.77	4.45	2.32	3.31	9.25	12.6	5.35	4.72	
1 ½	7.87	6.77	4.45	2.32	3.31	9.25	12.6	5.35	4.72	
2	7.87	6.77	4.45	2.32	3.31	9.25	12.6	5.35	4.72	
2 ½	7.87	6.77	4.45	2.32	4.29	10.2	14.5	5.35	7.09	
3	7.87	6.77	4.45	2.32	4.29	10.2	14.5	5.35	7.09	
4	9.84	6.77	4.45	2.32	4.29	10.2	14.5	5.35	7.09	
5	11.8	6.77	4.45	2.32	5.91	11.8	17.7	5.35	10.2	
6	11.8	6.77	4.45	2.32	5.91	11.8	17.7	5.35	10.2	
8	13.8	6.77	4.45	2.32	7.09	12.8	19.9	5.35	12.8	
10	17.7	6.77	4.45	2.32	8.07	13.8	21.9	5.35	15.8	
12	19.7	6.77	4.45	2.32	9.06	14.8	23.8	5.35	18.1	
350	21.7	6.77	4.45	2.32	11.1	17.2	28.3	5.35	22.2	
400	23.6	6.77	4.45	2.32	12.1	18.2	30.4	5.35	24.3	
450	25.6	6.77	4.45	2.32	13.1	19.2	32.3	5.35	26.2	
500	25.6	6.77	4.45	2.32	14.1	20.2	34.4	5.35	28.2	
600	30.7	6.77	4.45	2.32	16.2	22.3	38.5	5.35	32.3	

1)


2) For order code for "Sensor option", option CG "Sensor extension neck for insulation": values + 4.33 in

3)

4) Depends on the liner

**Accessories**


*External WLAN antenna*

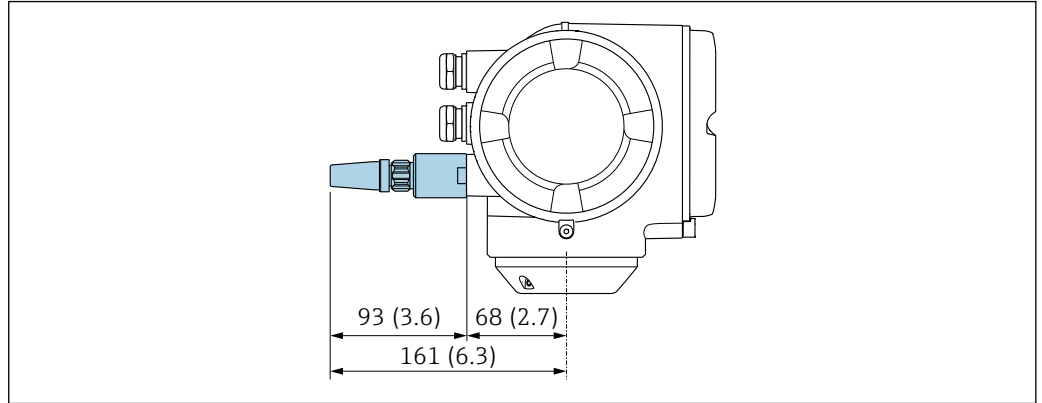

A0028923

40 Engineering unit mm (in)

*Ground disk for flange connection*

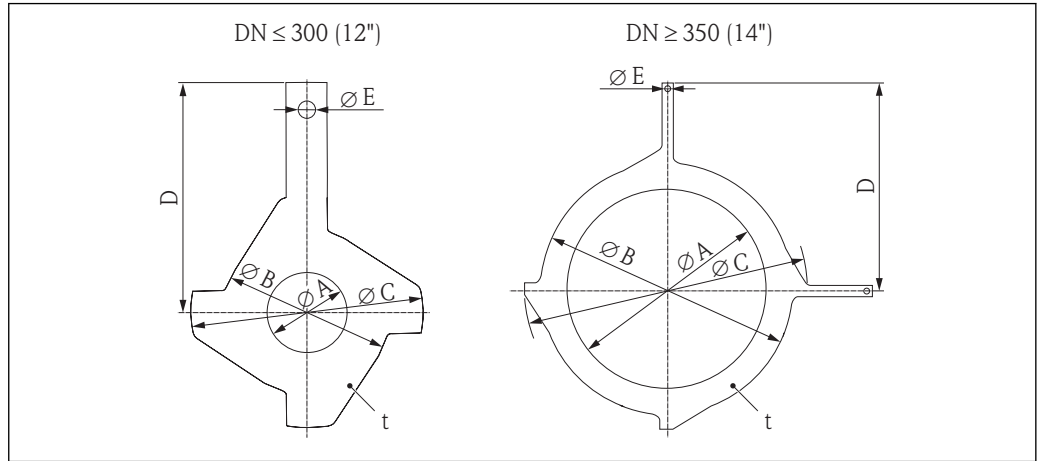

A0003221

DN <sup>1)</sup> ASME [in]	A PFA, PTFE [in]	B [in]	C [in]	D [in]	E [in]	t [in]
½	0.63	1.69	2.42	2.87	0.26	0.08
1	1.02	2.44	3.05	3.44	0.26	0.08
1 ½	1.61	3.23	3.98	4.06	0.26	0.08
2	2.05	3.98	4.55	4.25	0.26	0.08
3	3.15	5.16	6.08	5.31	0.26	0.08
4	4.09	6.14	7.34	6.02	0.26	0.08
6	6.22	8.54	10.08	7.24	0.26	0.08
8	8.11	10.51	11.34	8.07	0.26	0.08
10	10.24	12.91	14.13	9.45	0.26	0.08
12	12.28	14.76	16.26	10.75	0.26	0.08
14	13.50	17.05	18.86	14.37	0.35	0.08
16	15.47	18.90	21.34	15.55	0.35	0.08
18	17.28	21.18	22.95	16.42	0.35	0.08

DN <sup>1)</sup> ASME [in]	A PFA, PTFE [in]	B [in]	C [in]	D [in]	E [in]	t [in]
20	19.41	23.31	25.59	18.11	0.35	0.08
24	23.35	27.28	30.16	20.55	0.35	0.08

1) Ground disks can be used for all available pressure ratings.

## Weight

Excluding the transmitter

- Aluminum
  - 6.5 kg (14.3 lbs)
  - Digital: 2.4 kg (5.3 lbs)
- Polycarbonate: 1.4 kg (3.1 lbs)
- Cast, stainless: 15.6 kg (34.4 lbs)

Weight specifications apply to standard pressure ratings and without packaging material.

Cast connection housing version, stainless: +3.7 kg (+8.2 lbs)

## Weight in SI units

Nominal diameter		EN (DIN), AS <sup>1)</sup>		ASME		JIS	
[mm]	[in]	Pressure rating	[kg]	Pressure rating	[kg]	Pressure rating	[kg]
15	½	PN 40	4.5	Class 150	4.5	10K	4.5
25	1	PN 40	5.3	Class 150	5.3	10K	5.3
32	-	PN 40	6	Class 150	-	10K	5.3
40	1 ½	PN 40	7.4	Class 150	7.4	10K	6.3
50	2	PN 40	8.6	Class 150	8.6	10K	7.3
65	-	PN 16	10	Class 150	-	10K	9.1
80	3	PN 16	12	Class 150	12	10K	10.5
100	4	PN 16	14	Class 150	14	10K	12.7
125	-	PN 16	19.5	Class 150	-	10K	19
150	6	PN 16	23.5	Class 150	23.5	10K	22.5
200	8	PN 10	43	Class 150	43	10K	39.9
250	10	PN 10	63	Class 150	73	10K	67.4
300	12	PN 10	68	Class 150	108	10K	70.3
350	14	PN 10	103	Class 150	173		
400	16	PN 10	118	Class 150	203		
450	18	PN 10	159	Class 150	253		
500	20	PN 10	154	Class 150	283		
600	24	PN 10	206	Class 150	403		

1) For flanges to AS, only DN 25 and 50 are available.

## Weight in US units

Nominal diameter		ASME	
[mm]	[in]	Pressure rating	[lbs]
15	½	Class 150	9.92
25	1	Class 150	11.7
40	1 ½	Class 150	16.3

Nominal diameter		ASME	
[mm]	[in]	Pressure rating	[lbs]
50	2	Class 150	19.0
80	3	Class 150	26.5
100	4	Class 150	30.9
150	6	Class 150	51.8
200	8	Class 150	94.8
250	10	Class 150	161.0
300	12	Class 150	238.1
350	14	Class 150	381.5
400	16	Class 150	447.6
450	18	Class 150	557.9
500	20	Class 150	624.0
600	24	Class 150	888.6

Measuring tube specification

Nominal diameter		Pressure rating					Process connection internal diameter			
		EN (DIN)	ASME	AS 2129	AS 4087	JIS	PFA		PTFE	
[mm]	[in]	[bar]	[psi]	[bar]	[bar]	[bar]	[mm]	[in]	[mm]	[in]
15	½	PN 40	Class 150	-	-	20K	-	-	15	0.59
25	1	PN 40	Class 150	Table E	-	20K	23	0.91	26	1.02
32	-	PN 40	-	-	-	20K	32	1.26	35	1.38
40	1 ½	PN 40	Class 150	-	-	20K	36	1.42	41	1.61
50	2	PN 40	Class 150	Table E	PN 16	10K	48	1.89	52	2.05
65	-	PN 16	-	-	-	10K	63	2.48	67	2.64
80	3	PN 16	Class 150	-	-	10K	75	2.95	80	3.15
100	4	PN 16	Class 150	-	-	10K	101	3.98	104	4.09
125	-	PN 16	-	-	-	10K	126	4.96	129	5.08
150	6	PN 16	Class 150	-	-	10K	154	6.06	156	6.14
200	8	PN 10	Class 150	-	-	10K	201	7.91	202	7.95

Materials

Transmitter housing

*Proline 500 – digital transmitter housing*

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

*Proline 500 transmitter housing*

Order code for "Transmitter housing":


- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **L** "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

*Window material*

Order code for "Transmitter housing":

- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option **L** "Cast, stainless": glass

## Cable entries/cable glands

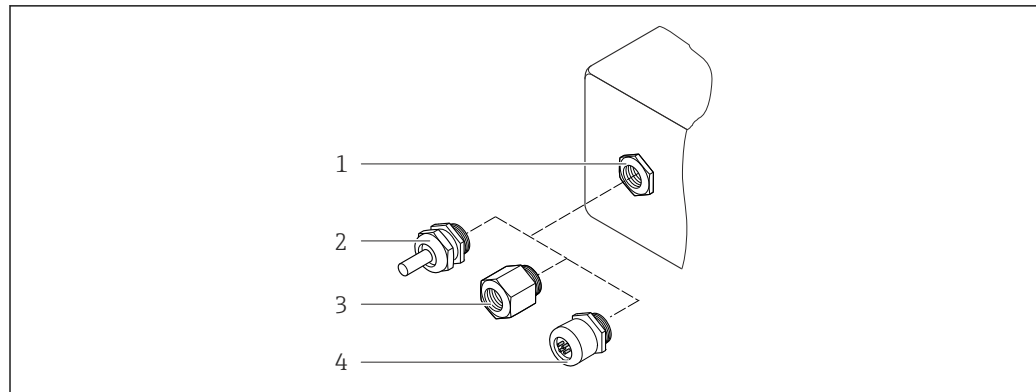

A0028352

41 Possible cable entries/cable glands

- 1 Cable entry with M20 × 1.5 internal thread
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"
- 4 Device plug coupling

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
<ul style="list-style-type: none"> <li>■ Adapter for cable entry with internal thread G ½"</li> <li>■ Adapter for cable entry with internal thread NPT ½"</li> </ul> <p><b>i</b> Only available for certain device versions:</p> <ul style="list-style-type: none"> <li>■ Order code for "Transmitter housing": <ul style="list-style-type: none"> <li>– Option <b>A</b> "Aluminum, coated"</li> <li>– Option <b>D</b> "Polycarbonate"</li> </ul> </li> <li>■ Order code for "Sensor connection housing": Option <b>A</b> "Aluminum coated"</li> </ul>	Nickel-plated brass
<ul style="list-style-type: none"> <li>■ Adapter for cable entry with internal thread G ½"</li> <li>■ Adapter for cable entry with internal thread NPT ½"</li> </ul> <p><b>i</b> Only available for certain device versions:</p> <ul style="list-style-type: none"> <li>■ Order code for "Transmitter housing": Option <b>L</b> "Cast, stainless"</li> <li>■ Order code for "Sensor connection housing": Option <b>L</b> "Cast, stainless"</li> </ul>	Stainless steel, 1.4404 (316L)
Adapter for device plug <p><b>i</b> Device plug for digital communication: Only available for certain device versions → 26.</p>	Stainless steel, 1.4404 (316L)
Device plug coupling	Plug M12 × 1 <ul style="list-style-type: none"> <li>■ Socket: Stainless steel, 1.4404 (316L)</li> <li>■ Contact housing: Polyamide</li> <li>■ Contacts: Gold-plated brass</li> </ul>

## Device plug

Electrical connection	Material
Plug M12x1	<ul style="list-style-type: none"> <li>■ Socket: Stainless steel, 1.4404 (316L)</li> <li>■ Contact housing: Polyamide</li> <li>■ Contacts: Gold-plated brass</li> </ul>

## Connecting cable

Connecting cable for sensor - Proline 500 – digital transmitter

PVC cable with copper shield

*Connecting cable for sensor - Proline 500 transmitter*

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

**Sensor connection housing**

Order code for "Sensor connection housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **L** "Cast, stainless": 1.4409 (CF3M) similar to 316L

**Sensor housing**

- DN 15 to 300 (½ to 12"): coated aluminum AlSi10Mg
- DN 350 to 600 (14 to 24"): carbon steel with protective varnish

**Measuring tubes**

Stainless steel, 1.4301/304/1.4306/304L; for flanges made of carbon with Al/Zn protective coating (DN 15 to 300 (½ to 12")) or protective varnish (DN 350 to 600 (14 to 24"))

*Liner*

- PFA
- PTFE

**Process connections**

EN 1092-1 (DIN 2501)

Stainless steel, 1.4571 (F316L); carbon steel, FE410WB<sup>1)</sup>/S235JRG2; Alloy C22, 2.4602 (UNS N06022)

ASME B16.5

Stainless steel, F316L; carbon steel, A105<sup>1)</sup>

JIS B2220

Stainless steel, 1.0425 (F316L)<sup>1)</sup>; carbon steel, S235JRG2/HII

AS 2129 Table E

- DN 25 (1"): carbon steel, A105/S235JRG2
- DN 40 (1 ½"): carbon steel, A105/S275JR

AS 4087 PN 16

Carbon steel, A105/S275JR

**Electrodes**

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium

**Seals**

In accordance with DIN EN 1514-1

**Accessories**

*Protective cover*

Stainless steel, 1.4404 (316L)

*External WLAN antenna*



- WLAN antenna:  
ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter:  
Stainless steel and copper

*Ground disks*




Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum; titanium


---

1) DN 15 to 300 (½ to 12") with Al/Zn protective coating; DN 350 to 600 (14 to 24") with protective varnish

<b>Fitted electrodes</b>	<p>Measuring electrodes, reference electrodes and electrodes for empty pipe detection:</p> <ul style="list-style-type: none"> <li>▪ Standard: stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum, titanium</li> <li>▪ Optional: only platinum measuring electrodes</li> </ul>
<b>Process connections</b>	<ul style="list-style-type: none"> <li>▪ ASME B16.5</li> <li>▪ JIS B2220</li> <li>▪ AS 2129 Table E</li> <li>▪ AS 4087 PN 16</li> </ul> <p> For information on the different materials used in the process connections →  65</p>
<b>Surface roughness</b>	<p>Stainless steel electrodes, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium:</p> <p>≤ 0.3 to 0.5 μm (11.8 to 19.7 μin) (All data relate to parts in contact with fluid)</p> <p>Liner with PFA:</p> <p>≤ 0.4 μm (15.7 μin) (All data relate to parts in contact with fluid)</p>

## Operability

<b>Operating concept</b>	<p><b>Operator-oriented menu structure for user-specific tasks</b></p> <ul style="list-style-type: none"> <li>▪ Commissioning</li> <li>▪ Operation</li> <li>▪ Diagnostics</li> <li>▪ Expert level</li> </ul> <p><b>Fast and safe commissioning</b></p> <ul style="list-style-type: none"> <li>▪ Guided menus ("Make-it-run" wizards) for applications</li> <li>▪ Menu guidance with brief explanations of the individual parameter functions</li> <li>▪ Device access via Web server</li> <li>▪ Optional: WLAN access to device via mobile handheld terminal</li> </ul> <p><b>Reliable operation</b></p> <ul style="list-style-type: none"> <li>▪ Operation in local language →  66</li> <li>▪ Uniform operating philosophy applied to device and operating tools</li> <li>▪ If replacing electronic modules, transfer the device configuration via the integrated memory (integrated HistoROM) which contains the process and measuring device data and the event logbook. No need to reconfigure.</li> </ul> <p><b>Efficient diagnostics increase measurement availability</b></p> <ul style="list-style-type: none"> <li>▪ Troubleshooting measures can be called up via the device and in the operating tools</li> <li>▪ Diverse simulation options, logbook for events that occur and optional line recorder functions</li> </ul>
<b>Languages</b>	<p>Can be operated in the following languages:</p> <ul style="list-style-type: none"> <li>▪ Via local operation English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish</li> <li>▪ Via Web browser English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish</li> <li>▪ Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese</li> </ul>
<b>Local operation</b>	<p><b>Via display module</b></p> <p>Two display modules are available:</p> <ul style="list-style-type: none"> <li>▪ Order code for "Display; operation", option <b>F</b> "4-line, backlit, graphic display; touch control"</li> <li>▪ Order code for "Display; operation", option <b>G</b> "4-line, backlit, graphic display; touch control + WLAN"</li> </ul> <p> Information about WLAN interface →  70</p>

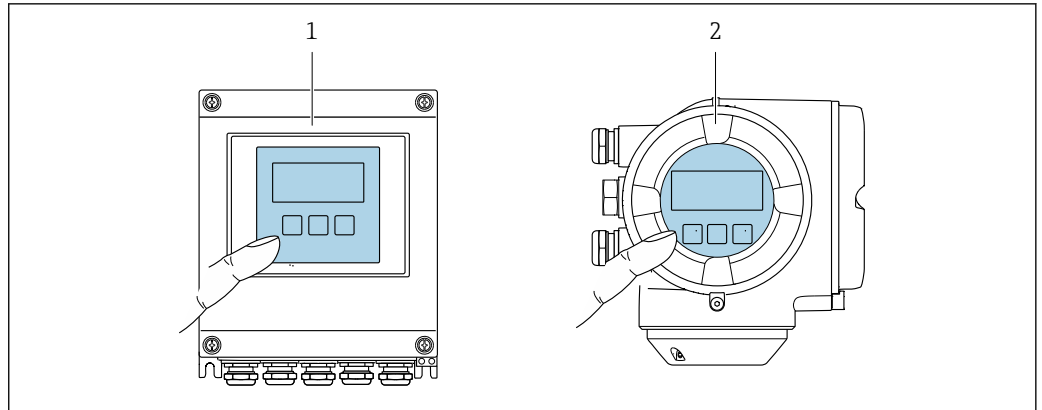

A0028232

42 Operation with touch control

- 1 Proline 500 – digital
- 2 Proline 500

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)  
The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- External operation via touch control (3 optical keys) without opening the housing: +, □, ☐
- Operating elements also accessible in various hazardous areas

Remote operation

Via HART protocol


This communication interface is available in device versions with a HART output.

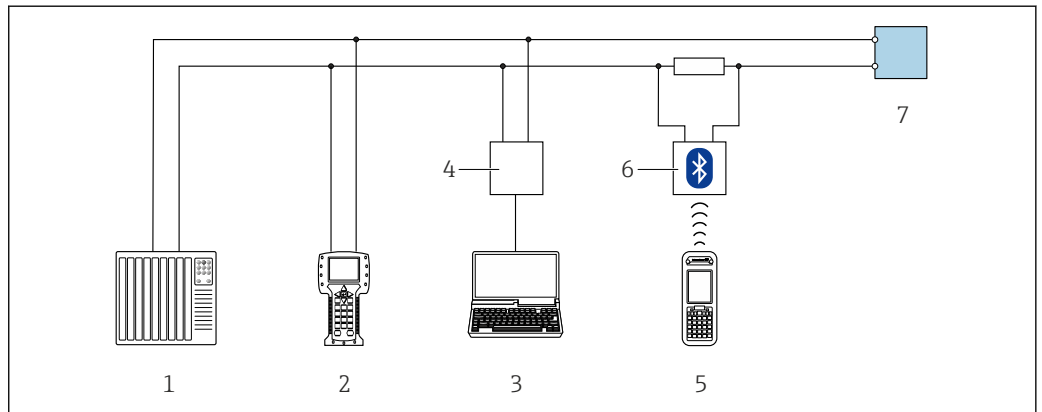

A0028747

43 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 VIATOR Bluetooth modem with connecting cable
- 7 Transmitter

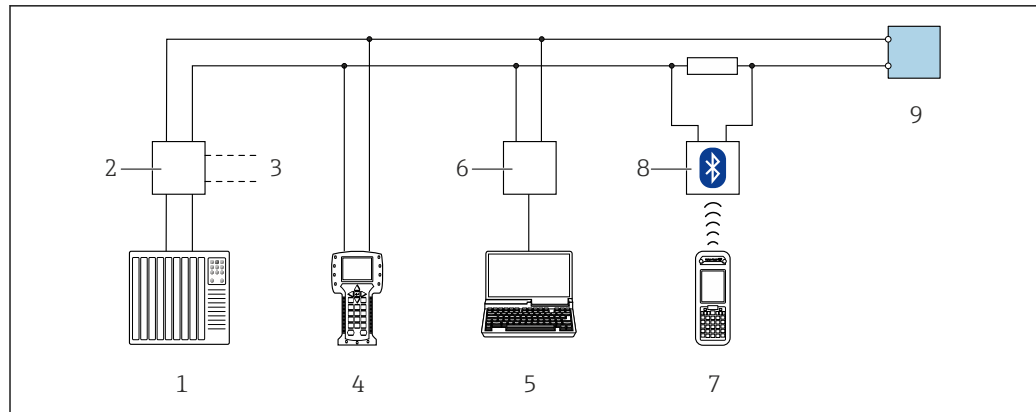


A0028746

44 Options for remote operation via HART protocol (passive)

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter

#### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

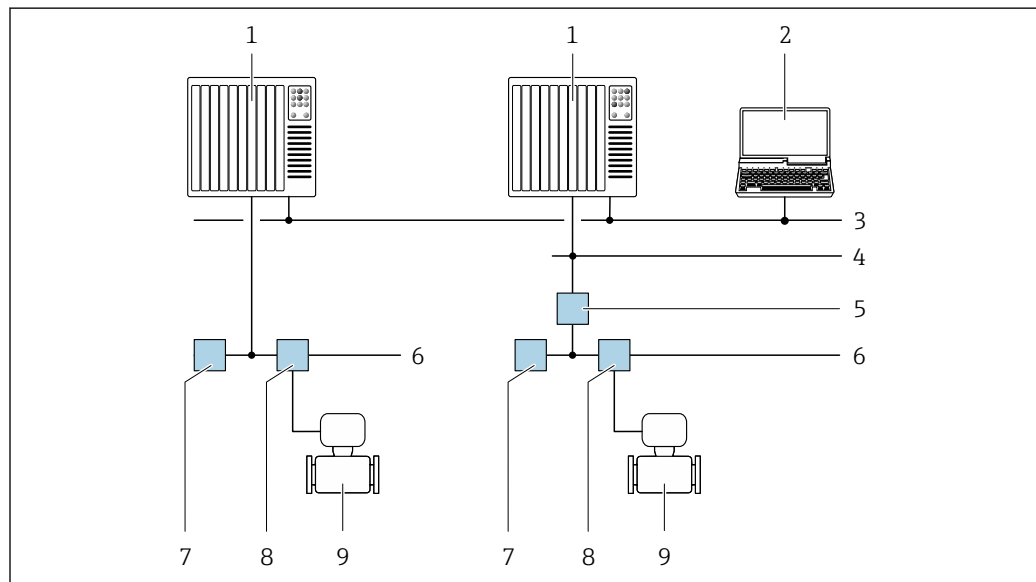


A0028837

45 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

**Via PROFIBUS PA network**

This communication interface is available in device versions with PROFIBUS PA.

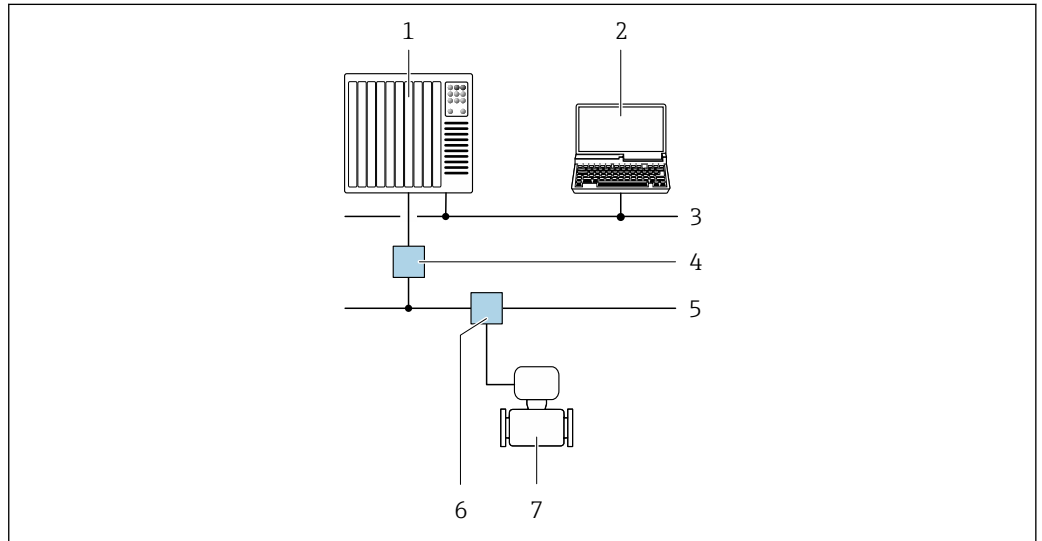


A0028838

46 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- 7 Measuring device

**Via Modbus RS485 protocol**

This communication interface is available in device versions with a Modbus-RS485 output.

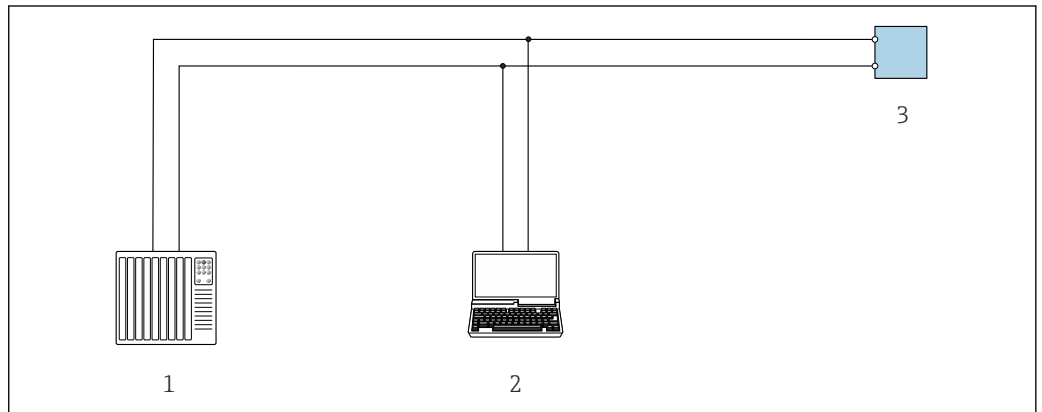

A0029437


47 Options for remote operation via Modbus-RS485 protocol (active)

- 1 Control system (e.g. PLC)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

## Service interface

## Via service interface (CDI-RJ45)

Proline 500 – digital transmitter

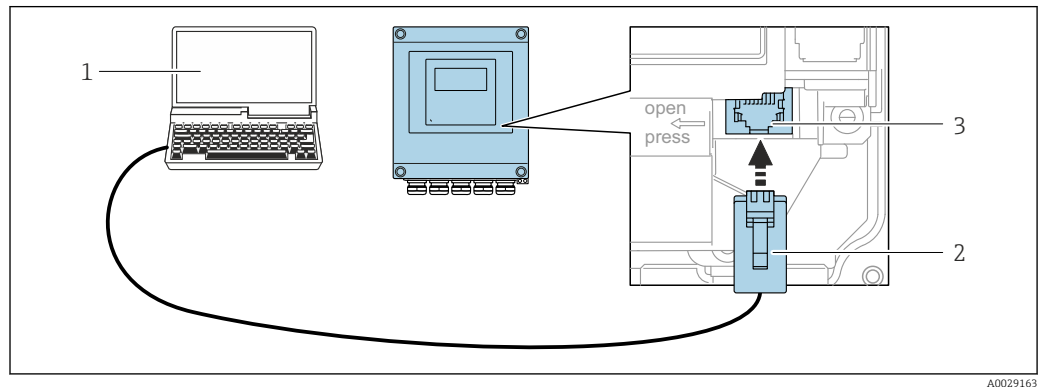


A0029163

48 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Proline 500 transmitter

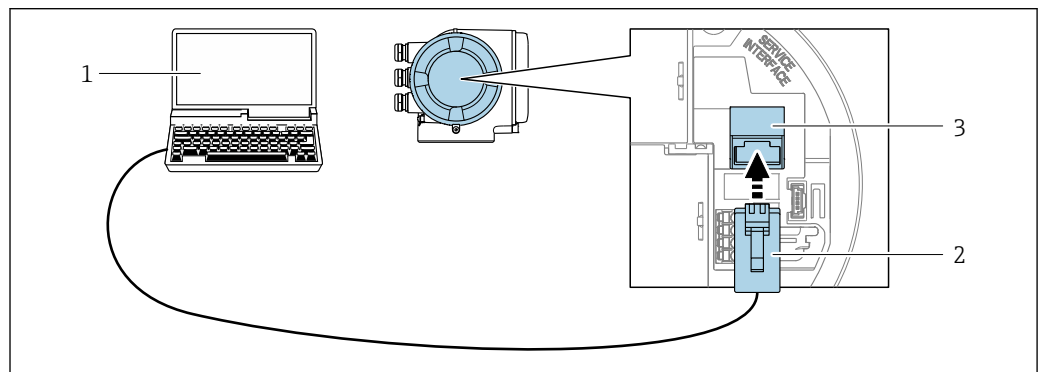

A0027563


49 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

## Via WLAN interface

The optional WLAN interface is available on the following device version:

Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"

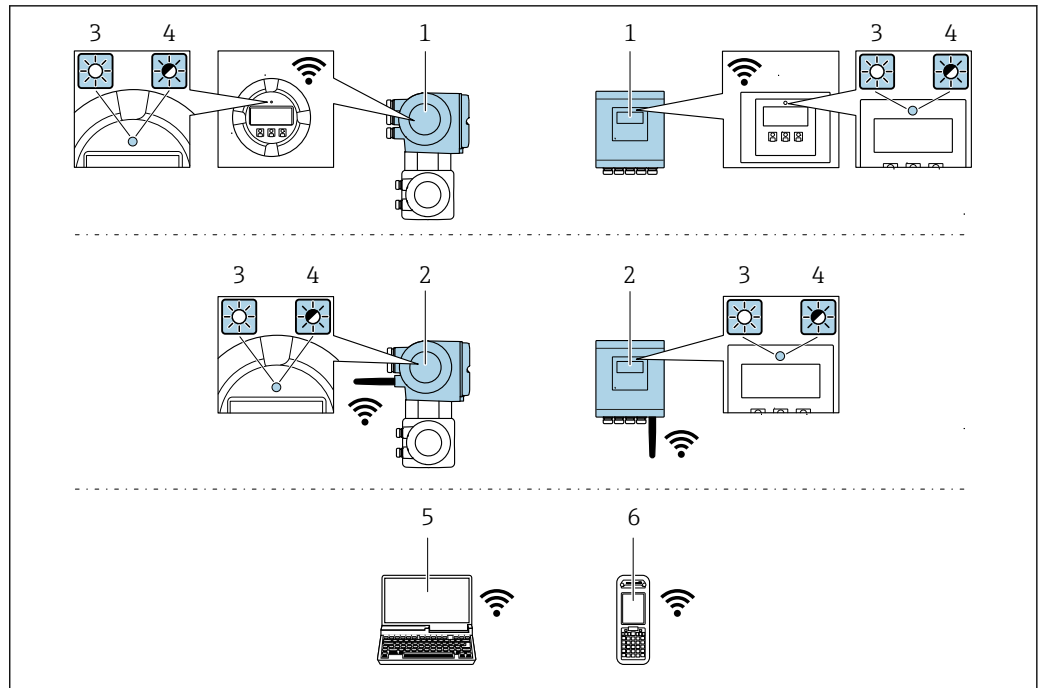

A0029165


- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)


<b>Wireless LAN</b>	IEEE 802.11 b/g (2.4 GHz) WLAN
<b>Encryption</b>	WPA2 PSK/TKIP AES-128
<b>Configurable channels</b>	1 to 11
<b>Function</b>	Access point with DHCP
<b>Range with integrated antenna</b>	Max. 10 m (32 ft)
<b>Range with external antenna</b>	Max. 50 m (164 ft)

**Supported operating tools**

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul style="list-style-type: none"> <li>▪ CDI-RJ45 service interface</li> <li>▪ WLAN interface</li> </ul>	Special Documentation for the device → 82
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul style="list-style-type: none"> <li>▪ CDI-RJ45 service interface</li> <li>▪ WLAN interface</li> <li>▪ Fieldbus protocol</li> </ul>	→ 81

Supported operating tools	Operating unit	Interface	Additional information
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul style="list-style-type: none"> <li>■ CDI-RJ45 service interface</li> <li>■ WLAN interface</li> <li>■ Fieldbus protocol</li> </ul>	→  81
Device Xpert	Field Xpert SFX 100/350/370	HART and FOUNDATION Fieldbus fieldbus protocol	Operating Instructions BA01202S Device description files: Use update function of handheld terminal

 Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- Process Device Manager (PDM) by Siemens → [www.siemens.com](http://www.siemens.com)
- Asset Management Solutions (AMS) by Emerson → [www.emersonprocess.com](http://www.emersonprocess.com)
- FieldCommunicator 375/475 by Emerson → [www.emersonprocess.com](http://www.emersonprocess.com)
- Field Device Manager (FDM) by Honeywell → [www.honeywellprocess.com](http://www.honeywellprocess.com)
- FieldMate by Yokogawa → [www.yokogawa.com](http://www.yokogawa.com)
- PACTWare → [www.pactware.com](http://www.pactware.com)

The associated device description files are available at: [www.endress.com](http://www.endress.com) → Downloads

### Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the measuring device data can be managed and the network parameters can be configured. The WLAN connection requires a device that acts as an access point to enable communication via a computer or mobile handheld terminal.


#### Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Uploading the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file, create documentation of the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance

### HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.

 When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

**Additional information on the data storage concept**

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
<b>Available data</b>	<ul style="list-style-type: none"> <li>▪ Event history, such as diagnostic events</li> <li>▪ Parameter data record backup</li> <li>▪ Device firmware package</li> <li>▪ Driver for system integration e.g.:                             <ul style="list-style-type: none"> <li>- DD for HART</li> <li>- GSD for PROFIBUS PA</li> <li>- DD for FOUNDATION Fieldbus</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>▪ Measured value memory ("Extended HistoROM" order option)</li> <li>▪ Current parameter data record (used by firmware at run time)</li> <li>▪ Maximum indicators (min/max values)</li> <li>▪ Totalizer values</li> </ul>	<ul style="list-style-type: none"> <li>▪ Sensor data: diameter etc.</li> <li>▪ Serial number</li> <li>▪ User-specific access code (to use the "Maintenance" user role)</li> <li>▪ Calibration data</li> <li>▪ Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
<b>Storage location</b>	Fixed on the user interface board in the connection compartment	Can be plugged into the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

**Data backup**

**Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors

**Manual**

Additional parameter data record (complete parameter settings) in the integrated device memory for:

- Data backup function  
Backup and subsequent restoration of a device configuration in the device memory
- Data comparison function  
Comparison of the current device configuration with the device configuration saved in the device memory

**Data transfer**

**Manual**

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

**Event list**

**Automatic**

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

**Data logging**

**Manual**


If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1 000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or Web server
- Use the recorded measured value data in the integrated device simulation function in the **Diagnostics** submenu.

**Service logbook****Manual**

- Create up to 20 user-specific events with a date and customized text in a separate logbook for documentation of the measuring point
- Use for calibration or service operations, for example, or for maintenance or revision work that has been performed

## Certificates and approvals

<b>CE mark</b>	The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.  Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
<b>C-Tick symbol</b>	The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".
<b>Ex approval</b>	The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.   The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

**Proline 500 – digital**

ATEX, IECEx

Currently, the following versions for use in hazardous areas are available:

*Ex ia, Ex db*

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
II(1)G	[Ex ia] IIC	II2G	Ex db ia IIC T6...T1 Gb
II3(1)G	Ex ec [ia Ga] IIC T5...T4 Gc	II2G	Ex db ia IIC T6...T1 Gb

*Ex tb*

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
II(1)D	[Ex ia] IIIC	II2D	Ex ia tb IIIC T** °C Db

*Non-Ex, Ex ec*

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
Non-Ex	Non-Ex	II3G	Ex ec ic IIC T5...T1 Gc
II3G	Ex ec IIC T5...T4 Gc	II3G	Ex ec ic IIC T5...T1 Gc

cCSAus

Currently, the following versions for use in hazardous areas are available:

*IS (Ex nA, Ex i)*

Transmitter	Sensor
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups A-G

*NI (Ex nA)*

Transmitter	Sensor
Class I Division 2 Groups A - D	

*Ex nA, Ex i*

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5...T4 Gb	Class I, Zone 1 AEx/ Ex d ia IIC T6...T1 Gb

*Ex nA*

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5...T4 Gc	Class I, Zone 2 AEx/Ex nA ic IIC T5...T1 Gc

*Ex tb*

Transmitter	Sensor
[AEx / Ex ia ] IIIC	Zone 2 I AEx/ Ex ia tb IIIC T** °C Db

**Proline 500**

*ATEX, IECEx*

Currently, the following versions for use in hazardous areas are available:

*Ex db eb*

Category	Type of protection	
	Transmitter	Sensor
II2G	Ex db eb ia IIC T6...T4 Gb	Ex eb ia IIC T6...T1 Gb

*Ex db*

Category	Type of protection	
	Transmitter	Sensor
II2G	Ex db ia IIC T6...T4 Gb	Ex eb ia IIC T6...T1 Gb

*Ex tb*

Category	Type of protection	
	Transmitter	Sensor
II2G	Ex tb IIIC T85°C Db	Ex ia tb IIIC T** °C Db

*Ex ec*

Category	Type of protection	
	Transmitter	Sensor
II3G	Ex ec IIC T5...T4 Gc	Ex ec ic IIC T5...T1 Gc

cCSAus

Currently, the following versions for use in hazardous areas are available:

*IS (Ex i), XP (Ex d)*

Transmitter	Sensor
Class I, III, III Division 1 Groups A-G	

*NI (Ex nA)*

Transmitter	Sensor
Class I Division 2 Groups A - D	

*Ex de*

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex de ia IIC T6...T4 Gb	Class I, Zone 1 AEx/Ex e ia IIC T6...T1 Gb

*Ex d*

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex d ia IIC T6...T4 Gb	Class I, Zone 1 AEx/Ex e ia IIC T6...T1 Gb

*Ex nA*

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5...T4 Gc	Class I, Zone 2 AEx/Ex nA ic IIC T5...T1 Gc

*Ex tb*

Transmitter	Sensor
Zone 21 AEx/ Ex tb IIIC T85 °C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

## Functional safety

The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option **LA**) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified by the TÜV in accordance with IEC 61508.

The following types of monitoring in safety equipment are possible:  
Volume flow



Functional Safety Manual with information on the SIL device → 82

## HART certification

### HART interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

## FOUNDATION Fieldbus certification

### FOUNDATION Fieldbus interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.1.2 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

---

**Certification PROFIBUS**

**PROFIBUS interface**

The measuring device is certified and registered by the PROFIBUS User Organization (PNO). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

---

**Modbus RS485 certification**

The measuring device meets all the requirements of the MODBUS/TCP conformity test and has the "MODBUS/TCP Conformance Test Policy, Version 2.0". The measuring device has successfully passed all the test procedures carried out.

---

**Radio approval**

Europe:  
RED 2014/53/EU

United States of America:  
CFR Title 47, FCC Part 15.247

Canada:  
RSS-247 Issue 1

Japan:  
Article 2 clause 1 item 19



Additional country-specific approvals on request.

---

**Other standards and guidelines**

- EN 60529  
Degrees of protection provided by enclosures (IP code)
- EN 61010-1  
Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements
- IEC/EN 61326  
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- NAMUR NE 21  
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32  
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43  
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53  
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 105  
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107  
Self-monitoring and diagnosis of field devices
- NAMUR NE 131  
Requirements for field devices for standard applications

## Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: [www.endress.com](http://www.endress.com) -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
- From your Endress+Hauser Sales Center: [www.addresses.endress.com](http://www.addresses.endress.com)

### Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
  - Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
  - Automatic verification of exclusion criteria
  - Automatic creation of the order code and its breakdown in PDF or Excel output format
  - Ability to order directly in the Endress+Hauser Online Shop

## Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

### Diagnostics functions

Package	Description
Extended HistoROM	<p>Comprises extended functions concerning the event log and the activation of the measured value memory.</p> <p>Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.</p> <p>Data logging (line recorder):</p> <ul style="list-style-type: none"> <li>▪ Memory capacity for up to 1000 measured values is activated.</li> <li>▪ 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.</li> <li>▪ Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.</li> </ul>

### Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	<p><b>Heartbeat Monitoring</b> Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</p> <ul style="list-style-type: none"> <li>▪ Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time.</li> <li>▪ Schedule servicing in time.</li> <li>▪ Monitor the process or product quality, e.g. gas pockets.</li> </ul> <p><b>Heartbeat Verification</b> Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".</p> <ul style="list-style-type: none"> <li>▪ Functional testing in the installed state without interrupting the process.</li> <li>▪ Traceable verification results on request, including a report.</li> <li>▪ Simple testing process via local operation or other operating interfaces.</li> <li>▪ Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.</li> <li>▪ Extension of calibration intervals according to operator's risk assessment.</li> </ul>

**Cleaning**







Package	Description
Electrode cleaning circuit (ECC)	The electrode cleaning circuit (ECC) function has been developed to have a solution for applications where magnetite (Fe <sub>3</sub> O <sub>4</sub> ) deposits frequently occur (e.g. hot water). Since magnetite is highly conductive this build up leads to measuring errors and ultimately to the loss of signal. The application package is designed to AVOID build up of highly conductive matter and thin layers (typical of magnetite).



## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).


**Device-specific accessories**

**For the transmitter**







Accessories	Description
Transmitter <ul style="list-style-type: none"> <li>▪ Proline 500</li> <li>▪ Proline 500 – digital</li> </ul>	Transmitter for replacement or storage. Use the order code to define the following specifications: <ul style="list-style-type: none"> <li>▪ Approvals</li> <li>▪ Output</li> <li>▪ Input</li> <li>▪ Display / operation</li> <li>▪ Housing</li> <li>▪ Software</li> </ul>  For details, see Installation Instructions EA01150 For details <ul style="list-style-type: none"> <li>▪ Proline 500 – digital transmitter: Installation Instructions EA01151</li> <li>▪ Proline 500 transmitter: Installation Instructions EA01152</li> </ul>  Proline 500 transmitter for replacement: the serial number of the current transmitter should always be quoted when ordering. On the basis of the serial number, the device-specific data of the replacement device can also be used for the new transmitter.
WLAN antenna Wide range	External WLAN antenna for a range of up to 50 m (165 ft).  Further information on the WLAN interface → 70.
Post mounting kit	Post mounting kit for transmitter.  The post mounting kit can only be ordered together with a transmitter.
Protective cover Proline 500	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  For details, see Installation Instructions EA01160
Display guard Proline 500 – digital	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  For details, see Installation Instructions EA01161
Ground cable	Set, consisting of two ground cables for potential equalization.

Connecting cable Proline 500 – digital Sensor – Transmitter	<p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> <li>▪ Option <b>B</b>: 20 m (65 ft)</li> <li>▪ Option <b>E</b>: User configurable up to max. 50 m</li> <li>▪ Option <b>F</b>: User configurable up to max. 165 ft</li> </ul> <p> Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)</p>
Connecting cable Proline 500 Sensor – Transmitter	<p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> <li>▪ Option <b>1</b>: 5 m (16 ft)</li> <li>▪ Option <b>2</b>: 10 m (32 ft)</li> <li>▪ Option <b>3</b>: 20 m (65 ft)</li> <li>▪ Option <b>4</b>: User-configurable cable length (m)</li> <li>▪ Option <b>5</b>: User-configurable cable length (ft)</li> </ul> <p>Reinforced connecting cable with an additional, reinforcing metal braid:</p> <ul style="list-style-type: none"> <li>▪ Option <b>6</b>: User-configurable cable length (m)</li> <li>▪ Option <b>7</b>: User-configurable cable length (ft)</li> </ul> <p> Possible cable length for a Proline 500 connecting cable: depends on the medium conductivity, max. 200 m (660 ft)</p>



#### For the sensor

Accessories	Description
Ground disks	<p>Are used to ground the fluid in lined measuring tubes to ensure proper measurement.</p> <p> For details, see Installation Instructions EA00070D</p>


#### Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	<p>For intrinsically safe HART communication with FieldCare via the USB interface.</p> <p> For details, see "Technical Information" TI00404F</p>
HART Loop Converter HMX50	<p>Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.</p> <p> For details, see "Technical Information" TI00429F and Operating Instructions BA00371F</p>
Fieldgate FXA320	<p>Gateway for the remote monitoring of connected 4 to 20 mA measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00053S</p>
Fieldgate FXA520	<p>Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser.</p> <p> For details, see "Technical Information" TI00025S and Operating Instructions BA00051S</p>
Field Xpert SFX350	<p>Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the <b>non-Ex area</b>.</p> <p> For details, see Operating Instructions BA01202S</p>
Field Xpert SFX370	<p>Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the <b>non-Ex area</b> and the <b>Ex area</b>.</p> <p> For details, see Operating Instructions BA01202S</p>


**Service-specific accessories**

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> <li>Choice of measuring devices for industrial requirements</li> <li>Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.</li> <li>Graphic illustration of the calculation results</li> <li>Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</li> </ul> <p>Applicator is available:</p> <ul style="list-style-type: none"> <li>Via the Internet: <a href="https://wapps.endress.com/applicator">https://wapps.endress.com/applicator</a></li> <li>As a downloadable DVD for local PC installation.</li> </ul>
W@M	<p>W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.</p> <p>W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.</p> <p>Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit <a href="http://www.endress.com/lifecyclemanagement">www.endress.com/lifecyclemanagement</a></p>
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>
DeviceCare	<p>Tool for connecting and configuring Endress+Hauser field devices.</p> <p> For details, see Innovation brochure IN01047S</p>

**System components**

Accessories	Description
Memograph M graphic display recorder	<p>The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p>

**Supplementary documentation**

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
  - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

**Standard documentation**

**Brief Operating Instructions**

*Part 1 of 2: Sensor*

Measuring device	Documentation code
Proline Promag	KA01216D

## Part 2 of 2: Transmitter

Measuring device	Documentation code			
	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Proline 500	KA01230D	KA01233D	KA01231D	KA01232D

## Operating Instructions

Measuring device	Documentation code			
	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Promag P 500	BA01399D	BA01480D	BA01405D	BA01402D

## Description of device parameters

Measuring device	Documentation code			
	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Promag 500	GP01054D	GP01099D	GP01056D	GP01055D

## Supplementary device-dependent documentation

## Safety Instructions

Contents	Documentation code
ATEX/IECEX Ex i	XA01522D
ATEX/IECEX Ex ec	XA01523D
cCSAus IS	XA01524D
cCSAus Ex e ia / Ex d ia	XA01525D
cCSAus Ex nA	XA01526D
INMETRO Ex i	XA01527D
INMETRO Ex ec	XA01528D
NEPSI Ex i	XA01529D
NEPSI Ex nA	XA01530D

## Special documentation

Contents	Documentation code			
Information on the Pressure Equipment Directive	SD01614D			
Functional Safety Manual	SD01741D			
Contents	Documentation code			
	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Heartbeat Technology	SD01641D	SD01745D	SD01747D	SD01746D
Contents	Documentation code			
	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Web server	SD01658D	SD01661D	SD01660D	SD01659D

### Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	Specified for each individual accessory

## Registered trademarks

### **HART®**

Registered trademark of the FieldComm Group, Austin, Texas, USA

### **PROFIBUS®**

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

### **FOUNDATION™ Fieldbus**

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

### **Modbus®**

Registered trademark of SCHNEIDER AUTOMATION, INC.

### **Applicator®, FieldCare®, DeviceCare®, Field Xpert™, HistoROM®, Heartbeat Technology™**

Registered or registration-pending trademarks of the Endress+Hauser Group

[www.addresses.endress.com](http://www.addresses.endress.com)

---