


User Guide

PoleVault Switchers

PVS 407D

PoleVault Digital Switcher

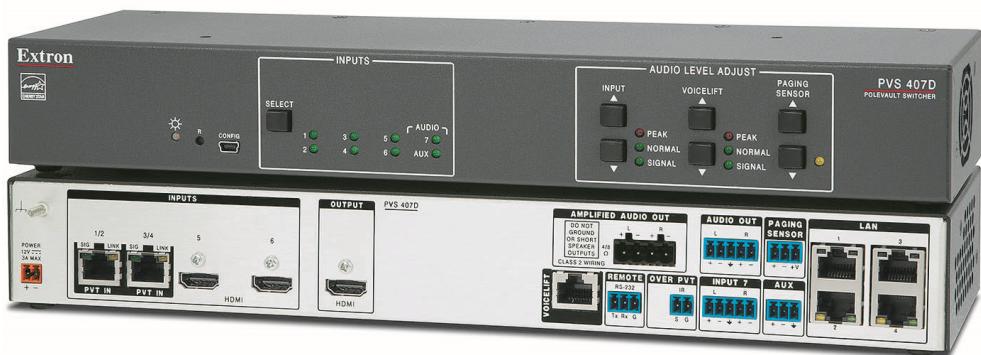

Extron

68-2776-01 Rev. D
03 19

Safety Instructions

Safety Instructions • English

WARNING: This symbol, , when used on the product, is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may present a risk of electric shock.

ATTENTION: This symbol, , when used on the product, is intended to alert the user of important operating and maintenance (servicing) instructions in the literature provided with the equipment.

For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the Extron Safety and Regulatory Compliance Guide, part number 68-290-01, on the Extron website, www.extron.com.

Sicherheitsanweisungen • Deutsch

WARNUNG: Dieses Symbol  auf dem Produkt soll den Benutzer darauf aufmerksam machen, dass im Inneren des Gehäuses dieses Produktes gefährliche Spannungen herrschen, die nicht isoliert sind und die einen elektrischen Schlag verursachen können.

VORSICHT: Dieses Symbol  auf dem Produkt soll dem Benutzer in der im Lieferumfang enthaltenen Dokumentation besonders wichtige Hinweise zur Bedienung und Wartung (Instandhaltung) geben.

Weitere Informationen über die Sicherheitsrichtlinien, Produkthandhabung, EMI/EMF-Kompatibilität, Zugänglichkeit und verwandte Themen finden Sie in den Extron-Richtlinien für Sicherheit und Handhabung (Artikelnummer 68-290-01) auf der Extron-Website, www.extron.com.

Instrucciones de seguridad • Español

ADVERTENCIA: Este símbolo, , cuando se utiliza en el producto, avisa al usuario de la presencia de voltaje peligroso sin aislar dentro del producto, lo que puede representar un riesgo de descarga eléctrica.

ATENCIÓN: Este símbolo, , cuando se utiliza en el producto, avisa al usuario de la presencia de importantes instrucciones de uso y mantenimiento recogidas en la documentación proporcionada con el equipo.

Para obtener información sobre directrices de seguridad, cumplimiento de normativas, compatibilidad electromagnética, accesibilidad y temas relacionados, consulte la Guía de cumplimiento de normativas y seguridad de Extron, referencia 68-290-01, en el sitio Web de Extron, www.extron.com.

Instructions de sécurité • Français

AVERTISSEMENT : Ce pictogramme, , lorsqu'il est utilisé sur le produit, signale à l'utilisateur la présence à l'intérieur du boîtier du produit d'une tension électrique dangereuse susceptible de provoquer un choc électrique.

ATTENTION : Ce pictogramme, , lorsqu'il est utilisé sur le produit, signale à l'utilisateur des instructions d'utilisation ou de maintenance importantes qui se trouvent dans la documentation fournie avec le matériel.

Pour en savoir plus sur les règles de sécurité, la conformité à la réglementation, la compatibilité EMI/EMF, l'accessibilité, et autres sujets connexes, lisez les informations de sécurité et de conformité Extron, réf. 68-290-01, sur le site Extron, www.extron.com.

Istruzioni di sicurezza • Italiano

AVVERTENZA: Il simbolo, , se usato sul prodotto, serve ad avvertire l'utente della presenza di tensione non isolata pericolosa all'interno del contenitore del prodotto che può costituire un rischio di scosse elettriche.

ATTENZIONE: Il simbolo, , se usato sul prodotto, serve ad avvertire l'utente della presenza di importanti istruzioni di funzionamento e manutenzione nella documentazione fornita con l'apparecchio.

Per informazioni su parametri di sicurezza, conformità alle normative, compatibilità EMI/EMF, accessibilità e argomenti simili, fare riferimento alla Guida alla conformità normativa e di sicurezza di Extron, cod. articolo 68-290-01, sul sito web di Extron, www.extron.com.

Instrukcje bezpieczeństwa • Polska

OSTRZEŻENIE: Ten symbol, , gdy używany na produkcie, ma na celu poinformować użytkownika o obecności izolowanego i niebezpiecznego napięcia wewnętrz obudowy produktu, który może stanowić zagrożenie porażenia prądem elektrycznym.

UWAGI: Ten symbol, , gdy używany na produkcie, jest przeznaczony do ostrzegania użytkownika ważne operacyjne oraz instrukcje konserwacji (obsługi) w literaturze, wyposażone w sprzęt.

Informacji na temat wytycznych w sprawie bezpieczeństwa, regulacji wzajemnej zgodności, zgodność EMI/EMF, dostępności i Tematy pokrewne, zobacz Extron bezpieczeństwa i regulacyjnego zgodności przewodnik, część numer 68-290-01, na stronie internetowej Extron, www.extron.com.

Инструкция по технике безопасности • Русский

ПРЕДУПРЕЖДЕНИЕ: Данный символ, , если указан на продукте, предупреждает пользователя о наличии неизолированного опасного напряжения внутри корпуса продукта, которое может привести к поражению электрическим током.

ВНИМАНИЕ: Данный символ, , если указан на продукте, предупреждает пользователя о наличии важных инструкций по эксплуатации и обслуживанию в руководстве, прилагаемом к данному оборудованию.

Для получения информации о правилах техники безопасности, соблюдении нормативных требований, электромагнитной совместимости (ЭМП/ЭДС), возможности доступа и других вопросах см. руководство по безопасности и соблюдению нормативных требований Extron на сайте Extron: , www.extron.com, номер по каталогу - 68-290-01.

安全说明 • 简体中文

警告:  产品上的这个标志意在警告用户该产品机壳内有暴露的危险电压, 有触电危险。

注意:  产品上的这个标志意在提示用户设备随附的用户手册中有重要的操作和维护(维修)说明。

关于我们产品的安全指南、遵循的规范、EMI/EMF 的兼容性、无障碍使用的特性等相关内容，敬请访问 Extron 网站，www.extron.com，参见 Extron 安全规范指南，产品编号 68-290-01。

安全記事・繁體中文

警告:  若產品上使用此符號，是為了提醒使用者，產品機殼內存在著可能會導致觸電之風險的未絕緣危險電壓。

注意  若產品上使用此符號，是為了提醒使用者，設備隨附的用戶手冊中有重要的操作和維護（維修）說明。

有關安全性指導方針、法規遵守、EMI/EMF 相容性、存取範圍和相關主題的詳細資訊，請瀏覽 Extron 網站：www.extron.com，然後參閱《Extron 安全性與法規遵守手冊》，準則編號 68-290-01。

安全上の注意・日本語

警告: この記号が製品上に表示されている場合は、筐体内に絶縁されていない高電圧が流れ、感電の危険があることを示しています。

注意: この記号が製品上に表示されている場合は、本機の取扱説明書に記載されている重要な操作と保守(整備)の指示についてユーザーの注意を喚起するものです。

安全上の注意、法規遵守、EMI/EMF適合性、その他の関連項目については、エクストロンのウェブサイト www.extron.com より『Extron Safety and Regulatory Compliance Guide』(P/N 68-290-01) をご覧ください。

FCC Class A Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. The Class A limits provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference. This interference must be corrected at the expense of the user.

NOTE: This unit was tested with shielded I/O cables on the peripheral devices. Shielded cables must be used to ensure compliance with FCC emissions limits. For more information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the **Extron Safety and Regulatory Compliance Guide** on the Extron website.

Copyright

© 2015-2019 Extron Electronics. All rights reserved. www.extron.com

Trademarks

All trademarks mentioned in this guide are the properties of their respective owners.

The following registered trademarks (®), registered service marks (SM), and trademarks (TM) are the property of RGB Systems, Inc. or Extron Electronics (see the current list of trademarks on the **Terms of Use** page at www.extron.com):

Registered Trademarks (®)
Extron, Cable Cubby, ControlScript, CrossPoint, DTP, eBUS, EDID Manager, EDID Minder, Flat Field, FlexOS, Glitch Free, Global Configurator, Global Scripter, GlobalViewer, Hideaway, HyperLane, IP Intercom, IP Link, Key Minder, LinkLicense, LockIt, MediaLink, MediaPort, NetPA, PlenumVault, PoleVault, PowerCage, PURE3, Quantum, Show Me, SoundField, SpeedMount, SpeedSwitch, StudioStation, System INTEGRATOR, TeamWork, TouchLink, V-Lock, VideoLounge, VN-Matrix, VoiceLift, WallVault, WindoWall, XTP, XTP Systems, and ZipClip
Registered Service Mark ^(SM) : S3 Service Support Solutions
Trademarks (TM)
AAP, AFL (Accu-Rate Frame Lock), ADSP (Advanced Digital Sync Processing), Auto-Image, AVEdge, CableCover, CDRS (Class D Ripple Suppression), Codec Connect, DDS (Digital Display Sync Processing), DMI (Dynamic Motion Interpolation), Driver Configurator, DSP Configurator, DSVP (Digital Sync Validation Processing), eLink, EQIP, Everlast, FastBite, FOX, FOXBOX, IP Intercom HelpDesk, MAAP, MicroDigital, Opti-Torque, PendantConnect, ProDSP, QS-FPC (QuickSwitch Front Panel Controller), Room Agent, Scope-Trigger, ShareLink, SIS (Simple Instruction Set), Skew-Free, SpeedNav, Triple-Action Switching, True4K, Vector™ 4K, WebShare, XTRA, and ZipCaddy

Conventions Used in this Guide

Notifications

The following notifications are used in this guide:

WARNING: Potential risk of severe injury or death.

AVERTISSEMENT : Risque potentiel de blessure grave ou de mort.

ATTENTION:

- Risk of property damage.
- Risque de dommages matériels.

NOTE: A note draws attention to important information.

Software Commands

Commands are written in the fonts shown here:

```
^AR Merge Scene,,Op1 scene 1,1 ^B 51 ^W^C  
[01] R 0004 00300 00400 00800 00600 [02] 35 [17] [03]
```

```
Esc[X1*[X17*[X20*[X23*[X21]CE←
```

NOTE: For commands and examples of computer or device responses mentioned in this guide, the character “Ø” is used for the number zero and “O” is the capital letter “o.”

Computer responses and directory paths that do not have variables are written in the font shown here:

```
Reply from 208.132.180.48: bytes=32 times=2ms TTL=32  
C:\Program Files\Extron
```

Variables are written in slanted form as shown here:

```
ping xxx.xxx.xxx.xxx -t  
SOH R Data STX Command ETB ETX
```

Selectable items, such as menu names, menu options, buttons, tabs, and field names are written in the font shown here:

From the **File** menu, select **New**.

Click the **OK** button.

Specifications Availability

Product specifications are available on the Extron website, www.extron.com.

Extron Glossary of Terms

A glossary of terms is available at <http://www.extron.com/technology/glossary.aspx>.

Contents

Introduction.....	1	SIS Communication and Control	19
PVS 407D Description	1	Host and Switcher Communication	19
Inputs	2	Switcher-Initiated Messages	19
Outputs	2	Copyright Information	19
Control and Configuration.....	2	Password Information.....	19
Power Save	2	Error Responses.....	20
Application Diagrams.....	3	SIS Overview	20
Rear Panel Connections	5	Using the Command and Response Tables ..	20
Rear Panel Connectors.....	5	Command and Response Tables	24
Inputs	5		
Outputs	6		
Control Ports	7		
Power.....	7		
Labeling the AV Inputs	8		
Labeling the PVT Faceplates.....	8		
Final Setup	9		
Securing the HDMI Cable	9		
Operation.....	10		
Front Panel Overview.....	10		
Front Panel Features.....	10		
Front Panel Operation.....	11		
Configuration.....	12		
Resetting the Switcher.....	12		
Enabling and Activating LinkLicense	13		
Front Panel Security Lockout (Executive Mode)	13		
Power Save Modes	14		
Setting Up and Optimizing the Audio	15		
Steps for Optimizing the Audio	15		
Gain Control	16		
Bass and Treble Control.....	17		
VoiceLift Level Adjustment	17		
Paging Sensitivity Adjustment	18		
SIS Communication and Control	19		
Host and Switcher Communication	19		
Switcher-Initiated Messages	19		
Copyright Information	19		
Password Information.....	19		
Error Responses.....	20		
SIS Overview	20		
Using the Command and Response Tables ..	20		
Command and Response Tables	24		
Using the Extron Product Configuration Software.....	37		
Installing the Software.....	37		
Installation	37		
Starting the PVS 407D Product Configuration Software.....	38		
New Configuration File.....	39		
Open Configuration File	40		
Using PCS — Device Menu.....	40		
Connect to a Device	41		
Deploy Configuration to Devices	44		
Using PCS — Panel and Pages.....	48		
AV Controls Panel	48		
Configuration Pages	49		
Input Configuration Page	49		
EDID Minder Page	50		
Audio Configuration Page	52		
VLR 302 Config Page	58		
General Settings Page	59		
Hardware Settings	60		
Using PCS — Software Menu.....	64		

Using the Internal Web Page	65
Accessing the Internal Web Page	65
Turning Off Compatibility Mode.....	66
Using the Internal Web Page	66
Device Info.....	67
Device Status	68
Network Settings.....	69
Audio Stream.....	70
Firmware	71
Roles and Permissions	72
LinkLicense	73
Downloading the Latest Switcher Firmware	75

Connector Wiring	76
Speaker Configuration	76
Terminating the Speaker Cable	77
TP Cable Termination and Recommendations ..	77
Power Supply Wiring	78
RS-232 Connector Wiring	80
Wiring for IR Communication	81
Input 7 Connector Wiring.....	83

Introduction

This guide covers the installation, operation, and configuration of the Extron PVS 407D PoleVault Switcher. Throughout the guide, this switcher is interchangeably referred to as the “PVS 407D” or the “PoleVault switcher” or the “switcher”.

NOTE: In this guide, where used, the generic term “12 VDC power supply”, refers to either the 12 VDC, 48 Watt 4 Amp power supply, or the 12 VDC, 50 Watt, 4.2 Amp power supply ONLY, as supplied by Extron.

PVS 407D Description

The Extron PVS 407D is part of the PoleVault System and is used in conjunction with the Extron PVT series of transmitters and Extron speakers. It has four video and audio twisted pair inputs, two HDMI inputs, and one HDMI output, and incorporates a built-in audio amplifier. The switcher accepts a combination of up to six HDMI digital signals, four of which can be computer video signals with stereo audio, and supports up to two analog VGA signals on the wallplates.

A seventh input is a switchable analog audio-only input for line-level audio such as an Apple iPod® or MP3 player. The dedicated auxiliary (Aux) mixed input on rear panel is always active, and it is independent of the switchable audio inputs (1 to 7).

As part of the Extron PoleVault system, the PVS 407D can be installed above a suspended ceiling in the Extron PVM 220 plenum rated enclosure, or installed at ceiling level within the Extron PMK 560 Pole Mount Kit. Alternatively it can be mounted in either the Extron WMK 160 or USFM 100 wall mount kits that can be installed on a wall close to a projector or display device.

The PVS 407D switcher is used in conjunction with the Extron digital PVT wallplates, (such as the PVT HD RGB), and the VoiceLift microphone system. It is equipped with an integrated 50 watt RMS stereo amplifier capable of driving 4 or 8 ohm speakers.

The switcher supports all standard single link HDMI 1.4 signals at resolutions up to 4096x2160 at 30 Hz with 4:4:4 chroma sampling, and data rates up to 10.2 Gbps. The switcher and the PVT wallplates feature EDID Minder technology, which automatically manages the EDID information between the display device and each HDMI and RGB input source.

With the Audio Decoding LinkLicense upgrade enabled, the PVS 407D switcher is capable of decoding network streamed audio from Extron GlobalViewer Campus Communication Suite (GVCCS) web-based application software.

The switcher has DSP audio processing incorporated that provides advanced control of ducking and other audio features.

The switcher is also equipped with Ethernet control via the rear panel LAN ports, and supports audio file playback for pre-recorded announcements.

The PVS 407D is ENERGY STAR® qualified. The switcher is an energy efficient product that conserves energy and reduces running costs.

Inputs

The PoleVault switcher receives the video and audio signals sent from PVT Wallplates, which can be located up to 130 feet away for 4K/30 Hz rate (see Note below), or 150 feet for 2K rates. The signals are sent over shielded twisted pair (STP) cable.

NOTE: PVS 407D must have firmware version 2.00 or greater for 4K support on all HDMI inputs.

In addition there are two HDMI inputs (inputs 5 and 6) for HDMI source inputs, such as Apple TV® or Extron ShareLink devices. DVI inputs can also be connected to these two HDMI connectors when using the appropriate DVI-to-HDMI adapter. The PVS 407D switcher has a separate analog audio input (input 7) that can be switched with the other six inputs. In addition, there is a dedicated port for connecting the optional VoiceLift microphone system, and another port for connecting an optional Priority Page Sensor. A third dedicated port allows the user to connect an auxiliary audio device.

Outputs

The PVS 407D has one HDMI output, an amplified audio output, and a line out audio output for assistive listening or recording devices.

Control and Configuration

The PoleVault switcher can be controlled from either the front panel buttons, or software via the front panel USB, rear panel LAN ports, or RS-232 control via a MediaLink controller.

The switcher has an RS-232 port which can be connected to a MediaLink Controller for remote control of the switcher. An IR pass-through port is available for routing IR transport control signals from a controller to the source device.

In addition, the PVS 407D can be configured and controlled using the Extron Simple Instruction Set (SIS) of commands or through the Extron Product Configuration Software (PCS) program connected via the front panel USB port and TCP/IP connection. The female USB mini B connector located on the front panel can also be used for configuring the switcher settings and flash upgrading the firmware. Firmware upgrades can also be made remotely over the network by connecting to one of the four rear panel LAN ports.

Four 10/100Base-T network switch ports are also provided allowing network connectivity for multiple other devices, such as MLC controller, TouchLink panel and Ethernet controlled products, using a single LAN drop within the installation location.

Three front panel controls allow the user to adjust the independent input gains, the VoiceLift microphone input level, and the Page Sensor sensitivity.

Power Save

This product is an ENERGY STAR® qualified product. It has two Power Save modes (Standby and Auto) that can be enabled or disabled by SIS commands, or through the Product Configuration Software (PCS). When either of these modes are enabled and the product is in a low power state, it can be taken out of that state by a front panel operation.

See [Power Save Modes](#) on page 14 for full details and the SIS command [Power save mode](#) on page 25 .

See [Setting the Auto Power Save Mode](#) on page 59, for details on how to set the auto power feature using PCS.

Application Diagrams

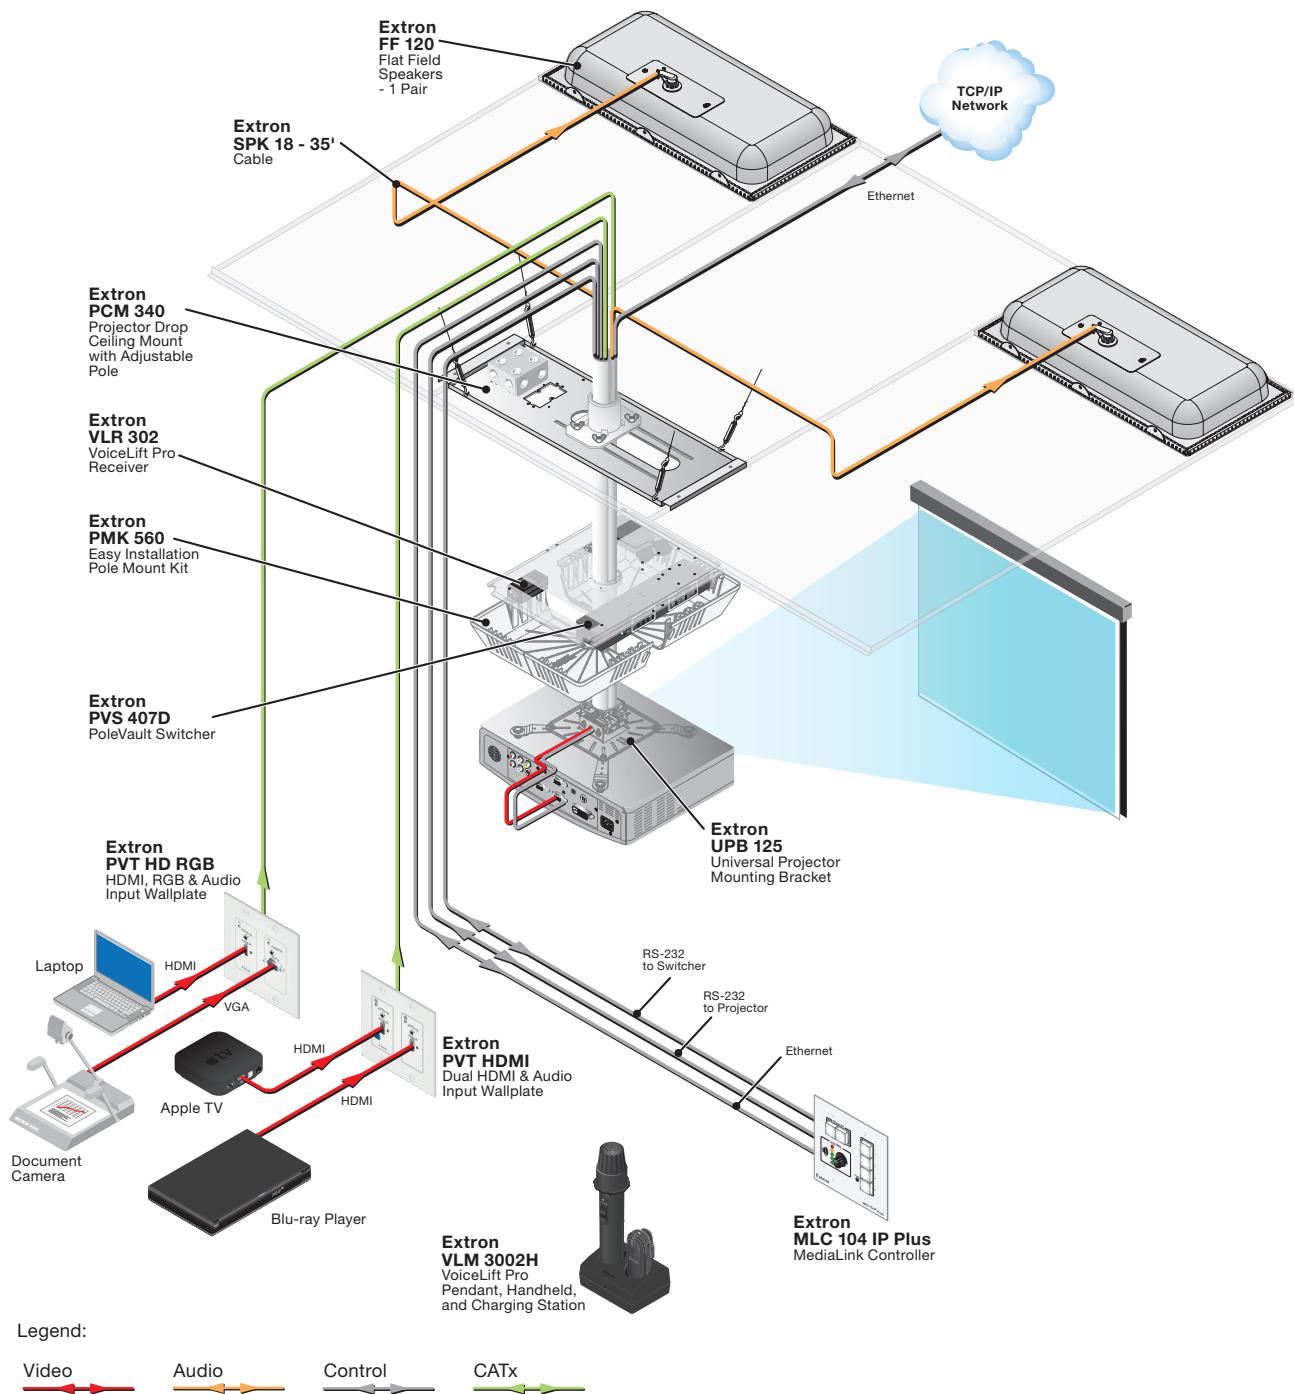


Figure 1. Typical PVS 407D Application

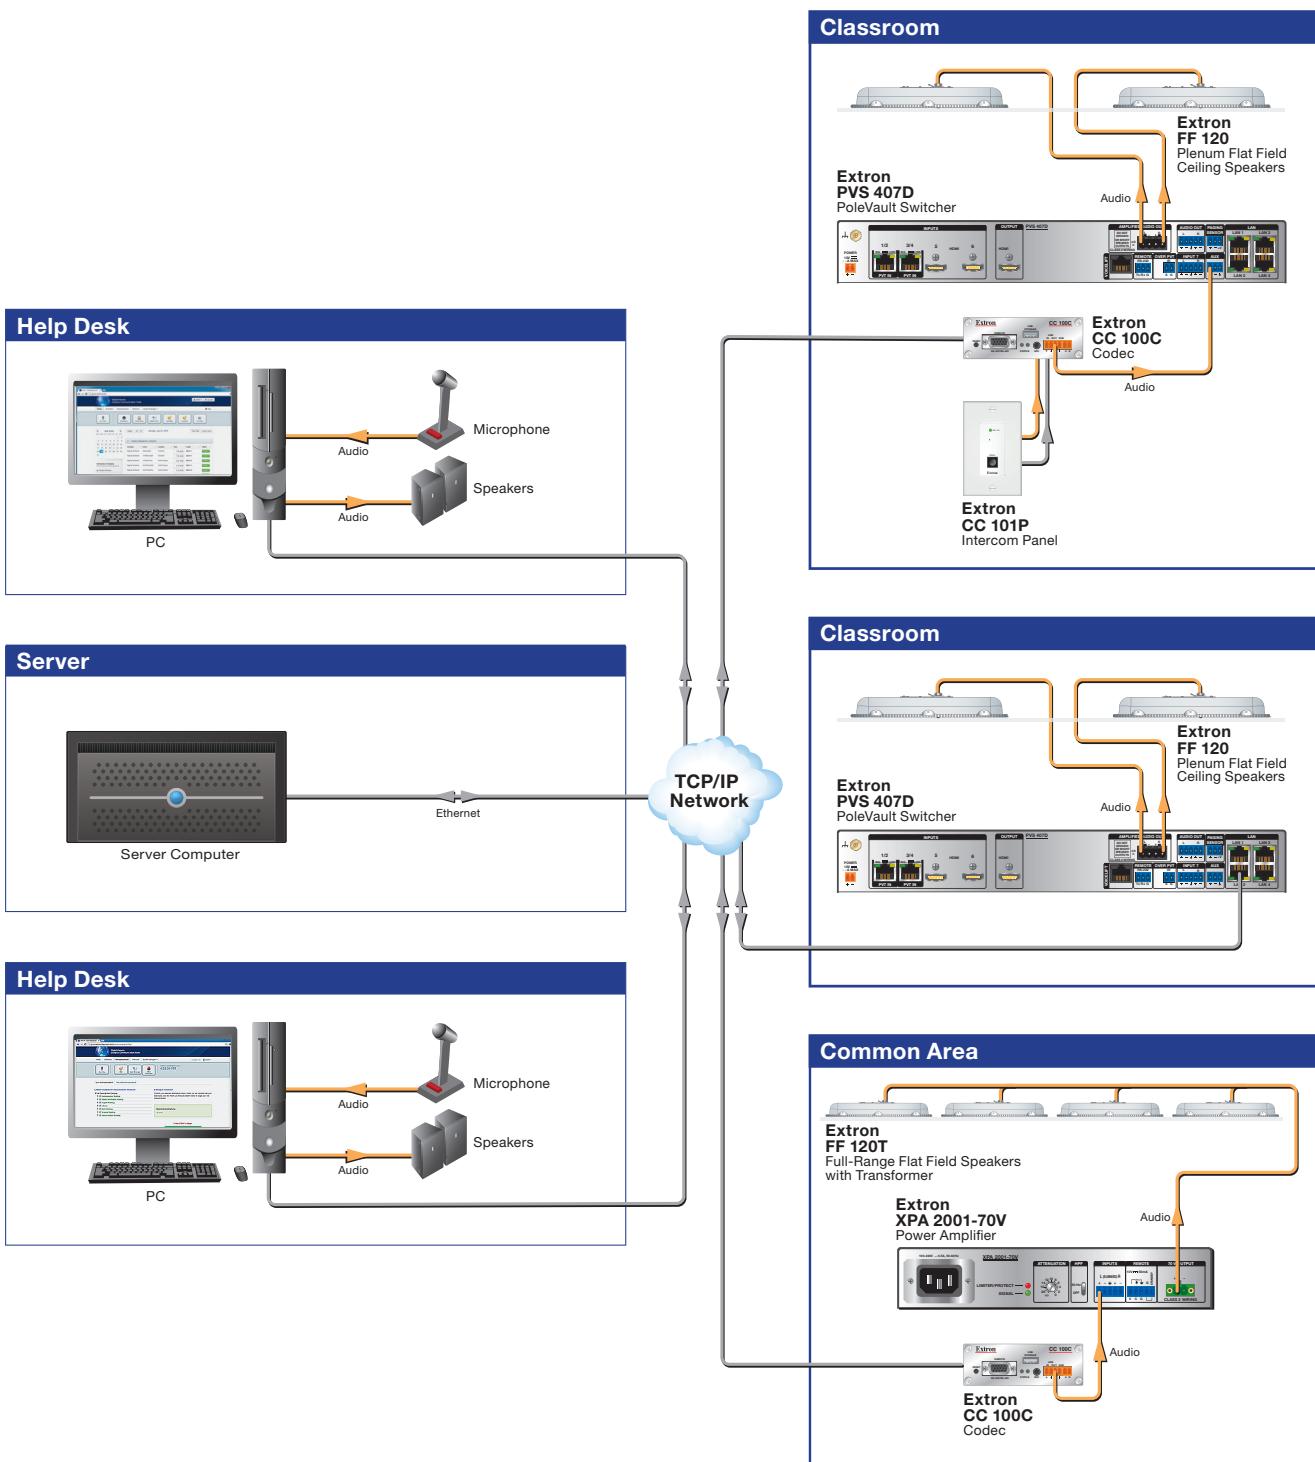


Figure 2. PVS 407D Application using GVCCS and Multiple Classrooms

Rear Panel Connections

This section describes cable connections to a PVS 407D switcher.

NOTE: This equipment is to be connected only to networks without routing to the outside plant.

Rear Panel Connectors

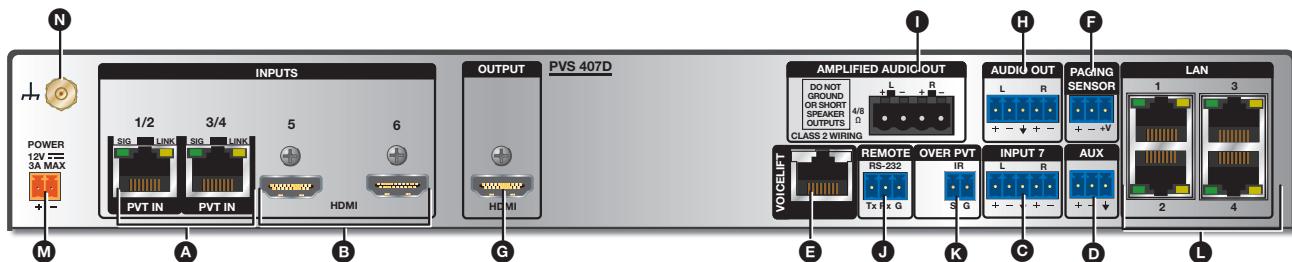


Figure 3. PVS 407D Rear Panel Features

Inputs and Outputs	Control and Power
A Inputs 1/2 and 3/4	J Remote RS-232 control port
B Inputs 5 and 6	K Over PVT (IR Insert port)
C Input 7	L LAN ports (LAN 1 to 4)
D Aux audio port	M Power receptacle
E VoiceLift port	N Grounding stud
F Paging sensor port	
G HDMI video output	
H Line out audio output	
I Amplified audio output	

Inputs

A Inputs 1/2 and 3/4 — Connect up to two PVT HD RGB or PVT HDMI wallplates (four input sources) to these two RJ-45 female connectors using shielded twisted pair cable (XTP DTP 24). The four inputs can be up to four HDMI with embedded audio or two HDMI and two high resolution computer video and audio sources or any combination of both. The RGB input is digitized at the PVT input wallplate. The front panel input selection button toggles the inputs 1 through 4 as required (see [TP Cable Termination and Recommendations](#) on page 77, for wiring details).

NOTE: Extron XTP DTP 24 shielded twisted pair cable is required for optimal performance.

- B Inputs 5 and 6** (see **figure 3** on previous page) — Connect up to two HDMI sources (such as an Extron ShareLink device) to these female HDMI digital video connectors. Use the Extron LockIt device to secure the HDMI cable at the switcher (see **Securing the HDMI Cable** on page 9 for securing the cable).
- C Input 7** — Input 7 is a dedicated audio-only input for an auxiliary, stereo, line-level analog audio signal from an output source such as an iPod or an MP3 player. Connect a cable from the source to this 5-pole captive screw connector. It can be wired as balanced or unbalanced (see **Input 7 Connector Wiring** on page 83 for wiring details).
- D Aux audio port** — Connect an aux audio device to this 3.5 mm captive screw 3-pole connector for dedicated mono audio only input.
- E VoiceLift port** — This RJ-45 jack is dedicated for use with the optional VLR 102 or VLR 302 VoiceLift Receiver for integration of a VoiceLift Microphone system.

NOTE: To install the VoiceLift Microphone system, see the *VoiceLift Installation Guide*, supplied with the device.

- F Paging sensor port** — Connect the optional Priority Page Sensor (PPS 35 or PPS 25) to this port, to enable program audio interruptions during paging system broadcasts.

NOTE: The Extron Priority Page Sensor is an optional accessory, purchased separately. See the Extron [website](#) for details about the Priority Page Sensors. To install a Priority Page Sensor system, see the installation guide supplied with the applicable device.

Outputs

- G HDMI video output** — Connect a suitable display device to this female HDMI digital video output connector. Use the Extron LockIt device to secure the HDMI cable at the switcher (see **Securing the HDMI Cable** on page 9 for securing the cable).
- H Line out audio output** — Connect an external amplifier, recording, podcasting, or assisted listening device to this 3.5 mm captive screw 5-pole connector.
- I Amplified audio output** — Connect speakers to this 5 mm captive screw 4-pole connector. The amplified audio is capable of outputting 50 watts (2 x 25 watts RMS) for 4 and 8 ohm speakers (see **Speaker Configuration** on page 76 for wiring details).

Control Ports

- J Remote RS-232 control port** (see **figure 3** on page 5) — Connect a host computer, control system, or MLC controller to this 3.5 mm captive screw 3-pole connector for direct switcher control via RS-232 (see **figure 4** below).
- K Over PVT (IR insert port)** — For IR control for a source device, connect the IR port on the MLC to this 3.5 mm captive screw 2-pole connector (see **figure 4** below). This routes IR transport control signals via an IR device connected to the PVT wallplate front panel.
- L LAN ports** — These four RJ-45s act as a built-in 4-port 10/100Base-T network switch. These ports allow communication with the switcher via TCP/IP for firmware updates over the network, as well as configuration and operation using PCS software or the embedded web pages.

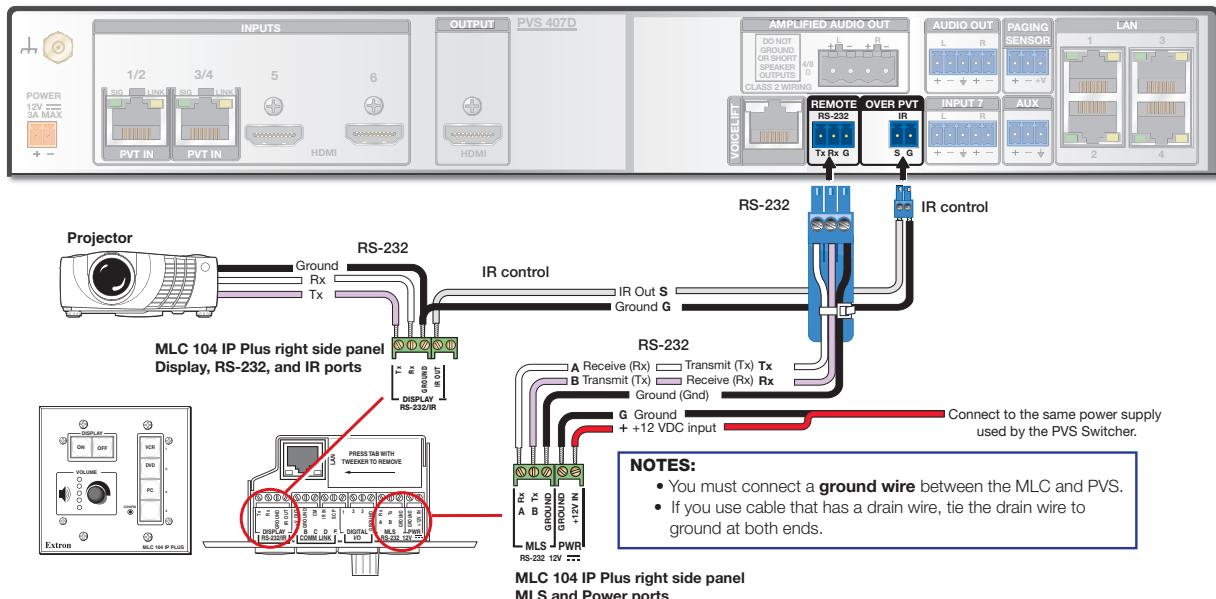


Figure 4. MLC 104 IP Plus RS-232 and IR Connections to the PVS 407D

Power

- M Power receptacle** — Connect the supplied 12 VDC power supply to this orange female 2-pole captive screw connector (see **Power Supply Wiring** on page 78).

NOTES:

- Use only the supplied 12 V, 4 A or 12 V, 4.2 A power supply for this switcher.
- The PVS 407D power supply can support a typical system: for example, a PVS 407D, 2 PVT Wallplates, 2 or 4 speakers, an MLC 104 IP Plus with an IRCM DV+, and a VoiceLift Microphone system.

- N Grounding stud** — Connect a ground cable to this stud and tie it to the closest grounded electrical box, so as to reduce any ESD affects that may be caused when connecting to other sources.

Labeling the AV Inputs

A sheet of labels is supplied for the installer to label the cables as an aid to easy identification of the input signal type running from the PVT Wallplates to the switcher. Once the labels are attached to the cables, the signal type transmitted on any cable can clearly be identified, enabling correct cable connection during installation.

To label the cables,

1. Peel off the label corresponding to the cable signal type (HDMI or RGB) and affix it close to one end of the cable.

NOTE: Align and press the colored section of the label to the cable first, then wrap the clear section around the cable, allowing the signal type name to be easily read.


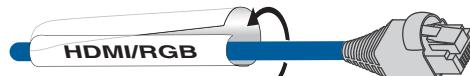


Figure 5. Wrap the Label Around the Cable, Colored Part First.


2. Repeat step 1 for the other end of the cable, using the same label type.
3. Using the correct label type, repeat steps 1 and 2 as necessary for all signal cables that are to be connected to the PVS 407D.
4. Connect the designated input cable to the corresponding input.

Labeling the PVT Faceplates


To help identify the input number and type of signal that a PVT wallplate sends to the PVS switcher when the wallplate is installed, a series of small labels are supplied. A label identifying the transmitted signal type should be affixed to each decorator-style face plate (top or bottom) where it can easily be seen after installation. This aids the user to connect a device corresponding to the plate transmission signal type, allowing correct input switching (for example input 1, input 3, and so on) at the PVS 407D.

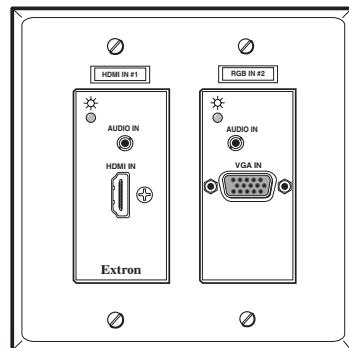

Each digital wallplate has two inputs. Up to two wallplates can be connected to the PoleVault digital switcher. See image below for an explanation of input association.

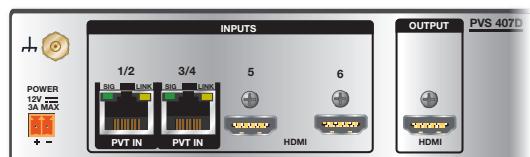

Connect up to two digital wallplates to PVT IN 1/2 and 3/4 using 1 XTP DTP 24 cable with RJ-45 connectors per wallplate.

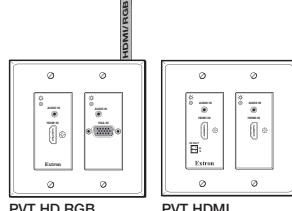

NOTE: Any digital wallplate connected to PVT IN 1/2 on the switcher is associated with inputs 1 and 2. Input 1 is the left audio and video input, and input 2 is the right audio and video input on the wallplate.

The same is true when connecting to PVT IN 3/4. Input 3 is the left and input 4 is the right input on the wallplate.

Figure 6. Wallplate to Switcher Input Association

Final Setup

With an MLC 104 IP Plus as a standard MLC controller in the PoleVault system package, the PVS 407D switcher completed setup should look similar to the figure below.

Ensure all connections are correctly made and secure. Use LockIt brackets to secure HDMI cables (see below).

NOTE: See the *PoleVault System Installation Guide* and *MLC 104 IP Plus Series Setup Guide* for full MLC installation, configuration, and operating details.

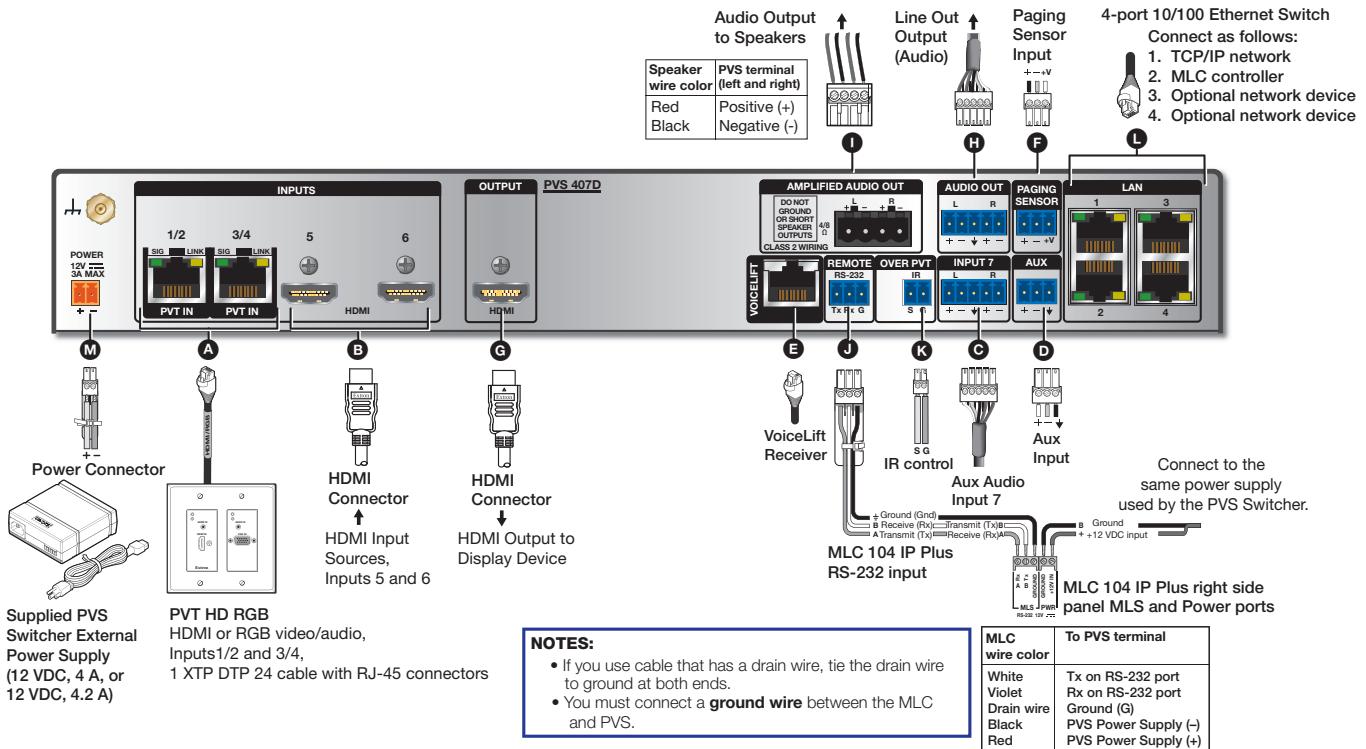


Figure 7. PVS 407D Connections


Securing the HDMI Cable

The supplied Extron LockIt HDMI cable lacing bracket makes it possible to secure a standard HDMI cable to the PVS 407D switcher.

To securely fasten an HDMI cable to the PVS 407D (see image at right):

- 1 Plug the HDMI cable into the rear panel HDMI connector.
- 2 Loosen the HDMI connection mounting screw from the rear panel enough to allow the LockIt lacing bracket to be placed over it. The screw does not have to be removed.
- 3 Place the LockIt lacing bracket on the screw and against the HDMI cable connector.
- 4 Lightly tighten the screw to secure the bracket.
- 5 Place the included tie wrap around the HDMI connector and the LockIt lacing bracket and tighten as shown in the images at right.

NOTE: The tie wrap can be tightened using pliers or similar tools.

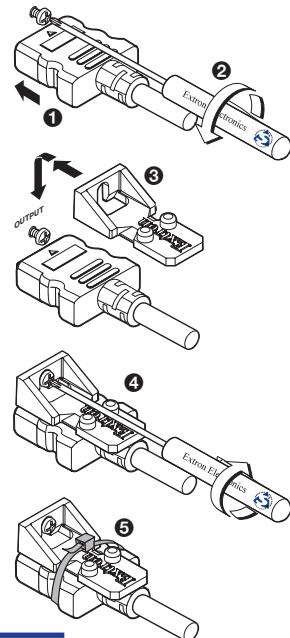

Operation

This section of the manual discusses the operation of a PVS 407D device. Topics covered include:

- **Front Panel Overview**
- **Configuration**
- **Resetting the Switcher**
- **Front Panel Security Lockout (Executive Mode)**
- **Power Save Modes**
- **Setting Up and Optimizing the Audio**

Front Panel Overview

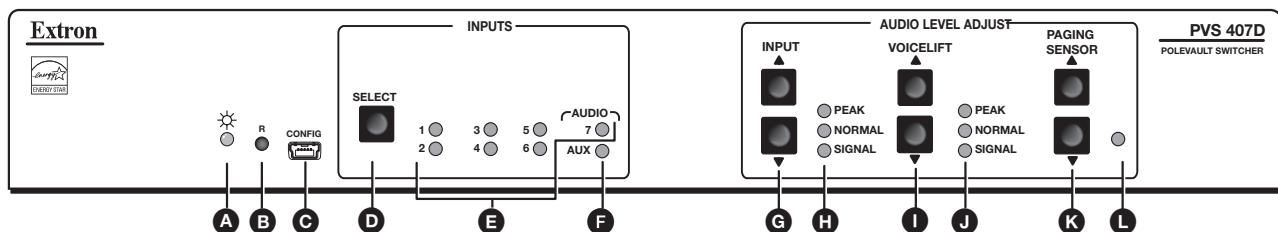


Figure 8. PVS 407D Front Panel Features

Input Selection, Configuration, Status, and Reset	Audio Level Adjustments
A Status LED	G Audio Input adjustment buttons
B Device reset button	H Audio Input adjustment LEDs
C Mini USB Configuration port	I VoiceLift adjustment buttons
D Input selection button	J VoiceLift adjustment LEDs
E Inputs 1 to 7 status LEDs	K Paging Sensor adjustment buttons
F Aux Input status LED	L Paging Sensor indication LED

Front Panel Features

- **A Status LED** — This LED lights green when the unit is powered up, and amber when it is in power save mode.
- **B Device Reset button** — Pressing this inset button resets the switcher to default settings. There are three reset modes (see **Resetting the Switcher** on page 12 for details).
- **C Front panel mini USB configuration port** — Connect a computer to this mini USB port (cable not supplied), for device configuration, control, and upgrading the firmware.
- **D Input selection button** — Pressing this toggles through and selects inputs 1 to 7 and the Aux input.

E **Input selection LEDs (1 to 7, Aux)** (see **figure 8** on page 10) — The applicable input LED lights green when that input is selected and active.

- **Inputs 1 to 4** — Inputs 1 through 4 are HDMI with embedded audio, or high resolution RGB signals input via the PVT wallplates. The analog RGB signal is digitized at the wallplate.
- **Inputs 5 and 6** — Inputs 5 and 6 are HDMI source inputs (such as Apple TV or an Extron ShareLink device) with embedded audio.
- **Input 7** — Input 7 is a dedicated audio-only input for an auxiliary, stereo, line-level analog audio signal from a source such as an iPod device or an MP3 player.

NOTE: No video signals are supported on input 7.

F **Aux Input** — This input is mono analog audio only.

G **Audio input level adjustment buttons** — Use these buttons to adjust the input levels in 1 dB steps (-18 to +24 dB, default is 0 dB).

H **Audio input level adjustment LEDs** — These three LEDs (peak, normal and signal), indicate the active audio level (see **Setting Up and Optimizing the Audio** on page 15 for details).

I **VoiceLift level adjustment buttons** — These allow the user to adjust the level of the VoiceLift (microphone) input level in 1 dB steps. The VoiceLift Microphone Receiver input range is from -18 dB to +24 dB, default is 0 dB.

J **VoiceLift level adjustment LEDs** — These three LEDs indicate the active audio level (peak, normal, and signal).

K **Paging Sensor sensitivity adjustment buttons** — These allow the user to adjust the paging sensor sensitivity level for the optional Page Sensor.

L **Paging Sensor indication LED** — This LED lights amber during paging system broadcasts.


Front Panel Operation

NOTE: See the **Front Panel Overview** on page 10 for the location of input buttons, adjustment buttons, LEDs, and configuration port.

- To change inputs, toggle the input **Select** button **D**, 1 through 6 (video and audio), or input 7 (mono audio only).
- To adjust audio input levels, press the **Input** adjustment buttons **G** in 1 dB steps (-18 to +24 dB, default = 0 dB).
- To adjust VoiceLift microphone levels, press the **VoiceLift** adjustment buttons **I** in 1 dB steps (-18 to +24 dB, default = 0 dB).

NOTES:

- Front panel LEDs indicate input, aux, and mic levels (see image at right).
- On initial switcher power-up the volume level is automatically adjusted to 80%.

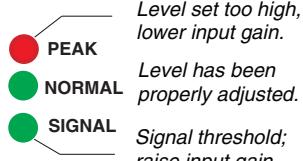

- To adjust paging sensitivity, press the **Paging Sensor** sensitivity buttons **K** to increase or decrease sensitivity (default setting is 50).

Configuration

The PVS 407D switcher can be controlled by a MediaLink Controller (MLC) or by an RS-232 device acting through the MLC. Alternatively, the switcher can be set up and controlled via a host computer or other device (such as a control system) attached to the front panel USB connector or direct connection to the Ethernet, or to the rear panel RS-232 remote port of the switcher.

The control device (host) can use either the SIS commands or use the Extron Product Configuration Software (PCS).

NOTE: See [SIS Communication and Control](#) starting on page 19 for a full list of the relevant SIS commands.

Firmware updates (using Firmware Loader or PCS) can be made via the front panel USB port or a TCP/IP connection over the network.

Resetting the Switcher

The switcher can be reset to the factory defaults using PCS software or SIS commands, when connected via the front panel USB, rear panel RS-232, or TCP/IP (LAN connection).

The reset button on the front panel (see [figure 8](#) on page 10) is a small recessed switch that allows the user to put the switcher into any one of three different reset modes. The PVS 407D switcher reset modes are:

- **Mode 1:** If the reset button is held down while the switcher is being powered up, the switcher runs the base factory firmware instead of any newer version that was loaded after it shipped.
- **Mode 4:** If the reset button is held down long enough for the [Status LED](#) to blink twice (about 6 seconds), then released and momentarily pressed again (within 1 second), the switcher resets all of its IP settings including IP address, subnet mask, gateway address, and port maps. In addition, DHCP is turned off.
- **Mode 5:** If the reset button is held down long enough for the [Status LED](#) to blink three times (about 9 seconds), then released and momentarily pressed again (within 1 second), the switcher resets all its settings (switcher AV & IP settings) back to factory default condition. All files (including audio files) are removed/ cleared. This reset mode is equivalent to [SIS command ZQQQ](#).

NOTES:

- If the second momentary press does not occur within 1 second, the reset procedure is aborted.
- SIS commands [ZXXX](#), [ZY](#), and [ZQQQ](#) resets also reset the connected wallplate(s).
- It takes approximately 4 seconds for the connected wallplate(s) to fully boot up after a reset.

Enabling and Activating LinkLicense

Refer to [LinkLicense](#) starting on page 73 to enable and activate the Audio Decoding LinkLicense through the PVS 407D internal webpage. A few things to consider:

- **PVS 407D Audio Decoding LinkLicense** – The PVS 407D switcher must have firmware 5.00 or above with the Audio Decoding LinkLicense, part 79-2558-01, enabled to directly playback bells and announcements from GlobalViewer Campus Communication Suite server version 2.0.0.
- **Audio Stream Settings** – The Audio Stream settings on the PVS 407D default webpage will be disabled until the PVS 407D Audio Decoding LinkLicense is applied to the switcher. With the LinkLicense successfully added, audio stream settings are accessible. IP address and UDP port settings should be coordinated with your GlobalViewer Campus Communication Suite and network administrators for proper operation.

Should you still need help with LinkLicense activation, please contact your Extron Support Representative.

Front Panel Security Lockout (Executive Mode)

To prevent accidental or unauthorized changes to settings, the PVS switcher has a front panel security lockout (executive mode) that limits access to front panel controls.

When the front panel security lockout mode is active, all front panel functions are locked except the reset button. This mode can also be turned on or off via an SIS command (see [Front panel lockout mode \(executive mode\)](#) on page 25).

All the input LED indicators light up for one second to indicate that executive mode has been enabled or disabled.

To turn executive mode on or off via the front panel:

1. Press and hold the input **Select** button until all input LEDs blink (approx. 8 seconds).
2. Release the button. The LEDs go out except for the currently selected input. The switcher has enabled or disabled the executive mode.

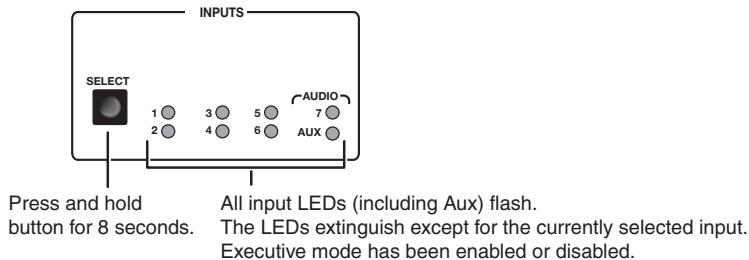


Figure 9. Setting the Executive Mode via the Front Panel

This mode can also be turned on or off through PCS software, TCP/IP, USB, or RS-232 control.

For details, see [SIS Communication and Control](#) on page 19 or [Using the Extron Product Configuration Software](#) on page 37.

Power Save Modes

The PVS 407D is an ENERGY STAR® qualified device, and has five Power Save modes, (see table below for mode descriptions and **Power save mode** on page 25.

Mode	Type	Activation	Device and System power	Wake-up trigger	Setup Command
0	Normal	None	Fully powered. Status LED is green.	N/A	Default state, SIS command reset
1	Auto Power Save	Timed after setup. If no audio and video signal (from inputs 1 to 6) or audio signal (from switchable program inputs, Aux input, and VoiceLift input) is detected for 25 consecutive minutes, mode 2 is enabled.	Amplifier and rest of system is powered until mode 2 is entered. The Status LED is green in mode 1.	An active switchable program audio signal which is referring to selectable inputs 1-7, or when an input is switched, or if the volume is adjusted. The audio timer is reset. Can also be woken by SIS command (resets device to mode 0).	By SIS command or Configuration Software (PCS)
2	Forced Auto Power Save	Instant	Amplifier is off. Rest of system is powered. The Status LED is amber.	If entered from mode 1, can be woken by an active switchable program audio signal which is referring to selectable inputs 1-7, or when an input is switched, or if the volume is adjusted. Reverts to mode 1.	Either from mode 1 or set instantly by SIS command
				If set instantly by SIS command, can only be woken by SIS command, input selection, or volume adjustment. Reverts to the previously set mode (0 or 1).	
3	Forced Standby Power Save	Instant	Amplifier is off. Wallplates off. VLR 102 receiver off. Rest of system is powered. Status LED is amber. On PVS 407D, only USB, RS-232, network switch ports, and input buttons are functional.	Pressing the front input toggle button, or switching the inputs from the attached MLC controller. Reverts to the previously set mode (0 or 1). Can also be woken by SIS command.	SIS command only
4	Forced Network Standby Power Save	Instant	Amplifier is off. Wallplates off. VLR 102 receiver off. Network switch off. Rest of system is powered. The Status LED is amber. On PVS 407D, only USB, RS-232, and input buttons are functional.	Pressing the front input toggle button, or switching the inputs from the attached MLC controller. Reverts to the previously set mode (0 or 1). Can also be woken by SIS command.	SIS command only

NOTE: Front USB and rear remote RS-232 ports are powered and active all the time regardless of the current power save mode.

Setting Up and Optimizing the Audio

The following steps ensure optimal sound is achieved by configuring the switcher. For each step, refer to the sections indicated for more information.

Steps for Optimizing the Audio

1. Ensure all the settings are at default. These are the settings the PVS has upon initial power up. The default settings are as shown below.

- Volume is set at 80%.
- Bass and treble are set at 0 dB.

NOTE: Output volume can be adjusted via USB, Ethernet, RS-232, or configuration software.

2. Ensure that the PVT transmitters are connected to the PVS and that there is an audio input source present at each of the transmitters. Refer to the transmitter user guide for installation and connection information.
3. Ensure a set of speakers is connected to the PVS 407D.
4. Adjust the input gain level for one input through the front panel or by configuration software to a level just below where audio input is peaking (see [Front panel input sensitivity adjustment](#) on page 16 for details). Repeat for all inputs.

NOTE: Adjusting input gain level for all inputs ensures that all inputs are at the same level, and at the highest level possible before peaking occurs. Step 4 ensures that when the volume is at 100% the audio signal is not distorted (clipped).

5. Fine tune the audio by making adjustments to the bass and treble until the desired settings are reached (see [Bass and Treble Control](#) on page 17 for details).
6. The Aux input is selectable for configuration only. To do this, press and hold the **Select** button for 3 seconds until the Aux LED lights. Then increase or decrease using the buttons to the level desired (see [Front panel input sensitivity adjustment](#) for details). Aux input can be adjusted via PCS.
7. Press the **Select** button to exit the Aux adjustment mode.

Gain Control

Individual channel input sensitivity control

Individual channel input gain control adjustments are made by pressing the adjustment buttons for the selected input button. The adjustment range is -18 dB to +24 dB, with the default set at 0 dB.

NOTE: Adjusting input sensitivity for all inputs ensures consistent signal to noise ratios across all inputs.

Front panel input sensitivity adjustment

To make sure the correct input sensitivity is attained, do the following:

For the active input (with the LED lit), press the up ▲ **Input** level adjustment button until the Normal LED is lit and the Peak LED only lights occasionally. Press the down ▼ adjustment button for compensation if the Peak LED stays on too long.

NOTE: Having the audio level beyond the point at which the peak LED flashes results in a distorted output signal (clipping).

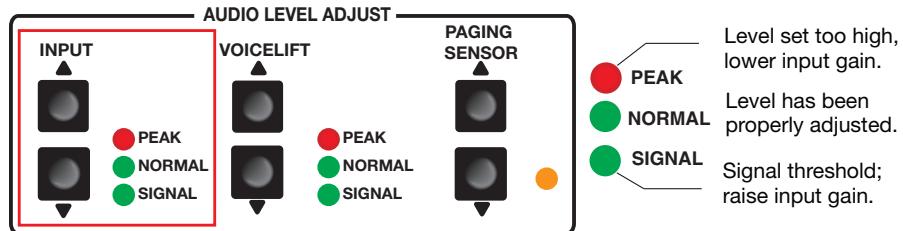


Figure 10. Front Panel Audio Input Peak/Normal/Signal LEDs and Adjustment Buttons

Individual gain adjustment can also be made by configuration software.

Repeat the steps for the other inputs as desired.

NOTE: The Peak, Normal, and Signal LEDs function as the Aux Input level indicator only when the switcher is in the “Aux Adjust” mode.

Bass and Treble Control

For optimum audio quality, the audio input levels and the bass and treble controls must all be set up properly. Input audio levels may need to be adjusted depending on the variation of the output levels from different source devices.

NOTE: By default these levels are set for the consumer product level of -10 dBV.

Bass and treble should be adjusted once the input and output levels have been adjusted. These are adjusted by configuration software only, with a range from -24 dB to +12 dB. By default the bass and treble have been set at 0 dB.

VoiceLift Level Adjustment

To adjust VoiceLift microphone levels, press the **VoiceLift** adjustment buttons (in 1 dB steps) from -18 dB to +24 dB, default is 0 dB.

While speaking into the microphone, increase the gain until the Normal LED is lit and the Peak LED only lights occasionally.

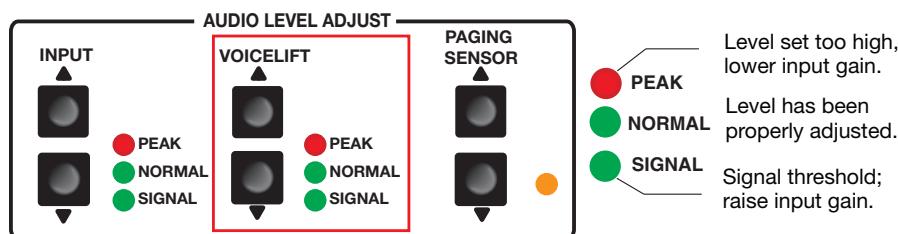


Figure 11. Front Panel VoiceLift Mic Peak/Normal/Signal LEDs and Adjustment Buttons

The VoiceLift Microphone Receiver input signal is not affected by the system volume adjustment and tone control via SIS or an MLC controller attached to the switcher. The VoiceLift audio channel is always active, and it is independent of the selectable audio inputs (1 to 7).

The VoiceLift Receiver Microphone input audio can be heard throughout a presentation, whether or not audio from the selected input (1 to 6) is active or muted.

NOTE: If output audio is muted via the 1Z SIS command, all embedded audio on the HDMI, line out and amplifier outputs is not be heard.

The VoiceLift Microphone input can be muted via a separate SIS command (see **SIS Communication and Control** starting on page 19 for details).

Paging Sensitivity Adjustment

When the Priority Page Sensor is connected to the Priority sensor input on the rear panel, the HDMI output audio, amplified and line out audio outputs are muted during a system announcement. The amber LED indicator lights when an announcement or page is made over the facility PA system.

The PPS 25 Priority Page Sensor works with 25 V/70 V and 4/8 ohms paging systems. The PPS 35 Priority Page Sensor works with any public address system speakers.

To adjust paging sensitivity, use the **Paging Sensor** sensitivity buttons to increase or decrease sensitivity.

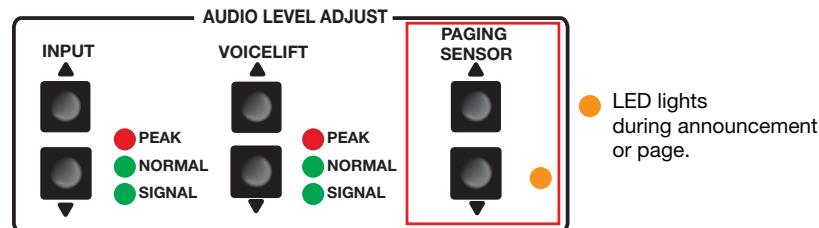


Figure 12. Front Panel Paging Sensor Min/Max LED and Adjustment Buttons

Paging Sensor hold time (see page 32) (1 to 8, in 1 second steps, \emptyset = disabled) can be set via SIS or configuration software. The default = 3 (enabled).

NOTE: The Paging Sensor port must be enabled in order to operate fully.

The paging sensor hold time can be set via SIS or configuration software to ensure the amplified and line out audio outputs stay muted for a specific duration after an announcement or page is finished. This is to prevent the audio being un-muted if the announcer pauses or stops talking while making the announcement or page.

SIS Communication and Control

The switcher can be configured and controlled with Extron Simple Instruction Set (SIS) commands when connected to a host computer or other device (such as a control system). Attach the host device to the rear panel RS-232 connector, the LAN port, or the front panel USB port. Commands can be entered using a Telnet application such as the Extron DataViewer, available at www.extron.com (see the *DataViewer Help* file for more details). This section describes SIS communication and control. Topics in this section include:

- [Host and Switcher Communication](#)
- [SIS Overview](#)
- [System Definitions](#)
- [Command and Response Tables](#)

The switcher uses a protocol of 9600 baud, 1 stop bit, no parity, and no flow control (see [Remote RS-232 control port](#) on page 7).

Host and Switcher Communication

SIS commands consist of one or more characters per field. No special characters are required to begin or end a command sequence. When the switcher determines that a command is valid, it executes the command and sends a response to the host device. All responses from the switcher to the host end with a carriage return and a line feed (CR/LF = ↴), indicating the end of the response character string (one or more characters).

Switcher-Initiated Messages

When a local event such as a front panel selection or adjustment takes place, the PVS 407D responds by sending a message to the host. No response is required from the host. Example switcher-initiated messages are listed here.

- ↴ © Copyright 2019, Extron Electronics, PVS 407D, Vx.xx, 60-1466-01 ↴ (where Vx.xx is the firmware version number and 60-1466-91 is the product number).
- Chn **[x1]** ↴ (where **[x1]** is the input number when an input switches).

Copyright Information

The copyright message is displayed upon connecting to a switcher via TCP/IP or Telnet or via RS-232 after a power cycle.

↳ © Copyright YYYY, Extron Electronics, PVS 407D, Vx.xx, 60-1466-01 ↴ Ddd, DD MMM YYYY HH:MM:SS ↴ (day, date, and time as in Fri, 20 Nov 2015 11:27:33).

Password Information

The ↴ **Password:** prompt requires a password (administrator level or user level) followed by a carriage return. The prompt is repeated if the correct password is not entered. If the correct password is entered, the unit responds with ↴ **Login Administrator** ↴ or ↴ **Login User** ↴, depending on password entered. If passwords are the same for both administrator and user, the unit defaults to administrator privileges.

Error Responses

When the switcher receives a valid command, it executes the command and sends a response to the host device. If the unit is unable to execute the command, it returns an error response to the host.

Error codes

E01 — Invalid input channel	E18 — System/command timed out
E10 — Invalid command	E22 — Busy
E12 — Invalid port number	E24 — Privilege violation
E13 — Invalid parameter	E25 — Device not present
E14 — Not valid for this configuration	E26 — Maximum number of connections exceeded
E17 — System timed out	E28 — Bad filename or file not found

Error response references

These references in the command and response tables note particular error responses to that command.

¹⁴ = Commands that give an E14 (invalid command for this configuration) error if sent to a product whose current configuration does not support the command

²⁴ = Commands that give an E24 (privilege violation) error if not administrator level

²⁸ = Commands that give an E28 (file not found) error

SIS Overview

Using the Command and Response Tables

The **Command and Response Tables** (see page 24) for SIS commands lists the commands that the switcher recognizes as valid, the responses that are returned to the host, a description of the command function or the results of executing the command, and examples of commands in ASCII (Telnet) and URL encoded (Web).

NOTE: Upper and lower case text can be used interchangeably unless otherwise stated.

ASCII to HEX Conversion Table											
space	20	!	21	"	22	#	23	\$	24	%	25
(28)	29	*	2A	+	2B	,	2C	-	2D
Ø	30	1	31	2	32	3	33	4	34	5	35
8	38	9	39	:	3A	;	3B	<	3C	=	3D
@	40	A	41	B	42	C	43	D	44	E	45
H	48	I	49	J	4A	K	4B	L	4C	M	4D
P	50	Q	51	R	52	S	53	T	54	U	55
X	58	Y	59	Z	5A	[5B	\	5C	J	5D
'	60	a	61	b	62	c	63	d	64	e	65
h	68	i	69	j	6A	k	6B	l	6C	f	66
p	70	q	71	r	72	s	73	t	74	m	6D
x	78	y	79	z	7A	{	7B		7C	n	6E
										~	7E
										DEL	7F

Figure 13. ASCII to Hexadecimal Character Conversion Table

System Definitions

● =	Space		
↙ =	Carriage return with line feed		
↖ =	Carriage return with no line feed		
=	Pipe (vertical bar) character (URL equivalent to carriage return)		
[Esc],W =	Escape key, or hex 1B (use W instead of [Esc] at any time)		
14, 24, 28 =	Superscripts indicate the error message displayed if the command is entered incorrectly or with invalid parameters (see Error Responses on page 20).		
[X1] =	Input selection	Video and audio input selection, 1 to 7	
[X2] =	Status	0 = Off/disable/unmute (default for active program, VoiceLift, and Aux) 1 = On/enable/mute (default for embedded HDMI audio out)	
[X3] =	PVT Wallplate type	0 = No PVT wallplate detected 1 = PVT HDMI wallplate detected 2 = PVT HDMI RGB wallplate detected 3 = PVT HD RGB wallplate detected	
[X4] =	Audio input	1 to 7 = Active Program (post switch) 8 = VoiceLift 9 = Aux 10 = Embedded HDMI audio out	
[X5] =	Audio status	Signal detection threshold: 0 = Off (signal level is too low to detect) 1 = On (a signal of at least -60 dBFS is present) Normal range: 0 = Off (input level too low) 1 = On (input is in the right range if at least -30 dBFS is present) Peak level: 0 = Off (audio input has been set up properly) 1 = On (the level or gain is too high, audio clips/distorts when -6 dBFS and above is detected) Adjust the input level so only the Normal LED is blinking (the Peak LED should not turn on).	
[X6] =	Video input selection	Inputs 1 to 6 only	
[X7] =	Video signal status	0 = Video/TMDS signal not detected 1 = Video/TMDS signal detected 2 = Unknown	
[X8] =	Audio format	0 = Analog 1 = Digital	
[X9] =	Audio mute to DSP	0 = Audio unmuted 1 = Audio muted	
[X10] =	Input HDCP status	0 = No video source detected* 1 = Video detected without HDCP (incoming video is not encrypted) 2 = Video detected with HDCP (incoming video is encrypted)	
NOTE: *Video source is active if +5 VDC from the source is present and the incoming TMDS clock is locked.			
[X11] =	HDMI input HDCP Authorization status	0 = Block HDCP encryption 1 = Allow HDCP encryption (default)	
[X12] =	Output HDCP status	0 = No active sink detected** 1 = Non-HDCP sink detected (connected sink is not HDCP compliant) 2 = HDCP sink detected, output not encrypted (connected sink is HDCP compliant. HDCP is not active) 3 = HDCP sink detected, output encrypted (connected sink is HDCP compliant. HDCP is active)	
NOTE: **Sink is active if HPD (hotplug detection) is detected and TMDS clock is terminated.			
[X13] =	EDID in HEX format	128 or 256 Byte EDID raw HEX (text form)	
[X14] =	Native resolution	Native resolution and refresh rate from selected EDID	
[X15] =	HDMI output sync mode	0 = Disable output sync (default) 1 = Enable output sync	
[X18] =	DDC value (EDID emulation or output rate)	(1 to 62), see SIS variables table on page 23	
NOTE: PVS 407D must have firmware version 2.00 or greater for 4K/UHD support on all HDMI inputs.			
[X20] =	Power save mode/ state	0 = auto power save and standby power mode off (power save off) (default) 1 = set auto power save timer running, but not triggered 2 = auto power save on (timer triggered) 3 = standby power save on (turn off all peripheral devices except network switch) 4 = network standby power save on (turn off network switch)	
[X25] =	Output port to play back audio	1 = All 2 = Amplified audio output 3 = Lineout audio output	
[X26] =	Audio file play back mode	0 = Play once 1 to 3 = Play continuously with a -299 second delay between repeats. Send Play command again with mode = to stop audio file playback.	
[X28] =	Audio priority level	0 to 3, optional, with 0 = least. Defaults to 0 if not specified.	
[X29] =	PVT HD RGB or PVT HDMI RGB wallplate inputs (2 and 4 only)	2 = Input 2 4 = Input 4	
[X30] =	Pixel phase	0 to 63 (32 = default)	
[X31] =	Total pixels (phase)	±255 of the default value (depends on input rate)	
[X32] =	Horizontal start	0 to 255 (default midpoint of 128 translates to the default value in the input lookup tables)	

X33	=	Vertical start	Ø to 255 (default midpoint of 128 translates to the default value in the input lookup tables)
X34	=	Status	Ø = Off/disable 1 = On/enable
X35	=	Audio output volume	000 to 100 , (-100 dB to Ø dB), [default 080]
X36	=	Audio filename	Alphanumeric, up to 32 characters (for example, "lunchtime"): <ul style="list-style-type: none"> File name must contain alphanumeric characters. Symbols, special characters and spaces are not allowed except underscore. Valid characters are A-Z, a-z, 0-9 and _ (underscore). The file name can start with a number or underscore. It cannot end with an underscore.
NOTE: The audio file must be in specific audio format type supported by the firmware e.g. 8.0 kHz, 16 bit mono PCM format.			
X37	=	Audible Chime	Ø =Off/disable 1 = On/enable (default) E25 = Device not present/ detected
X38	=	LINK slot 1	Ø =LINK slot 1 is not paired to a microphone or pairing fails 1 = LINK slot 1 is paired microphone 9 = Microphone is on/ connected or LINK slots are occupied and cannot pair.
X39	=	LINK slot 2	Ø =LINK slot 2 is not paired to a microphone or pairing fails 1 = LINK slot 2 is paired 9 = Microphone is on/connected or LINK slots are occupied and cannot pair.
X40	=	VoiceLift VLR 302 relay 1 status	Ø = Off 1 = On
X41	=	VoiceLift VLR 302 relay 2 status	Ø = Off 1 = On
X42	=	VLR 302 firmware version with build	Example response: 1.00.0042 ↵
X43	=	Feedback suppressor	Ø =Off/disable (default) 1 = On/enable E25 = Device not present/ detected
X44	=	Number of connections	Number of open connections
X45	=	Relay status (VLR 102)	Ø = Off 1 = On
X46	=	Contact closure input state (VLR 102)	Ø = Open 1 = Closed
X47	=	VoiceLift status (VLR 102)	Ø = No carrier/microphone is off 1 = Channel A or C 2 = Channel B or D 3 = Channels A or C and B or D
X101	=	Default name	Combination of model name and last 3 hex pairs of MAC address (for example PVS-407D-Ø7-4B-E9)

X102	=	Verbose mode	Ø = Clear/none; 1 = Verbose mode 2 = Tagged responses for queries 3 = Verbose mode, tagged responses for queries
NOTE: If tagged responses are enabled, all read commands return the constant string + the data, like setting the value does. For example: command: [Esc] CN ↵ response: lpn • X106 ↵			
X103	=	Baud rate	Ø = 9600 (Default) 1 = 19200 2 = 38400 3 = 115200
X104	=	Hardware (MAC) address	(00-05-A6-xx-xx-xx)
X105	=	Unit name	Text string up to 24 characters drawn from the alphabet (A to Z), digits (0 to 9), and hyphen (-). No blank or space characters are permitted as part of a name. No distinction is made between upper and lower case. The first character must be an alpha character. The last character must not be a hyphen.
X106	=	Date and time	Set local date and time format (MM/DD/YY:HH:MM:SS) for example, 06/21/15-10:54:00.
X107	=	On/Off status	0=off/disable; 1=on/enable
X108	=	Password	Password: maximum length is 12 characters. All human-readable characters are permitted except "/", "\", "[", "]", " ", and "*". Passwords are case-sensitive and cannot be a single space.
NOTE: A user password cannot be assigned if an admin password does not exist and the switcher returns the error code "E14". If admin password gets cleared, then user password is also removed.			
X109	=	IP address (xxx.xxx.xxx.xxx)	Leading zeros in each of 4 fields are optional in setting values, and are suppressed in returned values. Factory default IP address: 192.168.254.254
X110	=	Subnet mask (xxx.xxx.xxx.xxx)	Leading zeros in each of 4 fields are optional in setting values, and are suppressed in returned values. Default subnet mask: 255.255.0.0
X111	=	Gateway address (xxx.xxx.xxx.xxx)	Leading zeros in each of 4 fields are optional in setting values, and are suppressed in returned values. Default gateway address: Ø.Ø.Ø.Ø
X112	=	GMT offset	Greenwich Mean Time (GMT) offset value (-12:00 to 14:00). This represents hours and minutes (hh:mm) offset from GMT.
X113	=	Prefix (subnet mask bits)	Subnet 255.255.Ø.Ø is represented as a prefix value by /16.

SIS X18 variables for EDID resolution/refresh rate combination (where X18 = 1 through 62)												
Analog						Digital						
Resolution	Refresh (Hz)	Rate Type	Video Format	Audio Format	X18	Resolution	Refresh (Hz)	Rate Type	Video Format	Audio Format	X18	
800x600	60	PC	VGA	N/A	1	800x600	60	PC	HDMI	2-ch	33	
1024x768	60	PC	VGA	N/A	2	1024x768	60	PC	HDMI	2-ch	34	
1280x720	60	PC	VGA	N/A	3 ^a	1280x768	60	PC	HDMI	2-ch	35	
1280x768	60	PC	VGA	N/A	4	1280x800	60	PC	HDMI	2-ch	36	
1280x800	60	PC	VGA	N/A	5	1280x1024	60	PC	HDMI	2-ch	37	
1280x1024	60	PC	VGA	N/A	6	1360x768	60	PC	HDMI	2-ch	38	
1360x768	60	PC	VGA	N/A	7	1366x768	60	PC	HDMI	2-ch	39	
1366x768	60	PC	VGA	N/A	8	1400x1050	60	PC	HDMI	2-ch	40	
1400x1050	60	PC	VGA	N/A	9	1440x900	60	PC	HDMI	2-ch	41	
1440x900	60	PC	VGA	N/A	10	1600x900	60	PC	HDMI	2-ch	42	
1600x900	60	PC	VGA	N/A	11	1600x1200	60	PC	HDMI	2-ch	43	
1600x1200	60	PC	VGA	N/A	12	1680x1050	60	PC	HDMI	2-ch	44	
1680x1050	60	PC	VGA	N/A	13	1920x1200	60	PC	HDMI	2-Ch	45	
1920x1080	60	PC	VGA	N/A	14 ^b	2048x1080	60	PC	HDMI	2-Ch	46	
1920x1200	60	PC	VGA	N/A	15	480	60	HDTV	HDMI	2-Ch	47	
2048x1080	60	PC	VGA	N/A	16	576p	50	HDTV	HDMI	2-Ch	48	
800x600	60	PC	DVI	N/A	17	720p	50	HDTV	HDMI	2-Ch	49	
1024x768	60	PC	DVI	N/A	18	720p	60	HDTV	HDMI	2-Ch	50 ^x	
1280x720	60	PC	DVI	N/A	19	1080i	50	HDTV	HDMI	2-Ch	51	
1280x768	60	PC	DVI	N/A	20	1080i	60	HDTV	HDMI	2-Ch	52	
1280x800	60	PC	DVI	N/A	21	1080p	50/25	HDTV	HDMI	2-Ch	53	
1280x1024	60	PC	DVI	N/A	22	1080p	50	HDTV	HDMI	2-Ch	54	
1360x768	60	PC	DVI	N/A	23	1080p	60/24	HDTV	HDMI	2-Ch	55	
1366x768	60	PC	DVI	N/A	24	1080p	60	HDTV	HDMI	2-Ch	56 ^y	
1400x1050	60	PC	DVI	N/A	25	4K/UHD	30	HDTV	HDMI	2-Ch	62	
1440x900	60	PC	DVI	N/A	26	Output 1 (Automatic mode)						57
1600x900	60	PC	DVI	N/A	27	User loaded slot 1						58
1600x1200	60	PC	DVI	N/A	28	User loaded slot 2						59
1680x1050	60	PC	DVI	N/A	29	User loaded slot 3						60
1920x1080	60	PC	DVI	N/A	30	User loaded slot 4						61
1920x1200	60	PC	DVI	N/A	31							
2048x1080	60	PC	DVI	N/A	32							

^a Default analog EDID for Firmware version 3.00 or below

^b Default analog EDID for Firmware version 4.00 or below

^x Default digital EDID for Firmware version 2.02 or below

^y Default digital EDID for Firmware version 3.00 or above

NOTE: PVS 407D must have firmware version 2.00 or greater for 4K/UHD support on all HDMI inputs.

Command and Response Tables

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
Input selection			
Select an input	X1 !	Chn X1 ↵	Select video and audio from input X1 .
View current input	! Verbose mode 2/3	X1 ↵ Chn X1 ↵	View current input.
Video mute (output)			
Disable TMDS clock	1B	Vmt 1 ↵	Disable TMDS clock.
Unmute output video	ØB	Vmt Ø ↵	Unmute the output.
View output video mute status	B Verbose mode 2/3	X2 ↵ Vmt X2 ↵	View the mute status on output.
KEY: X1 = Input selection 1 to 7 X2 = Status Ø = Off/disable/unmute (default for active program, VoiceLift, and Aux) 1 = On/enable/mute (default for embedded HDMI audio out)			
Audio mute (output)			
NOTES: <ul style="list-style-type: none"> The 1Z command mutes the embedded audio on the HDMI, line out, and amplifier outputs. If output audio mute is on and input is switched or volume is changed, the switcher is unmuted automatically and sends out the unmute response. Audio file playback is excluded from the Z mute command and cannot be muted. 			
Mute output audio	1Z	Amt 1 ↵	Turn audio mute on.
Unmute output audio	ØZ	Amt Ø ↵	Turn audio mute off.
View output audio mute status	Z Verbose mode 2/3	X2 ↵ Amt X2 ↵	View audio mute status.
Input mute control			
Set input audio mute	Esc X4 * X2 IMUT ↵	Imut X4 * X2 ↵	Set mute control to X4 .
View input audio mute status	Esc X4 IMUT ↵ Verbose mode 2/3	X2 ↵ Imut X4 * X2 ↵	View the audio input mute status. Default is X2 = 0, unmuted.
NOTE: If active program is muted and input is switched or volume is changed, the program audio is unmuted automatically and sends out the unmute response.			
KEY: X2 = Status Ø = Off/disable/unmute (default for active program, VoiceLift, and Aux) 1 = On/enable/mute (default for embedded HDMI audio out) X4 = Audio input selection 1 = Active program (post switch) 8 = VoiceLift 9 = Aux 1Ø = Embedded HDMI audio out			
Output volume			
Set specific volume	X35 V	Vol X35 ↵	Set volume to X35 .
Increment	+V	Vol X35 ↵	Increase volume.
Decrement	-V	Vol X35 ↵	Decrease volume.
View volume	V Verbose mode 2/3	X35 ↵ Vol X35 ↵	View current volume setting.
KEY: X35 = Audio output volume 000 to 100, (-100 dB to Ø dB), [default Ø80]			

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
Front panel lockout mode (executive mode)			
Enable locked mode	1X	Exe1 \leftarrow	Lock the entire front panel.
Disable locked mode	0X	Exe0 \leftarrow	Unlock the front panel.
View status	X	X34 \leftarrow	View the lock mode.
KEY: X34 = Status 0 = Off/disabled (default)		1 = On/enabled	
Power save mode			
Disable power save	Esc 0 PSAV \leftarrow	PsavX20 \leftarrow	Turns off power save mode, sets timer to zero (default).
Enable auto power save	Esc 1 PSAV \leftarrow	PsavX20 \leftarrow	Timer starts count but is not triggered. Switcher enters auto power save mode if there is no active AV signal for 25 minutes.
Force auto power save on	Esc 2 PSAV \leftarrow	PsavX20 \leftarrow	Turns on auto power save mode.
Force standby power save on	Esc 3 PSAV \leftarrow	PsavX20 \leftarrow	Turns on standby power mode.
Force network standby power save on	Esc 4 PSAV \leftarrow	PsavX20 \leftarrow	Turns on standby power mode (network switch off).
View setting	Esc PSAV \leftarrow	X20 \leftarrow	View power save status.
		Verbose mode 2/3	PsavX20 \leftarrow
KEY: X20 = Power save mode		0 = auto power save and standby power mode off (power save off) (default) 1 = set auto power save timer running, but not triggered 2 = auto power save on (timer triggered) 3 = standby power save on (turn off peripheral devices except network switch) 4 = network standby power save on (turn off network switch)	
Device information requests			
View fan status	21S	X34 \leftarrow	View status of internal fan.
	Verbose mode 2/3	Sts21*X34 \leftarrow	
View switchable Signal, Normal, and Peak status	1S	SigX34•NormX34•ClpX34 \leftarrow	View switchable audio Signal, Normal, and Peak status.
	Verbose mode 2/3	Sts01*SigX34• NormX34•ClpX34 \leftarrow	
View VoiceLift receiver Mic input Signal, Normal, and Peak status	4S	SigX34•NormX34•ClpX34 \leftarrow	View VoiceLift receiver Mic input Signal, Normal, and Peak status.
	Verbose mode 2/3	Sts04*SigX34• NormX34•ClpX34 \leftarrow	
View Aux input Signal, Normal, and Peak status	5S	SigX34•NormX34•ClpX34 \leftarrow	View Aux input audio Signal, Normal, and Peak status.
	Verbose mode 2/3	Sts05*SigX34• NormX34•ClpX34 \leftarrow	
View video signal presence	Esc LS \leftarrow	X7•X7•X7•X7•X7•X7 \leftarrow	View which input video signals are present for inputs (L-R, Inputs 1 to 6).
	Verbose mode 2/3	SigX7•X7•X7•X7•X7•X7 \leftarrow	
KEY: X7 = Video signal status 0 = Video/TMDS signal not detected		1 = Video/TMDS signal detected 2 = Unknown	
KEY: X34 = Status 0 = Off/disable		1 = On/enable	

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
View detected audio format	[Esc] 40STAT ←	X8 ←	View detected audio input format for selected input.
	Verbose mode 2/3	40Stat • X6 * X8 ←	
View PVS 407D serial number	19I	<Extron serial number> ← Inf19* <Extron serial number> ←	
View PVT wallplate type	35I	PVTplate X3 • X3 ←	Identify wallplate type; PVT (plate 1) • (plate 2).
Query both LINK statuses	38I	X34 • X34 ←	Query LINK; PVT In (port 1) • (port 2).
	Verbose mode 2/3	Inf38 * X34 • X34 ←	
View audio mute to DSP	40S	X9 ←	Unmutes when 2-Chn PCM is available only. Mutes when other formats are available.
	Verbose mode 2/3	Sts40 * X9 ←	
View paging sensor status	42S	X34 ←	View the priority paging sensor status.
	Verbose mode 2/3	Sts42 * X34 ←	

KEY:	X3 = PVT wallplate type	Ø = No PVT wallplate detected	2 = PVT HDMI RGB wallplate detected
		1 = PVT HDMI wallplate detected	3 = PVT HD RGB wallplate detected
	X6 = Video inputs	Inputs 1 to 6 only	
	X8 = Audio format	Ø = Analog	1 = Digital
	X9 = Audio mute to DSP	Ø = Audio unmuted	1 = Audio muted
	X34 = Status	Ø = Off/disable	1 = On/enable

EDID Minder (VGA and HDMI)

Assign EDID to input	[Esc] A X6 * X18 EDID ←	EdidA X6 * X18 ←	Assign EDID X18 to input X6 .
View assigned EDID	[Esc] A X6 EDID ←	X18 ←	View the EDID for input X6 .
Save display EDID to custom slot	[Esc] S X18 EDID ←	EdidS X18 ←	Save output EDID to X18 (58 to 61).
View/read EDID in Hex format	[Esc] R X6 EDID ←	X13 ←	View the EDID in Hex format.
View EDID native resolution	[Esc] N X6 EDID ←	X14 ←	View the EDID native resolution for input X6 (for example: 1080x768).
Verbose mode 2/3		EdidN X14 ←	
Import EDID to user slot	[Esc] I X18 , <filename> EDID ←	EdidI X18 ←	Import from <filename> to specified user slot. (X18 = 58 to 61).
Upload file to unit	[Esc] +UFsize , <filename> ←	Up ←	Upload file from PC to <filename> , (where size = 128 or 256).
Export EDID file	[Esc] E X18 , <filename> EDID ←	EdidE X18 ←	Export EDID from specified EDID slot X18 to <filename> .
Send file from unit to PC	[Esc] <filename> SF ←	file data (128 or 256 bytes)	Send <filename> from unit to PC.

KEY:	X6 = Video inputs	Inputs 1 to 6 only
	X13 = EDID in Hex format	128 or 256 Byte EDID raw HEX (text form)
	X14 = Native resolution	Native resolution and refresh rate from selected EDID
	X18 = DDC value (EDID emulation or output rate)	(1 to 62), see SIS variables table on page 22

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
HDCP status			
View input HDCP	[Esc] I [X6] HDCP ←	[X10] ←	View the HDCP status on input [X6] .
	Verbose mode 2/3	HdcpI [X6] * [X10] ←	
View output HDCP	[Esc] O HDCP ←	[X12] ←	View the HDCP status on output.
	Verbose mode 2/3	HdcpO [X12] ←	
View HDCP status for all HDMI inputs	[Esc] I HDCP ←	[X10] * [X10] * [X10] * [X10] * [X10] * [X10] ←	View the HDCP status on inputs 1 to 6.
	Verbose mode 2/3	HdcpI [X10] * [X10] * [X10] * [X10] * [X10] * [X10] ←	
KEY: [X6] = Video inputs [X10] = Input HDCP status [X12] = Output HDCP status (see page 20 for full details)			
		1 to 6 only	
		Ø = No video source detected 2 = Video detected with HDCP (incoming video is encrypted)	1 = Video detected without HDCP (incoming video is not encrypted)
		Ø = No active sink detected 1 = Non-HDCP sink detected	2 = HDCP sink detected, output not encrypted 3 = HDCP sink detected, output encrypted
HDCP authorized setting (valid for HDMI inputs only, to allow or block HDCP input signals)			
Enable HDCP encryption	[Esc] E [X6] * 1 HDCP ←	HdcpE [X6] * 1 ←	Enable HDCP encryption support for input [X6] (default).
Disable HDCP encryption	[Esc] E [X6] * Ø HDCP ←	HdcpE [X6] * Ø ←	Disable HDCP encryption support for input [X6] .
View HDCP encryption status	[Esc] E [X6] HDCP ←	[X11] ←	View HDCP encryption support setting for input [X6] .
KEY: [X6] = Video inputs [X11] = HDMI input HDCP Authorization status			
		1 to 6 only	
		Ø = Block HDCP encryption,	1 = Allow HDCP encryption (default)
HDMI Output Sync mode			
Set output sync mode	[Esc] M [X15] SSAV ←	SsavM [X15] ←	Set HDMI output sync mode to [X15] .
View output sync mode	[Esc] MSSAV ←	[X15] ←	View HDMI output sync mode.
	Verbose mode 2/3	SsavM [X15] ←	
KEY: [X15] = HDMI output sync mode			
		Ø = Disable output sync (default),	1 = Enable output sync
Play audio file			
NOTES:			
<ul style="list-style-type: none"> This command responds with an E28 error (file not found) if the alphanumeric audio file does not exist. This command responds with an E22 error (busy) if the audio file is not played due to low priority. Only one audio file is played at a time. The firmware cannot play audio file 1 on lineout audio output and then start audio file 2 on amplified audio output until lineout audio output finishes audio file 1. Firmware sends out a "Play99" unsolicited response after an audio file is finished playing (after the file playing duration). 			
Play an audio file	[Esc] [X25] * [X36] * [X26] * [X28] PLAY ←	Play [X25] * [X36] * [X26] * [X28] ← PLAY99 ←	Start audio file playback. Unsolicited response (see Note above).
Stop (abort) playback	[Esc] Ø PLAY ←	Play Ø ←	Stop audio file playback.
View play status	[Esc] PLAY ←	Ø ← or [X25] * [X36] * [X26] * [X28] ←	Audio not playing. Audio currently playing.

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
KEY:			
<p>X25 = Output port to play back audio 1 = All 2 = Amplified audio output 3 = Lineout audio output</p> <p>X26 = Audio file playback mode Ø = Play once (or use to stop audio file playback). 1 to 3ØØ = Play continuously (with a Ø to 299 second delay between repeats).</p> <p>X28 = Audio priority level Ø to 3, optional, Ø = least. Defaults to Ø if not specified</p> <p>X36 = Audio filename Alphanumeric filename (see page 21 for details)</p>			
Picture adjustment (PVT HD RGB and PVT HDMI RGB, inputs 2 and 4 only)			
Set pixel phase value	Esc X29 * X30 PHAS ←	Phas X29 * X30 ←	Set pixel phase X30 for X29 .
Increment pixel phase value	Esc X29 + PHAS ←	Phas X29 * X30 ←	Increase pixel phase to X30 for X29 .
Decrement pixel phase value	Esc X29 - PHAS ←	Phas X29 * X30 ←	Decrease pixel phase to X30 for X29 .
View pixel phase value	Esc X29 PHAS ←	X30 ←	View pixel phase X30 for X29 .
		Verbose mode 2/3	Phas X29 * X30 ←
Set total pixel value	Esc X29 * X31 TPIX ←	Tpix X29 * X31 ←	Set total pixels X31 for X29 .
Increment total pixel value	Esc X29 + TPIX ←	Tpix X29 * X31 ←	Increase total pixels to X31 for X29 .
Decrement total pixel value	Esc X29 - TPIX ←	Tpix X29 * X31 ←	Decrease total pixels to X31 for X29 .
View total pixel value	Esc X29 TPIX ←	X31 ←	View total pixels X31 for X29 .
		Verbose mode 2/3	Tpix X29 * X31 ←
KEY:	X29 = PVT HD RGB or PVT HDMI RGB wallplate inputs (2 and 4 only)	2 = Input 2	4 = Input 4
	X30 = Pixel phase	Ø to 63 (32 = default)	
	X31 = Total pixels	±255 of the default value	
Horizontal start (PVT HD RGB and PVT HDMI RGB, inputs 2 and 4 only)			
Set horizontal start value	Esc X29 * X32 HSRT ←	Hsrt X29 * X32 ←	Set horizontal start at X32 for X29 .
Increment horizontal start value	Esc X29 + HSRT ←	Hsrt X29 * X32 ←	Increase horizontal start to X32 for X29 .
Decrement horizontal start value	Esc X29 - HSRT ←	Hsrt X29 * X32 ←	Decrease horizontal start to X32 for X29 .
View horizontal start value	Esc X29 HSRT ←	X32 ←	View horizontal start X32 for X29 .
		Verbose mode 2/3	Hsrt X29 * X32 ←
Set vertical start value	Esc X29 * X33 VSRT ←	Vsrt X29 * X33 ←	Set vertical start at X33 for X29 .
Increment vertical start value	Esc X29 + VSRT ←	Vsrt X29 * X33 ←	Increase vertical start to X33 for X29 .
Decrement vertical start value	Esc X29 - VSRT ←	Vsrt X29 * X33 ←	Decrease vertical start to X33 for X29 .
View vertical start value	Esc X29 VSRT ←	X33 ←	View vertical start X33 for X29 .
		Verbose mode 2/3	Vsrt X29 * X33 ←
KEY:	X29 = PVT HD RGB or PVT HDMI RGB wallplate inputs (2 and 4 only)	2 = Input 2	4 = Input 4
	X32 = Horizontal start	Ø to 255 (default = 128)	
	X33 = Vertical start	Ø to 255 (default = 128)	

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
VoiceLift – VLR 302 and VLR 102			
Request VoiceLift status information (VLR 302)	34I	Rly1[X40]•Rly2[X41]•Pair[X38] [X39]•Ver[X42]← or E25← Inf34*Rly1[X40]•Rly2[X41]• Pair[X38][X39]•Ver[X42]← or Inf34*E25←	View information on VoiceLift status. Device is not present.
	Verbose mode 2/3		Device is not present.
View VoiceLift status (VLR 102)	34I	[X45]•[X46]•[X47]← or E25← Inf34*[X45]•[X46]•[X47]← or Inf34*E25←	View information on VoiceLift status. Device is not present.
	Verbose mode 2/3		Device is not present.
NOTES:			
<ul style="list-style-type: none"> Returns E25 (device not present) when VoiceLift receiver is not detected/ present. <i>Example A: Rly11 Rly20 Pair11 Ver1.00.0002. Example B: Inf34* Rly11 Rly20 Pair11 Ver1.00.0002</i> Switcher sends out the unsolicited responses (with tag) via Ethernet/USB/RS-232 whenever there is any state change on the VoiceLift receiver. 			

KEY:	[X38] = LINK slot 1	\emptyset = LINK slot 1 is not paired or pairing fails. 1 = LINK slot 1 is paired to a microphone. 9 = Microphone is on/ connected or LINK slots are occupied and cannot pair.
	[X39] = LINK slot 2	\emptyset = LINK slot 2 is not paired or pairing fails. 1 = LINK slot 2 is paired to a microphone. 9 = Microphone is on/ connected or LINK slots are occupied and cannot pair.
	[X40] = Relay 1	\emptyset = Off 1 = On
	[X41] = Relay 2	\emptyset = Off 1 = On
	[X42] = Firmware Version	Firmware version info with build. <i>Example response: 1.00.0042</i>
	[X45] = Relay	\emptyset = Off 1 = On
	[X46] = Contact closure input state	\emptyset = Open 1 = Closed
	[X47] = VoiceLift microphone status	\emptyset = No carrier/ microphone is off 2 = Channel B or D 1 = Channel A or C 3 = Channels A or C and B or D←

VoiceLift Pro Microphone Usage			
View microphone usage (hours)	[Esc] USAG←	HHHHH:MM← or E25← or E14←	HHHHH:MM = hours: minutes Device is not present. VLR 102 detected, expected VLR 302.
	Verbose mode 2/3	Usag HHHHH:MM← or Usag*E25← or Usag*E14←	
Reset microphone usage	[Esc] ØUSAG←	UsagØØØØØ:ØØ← or Usag*E25← or Usag*E14←	Reset usage to zero. Device is not present. VLR 102 detected, expected VLR 302.

NOTES:			
<ul style="list-style-type: none"> Maximum hours with five digits from 00000 to 99999 values. Maximum minutes with two digits from 00 to 59 values (ex. 12345:15). Value is capped at 99999:59 and remains until it is reset. Returns E25 (device not present) when VoiceLift receiver is not detected/present. 			

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
VoiceLift Pro Microphone Pairing			
Initiate pairing	[Esc]1PAIR ←	Pair1← Pair[X38][X39]← or Pair*E25← or Pair*E14←	Default is On. Unsolicited response is sent out when one of the LINK slots is successfully paired or pairing fails after 30 second timeout (for example Pair10). Only one microphone can be paired at a time. Device is not present. VLR 102 detected, expected VLR 302.
NOTE: When both LINK slots are occupied, user/ PCS must clear the existing pairing first (0 PAIR) prior to initiate pairing (1 PAIR) otherwise firmware sends out Pair99 response indicating both LINK slots are already occupied.			
Clear pairing	[Esc]ØPAIR ←	Pair0← Pair00← or Pair*E25← or Pair*E14←	Remove all pairing. Unsolicited response sent after the Pair0 response that previous pairing has been successfully cleared. Device is not present. VLR 102 detected, expected VLR 302.
View pairing	[Esc]PAIR ←	[X38][X39]← or E25← or E14← Pair[X38][X39]← or Pair*E25← or Pair*E14←	Indicates whether microphones are paired to each LINK slot. Device is not present. VLR 102 detected, expected VLR 302.
NOTES: <ul style="list-style-type: none"> Example A: Pair99 unsolicited response is sent out when the VLR 302 receiver is unable to enter pairing mode due to an already paired microphone is On and connected, or both LINK slots are already occupied. Example B: Pair11 response indicates that microphones are paired to both LINK slots 1 and 2. User must clear the pairing first (0 PAIR) prior to initiate pairing (1 PAIR) to pair new microphone otherwise firmware sends out Pair99 (see above). 			
KEY: [X38] = LINK slot 1 [X39] = LINK slot 2			
<p>0 = LINK slot 1 is not paired or pairing fails. 1 = LINK slot 1 is paired to a microphone. 9 = Microphone is on/ connected or LINK slots are occupied and cannot pair.</p> <p>Ø = LINK slot 2 is not paired or pairing fails. 1 = LINK slot 2 is paired to a microphone. 9 = Microphone is on/ connected or LINK slots are occupied and cannot pair.</p>			
VoiceLift Pro Chime Setting			
Set audible chime	[Esc]X37CHIM ←	Chim[X37]← or Chim*E25← or Chim*E14←	Default is On. Device is not present. VLR 102 detected, expected VLR 302.
View audible chime	[Esc]CHIM ←	[X37]← or E25← or E14← Chim[X37]← or Chim*E25← or Chim*E14←	View audible chime status. Device is not present. VLR 102 detected, expected VLR 302.
KEY: [X37] = Audible Chime Ø = Off/disable 1 = On/enable (default) E25 = Device not present/detected			

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
VoiceLift Pro Reset			
NOTE: VLR 302 receiver reboots itself after reset is complete.			
Absolute System Reset, but retains microphone pairing	[Esc] V1*0RSTD←	Rstd•v1*0← or Rstd*E25← or Rstd*E14←	Reset the system, but keep pairing. Device is not present. VLR 102 detected, expected VLR 302.
Absolute System Reset	[Esc] V1*1RSTD←	Rstd•v1*1← or Rstd*E25← or Rstd*E14←	Reset to factory default. Device is not present. VLR 102 detected, expected VLR 302.
NOTE: This reset is same as the first reset, except microphone pairing is cleared.			
Reboot Device	[Esc] V1*9RSTD←	Rstd•v1*9← or Rstd*E25← or Rstd*E14←	Device reboot Device is not present. VLR 102 detected, expected VLR 302.
VoiceLift Pro Feedback Suppressor			
Set feedback suppressor	[Esc] X43 FSEN←	Fsen[X43]← or E25← or E14←	Default is Off. Device is not present. VLR 102 detected, expected VLR 302.
View feedback suppressor	[Esc] FSEN←	X43← or Fsen*E25← or Fsen*E14←	View feedback suppressor status. Device is not present. VLR 102 detected, expected VLR 302.
Verbose mode 2/3		Fsen[X43]← or Fsen*E25← or Fsen*E14←	
KEY: [X43] = Feedback suppressor Ø = Off/disable (Default) 1 = On/enable E25 = Device not present/detected			
Special Function Commands			
Set Line out mode			
Set Line out to variable	55*1#	LineOut*1←	Where 1 = variable (default).
Set Line out to fixed	55*2#	LineOut*2←	Where 2 = fixed.
View Line out mode	55#	LineOut*X←	Where X = 1 (variable, default), or 2 (fixed).
Set audio output mode			
Set audio output mode to dual mono	18*1#	PreAmpMod*1←	Where 1 = dual mono (default).
Set audio output mode to stereo	18*2#	PreAmpMod*2←	Where 2 = stereo.
View audio output mode	18#	PreAmpMod*X←	Where X = 1 (dual mono, default) or 2 (stereo).

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
Paging Sensor hold time			
Set Paging Sensor hold time	75*X#	PageDly*X \leftarrow	X = paging hold time in seconds, in 1 second steps. Ø = Ø second (disabled), 1 = 1.Ø, 2 = 2.Ø, ... 8 = 8.Ø seconds; default is 3.0 seconds.
View Paging Sensor hold time			
	75#	PageDly*X \leftarrow	
Paging Sensor sensitivity			
Set Paging Sensor sensitivity	83*X#	PageSen*X \leftarrow	Where X = Ø to 10Ø (paging sensor sensitivity range); default = 5Ø.
View sensitivity	83#	PageSen*X \leftarrow	
RS-232 Serial port parameters			
Configure RS-232 serial port parameters	Esc X103 CP \leftarrow	Ccp X103 \leftarrow	Set the baud rate for the RS-232 port.
View RS-232 serial port parameters	Esc CP \leftarrow Verbose mode 2/3	X103 \leftarrow Ccp X103 \leftarrow	Query the baud rate for the RS-232 port.
KEY: X103 = Baud rate Ø = 960Ø (Default) 1 = 1920Ø 2 = 3840Ø 3 = 11520Ø			
Information request (also see Device information requests on page 25)			
Request A/V input number	I	Vid•X1•Aud•X1 \leftarrow	Reports input number for active video and audio signals.
KEY: X1 = Input selection 1 to 7			
Query model name	1I Verbose mode 2/3	PVS 407D \leftarrow InfØ1*PVS 407D \leftarrow	Reports model name.
Query model description	2I Verbose mode 2/3	PoleVault Digital Switcher with Ethernet Control \leftarrow InfØ2*PoleVault Digital Switcher with Ethernet Control \leftarrow	
Query system-memory usage	3I Verbose mode 2/3	# Bytes Used out of # KBytes \leftarrow InfØ3*# Bytes Used out of # KBytes \leftarrow	
Query user-memory usage	4I Verbose mode 2/3	# Bytes Used out of # KBytes \leftarrow InfØ4*# Bytes Used out of # KBytes \leftarrow	
Query firmware version	Q	x.xx \leftarrow	View firmware version.
Query full firmware version	*Q	x.xx.xxxx \leftarrow	View full firmware version.
Query part number	N Verbose mode 2/3	<part number> \leftarrow Pno<part number> \leftarrow	View the part number.
Query VoiceLift firmware version	34Q Verbose mode 2/3	x.xx.xxxx \leftarrow or E25 \leftarrow Ver34*x.xx.xxxx \leftarrow or Ver34*E25 \leftarrow	View firmware version. E25 = device not present
Query PVT wallplate 1 firmware version	36Q Verbose mode 2/3	x.xx.xxxx \leftarrow or E25 \leftarrow Ver36*x.xx.xxxx \leftarrow or Ver36*E25 \leftarrow	View firmware version. E25 = device not present
Query PVT wallplate 2 firmware version	38Q	x.xx.xxxx \leftarrow or E25 \leftarrow	View firmware version. E25 = device not present

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
	Verbose mode 2/3	Ver38*x.xx.xxxx↵ or Ver38*E25↵	
Query VoiceLift Receiver part number	34N	60-1637-01↵ or 60-938-01↵ or E25↵	View the part number. E25 = device not present
	Verbose mode 2/3	Pno34*<part number>↵ or Pno34*E25↵	
Query PVT wallplate 1 part number	36N	60-1756-03 ↵ or 60-1335-13 ↵ or 60-1270-13 ↵ or E25↵	60-1756-03 = PVT HD RGB 60-1335-13 = PVT HDMI RGB 60-1270-13 = PVT HDMI E25 = device not present
	Verbose mode 2/3	Pno36*<part number>↵ or Pno36*E25↵	
Query PVT wallplate 2 part number	38N	60-1756-03 ↵ or 60-1335-13 ↵ or 60-1270-13 ↵ or E25↵	60-1756-03 = PVT HD RGB 60-1335-13 = PVT HDMI RGB 60-1270-13 = PVT HDMI E25 = device not present
	Verbose mode 2/3	Pno38*<part number>↵ or Pno38*E25↵	
Reset (Zap) command			
Reset all device settings to factory defaults	[Esc] ZXXX ↵	Zpx↵	[Esc] ZXXX command resets all video and audio settings.
Absolute system reset, retain IP	[Esc] ZY ↵	Zpy↵	See Note below.
NOTE: This reset is same as ZQQQ except it excludes IP settings such as IP address, subnet mask, gateway IP address, unit name, DHCP setting, and port mapping (Telnet/Web/direct access) in order to preserve communication with the device. (This reset is recommended after a firmware update.) Also erases file system and passwords.			
Erase all files from flash (user) memory	[Esc] ZFFF ↵	Zpf↵	See Note below.
NOTE: This reset only removes files created in the user space, and includes those created by the backup/restore functions, software configuration tools, EDID settings, image captures, user-supplied HTML files, and so forth. Space being used by firmware for internal operations (such as saving of non-volatile settings) is not removed.			
Absolute system reset	[Esc] ZQQQ ↵	Zpq↵	See Note below.
NOTE: This command resets all device settings to factory default; however, firmware version remains the same.			
IP system reset	[Esc] 1ZQQQ ↵	Zpq1↵	See Note below.
NOTE: This resets only IP settings such as IP address, subnet mask, gateway IP address, unit name, DHCP setting and port mapping (telnet/web/direct access) back to factory defaults.			

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
IP Setup Commands			
Set verbose mode	[Esc] X102 CV \leftarrow	Vrb X102 \leftarrow	Enable or disable verbose mode and tagged responses.
View verbose mode	[Esc] CV \leftarrow	X102 \leftarrow	View the verbose mode.
Set unit name ²⁴	[Esc] X105 CN \leftarrow	Ipne X105 \leftarrow	Set the device name to X105 .
Set unit name to factory default ²⁴	[Esc] CN \leftarrow	Ipne X101 \leftarrow	Reset the device name to the factory default.
View unit name	[Esc] CN \leftarrow	X105 \leftarrow	View the device name.
Set date and time ²⁴	[Esc] X106 CT \leftarrow	Ipt X106 \leftarrow	Set the date and time to X106 .
View date and time	[Esc] CT \leftarrow	X106 \leftarrow	View the device date and time.
View GMT offset	[Esc] CZ \leftarrow	X112 \leftarrow	View the GMT offset.
KEY: X101 = Default name X102 = Verbose mode X105 = Unit name X106 = Date and time X112 = GMT offset E24 - Privilege violation			
Combination of model name and last 3 hex pairs of MAC address (for example PVS-407D-07-4B-E9). Ø = Clear/none, 1 = Verbose mode, 2 = Tagged responses for queries, 3 = Verbose mode and tagged (where additional information responses is provided in response to a query) Text string up to 24 characters drawn from the alphabet (A to Z), digits (0 to 9), minus sign/hyphen (-). No blank or space characters are permitted. Set local date and time format (MM/DD/YY-HH:MM:SS). Greenwich Mean Time (GMT) offset value (-12:00 to 14:00). This represent hours and minutes (hh:mm) offset from GMT.			
Set time zone	[Esc] <zonename> *TZON \leftarrow	Tzon X107 \leftarrow *<description> \leftarrow	Set the time zone.
View time zone	[Esc] TZON \leftarrow	<zonename> *<description> \leftarrow	View the current time zone.
List time zones	[Esc] *TZON \leftarrow	<zonename> *<description> \leftarrow ...<zonename> *<description> \leftarrow	Lists all the time zones.
Set DHCP on ²⁴	[Esc] 1DH \leftarrow	Idh1 \leftarrow	Turn on DHCP.
Set DHCP off ²⁴	[Esc] ØDH \leftarrow	IdhØ \leftarrow	Turn off DHCP (default).
View DHCP mode	[Esc] DH \leftarrow	X107 \leftarrow	View the DHCP setting.
Set IP address ²⁴	[Esc] X109 CI \leftarrow	Ipi X109 \leftarrow	Set the IP address to X109 .
Read IP address ²⁴	[Esc] CI \leftarrow	X109 \leftarrow	View the current IP address.
KEY: X107 = On/Off status 0=off/disable; 1=on/enable X109 = IP address xxx.xxx.xxx.xxx (192.168.254.254 = default)			
Set subnet mask ²⁴	[Esc] X110 CS \leftarrow	Ips X110 \leftarrow	Set the subnet mask to X110 .
View subnet mask	[Esc] CS \leftarrow	X110 \leftarrow	View the subnet mask setting.
Set gateway IP address ²⁴	[Esc] X111 CG \leftarrow	Ipg X111 \leftarrow	Set gateway address to X111 .
View gateway IP address	[Esc] CG \leftarrow	X111 \leftarrow	View the gateway IP address.
KEY: X110 = Subnet address xxx.xxx.xxx.xxx (255.255.Ø.Ø = default) X111 = Gateway address xxx.xxx.xxx.xxx (Ø.Ø.Ø.Ø = default)			

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
Reboot system	[Esc]1B00T ←	Boot1←	Restarts the system after a firmware upgrade (required).
Reboot network	[Esc]2B00T ←	Boot2←	Restarts network (see Note below).
NOTE: Changes made to any TCP/IP settings do not take effect until the reboot network command, [Esc]2B00T is issued.			
Set IP, Subnet, and Gateway (all at once)			
NOTE: Setting any values with the CISG command changes DHCP from on to off (default). Settings take place immediately without the need for [Esc]2B00T .			
Set IP	[Esc]1*[X109]CISG ←	Cisg●1*[X109] / [X113]*[X111]←	1= NIC number.
Set IP/subnet	[Esc]1*[X109]*[X110] ←	Cisg●1*[X109] / [X113]*[X111]←	
or	CISG ←		
Set IP/subnet	[Esc]1*[X109]/[X113] ←	Cisg●1*[X109] / [X113]*[X111]←	
	CISG ←		
Set IP/subnet/Gateway	[Esc]1*[X109]*[X110]*[X111] ←	Cisg●1*[X109] / [X113]*[X111]←	
or	CISG ←		
Set IP/subnet/Gateway	[Esc]1*[X109]/[X113]*[X111] ←	Cisg●1*[X109] / [X113]*[X111]←	
	CISG ←		
View IP/subnet/Gateway (all)	[Esc]1CISG ←	[X109] / [X113]*[X111]←	
KEY: [X109] = IP address <i>xxx.xxx.xxx.xxx (192.168.254.254 = default)</i> [X110] = Subnet address <i>xxx.xxx.xxx.xxx (255.255.0.0 = default)</i> [X111] = Gateway address <i>xxx.xxx.xxx.xxx (0.0.0.0 = default)</i> [X113] = Prefix (subnet mask bits) <i>Subnet 255.255.0.0 is represented as a prefix value by /16.</i>			
Read MAC address	[Esc]CH ← Verbose mode 2/3	[X104] ← Ipho●[X104]←	00-05-A6-xx-xx-xx
View number of Ethernet connections	[Esc]CC ←	[X44] ←	View the number of open connections.
KEY: [X44] = Number of open connections [X104] = Hardware MAC address (00-05-A6-xx-xx-xx)			

Command	ASCII Command (host to switcher)	Response (switcher to host)	Additional Description
Passwords			
Set administrator password	Esc X108 CA←	Ipa• X108 ←	Set the administrator password to X108 .
Read administrator password	Esc CA←	X108 ←	View whether the administrator password exists (see Note below).
NOTE: Reading password: RS-232 and IP connections responds with 4 asterisks (****) if password exists and empty if not, instead of the actual password.			
Reset (clear) administrator password	Esc • CA←	Ipa•←	Reset (clear) the administrator password.
Set user password	Esc X108 CU←	Ipu• X108 ←	Set the user password to X108 .
Read user password	Esc X108 CU←	X108 ←	View whether the user password exists (see Note above).
Reset (clear) user password	Esc • CU←	Ipu•←	Reset (clear) the user password.
KEY: X108 = Password			
<ul style="list-style-type: none"> • Need to be logged in as administrator to perform these tasks. • Maximum length is 12 characters. • All human-readable characters are permitted except “/”, “\”, “ ”, “ “, and “*”. • Passwords are case-sensitive and cannot be a single space. • User password cannot be assigned if no admin password exists, (returns E14). • If admin password gets cleared, then user password is removed too. 			

Using the Extron Product Configuration Software

The Extron PVS 407D Product Configuration Software (PCS) offers another way to control the PVS 407D via USB connection or Ethernet Connection, in addition to using the SIS commands.

This section describes installation and gives a basic overview of the software. The topics include:

- [Installing the Software](#)
- [Starting the PVS 407D Product Configuration Software](#)
- [Using PCS – Device Menu](#)
- [Using PCS – Panel and Pages](#)

The graphical interface includes the same functions as those on the device front panel with additional features that are only available through the software.

The Configuration Software is compatible with Windows XP, Windows 7, Windows 8, and Windows 10. The software program and updates can be downloaded from the Extron web site (www.extron.com).

The software incorporates an embedded product WebHelp file, accessible from the Device Menu (see the [Using PCS – Device Menu](#) on page 40 for method).

Installing the Software

The PCS software can be downloaded from the Extron Website and installed onto the hard drive of a connected PC.

Installation

1. On the Extron website (www.extron.com), select the **Download** tab. The **Download** screen appears.
2. On the **Download** screen, select **Software**.
3. Use the “<” and “>” buttons to navigate to PCS. Clicking **PCS** takes you to the product page. (If PCS is not shown here, click “P” in the alphabet menu to locate the software in the list below it.)
4. Click **Download**. and follow the onscreen instructions.
5. Follow the on-screen instructions to download and install the program on your PC.

Starting the PVS 407D Product Configuration Software

1. Locate and click **C:\Program Files(x86)\Extron\Extron PCS\EAF.exe**. This opens the PCS program.

Alternatively, if an icon was installed on the desktop, PCS can be started by double-clicking on the icon. The **Device Discovery** window opens.

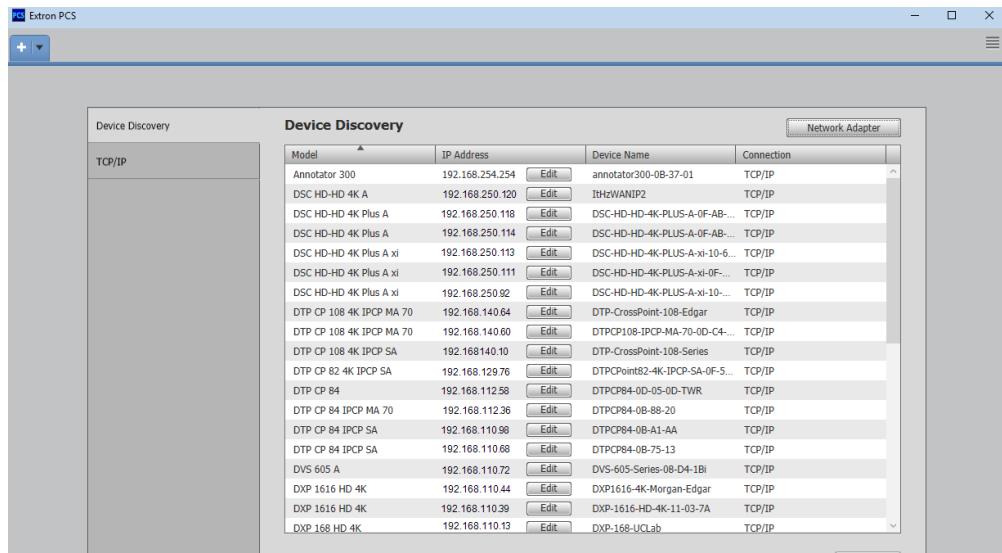


Figure 14. Device Discovery Window

2. Select the desired device either:
 - a. From the **Device Discovery** list by scrolling to the desired device, or
 - b. From the **New Configuration File** tab, by clicking on the drop-down arrow. This opens two menu options: **New Configuration File** and **Open Configuration File**.

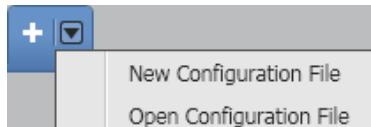


Figure 15. New or Open Configuration File menu

- c. Choose either **New Configuration File** or **Open Configuration File**.

New Configuration File

From the **New Configuration File** device selection list, either enter the model name in the search field and press <Enter>, or scroll down to select the device and click **Configure**.

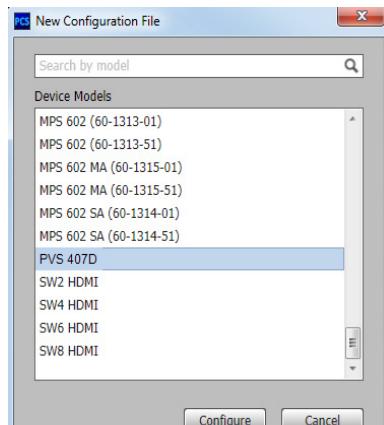


Figure 16. Select the Device from the New Configuration File List.

This opens in offline configuration (emulation mode) and the PVS 407D device input configuration page appears.

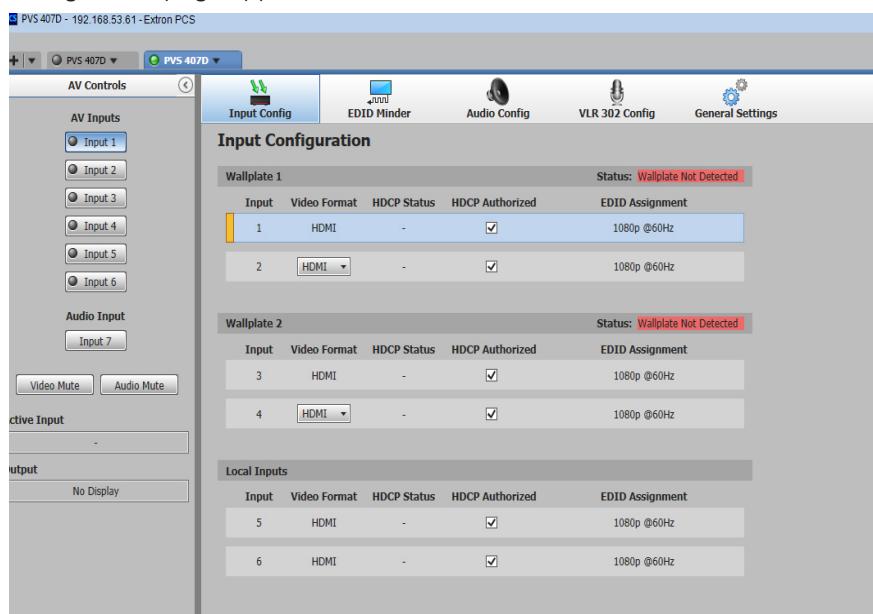


Figure 17. Device Input Configuration Page.

NOTE: The PVS 407D tab (top left) has a gray connection status indicator (circle) that indicates there is no actual device connected and the software is running in emulation mode. When an item on a menu screen is grayed out, that item is not selectable at that time and may only be selectable when in a live (connected) mode.

To configure the emulated device, click the applicable item on the ribbon menu. For menu details see the applicable sections (**Input Configuration**, **EDID Minder**, **Audio Config**, and **General Settings**) within the Help file. See the **Using PCS — Device Menu** section on the next page for how to open the Help file.

Any configurations made in emulation mode can be saved and uploaded to a connected device later (see **Connect to a Device** on page 41 and **Deploy Configuration to Devices** on page 44 for details).

Open Configuration File

From the Open Configuration File window (Open File) (see [figure 14](#) on page 38) navigate to and select the .extc file previously saved on the connected PC.

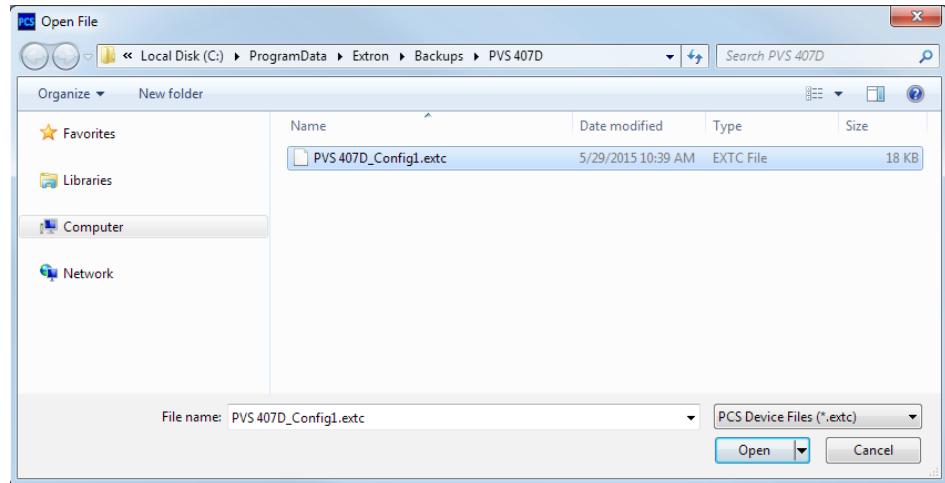


Figure 18. Select the Saved Configuration File.

Click **Open**. This opens in offline configuration (emulation mode) and the PVS 407D device input configuration screen appears (see [figure 16](#) on previous page).

Using PCS – Device Menu

The product tab has a device menu, accessible by clicking on the drop-down arrow on the name tab.

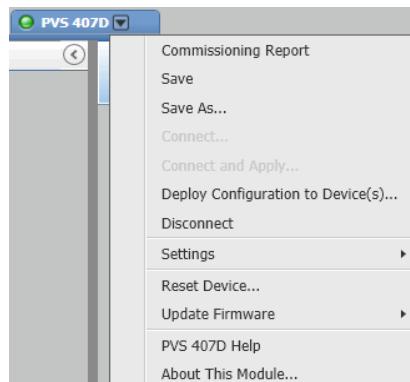


Figure 19. Device Menu

The device configuration items available through this menu are:

Commissioning Report — Allows the user to create and save a commissioning report to aid with troubleshoot device issues.

Save — Saves current configuration file to an existing saved file (.extc file) on the connected PC.

Save As — Saves current configuration file as a new file on the connected PC.

Connect — Connects to a device (via an existing USB connection, TCP/IP, or Pass-thru via MLC connection) and configuration becomes live (see [Connect to a Device](#) on the next page for details).

NOTE: If a device is already connected, the **Connect** option is disabled until the device is disconnected or the connection times out.

Connect and Apply — Connects to a device (via an existing USB connection, TCP/IP, or Pass-thru via MLC connection) and applies the current PCS configuration.

Deploy Configuration to Device(s) — Connects and deploys current configuration to multiple devices simultaneously (see [Deploy Configuration to Devices](#) on page 44 for details).

Disconnect — Disconnects from a connected device.

Settings — This opens to two submenus:

- **Hardware Settings** — Opens the **Hardware Settings** window that accesses a read-only **Unit Information** page and a **Device Name** option page.
- **Communication Settings** — Opens the **Communication Settings** window that allows the user to change the settings for the TCP/IP connection to the device.

Reset Device — Allows the user to reset the device.

Update Firmware — Opens to two submenus to start the update process for either this device or multiple devices.

NOTE: If a device is not connected, the **Disconnect**, **Reset**, and **Update Firmware** options are disabled until the device is connected.

PVS 407D Help File — Opens the device specific Help file. This file opens in a browser and has an embedded PDF file for printing if desired.

About This Module — Opens an information box with module name, version number, and compatible devices details.

For details of these menus see the *PVS 407D Help file*.

Connect to a Device

To connect to the device or re-establish the connection:

1. From the device menu, select **Connect**.... The **Connect** dialog box opens.

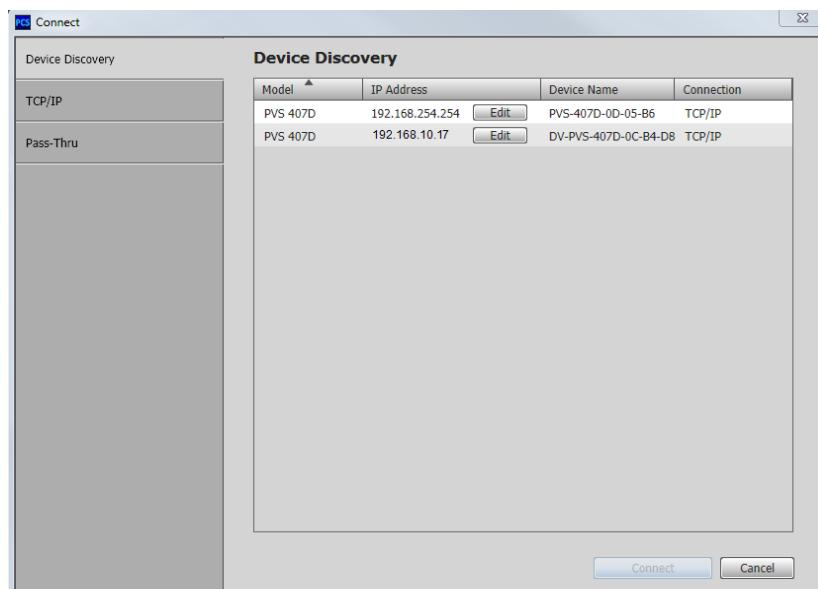


Figure 20. Connect Dialog Box

2. Choose the device from the **Device Discovery** list (TCP/IP or USB connection) or select the **Pass-Thru** tab, depending on the desired connection method. For devices where the IP address is known, but the device is not listed, select the **TCP / IP** tab.

For a USB or TCP/IP connection, select a listed device (see [figure 20](#) on previous page).

For a Pass-Thru connection:

- a.** Click the **Pass-Thru** tab.
- b.** Enter the IP address of the connected MLC. When checked, the **Show Characters** check box allows the user to see the password letters when typed in.
- c.** If applicable, enter the password of the connected MLC.
- d.** Enter the **Telnet Port** for the connected MLC (default is 23).
- e.** Enter the **Pass-Thru Port** number for the connected MLC (default is 2003).

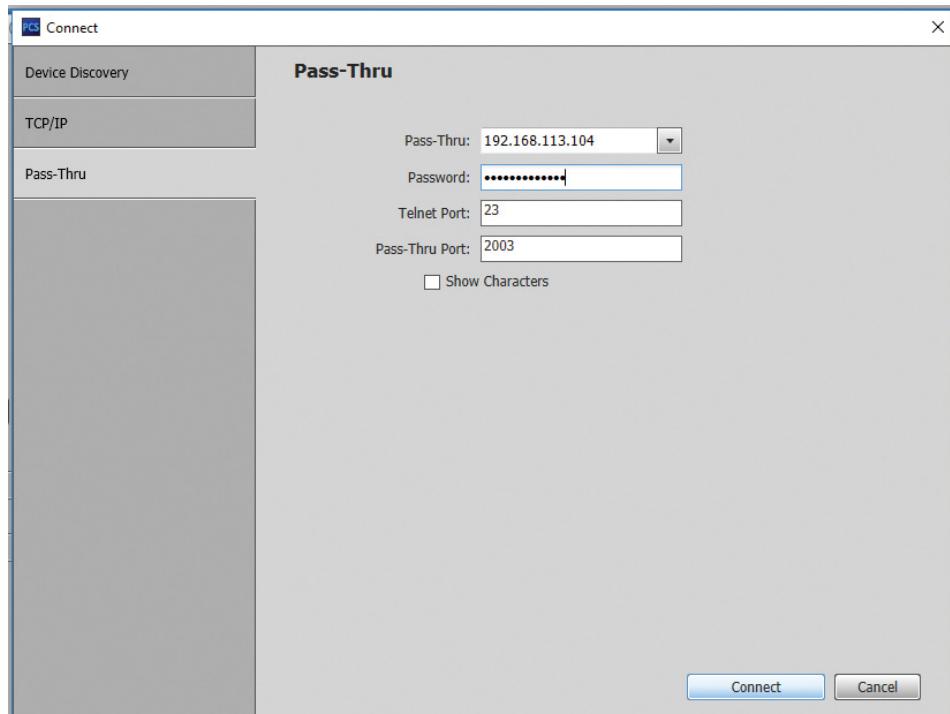


Figure 21. Example Connection via Pass-Thru Option

For a device not listed but where the IP address is known:

- a. Click the **TCP / IP** tab.
- b. Enter the IP address of the PVS 407D.
- c. If applicable, enter the password of the device. When checked, the **Show Characters** check box allows the user to see the password letters **when** typed in.
- d. Enter the Telnet port for the device (default is 23).

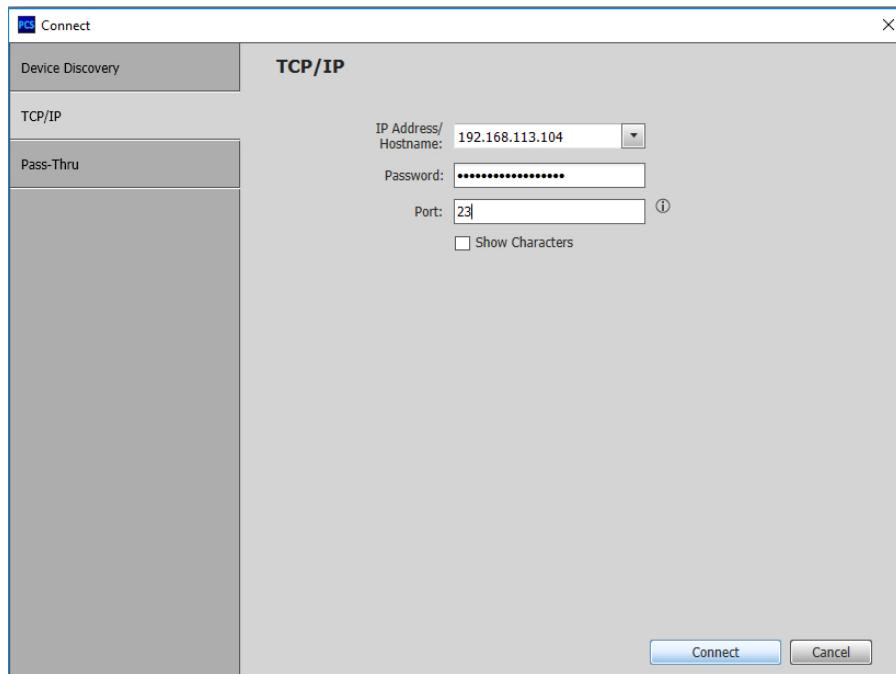


Figure 22. Example Connection Using the TCP/IP Option

For all methods, click **Connect**. The Input Configuration Software window opens.

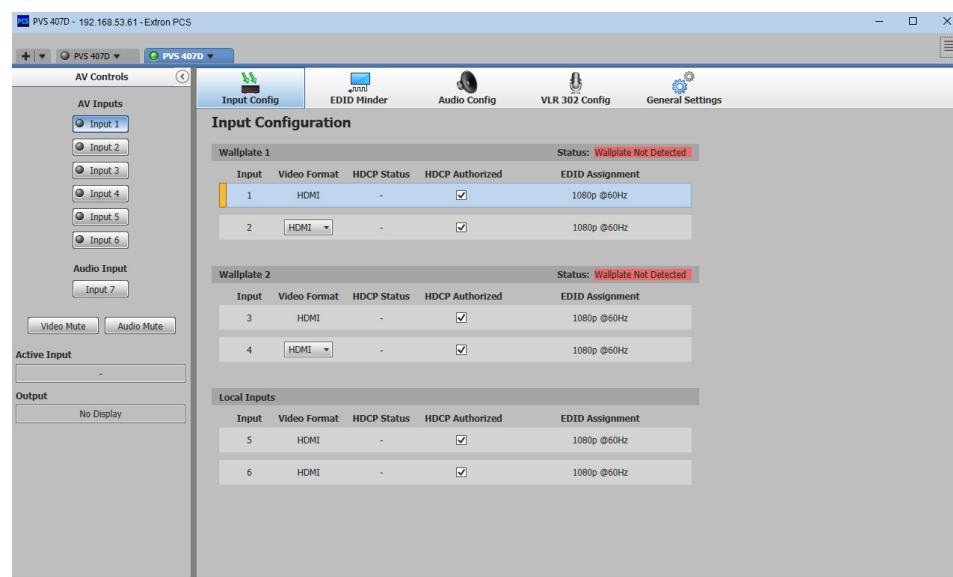


Figure 23. Device Configuration Window for a Connected Device

Deploy Configuration to Devices


The Deploy Configuration to Devices option allows the user to mass deploy the current configuration to multiple PVS 407D switchers simultaneously over the network either via direct connection to the PVS 407D or MLC pass-thru port. In addition it allows the user to save a list of added devices as a manifest file (.mfst extension). This manifest file can be imported for later use without the need to manually reenter details for each device (IP, password and port settings).

The user can connect to a device that is online, or open a new or saved configuration file and deploy the configuration to a single or multiple devices within a room or in group of rooms. See **step 2** in the “Connect to a Device” section, detailing [For a Pass-Thru connection](#): on page 42.


Deployment can be made from an online (live) device configuration, or from an emulation (offline) device configuration.

For deployment configuration:

1. From the drop-down **Device** menu, select **Deploy Configuration to Device(s)**. This opens a **Connection Type** selection window.

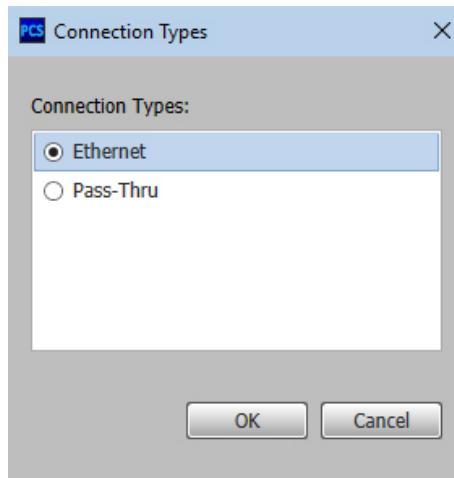

2. Select the appropriate type used, and click **OK**. This opens the **Deploy Options** window.

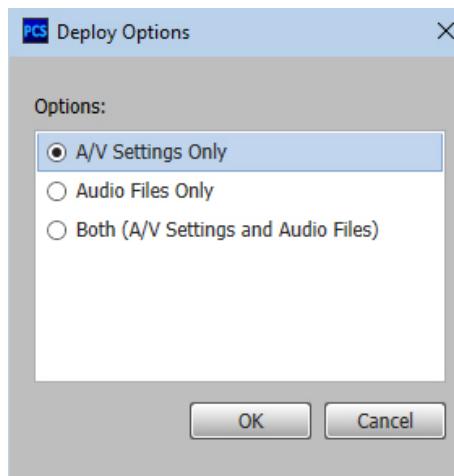

3. Select the appropriate **Deploy Option** used, and click **OK**. This now completes access to the **Deploy Configuration to Device(s)** window (see [figure 24](#) on the next page), where a list of existing devices are shown and new ones can be added and saved for future use.

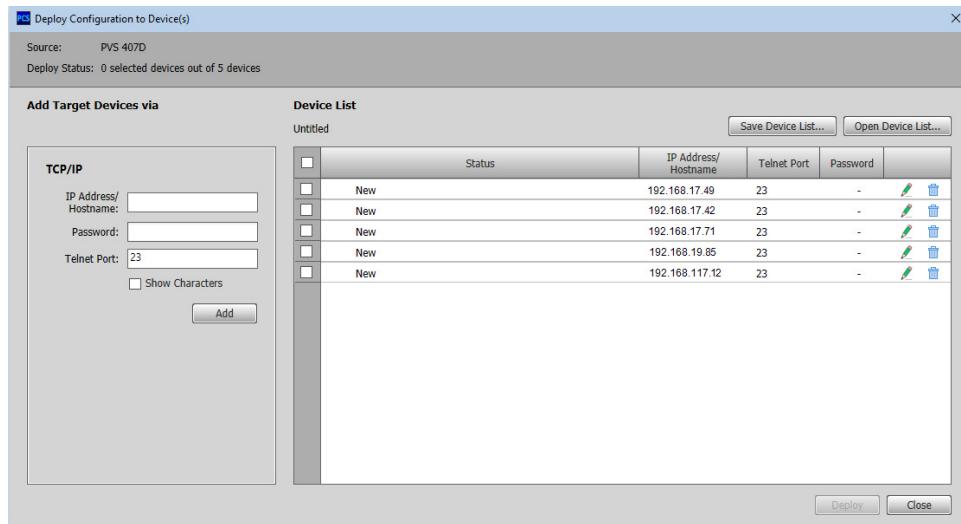


Figure 24. Deploy Configuration to Devices Window

To add devices to the list:

NOTE: The next several figures show the Pass-Thru screen. This occurs when you select **Pass-Thru** in the Connection Types dialog box during previous steps.

1. Enter the IP address, password, and where appropriate Telnet and Pass-Thru details in each field for a desired target device.
2. Click **Add**. The list is populated with the device details.
3. Repeat steps **1** and **2** for each desired target device.

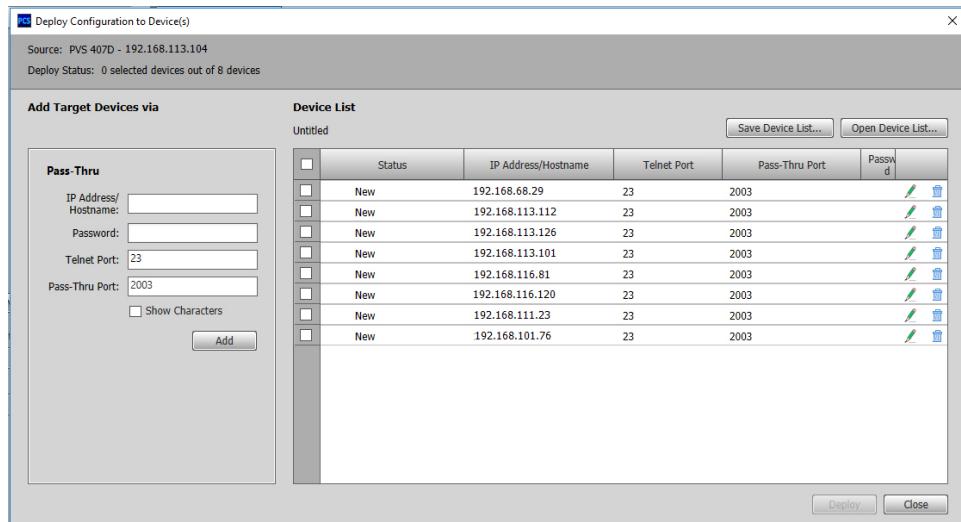


Figure 25. Deploy Configuration to Device Window Populated

Once the list is completed targets can be selected for deployment. As default, all manually-added targets are preselected for deployment and have a check mark to the left of the Device List.

To deploy the configuration to selected target devices:

1. Determine which targets are selected for deployment. Users can uncheck or check the check box column to select which devices they want to push the configuration to.
2. Click the **Deploy** button. The deployment begins, and the window initially updates with the status of the deployment as **Deploying** or **Pending**. A progress bar, at top left, graphs the deployment percentage completed.

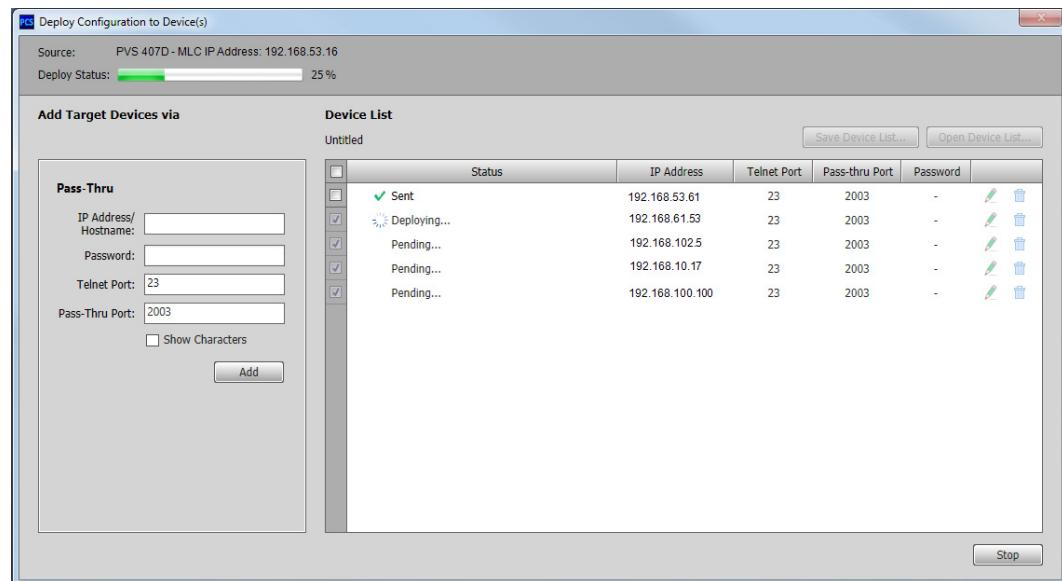


Figure 26. Deployment in Process

When the deployment run is complete, check boxes for any unsuccessful device deployments remaining checked (see **A** and **B** in the figure below). This allows the user the re-deploy the configuration again after making any necessary corrections to the device connection status.

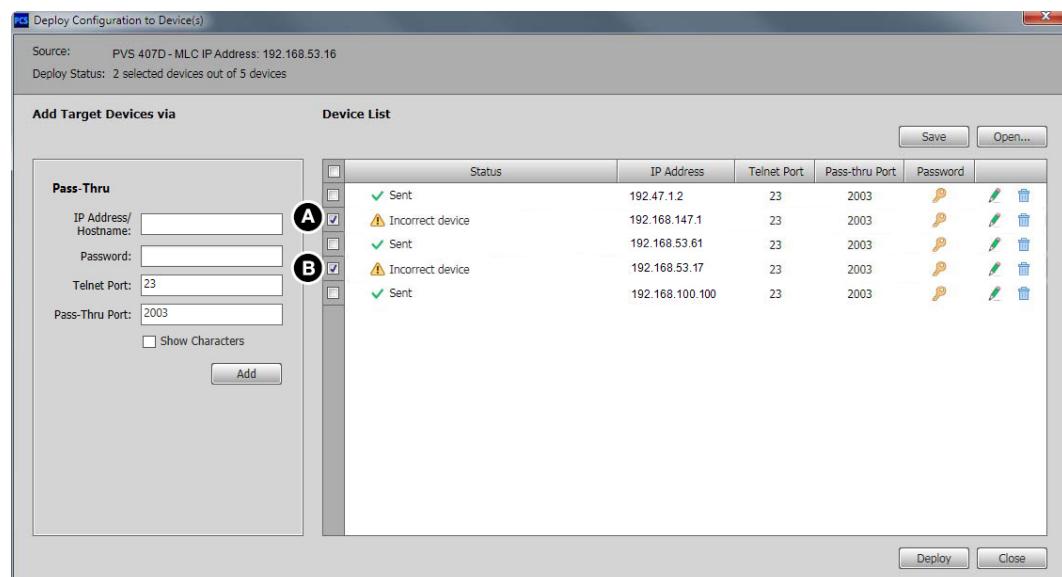


Figure 27. Errors Observed in the Deployment Process

NOTES:

- PCS verifies the correct MLC controller (MLC 104 IP Plus or MLC 226 IP series), the PVS 407D model, Telnet port, pass-thru port and device administrator password for each device in the list upon deploying the configuration. PCS does not push the configuration to the device if one of the above criteria is not valid and this is reflected in the Status column. The user should click the **Edit** icon to correct the settings where needed. See “Deploy Configuration to Devices” in the *PVS 407D Help file* embedded in the PCS software for full details.
- In addition if a device is not connected, not powered, or turned off, a **Device not found** status is returned.

To stop deployment at any time click **Stop** (see **figure 26** on the previous page).

If a configuration has been successfully deployed to a target, the status is appended as "Sent".

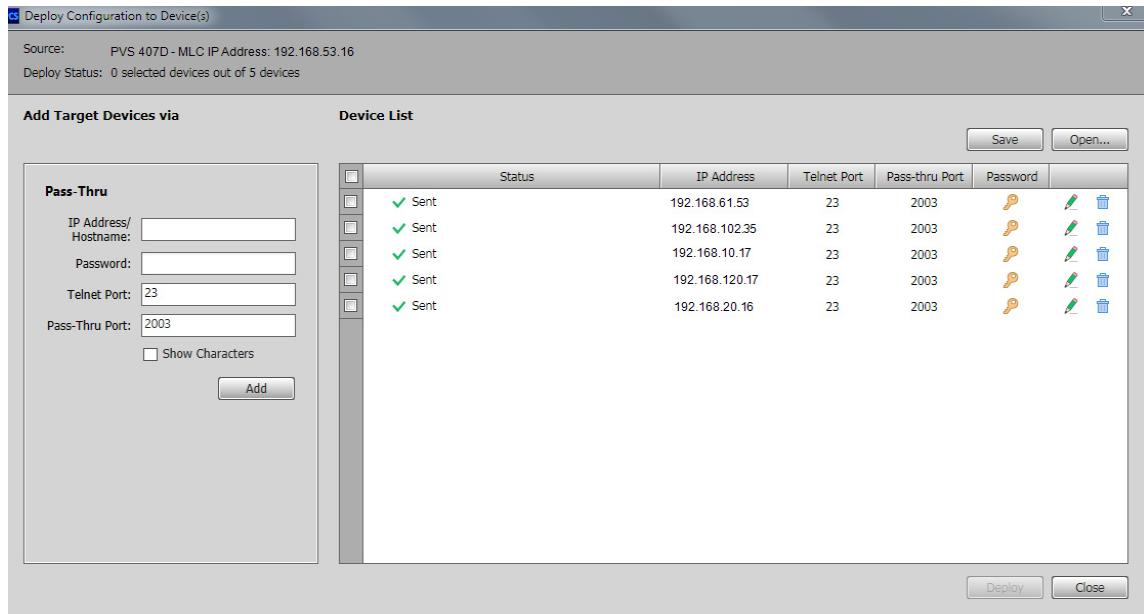


Figure 28. A Typical Successful Deployment Process

When deployment is completed click **Close**. If the list has not been saved, you are prompted to save the list. See *Saving and Opening the List of Target Devices* section in the *PVS 407D Help file* embedded in the PCS software for full details.

Using PCS – Panel and Pages

The browser screen is set out as two sections: **AV Controls** on the left, and the options pages on the right. The **AV Controls** panel, which can be hidden when not needed, and the four pages (**Input Configuration**, **EDID Minder**, **Audio Config**, and **General Settings**) are used for configuring the PVS 407D.

AV Controls Panel

The **AV Controls** panel is used to control AV settings such as input selection or muting video and audio signals. It also displays details about the active input and output.

NOTE: This panel section can be hidden or revealed by clicking on the section handle (see image at right, ①).

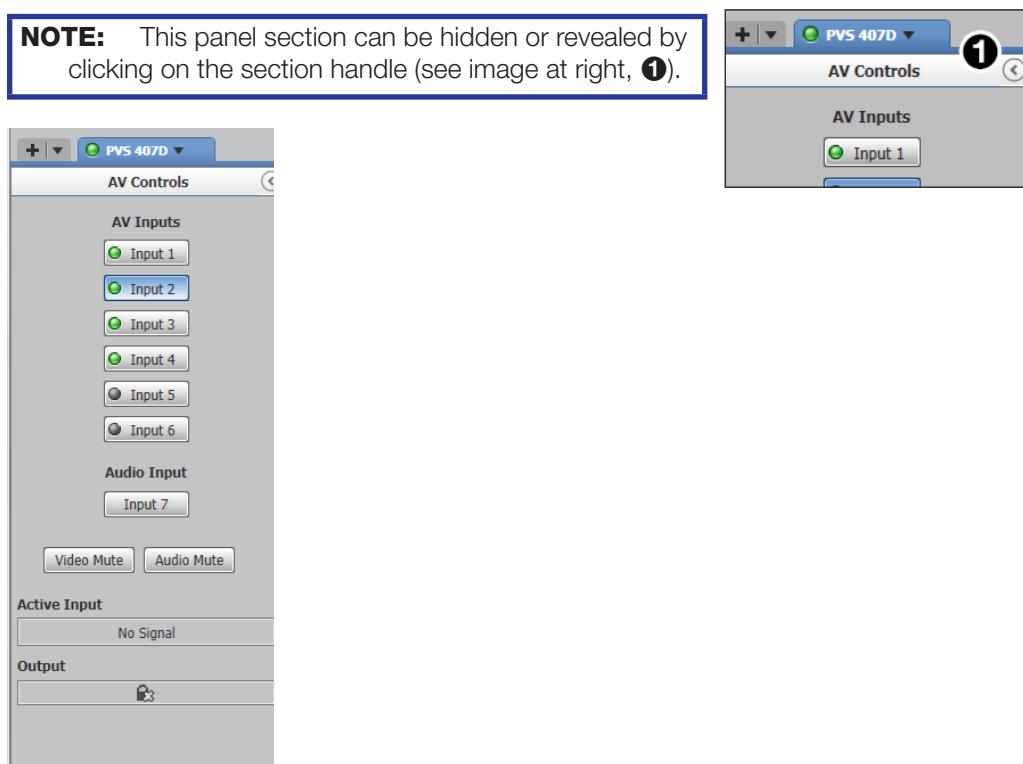


Figure 29. AV Controls Panel

AV input buttons (inputs 1 to 7)

Click these to select an input as desired. As a new one is selected, the summary within the panel changes to reflect the new input and output status. Inputs 1 to 6 are video and audio inputs. Input 7 is audio only and carries no video signal.

Video and audio mute buttons

Select **Video Mute** to mute only the video signal. The button turns red when mute is applied.

Select **Audio Mute** to mute only the audio. The button turns red when mute is applied.

To unmute any signal, click the appropriate button. The button reverts to the default color, indicating the signal has been unmuted.

Configuration Pages

NOTE: Click any icon on the global navigation bar to access the associated page.

The configuration page options are:

- [Input Configuration Page](#)
- [EDID Minder Page](#)
- [Audio Configuration Page](#)
- [VLR 302 Config Page](#)
- [General Settings Page](#)



Figure 30. Global Navigation Bar

Input Configuration Page

Click this button  to open to this page.

Input Configuration panel

The Input Configuration panel consists of fields for each of the inputs. These include; input number, video format, HDCP Status, HDCP Authorized, and EDID assignment. Only HDCP Authorized is configurable.

Input Configuration				
Wallplate 1				
Input	Video Format	HDCP Status	HDCP Authorized	EDID Assignment
1	HDMI	-	<input checked="" type="checkbox"/>	720p @60Hz
2	HDMI	-	<input checked="" type="checkbox"/>	720p @60Hz
Wallplate 2				
Input	Video Format	HDCP Status	HDCP Authorized	EDID Assignment
3	HDMI	-	<input checked="" type="checkbox"/>	720p @60Hz
4	HDMI	-	<input checked="" type="checkbox"/>	720p @60Hz
Local Inputs				
Input	Video Format	HDCP Status	HDCP Authorized	EDID Assignment
5	HDMI	-	<input checked="" type="checkbox"/>	720p @60Hz
6	HDMI	-	<input checked="" type="checkbox"/>	720p @60Hz

Figure 31. Input Configuration Panel

Video Format

For inputs 2 and 4, **HDMI** or **RGB** are the available signal types.

For inputs 1, 3, 5, and 6, **HDMI** is the only available signal type.

HDCP Status

This shows the HDCP signal status for the digital inputs (1 to 6) only.

HDCP Authorized

Select the **HDCP Authorized** check box for inputs 1 to 6 in order to have the input report as an HDCP Authorized device. If the box is not checked, the source is blocked from encrypting its output. This may result in some content not being passed to the output.

NOTE: The **HDCP Authorized** is only available for HDCP inputs.

EDID Assignment

This shows the EDID resolution and rate for the digital inputs (1 to 6) only.

EDID Minder Page

Extron EDID Minder is an EDID management process that automatically manages the EDID information between a digital display device and one or more input sources.

Click this button  to open the EDID Minder page.

From this page an EDID data set can be assigned to any input with an RGB or an HDMI or DVI input type. The currently assigned EDID properties can be viewed and EDID files can be loaded to and from the PVS 407D.

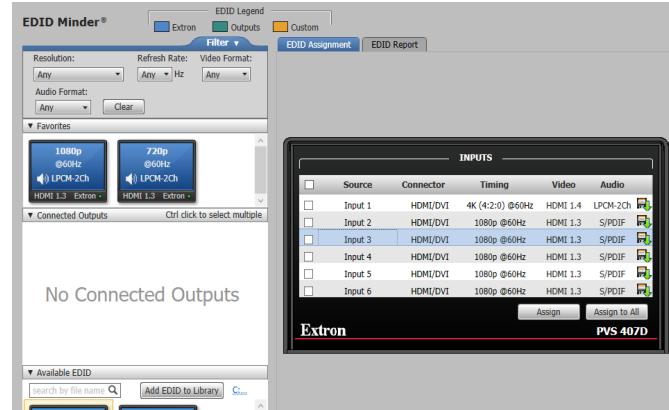


Figure 32. EDID Minder Page

The EDID Minder screen displays a table of EDIDs and connected output devices, grouped as favorites, connected outputs, and available EDIDs. These are visually shown as colored output display icons: factory default EDIDs are blue, connected output devices are green, and custom loaded or saved EDIDs are yellow.

The EDID properties currently assigned to each input are displayed in the table of inputs. Audio and video formats for each input are also displayed. The audio input format listed in an EDID is determined by the Audio Input Format on the **Audio Configuration** page. Video input format is configured on the **Input Configuration** page.

Assigning EDIDs

To assign EDID to selected inputs:

1. From the table, select an available EDID (1) (represented by a blue, green, or yellow output display icon) (see figure 33).
2. From the inputs screen (table of inputs) on the right, select the desired input or inputs (2).
3. Click the **Assign** button (3) to assign EDID to the selected input or inputs.

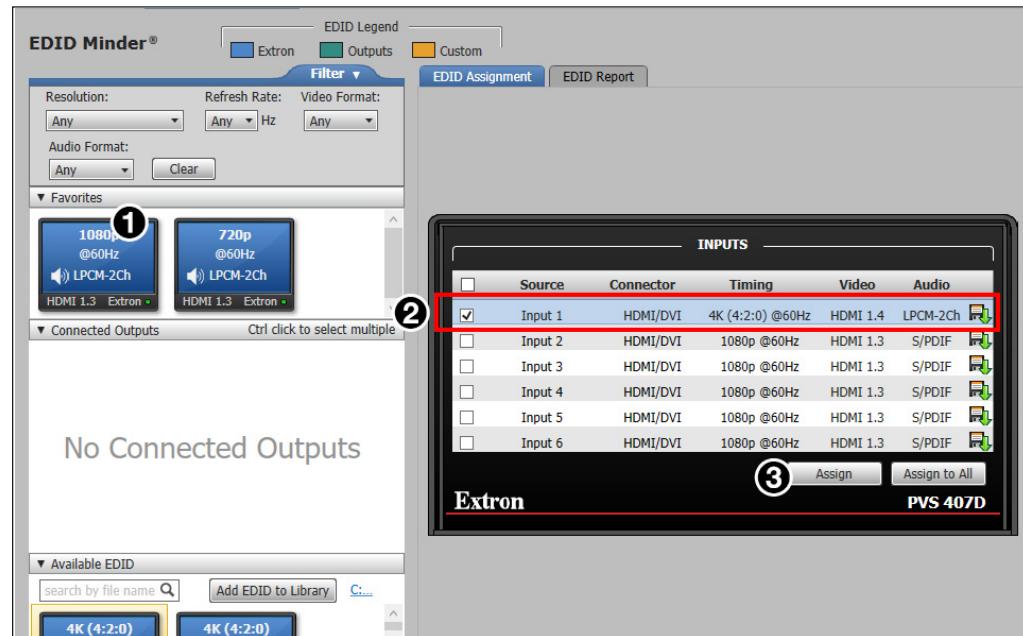


Figure 33. Assigning EDIDs


To assign EDID to all inputs:

1. From the EDID table, select an available EDID (represented by a blue, green, or yellow output display icon).
2. Click the **Assign to All** button.

NOTE: If you select **Assign to All**, all input boxes, checked or unchecked, are ignored and the EDID is assigned to all inputs.

Audio Configuration Page

Using this page each of the audio inputs can be configured, including setting the input format and the gain. The output volume and mode can also be configured. A library of saved audio files can be created and later applied to devices in the system. In addition the Mic, Aux, and Paging input audio settings can be configured.

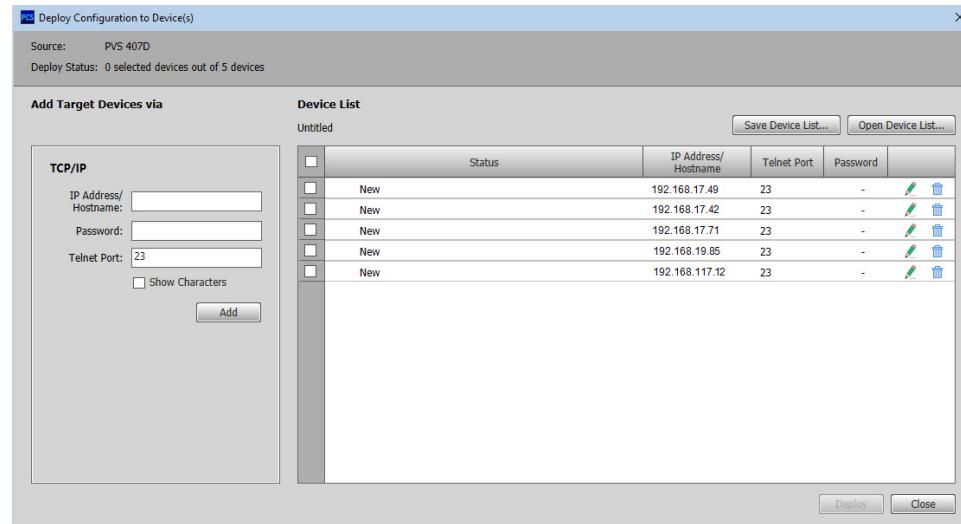

The page has three tabs: **Input/Output**, **Mic/Aux/Paging**, and **Audio Files**.

Click this button  to open the **Audio Configuration** page.

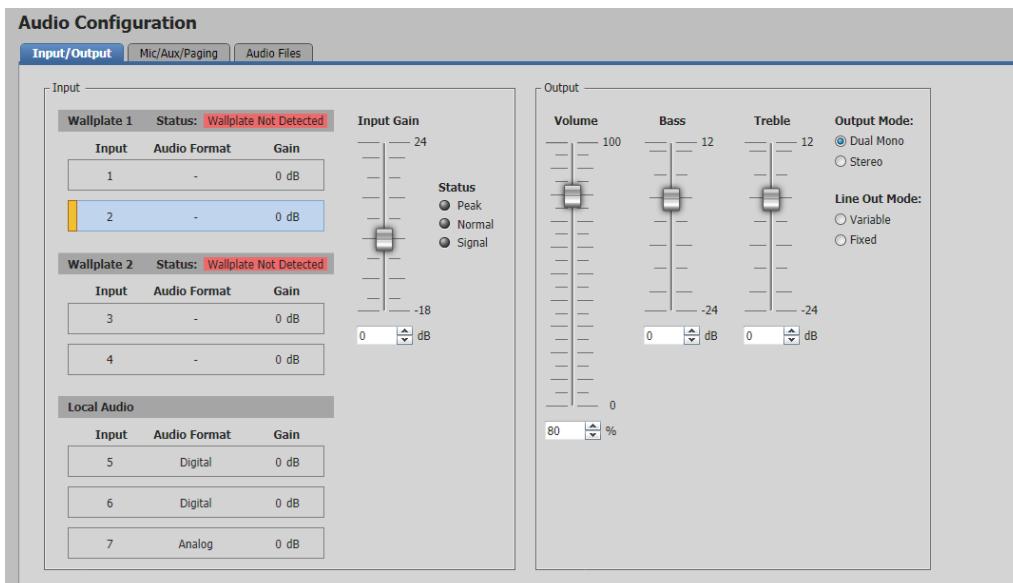


Figure 34. Audio Configuration Page — Input/Output

NOTES:

- For each input that has a gain value, when the input is selected, the current gain value is updated and displayed.
- The input gain setting is also available for adjustment when you are configuring the PVS 407D offline.

Input/Output

To configure audio inputs and outputs:

1. Using the input buttons in the **AV Controls** panel to the left, select the applicable input.
2. Click and drag the handle of the **Input Gain** slider, or click the up ▲ and down ▼ arrows in the field below the slider, or enter a value in the field.

NOTES:

- You can only adjust the gain and attenuation for an input that is in analog or Auto format. Gain only affects analog inputs.
- The Peak, Normal, or Signal LEDs light when each threshold is reached as the input gain is adjusted (see [X5 page 21](#) for details on each type of signal threshold).

3. Click and drag the handle of the **Bass** slider, or click the up ▲ and down ▼ arrows in the field below the slider, or enter a value in the field.
4. Click and drag the handle of the **Treble** slider, or click the up ▲ and down ▼ arrows in the field below the slider, or enter a value in the field.
5. Select the Output mode (**Dual Mono** or **Stereo**) or the Line Out mode (**Variable** or **Fixed**) for volume adjustment.
6. Click and drag the handle of the **Volume** slider or click the up ▲ and down ▼ arrows in the field below the slider, or enter a value in the field.

Mic/Aux/Paging

Using this page to set the input gain, and where desired, ducking can be enabled and settings configured for both VoiceLift and Aux inputs. In addition the Page Sensor sensitivity and hold time can be set from this page.

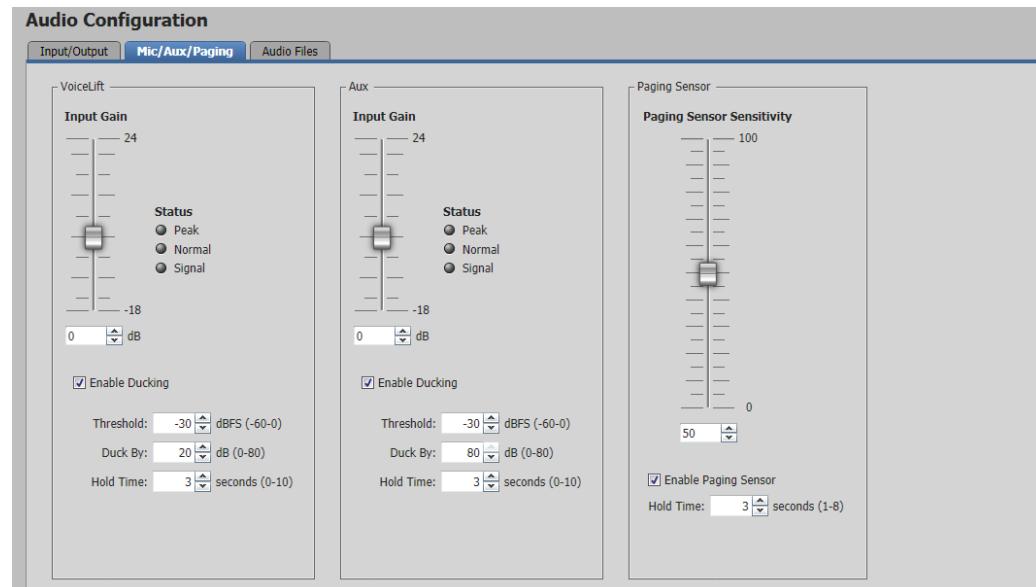


Figure 35. Audio Configuration Page — Mic/Aux/Paging

To set VoiceLift or Aux input gain and ducking settings:

To adjust audio input gain (-18 to +24 dB), click and drag the handle of the **Input Gain** slider, or click the up and down arrows in the field below the slider, or enter a value in the field. The Peak, Normal, or Signal LEDs light when each threshold is reached as the input gain is adjusted (see [X5 page 21](#) for signal thresholds).

To enable and configure set the ducking settings:

1. Select the **Enable Ducking** check box. The ducking setting fields become active.

NOTE: When the **Enable Ducking** check box is left unchecked, then the **Threshold**, **Duck By**, and **Hold Time** settings are grayed out and are not available.

2. To set **Threshold** level, click the up and down arrows in the field, or enter a value. The range is 0 to -60 dBFS.
3. To set the **Duck By** level, click the up and down arrows in the field, or enter a value. The range is 0 to +80 dB.
4. To set the **Hold Time** (in seconds), click the up and down arrows in the field, or enter a value. The range is 0 to 10 seconds.

To set Paging Sensor sensitivity and Hold Time setting:

To adjust Paging Sensor sensitivity (0 to 100):

Click and drag the handle of the **Input Gain** slider, or click the up and down arrows in the field below the slider, or enter a value in the field.

To adjust Paging Sensor Hold Time in seconds:

1. Select the **Enable Paging Sensor** check box. The **Hold Time** field become active.
2. Click the up and down arrows in the field, or enter a value in the field. The range is 1 to 8 seconds.

Audio Files

This page contains a list of audio files within an audio library, and lists the audio files copied to the switcher. In addition it has a volume adjustment slider.

NOTE: Audio files must be in .wav format and have a size limit of 124 kB.

Audio files can be added to or deleted from the library, played and renamed (if desired), and then copied to the device list. Up to 20 audio files can be loaded to the device.

NOTE: Audio files in the device list cannot be played until the device is synced.

Audio files can be managed by removing, moving up or down in the list, playing from the switcher, or saving a file to the library. In addition the device list can be exported as a .csv file, that can be opened and saved in Excel® or Notepad, or a similar program.

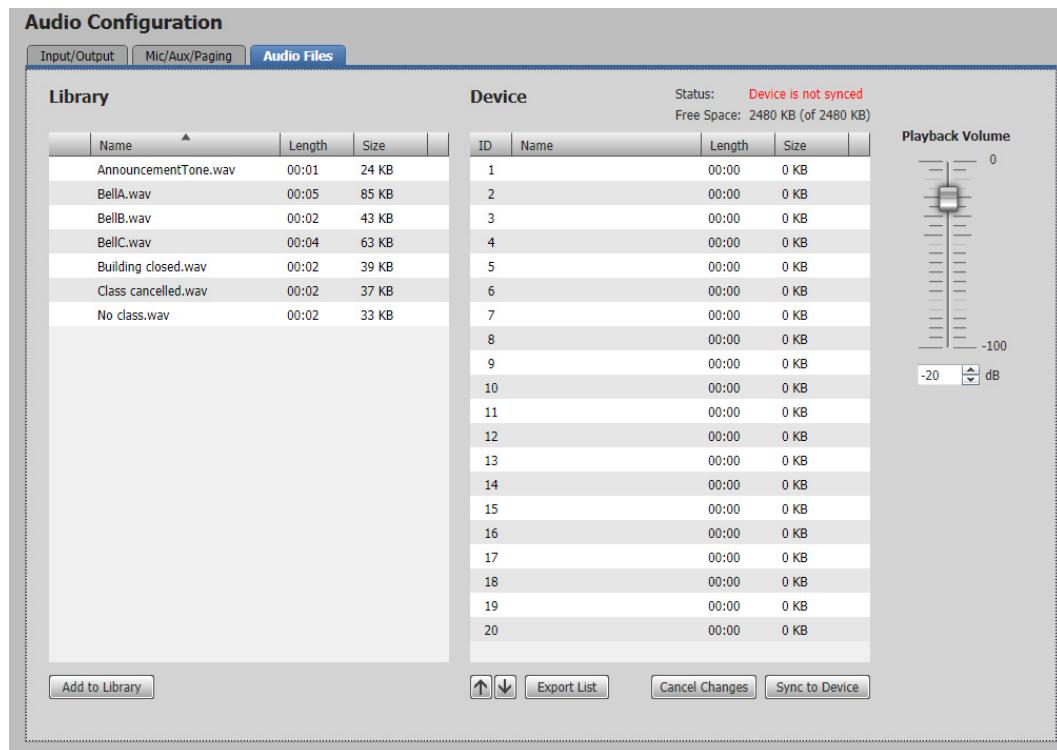


Figure 36. Audio Configuration Page — Audio Files

To add audio files to the library:

1. Click the **Add to Library** button. This opens an Explorer window.
2. Browse to the location of the desired audio (.wav) files on a connected PC.
3. Select the file(s) and click **Open**. The file or files are added to the list.

NOTE: If the file is not in the correct format or is larger than the 124 kB limit, an error message appears and the file is not added to the library.



To rename an audio files in the library:

1. Select and right-click on an audio file, and select **Rename** from the pop-up menu.

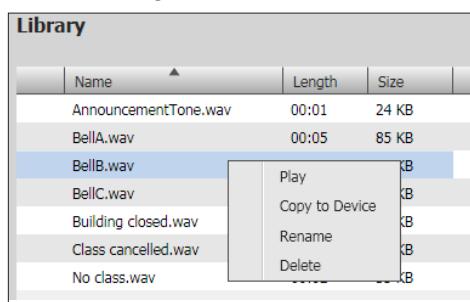


Figure 37. Audio Files Management in the Library

2. Type a new name in the file name field and press **Enter**. The name is updated.

To delete an audio file from the library:

Select and right-click on an audio file. From the drop down menu, select **Delete**.

To play an audio file:


Select an audio file and either click the **Play** icon  , or right-click on an audio file and select **Play** from the drop down menu.

To copy an audio file to a device:

Select an audio file from the library list and either drag and drop the file onto a device ID slot (1 to 20), or right-click on an audio file and select **Copy to Device** from the drop down menu.

NOTES:

- If the slot already has an audio file and is copied to, the existing audio file is overwritten by the new file.
- If an audio file already exists on the device list and is copied again with the same name, an error message appears and the file is not copied over.

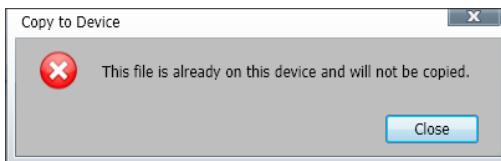

Click **Cancel Changes** to remove the recently copied file from the device list. This removes all files copied to the device and not synced.

To remove an existing audio file from the device:

Select an audio file on the device list and right-click. Select **Remove** from the drop down menu. The file is removed from the list. It can be added from the library at a later time.

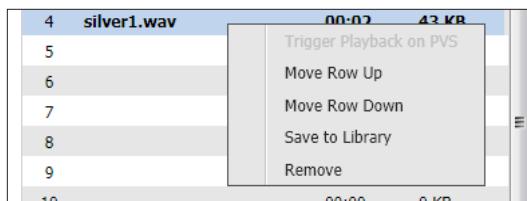


Figure 38. Audio Files Management in the Device

To move an audio file within the device list:

Select an audio file on the device list and either use the up and down arrows at the bottom of the list, or right-click and select **Move Row Up** or **Move Row Down**, as desired, from the drop down menu.

To play an audio file from the device list:

Select an audio file and either click the **Play** icon  or right-click and select **Trigger Playback on PVS** from the drop-down menu.

NOTE: Audio files in the device list cannot be played until the device is synced (see **To sync the device:** on the next page).

To save an existing listed audio file to the audio library:

Select an audio file on the device list and right-click. Select **Save to Library** from the drop-down menu. The file is saved to the audio library.

To export the device list:

Click **Export List** to export the list as a .csv file to a connected PC (see example below) for saving. If installed, Excel opens to display the exported file. The .csv file can also be opened in Notepad or a similar software program.

1	Model Name			
2	PVS 407D			
3	Part Number			
4	60-1466-01			
5	Device Name			
6	PVS-407D-0E-27-45			
7	IP Address	Subnet Mask	Default Gateway	
8	192.168.113.104	255.255.240.0	192.168.112.100	
9	MAC Address			
10	00-05-A6-0E-27-45			
11	ID	Device File Name	File Name	
12	1	1.wav	AnnouncementTone.wav	
13	2		Empty	
14	3	3.wav	BellA.wav	
15	4	4.wav	Building closed.wav	
16	5	5.wav	Class cancelled.wav	
17	6		Empty	
18	7	7.wav	No class.wav	
19	8		Empty	
20	9		Empty	
21	10	10.wav	BellB.wav	
22	11		Empty	
23	12		Empty	
24	13		Empty	
25	14		Empty	
26	15		Empty	
27	16		Empty	
28	17		Empty	
29	18		Empty	
30	19		Empty	
31	20		Empty	

Figure 39. Example .csv File of Device Loaded Audio Files

To sync the device:

Click **Sync to Device** (see [figure 35](#) on page 53) to sync the device list on the connected PVS switcher. This allows the audio files to be played from the switcher.

VLR 302 Config Page

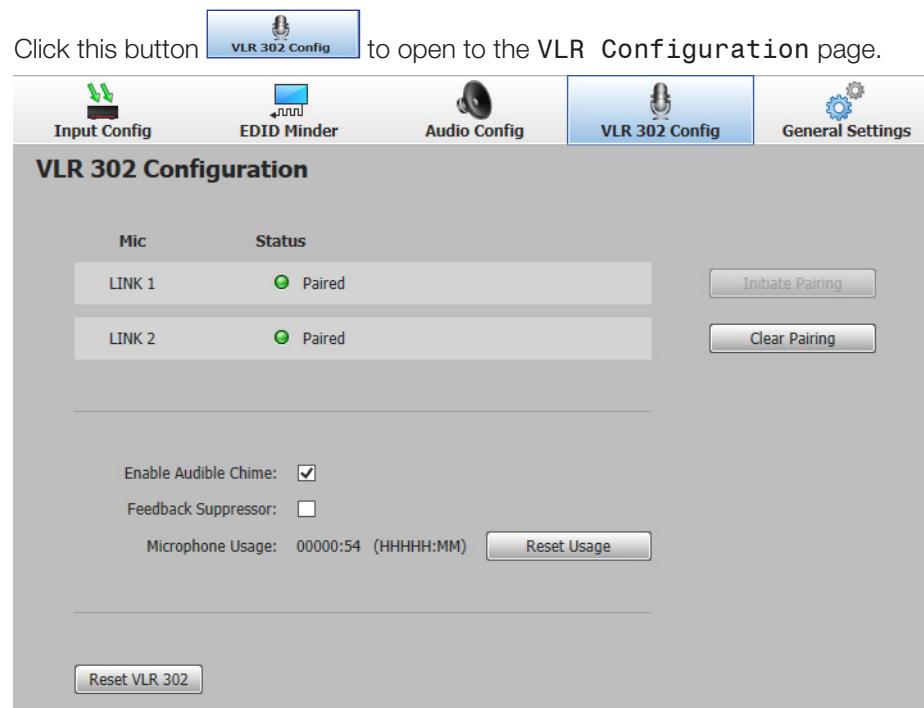


Figure 40. VLR 302 Config Page

This page allows you to configure the settings for the optional VLR 302 VoiceLift device. It allows a user to initiate or clear pairing, view LINK 1 and 2 status, enable or disable audible chime, reset the microphone usage data, and reset the VLR 302.

To initiate pairing:

Click the **Initiate Pairing** button. The LINK Status indicators change to green after pairing is established.

To clear pairing:

Click the **Clear Pairing** button. The LINK Status indicators change to gray after pairing is cleared.

To enable or disable Audible Chime:

Toggle the **Enable Audible Chime** checkbox. This enables or disables a tone (chime) which sounds to confirm configuration changes.

To enable or disable Feedback Suppressor:

Toggle the **Feedback Suppressor** checkbox.

To reset the Microphone usage data:

Click the **Reset Usage** button. The Microphone Usage data shown on this page is reset.

To reset the the VLR 302 device:

Click the **Reset VLR 302** button. The VLR 302 configuration is reset and all pairing and chime settings are set to default.

General Settings Page

This page allows you to set the Front Panel lock mode and Auto Power Save mode for the PVS 407D. This page also allows you to access the device hardware settings by clicking on the **Hardware Settings** button (see **Hardware Settings** on the next page section for details).

From any other configuration page, click this button  to open the **General Settings** page.

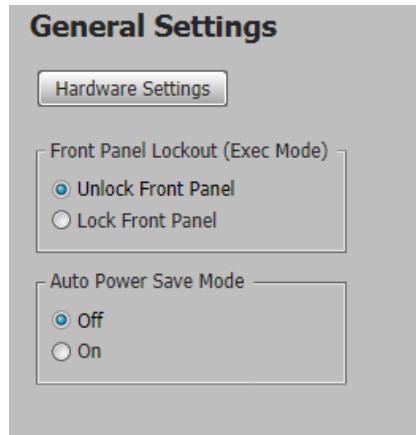


Figure 41. General Settings Page

Setting Front Panel Lockout

There are two front panel lockout options available (see **Front Panel Security Lockout (Executive Mode)** on page 13):

- Unlock front panel
- Lock front panel

To unlock or lock the front panel, click the radio button for the desired mode.

Setting the Auto Power Save Mode

The auto power save mode powers down the power amplifier when audio input is not detected for 25 minutes or more (see **Power Save Modes** on page 14).

To set the auto power save mode, click the radio button for the desired power mode:

- Off = full power
- On = low power (auto power state)

Hardware Settings

These can be accessed either from the drop-down device menu (select **Settings**>**Hardware Settings**) or from the **General Settings** page (click the **Hardware Settings** button).

The Hardware Settings options are:

- **Unit Information**
- **Device Name**
- **Date and Time**
- **Password**
- **System Reboot**

NOTE: The Hardware Settings options are grayed out and not available when the device is offline and not connected.

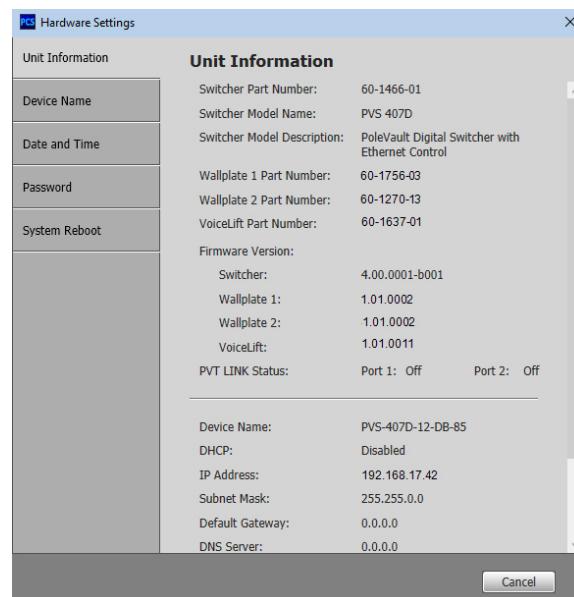


Figure 42. Hardware Settings Panel

Unit Information

This gives a non-configurable view of information about the connected unit, and is divided into two sections. The first section includes part numbers, model name and model description, firmware versions and build numbers for the switcher, connected wallplates and optional VoiceLift device (see [figure 43](#) on the next page).

Unit Information	
Switcher Part Number:	60-1466-01
Switcher Model Name:	PVS 407D
Switcher Model Description:	PoleVault Digital Switcher with Ethernet Control
Wallplate 1 Part Number:	60-1756-03
Wallplate 2 Part Number:	60-1270-13
VoiceLift Part Number:	60-1637-01
Firmware Version:	
Switcher:	4.00.0001-b001
Wallplate 1:	1.01.0002
Wallplate 2:	1.01.0002
VoiceLift:	1.01.0011
PVT LINK Status:	Port 1: Off Port 2: Off

Figure 43. Example Unit Information Panel - First Section

The second section (scroll down to fully view) includes device name, DHCP status, IP address, Subnet Mask Gateway, DNS Server and MAC addresses (see figure 44). It also includes a button to open the **Communication Settings** panel (see **Communications Setting Panel** on page 63)

Device Name:	PVS-407D-12-DB-85
DHCP:	Disabled
IP Address:	192.168.220.15
Subnet Mask:	255.255.0.0
Default Gateway:	0.0.0.0
DNS Server:	0.0.0.0
MAC Address:	00-05-A6-12-DB-85

Edit Communication Settings

Figure 44. Example Unit Information Panel - Second Section

Device Name

This panel allows the user to enter a name for the device or reset it to the default (see figure 45).

Device Name	
Enter a Device Name	
<input type="text" value="PVS407D-Rm21"/>	
Reset to Default	
Apply	Cancel

Figure 45. Device Name Panel

Assigning a Device Name

To set a device name:

NOTE: The name can have alphanumeric characters and hyphen only (see [figure 45](#) on the previous page). A hyphen cannot be the first or last character. An incorrect name is ignored and the current name is not changed.

1. On the **Hardware Settings** page, click the **Device Name** tab. The **Device Name** page opens.
2. Enter a name for the device. The name may be up to 24 alphanumeric characters in length.
3. Click **Apply** at the bottom of the panel.

To reset the name of the device:

NOTE: The default name is the model name followed by the last six digits of the device MAC address (see [figure 44](#) on the previous page).

1. Click **Reset to Default**. A confirmation box opens.
2. Click **Reset**. A pop-up window confirms the device name has been reset successfully.

Date and Time

This page allows the user to set the device time (including time zone setting) manually or sync the device time to that of a connected PC.

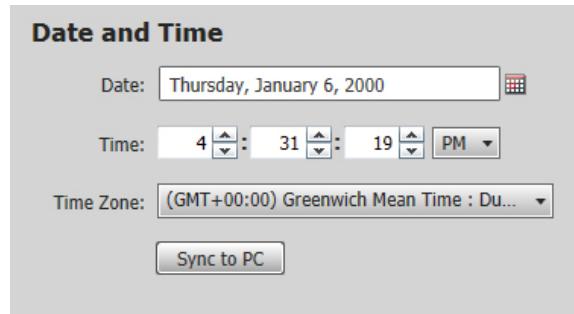


Figure 46. Date and Time Panel

To manually set date and time:


1. Click the calendar icon and select a month and day. The selected date appears in the date field.
2. Use the up and down arrows to set the current local time, and select AM or PM.
3. Select the appropriate **Time Zone** from the drop down list.
4. Click **Apply** at the bottom of the panel. The device is set to the newly inputted date and time.

To sync date and time to a PC:

Click **Sync to PC**. The date and time files update to match the synced PC.

Password

This gives an administrator the opportunity to change admin credentials and set up a user login.

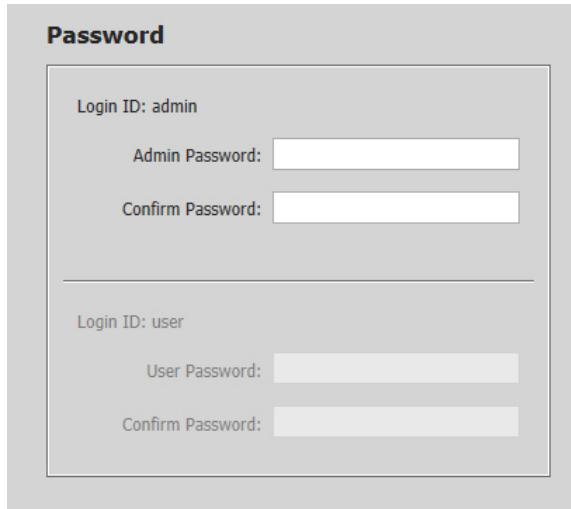

The screenshot shows a 'Password' panel with two sections. The top section is for 'admin' login, with fields for 'Login ID: admin' (set to 'admin'), 'Admin Password' (a redacted input field), and 'Confirm Password' (a redacted input field). The bottom section is for 'user' login, with fields for 'Login ID: user' (set to 'user'), 'User Password' (a redacted input field), and 'Confirm Password' (a redacted input field). A horizontal line separates the two sections.

Figure 47. Password Panel

To change an admin password:

1. Click in the **Admin Password** field and enter a new password.
2. Reenter the same password in the **Confirm Password** field.
3. Click **Apply** at the bottom of the panel. The new password is saved.

System Reboot

This gives a user the ability to reboot the device by clicking **Reboot**.



The screenshot shows a 'System Reboot' panel. It contains the text 'This action will perform a reboot of the device.' and a single button labeled 'Reboot'. At the bottom right of the panel is a 'Cancel' button.

Figure 48. System Reboot Panel

Communications Setting Panel

The Communication Settings window allows a user to change the settings for the TCP/IP connection to the device (see **figure 49** on the next page).

The Ethernet Settings section provides settings to set Ethernet communication with the device. You have the option to set a static IP address or use DHCP. The MAC address of the device is displayed as well.

The factory default IP address is 192.168.254.254, the default subnet mask is 255.255.0.0, and the default gateway is 0.0.0.0.

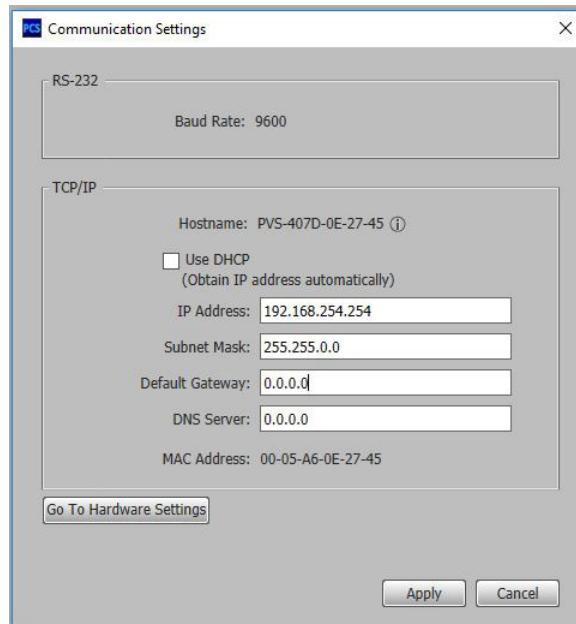


Figure 49. Communication Setting

Information and details for using this screen are available in the *PVS 407D Help file*.

Using PCS – Software Menu

PCS has a default Help file and a settings menu that is specific to the software. To access these, click the menu icon in the top right corner of the PCS window.

A drop-down menu appears. These options are available:

- **Show Expanded Device Tabs**
- **Software Settings**
- **Tutorial**
- **Extron PCS Help**
- **About Extron PCS**
- **Exit**

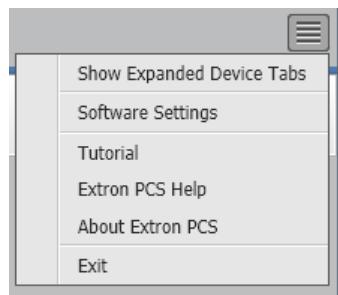


Figure 50. PCS Default Settings Menu

Information and details for using this menu are available in the Extron PCS Help file, opened by clicking on **Extron PCS Help**. This file opens in a browser and has an embedded PDF file for printing if desired.

Using the Internal Web Page

The PVS 407D features an internal Web server that hosts an embedded web page. This page allows you to:

- Edit the device name
- Set the date and time either manually or to sync with a connected PC
- Edit the TCP/IP and audio stream settings
- Update the firmware version
- Set administrator and user passwords
- Add a LinkLicense to the device

Connection is made via a LAN or WAN connection through one of the four rear panel LAN (RJ-45) ports, using a Web browser such as the Microsoft® Internet Explorer® 8 or later, Mozilla® Firefox® 6 or later, Google Chrome™ 9 or later, Apple® Safari® 4 or later.

NOTE: If you are using Internet Explorer, compatibility mode must be turned off (see [Turning Off Compatibility Mode](#) on the next page for details).

This section gives an overview of the default web page, which is always available and cannot be erased or overwritten.

Topics that are covered include:

- [Accessing the Internal Web Page](#)
- [Using the Internal Web Page](#)
- [Downloading the Latest Switcher Firmware](#)

Accessing the Internal Web Page

Access the PVS 407D through the internal web page as follows:

1. Launch the Web browser on your computer.
2. Click in the browser **Address** field.
3. Enter the unit IP address in the browser **Address** field.

NOTE: If the local system administrators have not changed the value, the factory-specified default is DHCP set to Off, IP address = 192.168.254.254.

4. Press the keyboard <**Enter**> key. The PVS 407D checks for password protection.
 - If the device is not password-protected, the web page opens without further input.
 - If the device is password-protected, it displays an **Enter Network Password** page.

NOTE: A user name entry (“user” or “admin”) is required.

5. For a password protected device, click in the **Password** field and enter the appropriate administrator or user password if prompted.
6. Click **OK**. The web page opens.

Turning Off Compatibility Mode

The PVS 407D default web pages do not support **Compatibility Mode** in Internet Explorer.

To check compatibility view settings:

From the **Tools** menu of the browser, select **Compatibility View Settings**. The **Compatibility View Settings** dialog box opens.

Be sure that the **Display all websites in Compatibility View** check box is cleared, and that the IP address of the PVS 407D is not in the list of Web sites that have been added to Compatibility view.

Using the Internal Web Page

NOTE: PVS 407D firmware version 5.00 or above is needed to show the Audio Stream and LinkLicense panes shown in the

The PVS 407D default web page (see figure 51) has seven panels:

- **Device Info**
- **Device Status**
- **Network Settings**
- **Audio Stream** (*In the screen below, the Audio Stream feature is not yet enabled.*)
- **Firmware**
- **Roles and Permissions**
- **LinkLicense** (*In the figure below, the LinkLicense is not yet added.*)

The screenshot shows the PVS 407D Internal Web Page with the following panels:

- Device Info:** Displays device details for PVS 407D, including Name, Description, Part Number, and Manufacturer (Extron). Buttons: EDIT.
- Device Status:** Displays system status with Date, Time, and Timezone. Buttons: EDIT, SYNC TO PC.
- Network Settings:** Displays network configuration for PVS-407D-0E-27-45, including DHCP, IP Address, Subnet Mask, Gateway IP, and Mac Address. Buttons: EDIT.
- Audio Stream:** Shows a message: "Feature disabled. Use the LinkLicense card to enable this feature." Buttons: EDIT.
- Firmware:** Displays current version (5.00.0000-b036) and wall plate versions (1.01.0002, 1.01.0002). Includes "Update Firmware" section with "SELECT FILE" and "UPDATE" buttons. Buttons: EDIT.
- Roles and Permissions:** Shows Admin and User status as "Not Set". Buttons: EDIT.
- LinkLicense:** Shows a message: "No LinkLicense information. There are currently no LinkLicenses added." Includes "SELECT FILE" and "ADD" buttons. Buttons: EDIT.

Figure 51. Internal Web Page Example

Device Info

The **Device Info** panel (see **figure 51** on the previous page) shows the current device name, description, part number, and manufacturer. By clicking **EDIT** on the bottom of that panel, the **Device Info Settings** dialog box (see figure 52) opens and allows you to change only the **Device Name**.

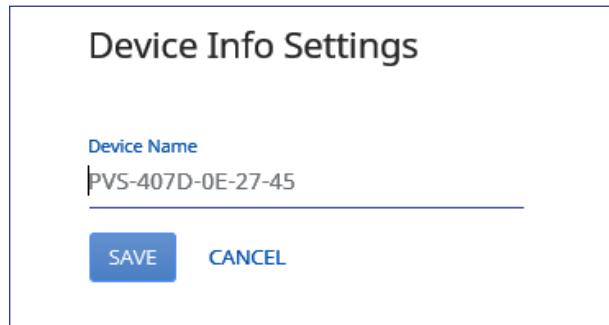


Figure 52. Device Info Settings Dialog Box

To change the device name:

1. Click into the **Device Name** field.



2. Enter a desired name.

NOTE: The name can have alphanumeric characters and hyphens only. A hyphen cannot be the first or last character. An incorrect name is ignored and the current name is not changed.

3. Click **SAVE**. The new name is applied, the dialog box closes, and the device name in the **Network Settings** pane is also updated with the new name.

Click **CANCEL** to exit the process without making any changes.

NOTE: The default name is a combination of the model name and last 3 pairs of the MAC address (for example, PVS - 407D - 0A - 1B - 22).

Device Status

The **Device Status** panel (see [figure 51](#) on page 66) shows the date, time, and time zone for the connected switcher, and allows the user to either synchronize the date and time to a connected PC or set the date and time manually.

To synchronize to the connected PC:

1. Click **SYNC TO PC** on the **Device Status** panel (see [figure 51](#)).
2. After the **Date**, **Time**, and **Timezone** update, a pop-up notification indicates that the synchronization was successful.

To set the information manually:

1. Click **EDIT** on the **Device Status** panel.
2. The **Device Status Settings** dialog box (see figure 53) appears allowing you to change **Time**, **Date**, and **Timezone**. Click **SAVE** when done.

A pop-up notification indicates the update has been successful.

Click **CANCEL** at any time to exit the process without making any changes.

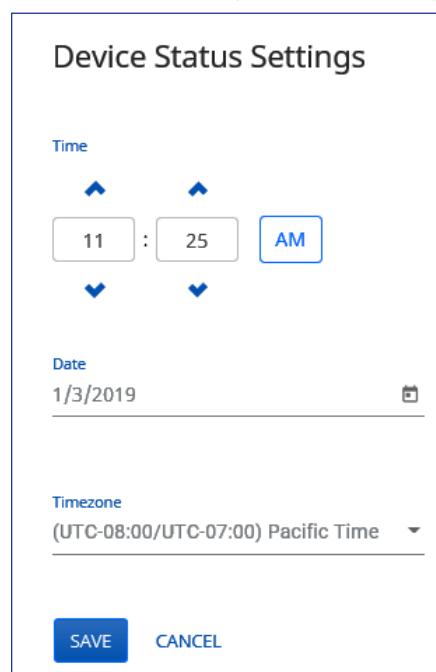


Figure 53. Device Status Settings Dialog Box

Network Settings

The **Network Settings** panel (see **figure 51** on page 66) shows the current network settings for the PVS 407D. To change the TCP/IP settings, click **EDIT** to access the **Network Settings** dialog box (see figure 54).

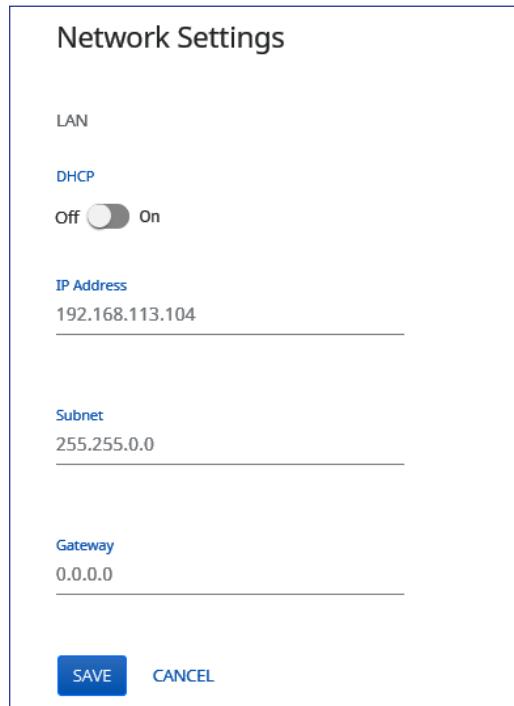


Figure 54. Network Settings Dialog Box

To configure the settings for use with DHCP:

1. Set the DHCP slider to **On**.
2. Click **SAVE**. An IP address is automatically assigned to the device. Contact your IT administrator for more information.

Click **CANCEL** to exit the process without making any changes.

To configure the settings with a static IP address:

1. Ensure the DHCP slider is set to **Off**.
2. In the **IP Address** field, enter an IP address for the device.
3. In the **Subnet** field, enter the subnet mask for the device.
4. In the **Gateway** field, enter the default gateway to be used.

Click **SAVE** to apply the changes, or click **CANCEL** to exit the process without making any changes.

NOTE: The default TCP/IP settings are:


- IP address = 192.168.254.254
- Subnet Mask = 255.255.0.0
- Default Gateway = 0.0.0.0

Audio Stream

The **Audio Stream** panel seen in figure 55 shows the audio stream settings **after** the LinkLicense is installed. (Refer to [LinkLicense](#) on page 73 for installation information.)

The Audio Stream settings on the PVS 407D default webpage are disabled until the PVS 407D Audio Decoding LinkLicense is applied to the switcher. With the LinkLicense successfully added, audio stream settings are accessible. IP address and UDP port settings should be coordinated with your GlobalViewer Campus Communication Suite and network administrators for proper operation

Prior to adding the LinkLicense, the screen appears as in [figure 51](#) on page 66.

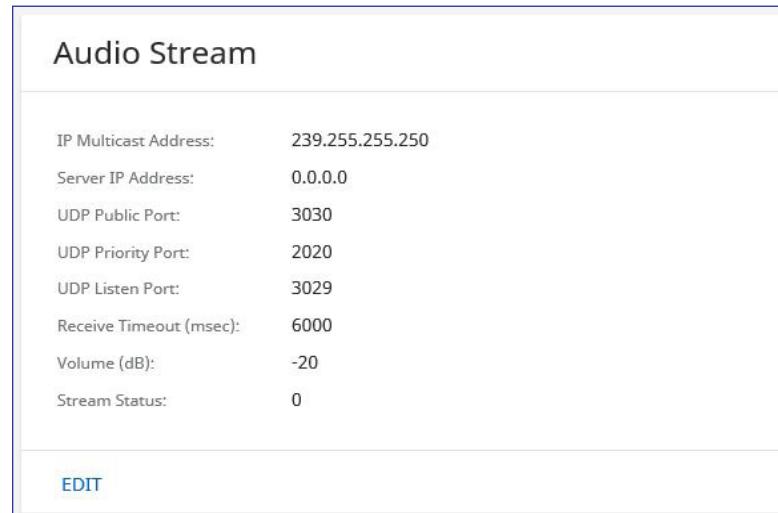

Audio Stream	
IP Multicast Address:	239.255.255.250
Server IP Address:	0.0.0.0
UDP Public Port:	3030
UDP Priority Port:	2020
UDP Listen Port:	3029
Receive Timeout (msec):	6000
Volume (dB):	-20
Stream Status:	0

EDIT

Figure 55. Audio Stream Display

To change the settings, click **EDIT** to access the **Audio Stream Settings** dialog box (see [figure 56](#) on the next page).

1. Change the desired criteria or click **Reset to default** to return to the factory settings.
2. Click **SAVE** to apply the changes, or click **CANCEL** to exit the process without making any changes.

The settings include:

- **IP Multicast Address:** Enter a Multicast address on which to receive an audio stream on the defined UDP Public or Priority port. Default: 239.255.25.250.
- **Server IP Address:** Enter the IP address of the GlobalViewer Campus Communication Suite (GVCCS) server PC. Default is 0.0.0.0.
- **UDP Public port:** Enter the port number for receiving a UDP stream. Set UDP port to a value between 1024 and 65535. UDP Port numbers 0 to 1023 are reserved and cannot be assigned. Default is 3030.
- **UDP Priority port:** Enter the port number for receiving a priority UDP stream. Set UDP port to a value between 1024 and 65535. UDP Port numbers 0 to 1023 are reserved and cannot be assigned. Default is 2020.
- **UDP Listen port:** Enter the port number for sending data to the GlobalViewer Campus Communication Suite (GVCCS) server PC. UDP Port numbers 0 to 1023 are reserved and cannot be assigned. Default is 3029.
- **Receive Timeout (msec):** Enter the duration when the next incoming UDP packets are not received in a timely manner for the session to be closed. Minimum is 600 msec and maximum is 5000 msec. Default is 600 msec.

- **Volume (dB):** Adjust the volume slider to set the audio stream volume level.
- **Stream status:** Shown in **figure 54** on the previous page, this displays the audio stream status of 0 = idle and 1 = currently streaming

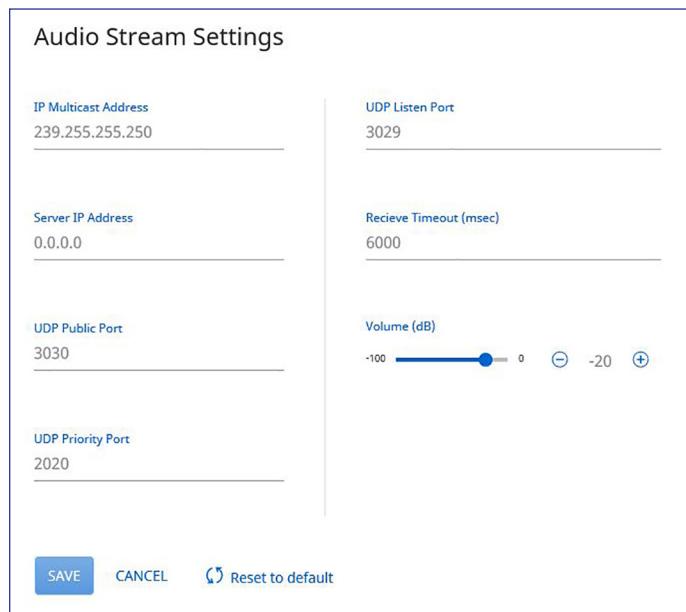


Figure 56. Audio Stream Settings Dialog Box

Firmware

The **Firmware** panel (see **figure 51** on page 66) shows the current firmware version and when it was last updated to the PVS 407D.

NOTE: The latest firmware can be downloaded from the Extron [website](#) (see [Downloading the Latest Switcher Firmware](#) on page 75 for method).

To update the switcher firmware version:

1. Before starting, download the latest version of the firmware (see the note above).
2. On the **Firmware** panel (see **figure 51** on page 66), click **Select File**. This opens an Explorer window (see figure 57).

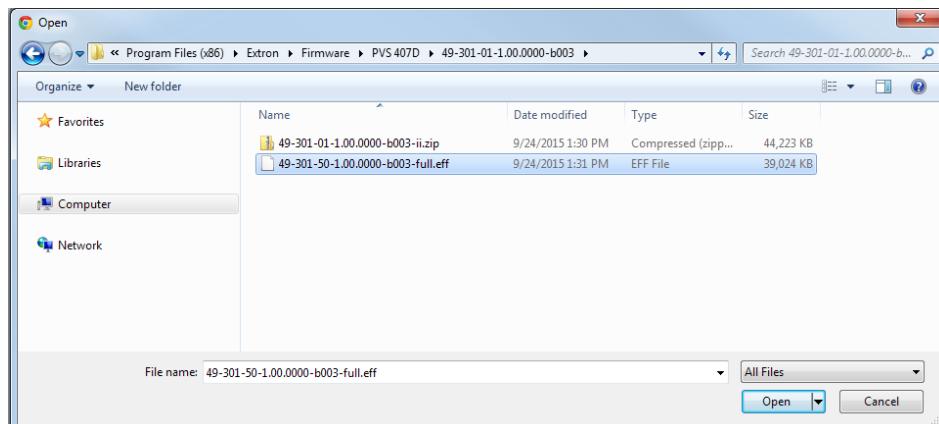


Figure 57. Explorer Window

3. Browse to the location of the firmware and select the file.
4. Click **Open**. The window closes and the **Firmware Update** dialog box reopens showing the firmware file in the file name field.

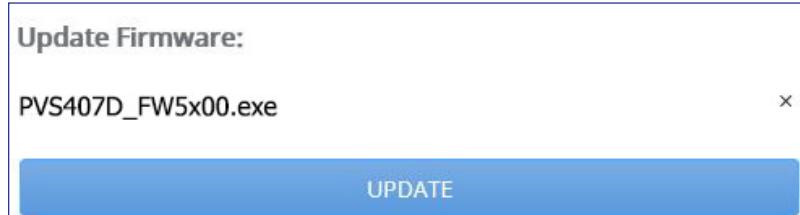


Figure 58. Update Firmware Button

Click the “x” at the right to remove the file selection.

5. Click **UPDATE**. The firmware is uploaded to the connected PVS 407D.

NOTE: When the system is restarted after a firmware update, and PVT wallplates connect to the switcher, the switcher syncs and updates the firmware to the wallplates when needed. When no wallplate is connected, the display shows a “-” (dash).

Roles and Permissions

The **Roles and Permissions** panel (see **figure 51** on page 66) gives the user access to set the admin and user passwords for the PVS 407D switcher. To change them, click **EDIT** to access the **Roles and Permission Settings** dialog box (see figure 59).

Change each password field as applicable. Click **SAVE** to apply the changes or **CANCEL** to exit the process without making any changes.

See the notes on the next page for conditions.

Role and Permission Settings	
<p>ADMIN</p> <p>Change Admin Password *****</p> <p>Confirm Admin Password</p>	<p>USER</p> <p>Change User Password</p> <p>Confirm User Password</p>
<p>SAVE CANCEL</p> <p><input type="checkbox"/> Show Passwords</p>	

Figure 59. Role and Permission Settings

NOTES:

- Only an administrator can set the admin password.
- A user password can only be set if an admin password exists.
- The default admin ID is “*admin*” and the default user ID is “*user*”. These can only be changed by an administrator and via SIS commands.
- An indicator of the current login status is shown on the top right corner of the main screen.



LinkLicense


The LinkLicense panel (see **figure 51** on page 66) shows the status of the LinkLicense as well as lets the user add a LinkLicense.

NOTES:

- A LinkLicense is obtained directly from Extron, usually by email. When received, download the file to your computer in order to upload it to the device.
- In order to install LinkLicense, the device must be using firmware version 5.00 or higher.
- The latest firmware can be downloaded from the Extron [website](#) (see **Downloading the Latest Switcher Firmware** on page 75 for method).

To add the LinkLicense to your PVS 407D:

1. On the LinkLicense panel (see below), click **Select File**. This opens an Explorer window (see **figure 60** on the next page).

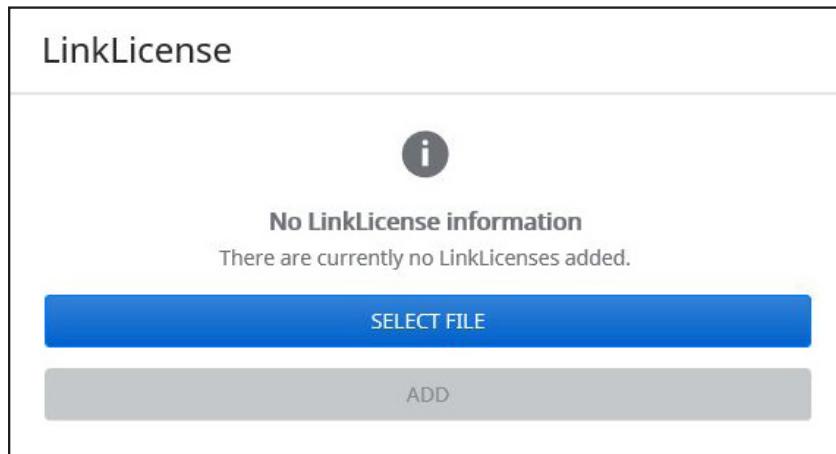

2. Browse to the location of the LinkLicense and select the LinkLicense file with .ell file extensions (see figure 60).

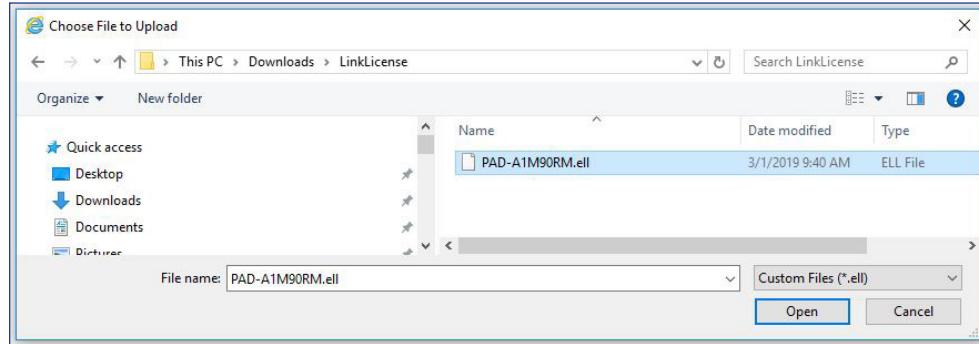


Figure 60. Explorer Window

3. Click **Open**. The window closes and the **LinkLicense** dialog box reopens showing the LinkLicense file in the file name field (see figure 61).



Figure 61. Add LinkLicense Button

To cancel this procedure, click the “x” at the right of the file name.

4. Click **ADD**. The LinkLicense is uploaded and automatically installs to the connected PVS 407D. The switcher automatically performs a system reboot when complete to apply the LinkLicense. When the license is properly installed, your LinkLicense panel looks like figure 62 below.

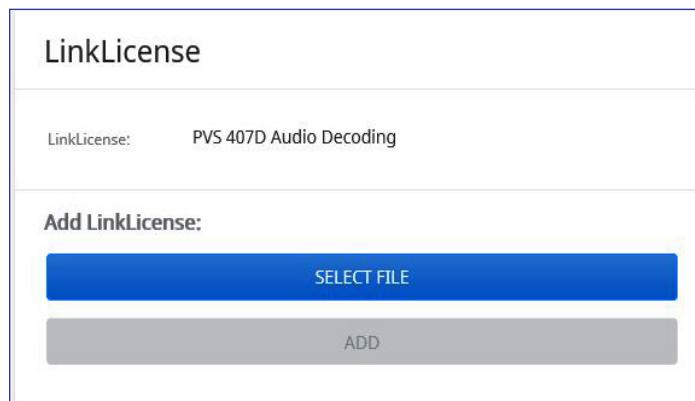


Figure 62. LinkLicense Uploaded

NOTE: If a failure message appears, verify that the serial number of the PVS 407D product matches the one found in the LinkLicense file name. Should you still need help with LinkLicense activation, please contact your Extron Support Representative.

Downloading the Latest Switcher Firmware

The latest switcher firmware can be downloaded from the Extron web site and installed onto the hard drive of a connected PC, ready for uploading to the PVS 407D switcher.

To download from the website:

1. On the Extron website (www.extron.com), select the **Download** tab. The **Download Center** screen appears.

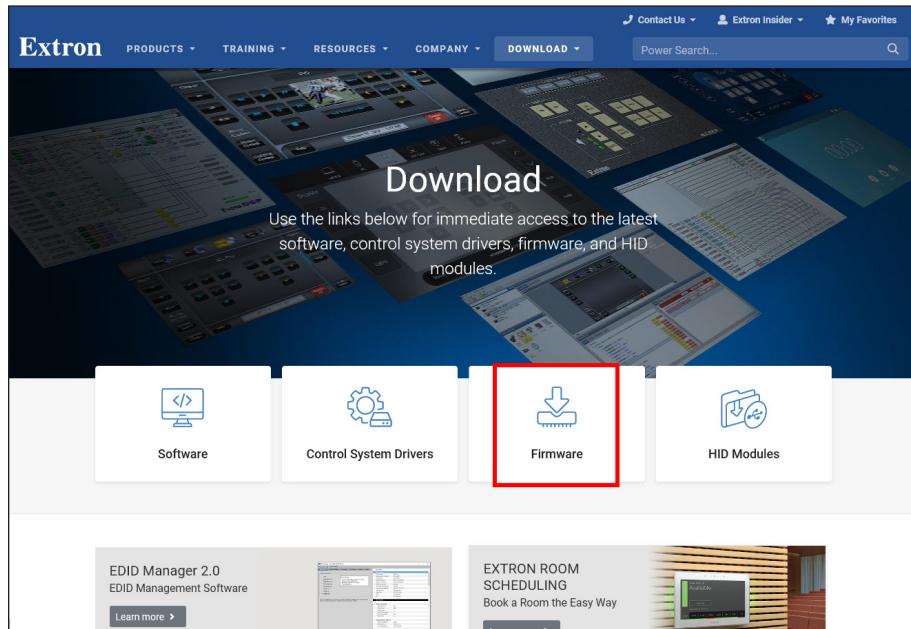


Figure 63. Extron Website Download Center

2. On the **Download Center** screen, select the **Firmware** menu from the left side-bar, or click on the **Firmware** icon on the page. This takes you to the **Firmware** pages.
3. Click “P” (see **A** in the figure below) and scroll to the PVS 407D line.

Description	Part Number	Version	Date	Size	
PVS 407D Firmware for the PVS 407D  Release Notes	49-301-50	4.0	Jan. 12, 2018	29.7 MB	 Download 

4. Click **Download** (see **B** in the figure above).
5. Follow the on-screen instructions to download the firmware to your PC.

Connector Wiring

This section of the manual discusses the connector wiring for a PVS 407D device. Topics covered include:

- **Speaker Configuration**
- **TP Cable Termination and Recommendations**
- **Power Supply Wiring**
- **RS-232 Connector Wiring**
- **Input 7 Connector Wiring**

Speaker Configuration

When setting up a speaker configuration, the correct speaker impedance loading must be observed.

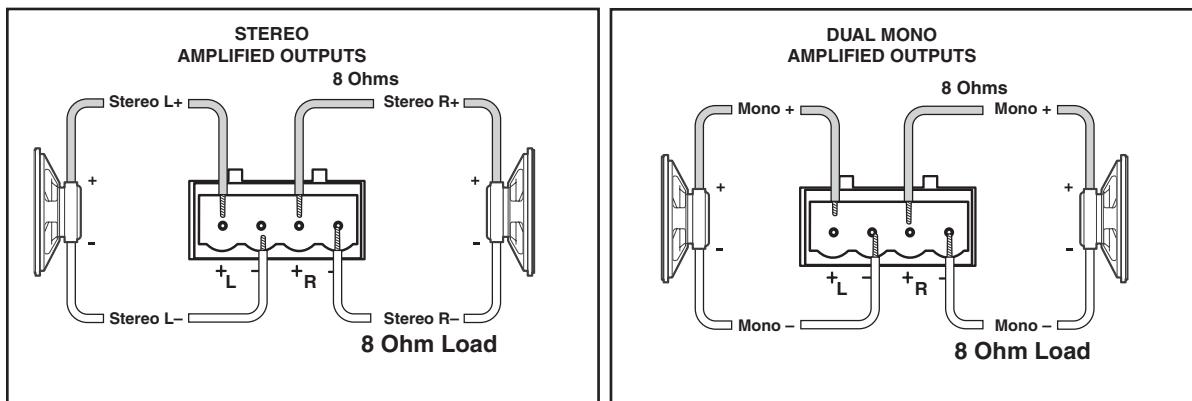


Figure 64. Stereo or Dual Mono Output Using In Line Speaker Wiring

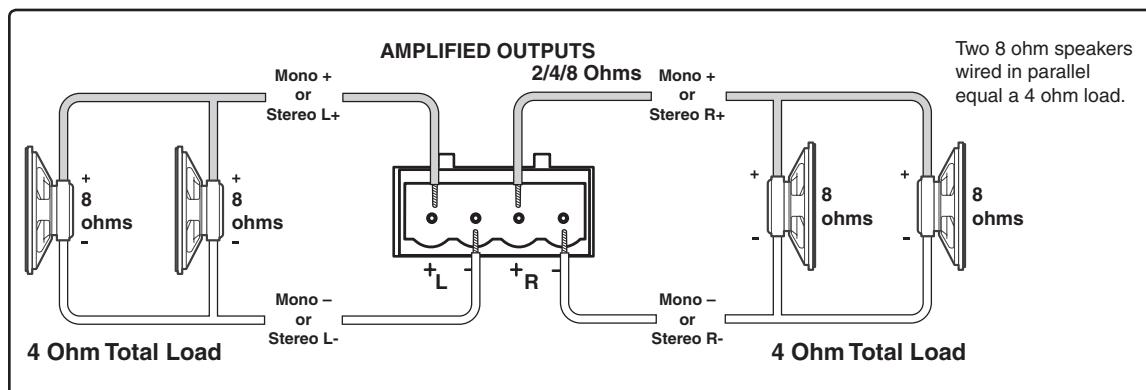


Figure 65. Stereo or Dual Mono Output Using Parallel Speaker Wiring

NOTE: By default, the amplifier is set for dual mono output. Use the Extron Product Configuration Software or SIS commands to change the setting to stereo if desired.

Terminating the Speaker Cable

To terminate the cable, strip the end of the cable 0.2 inch (5 mm) and secure the wires into the supplied 4-pole captive screw connector as shown in figure 66 below.

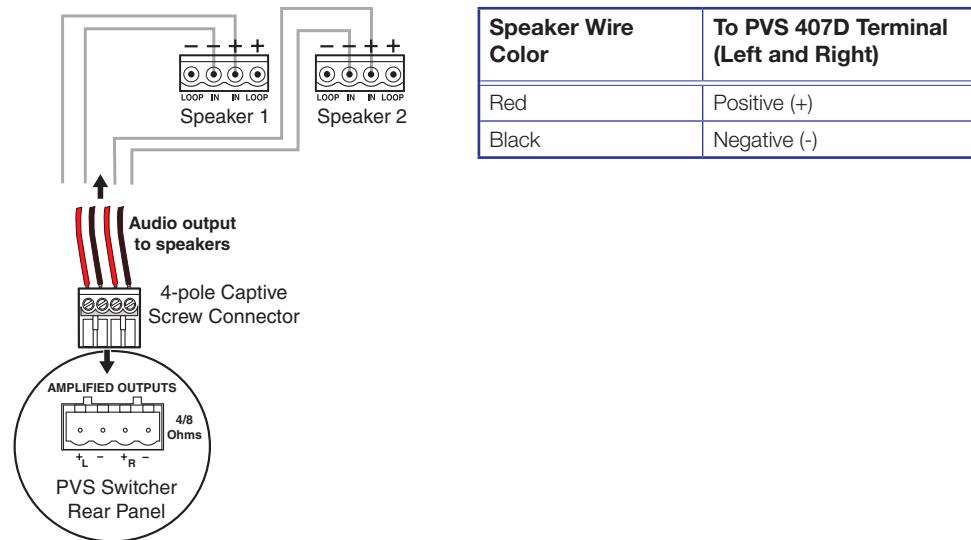


Figure 66. Wiring the Audio Output Connector

TP Cable Termination and Recommendations

Figure 67 below details the recommended termination of both ends of TP cables with RJ-45 connectors in accordance with the **TIA/EIA T568A** wiring standard.

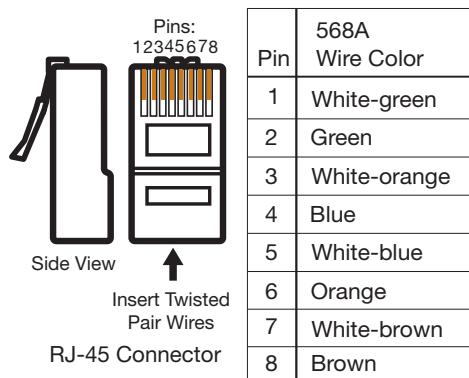


Figure 67. TP Cable Termination

ATTENTION:

- The PoleVault signal transmission method is specific for PVS 407D switchers working with PVT digital wallplates. **DO NOT** connect the input ports to an MTP system or to an Ethernet/LAN or data transmission system.
- La méthode de transmission du signal PoleVault est spécifique pour les sélecteurs PVS 407D qui fonctionnent avec les plaques murales PVT numériques. **Ne PAS** connecter les ports d'entrée à un système MTP ou à un système Ethernet/LAN ou de transmission de données.

Power Supply Wiring

NOTE: Use only the supplied 12 VDC, 4 A, or 4.2 A power supply for this switcher. The PVS 407D power supply can support a typical system: for example, a PVS 407D, 2 PVT Wallplates, 2 or 4 speakers, an MLC 104 IP Plus with an IRCM DV+, and a VoiceLift Microphone system.

Figure 68 below shows how to wire the connector.

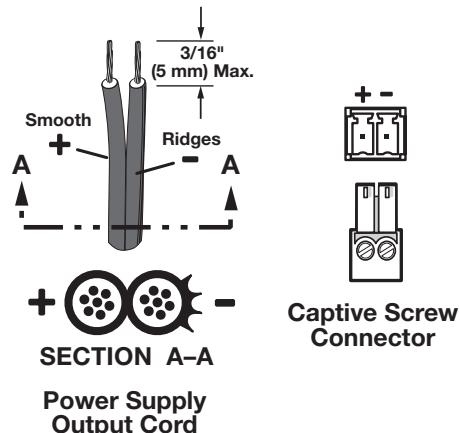


Figure 68. Power Connector Wiring

WARNING: The two power cord wires must be kept separate while the power supply is plugged in. Remove power before wiring.

AVERTISSEMENT : Les deux cordons d'alimentation doivent être maintenus à l'écart tant que la source d'alimentation est branchée. Coupez l'alimentation avant d'effectuer les raccordements.

ATTENTION:

- Always use a power supply supplied and or specified by Extron. Use of an unauthorized power supply voids all regulatory compliance certification and may cause damage to the supply and the end product.
- Utilisez toujours une source d'alimentation fournie ou recommandée par Extron. L'utilisation d'une source d'alimentation non autorisée annule toute certification de conformité réglementaire, et peut endommager la source d'alimentation et l'unité.
- Unless otherwise stated, the AC/DC adapters are not suitable for use in air handling spaces or in wall cavities.
- Sauf mention contraire, les adaptateurs CA/CC ne conviennent pas à une utilisation dans les espaces d'aération ou dans les cavités murales.
- The installation must always be in accordance with the applicable provisions of National Electrical Code ANSI/NFPA 70, article 725 and the Canadian Electrical Code part 1, section 16. The power supply shall not be permanently fixed to building structure or similar structure.
- Cette installation doit toujours être conforme aux dispositions applicables du Code américain de l'électricité (National Electrical Code) ANSI/NFPA 70, article 725, et du Code canadien de l'électricité, partie 1, section 16. La source d'alimentation ne devra pas être fixée de façon permanente à la structure de bâtiment ou à d'autres structures similaires.

ATTENTION:

- Power supply voltage polarity is critical. Incorrect voltage polarity can damage the power supply and the unit. The ridges on the side of the cord (see **figure 68** on the previous page) identify the power cord negative lead.
- La polarité de la source d'alimentation est primordiale. Une polarité incorrecte pourrait endommager la source d'alimentation et l'unité. Les stries sur le côté du cordon permettent de repérer le pôle négatif du cordon d'alimentation (voir **figure 68**).
- To verify the polarity before connection, plug in the power supply with no load and check the output with a voltmeter.
- Pour vérifier la polarité avant la connexion, brancher l'alimentation hors charge et mesurer sa sortie avec un voltmètre.
- The length of the exposed wires in the stripping process is **important**. **The ideal length is 3/16 inch (5 mm)**. Any longer and the exposed wires may touch, causing a short circuit between them. Any shorter and the wires can be easily pulled out even if tightly fastened by the captive screws.
- La longueur des câbles exposés est **importante** lorsque l'on entreprend de les dénuder **La longueur idéale est de 5 mm (3/16 inches)**. S'ils sont trop longs, les câbles exposés pourraient se toucher et provoquer un court-circuit. S'ils sont trop courts, ils peuvent être tirés facilement, même s'ils sont correctement serrés par les borniers à vis.

NOTE: Do not tin the power supply leads before installing them in the direct insertion connector. Tinned wires are not as secure in the connectors and could be pulled out.

RS-232 Connector Wiring

Figure 69 shows the wiring for the PVS 407D and the MLC 104 IP Plus RS-232 connectors.

NOTE: The MLC 104 IP Plus is powered from the same supply used by the PVS 407D.

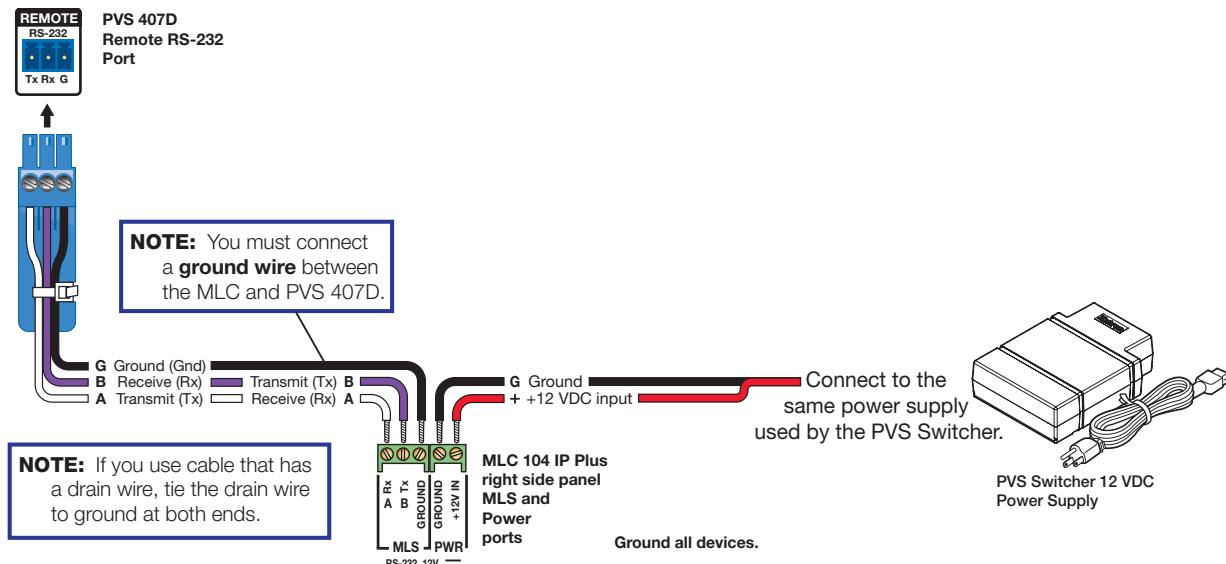


Figure 69. RS-232 Connector Wiring

From MLC 104 IP Plus Terminal	Wire Color	To PVS 407D Terminal
A - (Rx on the MLS port)	White	A - (Tx on the RS-232 port)
B - (Tx on the MLS port)	Violet	B - (Rx on the RS-232 port)
MLS RS-232 Ground	Drain wire	G - Ground
Power Ground	Black	To the PVS 407D Power Supply
12 V In	Red	To the PVS 407D Power Supply

See the **Attention** notice on the previous page for wire length and wire stripping.

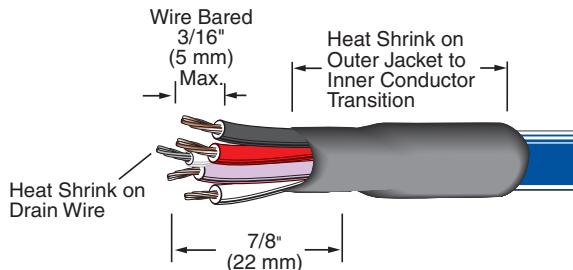


Figure 70. Connector Wire Preparation

Wiring for IR Communication

Connect the IR/RS-232 projector communication cable for either RS-232 or IR projector control.

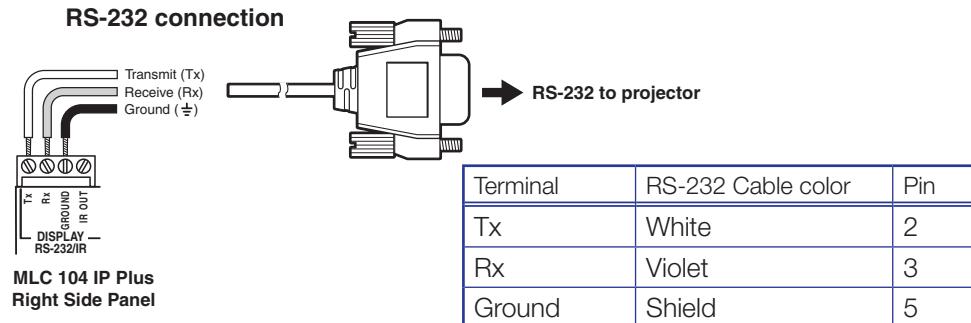


Figure 71. RS-232 Connection to Projector

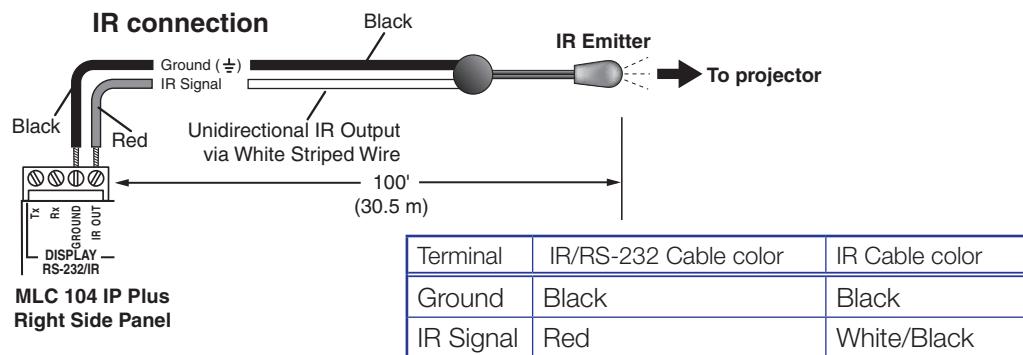


Figure 72. IR Connection to Projector

Connect the MLC to the projector with an RS-232 cable or IR emitter cable, as appropriate.

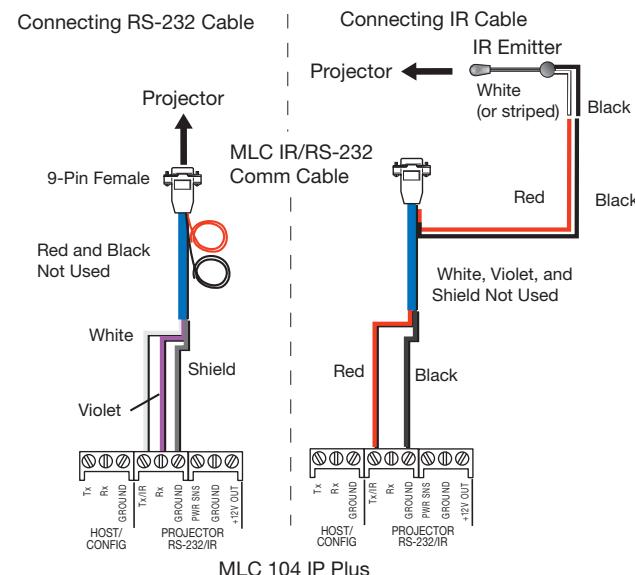


Figure 73. IR Emitter Cable Connection

NOTE: Some projectors require null connection wiring, which inverts the Tx and Rx connections. See the projector guide for details.

IR control for a connected input device such as a Blu-ray player can be made through the PVT wallplate.

The connections between the MLC 104 IP Plus and the PVS 407D switcher should look like the figure below.

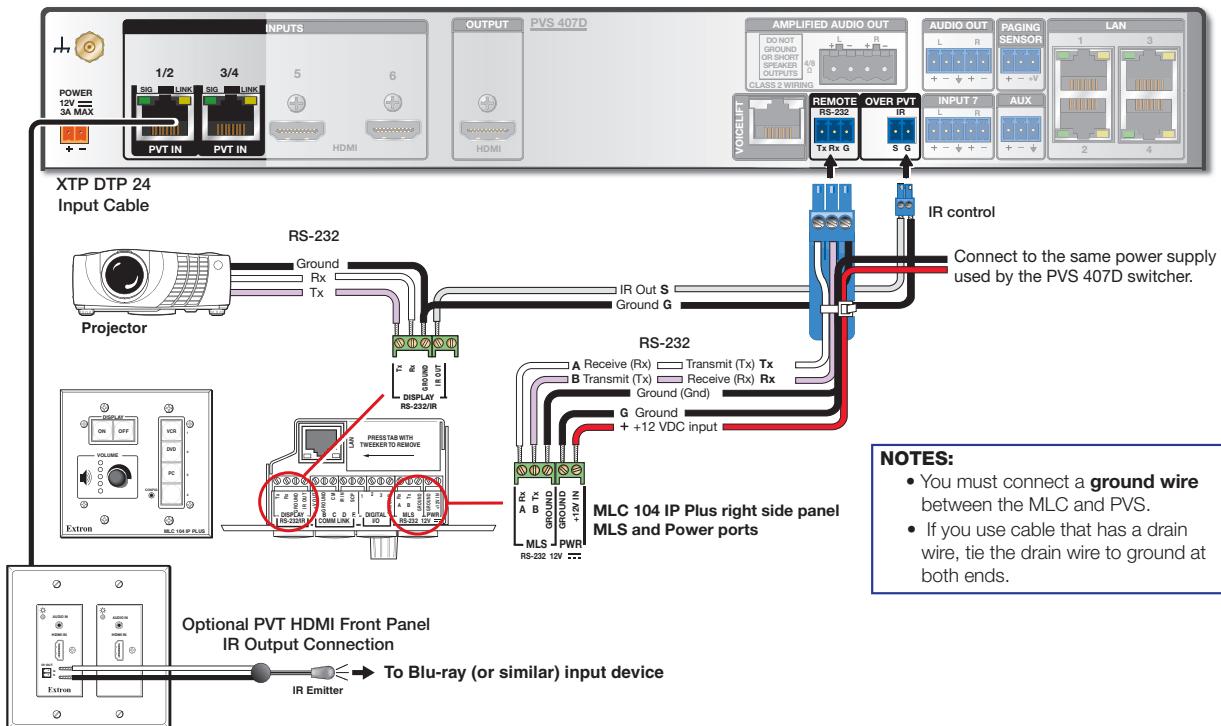


Figure 74. MLC Wiring to the PVS 407D Switcher

Input 7 Connector Wiring

Input 7 is a dedicated audio-only input for an auxiliary, stereo, line-level analog audio signal from an output source such as an iPod device or an MP3 player. Connect the cable from the source to this 5-pole captive screw connector. The connector can be wired as balanced or unbalanced as shown below.

NOTE: Input 7 is audio only. No video signals are supported on this input.

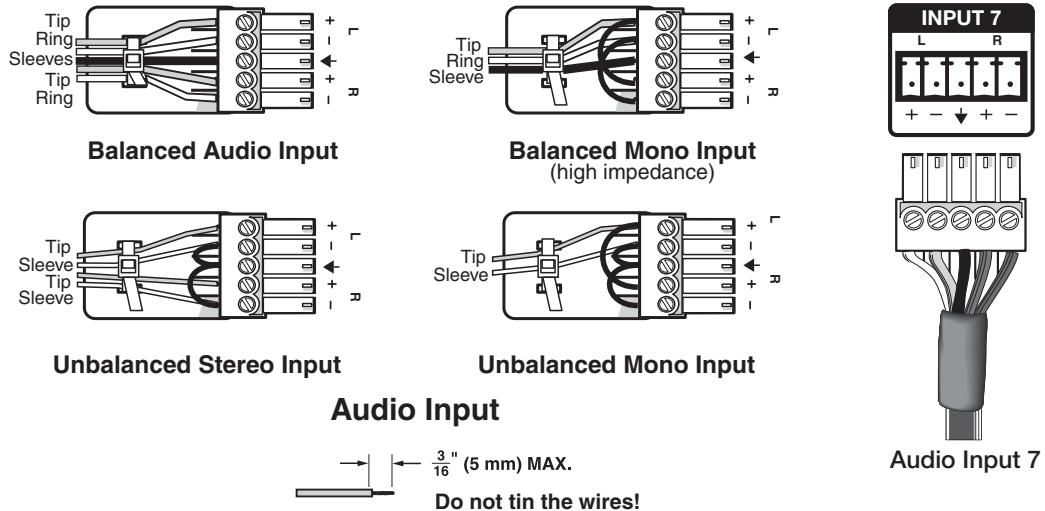


Figure 75. Input 7 Audio Wiring

Extron Warranty

Extron Electronics warrants this product against defects in materials and workmanship for a period of three years from the date of purchase. In the event of malfunction during the warranty period attributable directly to faulty workmanship and/or materials, Extron Electronics will, at its option, repair or replace said products or components, to whatever extent it shall deem necessary to restore said product to proper operating condition, provided that it is returned within the warranty period, with proof of purchase and description of malfunction to:

USA, Canada, South America, and Central America:

Extron Electronics
1230 South Lewis Street
Anaheim, CA 92805
U.S.A.

Europe and Africa:

Extron Europe
Hanzeboulevard 10
3825 PH Amersfoort
The Netherlands

Asia:

Extron Asia Pte Ltd
135 Joo Seng Road, #04-01
PM Industrial Bldg.
Singapore 368363
Singapore

Japan:

Extron Electronics, Japan
Kyodo Building, 16 Ichibancho
Chiyoda-ku, Tokyo 102-0082
Japan

China:

Extron China
686 Ronghua Road
Songjiang District
Shanghai 201611
China

Middle East:

Extron Middle East
Dubai Airport Free Zone
F13, PO Box 293666
United Arab Emirates, Dubai

This Limited Warranty does not apply if the fault has been caused by misuse, improper handling care, electrical or mechanical abuse, abnormal operating conditions, or if modifications were made to the product that were not authorized by Extron.

NOTE: If a product is defective, please call Extron and ask for an Application Engineer to receive an RA (Return Authorization) number. This will begin the repair process.

USA: 714.491.1500 or 800.633.9876
Asia: 65.6383.4400

Europe: 31.33.453.4040
Japan: 81.3.3511.7655

Units must be returned insured, with shipping charges prepaid. If not insured, you assume the risk of loss or damage during shipment. Returned units must include the serial number and a description of the problem, as well as the name of the person to contact in case there are any questions.

Extron Electronics makes no further warranties either expressed or implied with respect to the product and its quality, performance, merchantability, or fitness for any particular use. In no event will Extron Electronics be liable for direct, indirect, or consequential damages resulting from any defect in this product even if Extron Electronics has been advised of such damage.

Please note that laws vary from state to state and country to country, and that some provisions of this warranty may not apply to you.