



**2015 COMPOUND
OWNER'S MANUAL**

TABLE OF CONTENTS

Bow Owner's Personal Info	3
Compound Bow Terminology	4
Introduction	5
Important Safety Information	6
Bow Setup	11
Accessory Selection	14
Draw Length	14
Draw Weight	14
Centershot Alignment	15
Nock Point Location	15
Fine Tuning	16
Tuning for Broadheads	16
Bow Maintenance	16
Strings and Cables	17
AirShox	17
Limb Dampers and String Silencers	18
StealthShot String Suppressor	18
Paint and Finish	19
Cam Lubrication	19
Bow Press Usage	20
ZT Cable Guard	21
In-Line Roller Guard	22
Podium X Elite Cable Guard	23
Standard Cable Guard Installation	24
Standard Cable Slide Installation	24
Draw Length Adjustment	25
Factory Settings	27
Cam Synchronization	27
GTX and Spiral Pro Cam Let - Off Adjustment	29
Locating Your Serial Number	30
Hoyt Carbon Riser Precautions and Information	30
Warranty	33

BOW OWNER'S PERSONAL INFO

Fill in the following personal bow record for your reference.

Bow Serial Number _____

(See page 30 for information on where your bow serial number is located.)

Hoyt Bow Model _____

Purchased From _____

Purchase Date _____

Draw Length _____ (in.) Draw Weight _____ (lb.)

String Length _____ (in.) Buss Cable Length _____ (in.)


Control Cable Length _____ (in.)

IMPORTANT!

A copy of your sales receipt is required for warranty purposes.

The sales receipt, as well as the serial number, is your proof of date-of-purchase. Proof of date-of-purchase will be required if your bow ever needs warranty service.

COMPOUND BOW TERMINOLOGY

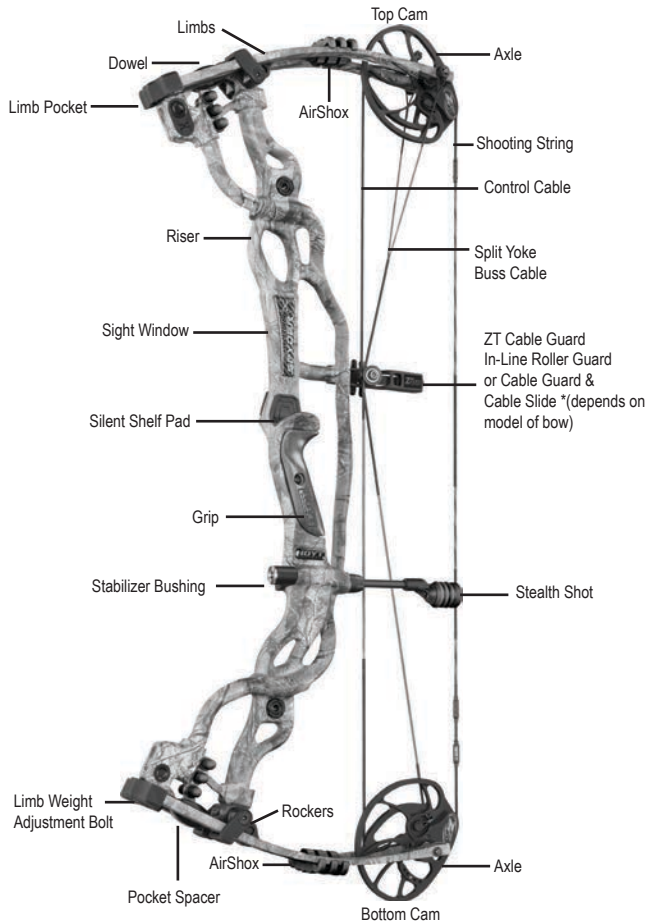

INTRODUCTION

WELCOME TO TEAM HOYT!

Congratulations on the purchase of your new Hoyt bow. We are excited and grateful to have you as a part of Team Hoyt. You will be pleased to know that you have purchased the most technologically advanced and dependable bow on the market. Only the finest components go into every Hoyt bow along with over 84 years of industry leading experience in bow technology and manufacturing. With proper use and some basic maintenance, your new bow will provide you with years of great shooting and dependability.

Archery is a very enjoyable form of recreation for people of all ages and abilities. It is important to note that archery equipment, when not used properly, can create a dangerous situation, including death and serious personal injury for the archer or those around them. It is up to you to be a responsible archer protecting both you and others when enjoying this great sport. Whether you are an experienced archer or have never shot a bow, you must **READ THIS ENTIRE MANUAL CAREFULLY BEFORE USING YOUR BOW.** Following all warnings and instructions contained in this manual will help ensure you and others have the safest and most enjoyable shooting experience possible. Keep this owner's manual handy and reference it often. Should you lose this manual you can find a current manual online at www.hoyt.com. Good luck and safe shooting!



This manual contains several safety warnings and instructions preceded with **⚠️WARNING**, **⚠️CAUTION** or **NOTICE**. These signal words are designed to draw attention to important safety information. **⚠️WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious personal injury. **⚠️CAUTION** indicates a hazardous situation, which, if not avoided, could result in moderate or minor personal injury. **NOTICE** addresses safety practices not related to personal injury.

⚠️WARNING

READ THIS MANUAL CAREFULLY BEFORE HANDLING OR USING YOUR HOYT BOW. YOU ARE RESPONSIBLE FOR ARCHERY SAFETY. Read and follow all warnings and guidelines for safe operating parameters at www.hoyt.com/safetyandwarnings

The warnings contained within this owner's manual were current at time of printing. For the most up to date list of warnings please visit www.hoyt.com/safetyandwarnings

⚠️WARNING: Always read the warning labels and manufacturer's instructions of all products being used in conjunction with a Hoyt bow, including but not limited to all archery accessories and components directly attached to the bow or used in conjunction with the bow such as targets, arrows, broadheads, release aids, etc.

⚠️WARNING: It is critical that your bow is set up and functioning within the bow's required safe operating parameters prior to use. Hoyt recommends that only a Genuine Hoyt Retailer setup and inspect your archery equipment to ensure that it is set up within the bow's safe operating parameters. (see page 11 for definition of Hoyt Bow Safe Operating Parameters).

⚠️WARNING: Carefully inspect your bow before each use. Before you handle or shoot your bow, carefully inspect the condition of your bow, accessories, arrows, and your release aid to ensure they are in good and proper working condition. Any suspected damage to your bow should be inspected by Hoyt or a Genuine Hoyt Retailer for possible repair or replacement.

⚠️WARNING: Before you handle or shoot your bow or other archery products, Hoyt recommends that you be trained and instructed in proper use by a certified archery coach. Sources such as USA Archery (www.teamusa.org/usa-archery/coaching/find-an-instructor-or-coach), the National Field Archery Association (NFAA) (<https://www.nfaausa.com/state-organizations>), and The Archery Trade Association (ATA) (<http://www.archery360.com/>) have contact information for certified archery coaches in your area. Other archery associations in your area or country may also have suitable programs.

⚠️WARNING: An adult should always supervise minors when they are handling or shooting a bow.

⚠️WARNING: Never use alcohol or drugs while handling or shooting your bow.

⚠️WARNING: Always wear safety glasses when handling or shooting your bow.

⚠️WARNING: Never let go of the bow handle while drawing the bow, holding the bow at full draw, or shooting the bow. It is important that you are able to maintain a consistent and secure grip on the bow handle without slippage of your hand on the bow grip. Use of items such as hand lotions, sunscreens, and bug repellents may limit your ability to maintain control of the grip.

⚠️WARNING: Always ensure that the area around your bow is clear of any and all obstructions to prevent items from being caught in the moving parts of the bow. When shooting your bow, never wear loose clothing, jewelry, or other items worn

on your body that may get caught in the bow or bow string when the bow is shot.

⚠️WARNING: Never point or aim a bow at another person. Be sure of your target and what lies beyond. Never shoot arrows straight up into the air. Make sure that the path from where you are shooting to the target and beyond is free from people and obstructions. The view that you see when looking through your sight while shooting (the sight picture) may not clearly show the trajectory path of the arrow.

⚠️WARNING: Never dry fire your bow. To dry fire your bow, means to shoot the bow without an arrow. Never try drawing a bow that is too heavy for your strength or that does not fit your draw length as this could lead to an unintentional dry fire. A dry fire could cause your bow to break and cause death or serious injury to you or others. If your bow is dry-fired there could be both seen and unseen damage and it should be returned to Hoyt or taken to a Genuine Hoyt Retailer for inspection before any further use.

⚠️WARNING: Never loosen your limb weight adjustment bolts more than 8 turns as it could cause the bow to violently disassemble

⚠️WARNING: Do not perform any maintenance, adjustments, or have any work performed of any kind on any part of your bow while drawing or during any other part of the shooting cycle. Do not allow others to work on or touch any part of your bow during the shooting cycle.

⚠️WARNING: Never shoot a bow with the incorrect arrow size (spine) or the incorrect arrow length. Shooting an incorrect arrow size or length could cause your arrow to break and cause serious injury to you or others. Refer to the specific arrow manufacturer's arrow selection chart to select the correct arrow size and length for your setup.

⚠️WARNING: Never shoot an arrow weighing less than five grains for every pound of peak draw weight of your bow. For example: If your bow's peak draw weight is 70 pounds, do not

shoot an arrow weighing less than 350 grains. Shooting an arrow below five grains per pound of peak draw weight could cause your bow to break and cause death or serious injury to you or others.

⚠️WARNING: Never shoot a damaged arrow. Before each shot, inspect your arrows for damage. See the specific arrow manufacturer's warnings and instructions on proper arrow inspection methods. Discard all damaged arrows.

⚠️WARNING: Never mechanically alter or modify your bow. Drilling holes, cutting, filing, or sanding are examples of mechanically altering your bow which will likely cause the bow to break and could cause death or serious injury.

⚠️WARNING: Never alter your Hoyt bow from its original factory configuration. Changing your bow's cams, limbs, or other components from its original equipped and configured assembly could cause your bow to break and could cause death or serious injury.

⚠️WARNING: Never draw or shoot a bow with frayed, worn, or damaged string or cables as they could break. Frayed, worn, or damaged bowstrings or cables should be immediately replaced by Hoyt or a Genuine Hoyt Retailer before the bow is used. Carefully inspect the string and cables each time before shooting your bow. Hoyt recommends that you replace your string and cables after 2,000 shots or after two years, whichever comes first.

⚠️WARNING: Never draw or shoot your bow without all string accessories (peep sight, kisser button, nock points, D-Loop, string silencers, string weights, and speed weights) properly installed and secured to the string. Do not use brass or other metal clamp-on nocking point or string weight devices. Hoyt recommends that only a Genuine Hoyt Retailer install all string accessories. (see page 11 for definition of Hoyt Bow Safe Operating Parameters).

⚠️WARNING: Never expose your string or cables to sharp objects such as knives or broadheads, or direct heat sources

such as open flame or extremely hot objects as they could easily cut or cause the string and/or cables to break.

⚠️WARNING: Never draw a bow with mismatched or missing cam modules, module screws and/or set screws. Never draw a bow with a missing or incorrectly installed draw stop peg. Never remove the cam control cable peg. Be sure to thoroughly check these areas of the cam with an allen wrench to ensure they are fully tightened and that modules are not mismatched.

⚠️WARNING: Do not draw or shoot bow without the cable guard, cable slide and/or rollers properly installed, adjusted and tightened.

⚠️WARNING: Only use genuine Hoyt manufactured replacement parts. Only Hoyt or a Genuine Hoyt Retailer should perform replacement of damaged parts. Hoyt recommends that all maintenance or service that requires the use of a bow press only be performed by a Genuine Hoyt Retailer. The use of an improper style bow press on your Hoyt bow or the incorrect use of any bow press on your bow may result in severe damage to the bow (see page 20 for definition of an appropriate style press for Hoyt bows).

⚠️WARNING: Never expose your Hoyt carbon bow to any solvents or lubricants as the structure could become weakened.

⚠️WARNING: Never expose your carbon bow to direct impact. If impact occurs, return your bow to Hoyt or take your bow to a Genuine Hoyt Retailer for inspection and required repair.

⚠️WARNING: Never expose your bow to extreme heat or prolonged moisture. Damage can occur to your bow from heat exposure, prolonged exposure to moisture and improper storage.

⚠️WARNING: This warning is given in compliance with California State Prop 65. This product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

REQUIRED SAFE OPERATING PARAMETERS

⚠️WARNING: It is critical that your bow is set up and functioning within the bow's required safe operating parameters prior to use. Hoyt recommends that only a Genuine Hoyt Retailer setup and inspect your archery equipment to ensure that it is set up within the bow's safe operating parameters. After your bow is set up within the bow's required safe operating parameters, the bow should be tuned for improved accuracy based on your shooting style and form, the arrow type and size used, and all other accessories used. See page 14 for tips and basic tuning procedures.

Cam Settings - Both the top and bottom cams must be of the same cam type and size. Most Hoyt compound bows use a cam system that can be adjusted to change the bow's draw length. If your cams have an adjustable module system for draw length adjustments, all screws

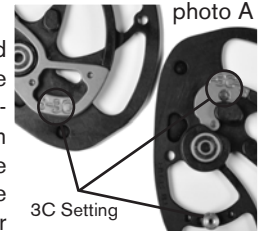


photo A

or other fasteners used to attach the modules must be tight and securely in place. For cams with replaceable draw length modules, both the top and bottom modules must be a matching set and the cable draw stop peg must be in the correct position that matches with the module setting (see photo A). For cams that have a rotating type module for draw length adjustment, both the top and bottom cam modules must be a matched set and rotated and set in the same position (see photo B).

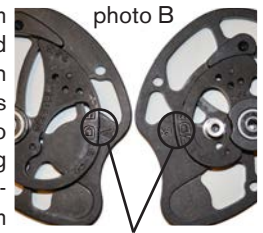


photo B

Both set on D

Limb Weight Adjustment Bolt Settings

All Hoyt compound bows have an adjustable limb system that allows the bow's peak draw weight to be adjusted within the specific bow's available range. Your bow's peak draw weight can be adjusted within the bow's range by turning the bow's top and bottom limb weight adjustment bolts equally (see photo C). Never turn your bow's limb weight adjustment bolts out more than 8 full turns as the bow will become disassembled. Always ensure that both your top and bottom limb weight adjustment bolts are adjusted and set at equal positions.



photo C

Limb Weight Adjustment Bolt

Attached Bow Accessories - Your Hoyt bow is equipped with various accessory mounting locations to allow accessories such as sights, quivers, arrow rests, and stabilizers to be attached to your bow. When attaching an accessory to your bow, follow all accessory mounting and use instructions provided by the accessory manufacturer. Ensure that all accessories are specifically right handed or left handed to match your bow where applicable and that all mounting hardware is securely tightened. Ensure that all attached accessories are clear of string and arrow flight path when the bow is shot.

Arrow Rest Setting - There are many different arrow rest designs and styles. Ensure the arrow rest is right handed or left handed based on your bow. On all Hoyt bows, arrow rests should be positioned on your bow so that your arrow fletchings completely clear the bow riser when the bow is shot. For all Hoyt bows, the required safe operating position of the arrow rest when setup within the safe operating parameters is with the center of the arrow between 5/8" and



photo D

1" from the bow's riser at the rest mounting location (see photo D). Always follow and use the specific arrow rest manufacturer's instructions for correctly setting up the arrow rest for proper function and tuning.

D-Loops and Nocking Points - All bows require the use of a D-Loop or a nocking point device to properly locate the arrow onto the bow string in relationship to the arrow rest. For all Hoyt bows, the required safe operating position of the D-Loop or the nocking point device is when the arrow is attached to the bow string and resting on the arrow rest, the arrow will be at a right angle to the bow string plus or minus 3/16" (see photo E). Never use a brass or other metal clamp-on nocking point device with your Hoyt bow. Only use a high quality archery serving material for installing a "tied-on" nocking point (see photo F for an example of a "tied-on" nocking point). Only use a high quality archery D-Loop material for installing a D-Loop (see photo F for an example of a D-Loop). Ensure that the "D-Loop" or "tied-on" nocking point is securely attached to the bow string and cannot move on the string or come off of the string during shooting.

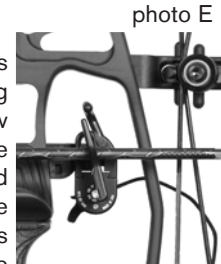


photo E

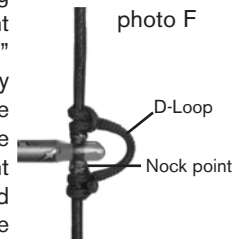


photo F

Other String Accessories - Other string accessories such as peep sights, string silencers, kisser buttons or any other devices attached to the bow string or cables of your bow must be installed in such a way that they cannot move or come off of the bow string or cables during shooting. Hoyt recommends that only a Genuine Hoyt Retailer install and set-up any string accessories on your Hoyt bow.

COMPOUND BOW SETUP, TUNING AND MAINTENANCE

ACCESSORY SELECTION

Hoyt and Fuse manufacture a broad selection of archery gear and accessories. Your Genuine Hoyt and Fuse Retailer can help you choose, install and tune the proper gear and accessories for your style of shooting. Do not modify your bow to accommodate an accessory that is not meant for your bow.

DRAW LENGTH

Draw length is determined by many variables. Your Genuine Hoyt Retailer is trained in properly fitting the bow to your size and style of shooting. Hoyt offers two basic types of adjustable cams to fit archers needs; rotating inner-cam module cams and exchangeable module cams. Draw length is measured in inches using the ATA (Archery Trade Association) standard method. Measure from the deepest part of the grip or to the center of the Berger button (rest mounting hole) plus 1 $\frac{3}{4}$ ". See page 25 for detailed instructions on adjusting your bow's draw length.

DRAW WEIGHT

Weight adjustments can easily be made by turning the weight adjustment bolt clockwise to increase weight or counter clockwise to decrease weight. To ensure your tiller stays equal always turn the top and bottom adjustment bolts (see diagram on page 12) in equal amounts. Hoyt bows are capable of being reduced to 10 pounds lower than the peak weight. For example, a Hoyt bow with a 60 lb. max weight can be adjusted to as low as 50 lbs. Do not let out or loosen your limb bolts more than 8 turns (10 turns on Ignite Series bows) doing so may cause limbs to pop out during adjustment or while shooting, causing serious injury to you or a bystander. Bows adjusted to their peak weight may draw up to four

pounds heavier than the labeled max weight.

Note:

It is **not** necessary to loosen the dowel screws to adjust the weight on any Hoyt bow. It is **not** necessary to lower the draw weight for storage purposes.


CENTERSHOT ALIGNMENT

Centershot is the alignment of the arrow to the power-path of the string. The measurement from the berger button hole to the center of the arrow shaft should be between 1" and 5/8" for an acceptable starting point.

This is accomplished by adjusting the arrow rest left or right. This is only a starting point, fine tuning adjustments may be needed to the centershot.

NOCK POINT LOCATION

Your setup and style of shooting (arrow type, fingers or release aid, arrow rest, etc.) will determine the type and location of the nocking point. A good starting point is to adjust

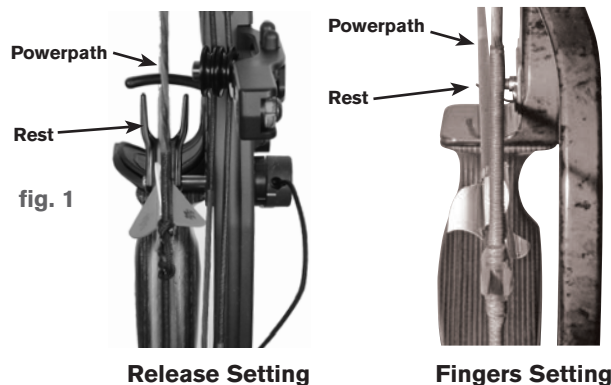

the nock point so the arrow and string make a 90-degree angle. This is only a starting point. Fine tuning adjustments to the nocking point may be needed. Hoyt does not recommend the use of brass or other metal clamp-on nocking point devices. Only a qualified archery pro shop should install string components.

FINE TUNING

Your Genuine Hoyt Retailer is the best resource for fine tuning your bow. There are many effective methods for tuning your whole set-up. A Genuine Hoyt Retailer will be able to help you from start to finish with the entire tuning process.

TUNING FOR BROADHEADS

Most bowhunters discover that they must make slight tuning or sight adjustments when switching from practice points to broadheads (even at the same weight). Broadheads create a dramatic aerodynamic change in arrow flight. For this reason, slight adjustments may need to be made in nocking point height, rest position or bow weight to achieve desired broadhead flight. Always test shoot broadheads before hunting to ensure proper sight settings. Even expandable broadheads may require different sight settings than field points.

BOW MAINTENANCE

Your bow is a mechanical device and as such, is subject to wear and need of periodic inspection, adjustment and service. Hoyt recommends that you take your bow to a Genuine Hoyt Retailer at least once a year for a professional maintenance, cleaning and inspection. Areas to be inspected are axles, spacers, e-clips, strings, cables, limbs, cams, pock-ets and riser.

STRINGS AND CABLES

Apply a light coat of bowstring wax to your bow's cables and string on a regular basis. Hoyt suggests once every two weeks during peak use. Use a high quality bowstring wax available at your local Genuine Hoyt Retailer. This will keep your bow's strings and cables in good condition. To ensure best results, replace your string and cables when wear is evident or every two years under normal use conditions. Insist that FUSE string and cables be used on your bow. All Hoyt bow models come equipped with the FUSE Custom String System. Always replace your strings with FUSE brand strings. Beware of lesser quality string and cables as they may alter the performance of your bow or cause damage to it, possibly voiding the warranty. Never expose your string and cables to extended periods of extreme heat or prolonged moisture. Only a Genuine Hoyt Retailer should install string components. A bow should not be drawn or shot without the string components properly installed and secured. (For example: Peep sight, kisser button, nock point, D-loop, string silencers, etc.) Improper installations of string components are a potential safety hazard. Hoyt does not recommend the use of brass or other metal clamp-on nocking point devices.



AIRSHOX

AirShox come standard equipped on some 2015 Hoyt bows; Carbon Spyder ZT Series, Nitrum Series, Faktor 30 and Elite Series. The factory installed AirShox are used to reduce noise and dampen vibration. Inspect the AirShox dampers periodically and replace them as wear is evident. Extra AirShox dampers may be purchased through a Genuine Hoyt

Retailer. The Airshox dampers are not covered by warranty. Always remove the AirShox extension arms while pressing the bow in a bow press or when disassembling the bow, failure to do so may cause damage to the bow. Damage to the bow as a result of not removing the AirShox extension arms for bow press usage is not covered by warranty. Remove the extension arm by removing the screw. Re-install after all adjustments are completed and do not over-tighten the screw.

Note: On Faktor 30 bows, the AirShox extension arms are specific to the size of cam being used. Extension arms will have the same number designation as the cams. For example, extension arm R3 is meant for cams Z5 3.0. Always use the appropriate extension arms for the size of cams that are on the bow. Proper torque specification when attaching the Airshox arm to the pocket is 30-40 inch pounds.

The AirShox system on the Carbon Spyder ZT series, Nitrum series and Elite series bows are engineered to be adjusted to accommodate different bow configurations. The extension arms are pre-set from the factory so the dampers lightly touch the outer side of limbs. If adjustments are needed, loosen the extension arm screw and adjust as needed so the set screw damper lightly touches the outer side of the limbs, then re-tighten the screw so it remains secure. Do not over tighten the extension arm screw.


LIMB DAMPERS AND STRING SILENCERS

Some Hoyt bows come standard with limb dampers and or string silencers to decrease vibration and noise. Inspect them periodically and replace when wear is evident. These dampers and silencers are not covered under warranty.

STEALTHSHOT STRING SUPPRESSOR

StealthShot is a highly effective noise and vibration dampening system. For optimum performance, make sure the StealthShot's

rubber damper is just touching the string at brace height (no pressure). By loosening the screw on the damper, you can rotate it so the string lies in the center.

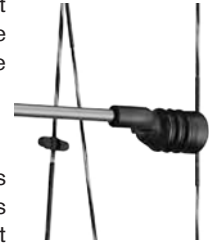

PAINT AND FINISH

The paint and finish on your bow requires very little maintenance. A few simple actions can help keep your bow looking new. Keep it clean by removing mud, dust and other contaminants from the finish by using a damp cloth. After use during wet conditions, towel-dry your bow to prevent water damage. (Do not use a heat source to dry your bow.) Do not use chemicals, solvents or products such as bug repellents that may harm your bow's finish. Any damage to the paint and finish caused by, but not limited to, chemicals, solvents, scent sprays, or other products will not be covered under warranty. Warranty coverage of paint and finish is limited to manufacturing defects only.

CAM LUBRICATION

Bows equipped with the Cam & 1/2 Performance System feature sealed ball bearings, which do not require lubrication. For conventional bearings or bushings, such as those found on the Ignite Cam, Ruckus Cam and Accuwheel, a light spot lubrication of the axles where they pass through the cam should be done on a regular basis (1,500 - 2,000 shots). In adverse hunting conditions where dirt, dust or moisture is encountered, lubrication may be done on a daily basis. Be sure to clean off any excess lubricant as it will attract dust and dirt and could possibly damage painted surfaces. Hoyt recommends you use a silicone or Teflon based lubrication. **It is NOT recommended that you use "Penetrating Oils" such as WD-40, EZ-#7, Fast Break, etc. As these products can damage your bow.**

BOW PRESS USAGE

Never allow your bow to be put into a bow press unless it is done by a knowledgeable bow technician. Hoyt recommends that a Genuine Hoyt Retailer do all necessary adjustments requiring the use of a bow press.

NOTICE: Damage to your bow due to the improper use of a bow press or any tool will void your bow's warranty. Only use a bow press that captures/contacts the bow at the limb tips (nearest the cams) and compresses the bow in a straight, inward motion. Never apply force to the riser as this could cause severe damage to the bow. (See fig. 3) Before putting your bow in a bow press, loosen the weight lock bolts (if they

fig. 2
(Examples of bow presses that only press the limbs)



Proper representation of how limbs should be pressed



Presses the bow at the grip only

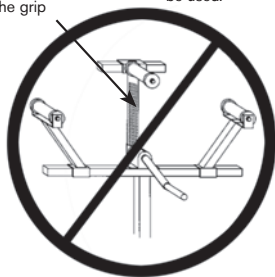


fig. 3 An example of a single-pull bow press that should not be used.

are equipped on your model of bow) and limb weight adjustment bolts 5 to 7 turns from maximum weight (when limb bolts are adjusted all the way in).

ZT Cable Guard System (Carbon Spyder ZT and Nitrum Series)

The ZT Cable Guard System is factory installed and requires no additional installation. The roller wheels feature sealed bearings that require no lubrication. If wax or dirt accumulate on the roller wheels, simply clean the wheels with a soft cloth.

Note: In order to remove both the split yoke buss cable and control cable from the ZT Cable Guard, the strings and cables must first be relaxed with the proper use of a bow press. (See pg. 20) Once the cables are relaxed, the roller wheels and spacers can be removed by loosening and removing the shoulder bolt with a 5/32" Allen key, allowing the cables to be free.


When reassembling the unit, the roller wheels and spacers must be installed correctly. The larger side or flanged side of the bearing should face away from the bow's shelf. One .050" spacer must be installed between the roller wheels and another one between the inner wheel and threaded mount.

When properly installed, the split yoke buss cable will route in the wheel track closest to the arrow and the control cable routes in the wheel track closest to the bow's shelf. The cables are designed to cross at the roller wheels, but never touch one another. Install the cables into the proper wheel tracks before threading and tightening the screw to 15 in-lbs. Do not over tighten.

The ZT Cable Guard's flexible limb assembly is maintenance free and should not be tampered with or adjusted. If the unit

needs to be disassembled for cleaning purposes or installation of shock rods, loosen the button head screw with a 1/8" Allen key. The screw should be retightened to 12 in-lbs. Do not over tighten.

Do not loosen any part of the ZT Cable Guard system without first relaxing the cables by proper use of a bow press. (Pg. 20)

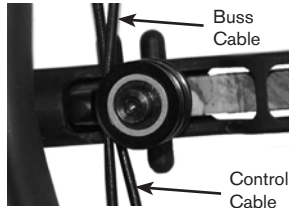


Do not draw or shoot the bow without the ZT Cable Guard and cables properly installed.

IN-LINE ROLLER GUARD (Faktor 30)

The In-Line Roller Cable Guard is factory installed and requires no additional installation. The roller wheels feature sealed bearings that require no lubrication. If wax or dirt accumulate on the roller wheels, simply clean the wheels with a soft cloth.

Note: When installing control and buss cables, make sure the control cable is routed through the roller track that is indicated with "CC" and buss cable routes through the roller track that is indicated with "BC".

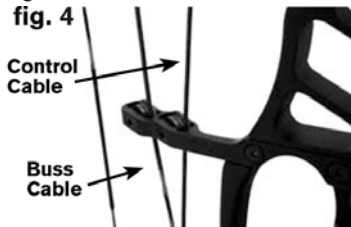

When installed correctly the cables will not touch each other. (See figs. 4 and 5).

It is not necessary to remove the roller wheels to change the buss and control

fig. 5

CORRECT WAY

Insert the wheel and screw with the bearing side facing the shelf of the bow.



WRONG WAY

Do not insert the screw with the bearing side facing away from the shelf.



cables on models with the in-line roller guard.

Podium X Elite Cable Guard System – The Podium X Elite Series bows come standard with an adjustable cable guard to optimize arrow clearance and enhance tuning. The cable guard has four different settings (0, 3, 6, and 9 degrees) and comes factory set in the 0 setting.


Before adjusting the cable guard, first remove the cables from the cable slide. Then loosen both of the socket head cap screws 1-2 turns with a 9/64 Allen key. Rotate the bar through the series of internal notches until the desired location is obtained. Retighten the screws to 20 in-lbs. and reinstall the cable slide. Do not tighten the screws unless the positioning marks line up with the desired setting. Before drawing or shooting the bow, make sure that all parts of the arrow are getting proper clearance. The arrow or arrow fletchings should never come in contact with the cables throughout the draw cycle or shot. If any part of the arrow or fletchings come in contact with

the cables, readjust the bar to a further out setting; to allow for more clearance.

⚠WARNING: Do not draw or shoot bow without the cable guard, cable slide and/or rollers properly installed, adjusted and tightened.


CABLE GUARD INSTALLATION

Some Hoyt bows are designed with a standard built-in cable guard bar attachment. To install the cable guard bar, simply slide the bar through the two mounting holes on the riser, making sure the bar is pushed completely through and flush with the end of the front mounting hole. After the bar has been inserted, fasten with the 1/4-20 x 1/2" set screws provided. (See fig. 6) The use of Loctite® is recommended when re-inserting screws.

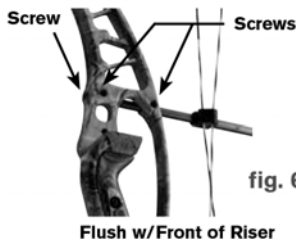

CABLE SLIDE INSTALLATION


To prevent your bow's cables from rubbing against each other, Hoyt uses a specially designed cable slide that has offset cableslots. To correctly install the slide on most Hoyt bows, first place the glide on the cable guard bar. (See fig. 7) Next, push the control cable into the shorter front slot. Then, push the buss cable into the longer rear slot.

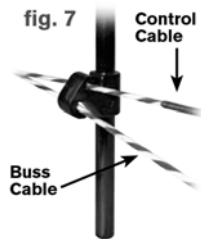

DRAW LENGTH ADJUSTMENT

Follow the directions below to adjust the draw length on Hoyt bows equipped with a rotating inner-cam module such as the GTX, Accuwheel, Ignite and Ruckus Cams. (for Z5, Turbo, Spiral Pro and Charger cams, see page 26).

Top Cam: To adjust the draw length of Hoyt's cams with a rotating inner-cam module like the one shown in (fig. 8), use a standard Allen key to loosen the fastening screw and remove

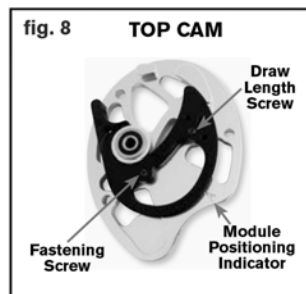


the draw length screw (See fig. 8). Rotating the inner-cam module in the (+) direction will lengthen the draw. Rotating the inner-cam module in the (-) direction will shorten the draw. Each lettered position will provide approximately 1/2 inch longer/shorter draw than the previous setting. Once the inner-cam module is in the desired location, reinstall and

tighten the draw length screw first and then the fastening screw.

Note:

On the Ignite, Accuwheel and Ruckus cams, repeat the top cam draw length adjustment instructions on the bottom wheel as well.

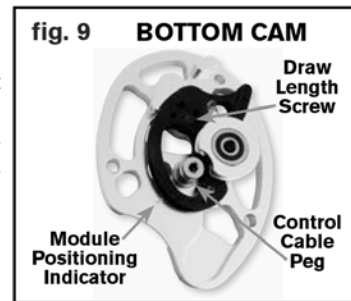


Bottom Cam: Remove the draw length screw, rotate the inner-cam module to the same lettered position as the top inner-cam module, and replace the screw. (See fig. 9) You must have both top and bottom inner-cam modules in the same lettered position or the bow will not tune properly. It may be necessary to use Blue Loctite® on the inner-cam module screws to keep them secure.

⚠WARNING: Never draw a bow with mismatched or missing cam modules, module screws and/or set screws. Never draw a bow with a missing or incorrectly installed draw stop peg. Never remove the cam control cable peg as serious injury and bow damage could occur

Exchangeable Module Adjustment:

Follow the directions below to adjust the draw length on a Hoyt bow equipped with an exchangeable module (Z5, Turbo, RKT and Charger cams).

No bow press is needed to make the following adjustments. Once you have determined the desired draw length, simply loosen and remove the module screws with a standard 7/64 Allen key. There are 3 screws on the top cam and 2 screws on the bottom cam that hold the modules in position. Once the screws have been loosened and removed, simply remove the modules from the cams. Then replace the modules with ones that correspond to the desired draw length. (Do not over-tight-

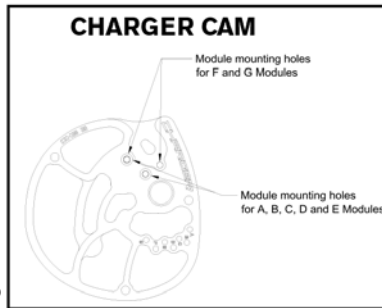

en module screws.) It may be necessary to use blue Loctite® on the module screws to keep them secure. After the desired draw modules are installed, the draw-stop that is located on the bottom cam needs to be adjusted. Remove the draw stop with a 5/64 Allen key and reinstall it in the threaded hole that corresponds with the letter on the cam module. For example: Cam module RK-2A-BR would use draw-stop peg position A. For a detailed instructional video on cam and draw length adjustment please visit: <http://www.youtube.com/watch?v=T-51Z-z98Zc>

Draw length modules of various sizes may be purchased at your local Genuine Hoyt Retailer.

ADJUSTING YOUR BOW TO FACTORY SETTINGS



To verify that the factory specifications (cam orientation, draw length, draw weight, brace height, axle-to-axle, etc.) are correct, use a proper bowpress and remove the string and cables (this should only be done by a Genuine Hoyt Retailer). Then measure the string and cables and add or remove twists to obtain the proper length. Strings and cables must be measured under 100 lbs. of load. Then re-install the correct length string and cables. Once the string and cables are installed on the bow, only add twists to either the control cable or buss cable to synchronize the draw stops on the cams at full draw.

CAM SYNCHRONIZING

Hoyt Cam & 1/2 Performance Systems require very little maintenance. Once the shooting string, control cable and buss cable are set to the correct lengths, cam synchronizing should require little or no maintenance. Both top and bottom cams are slaved together via the control cable – forcing both cams to always move together, regardless of when the cables come into contact with the cable stops. There is a broad range where the cams can be synchronized. Hoyt Engineers and Hoyt

Professional Shooters alike have found that varying the cam synchronization has little or no variation on downrange arrow impact. If you feel that the cam synchronizing or positioning is incorrect due to the shooting string, control cable or buss cable not being in specification, note the following instructions: (see fig. 10)

Measure your strings and adjust them to the recommended fac-

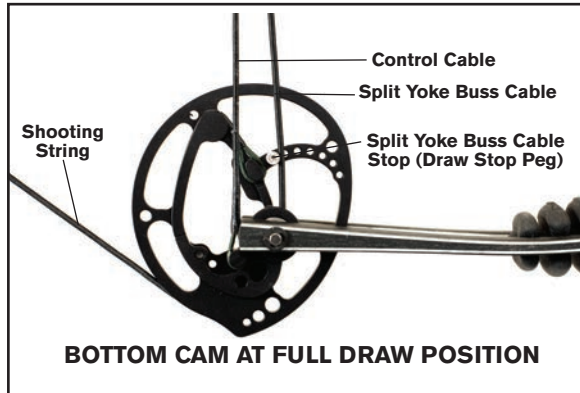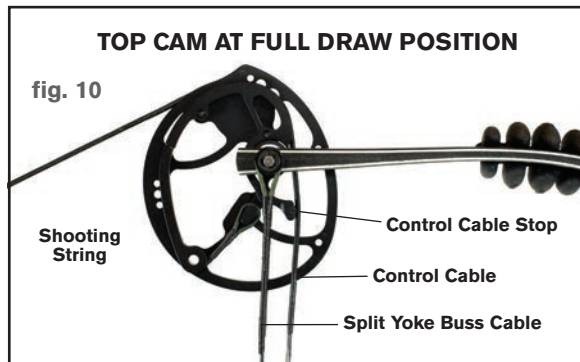

tory length by adding or subtracting twists. Then reinstall the adjusted strings onto the bow. When drawing the bow back, if the control cable-stop located on the top cam touches before the yoked buss cable-stop on the bottom cam, shorten the control cable by adding twists. When drawing the bow back, if the yoked buss cable stop on the bottom cam touches before the control cable stop on the top cam, shorten the yoked buss cable by adding twists. When drawing the bow back, if the control cable stop on the top cam touches before the yoked buss cable stop on the bottom cam, shorten the control cable by adding twists. When drawing the bow back, if the yoked buss cable stop on the bottom cam touches before the control cable stop on the top cam, shorten the yoked buss cable by adding twists.

Note:

Hoyt measures bowstrings using the ATA (Archery Trade Association) standard method.

GTX AND SPIRAL PRO CAM LET-OFF ADJUSTMENT

GTX cams are available with either 65% or 75% modules.

Changing the let-off should be done by Hoyt or a Genuine Hoyt Retailer. To change the let-off on this cam you must use a bow press to relax the cams and strings. Top cam: Remove the top cam module and replace it with the desired let-off. Bottom cam: Remove the string and cables. Next, remove the control cable peg and module screws, then remove the module. Replace it with the desired let-off module and reinstall the control cable peg and module screws. Blue Loctite® should be used when re-installing the control cable peg. Be sure the module numbers correspond with the cam numbers. For example, a GTX #5 cam would take a GX5 module. Be sure to adjust the modules to the same lettered module position as each other. For example, if the top module is in the "E" position, the bottom module must be in the "E" position.

⚠️WARNING: Never draw back a bow with mismatched or missing cam modules and set screws.

PODIUM X ELITE GRIP SYSTEM

The Podium X Elite series bows come standard with a modular grip system. Bows come factory installed with the 0 (18 Degree Neutral/ Traditional Angle) grip module. To change the modules for a different angle, simply loosen and remove the socket head cap screws with a 7/64 Allen Key and then remove the module. Insert the desired module into the grip bed and replace the screws, tighten to 15 in-lbs. Do not over tighten.

- 0 (18 Degree Neutral/ Traditional Angle)
- +2 (20 Degree)
- +4 (22 Degree)
- +6 (24 Degree)

LOCATING YOUR SERIAL NUMBER

The six or seven-digit serial number on Hoyt compound bows is located on or near the arrow rest mount. If you have already attached a rest to your riser, you may have to remove it to see the serial number. The serial number on Hoyt Carbon bows is found between the sight mounting holes. The serial number on the Charger series will be found under the grip. To locate, simply remove the two attachment screws and remove the grip. The Serial number for a Pro-Comp FX series bow is located under the cable guard bar.

HOYT CARBON RISER SPECIAL PRECAUTIONS AND INFORMATION:

1) **⚠️WARNING:** Composite constructed components, such as Hoyt Carbon Risers, may show small surface separations in the paint and/or top surface layer of the construction. This is a typical composite condition which may become more visible as the bow

is used over time. These small separations are considered normal and non-structural provided that they are under 1/8 inch in length and less than 1/32 inch wide at its widest location. These are typically not fractures or breaks in the carbon fibers themselves and do not represent a structural failure. For separations that are larger than 1/8 inch in length and/or wider than 1/32 inch wide, the bow should not be shot and should be returned to Hoyt or a Genuine Hoyt Retailer for inspection and testing. (See warranty information for instructions on returning product to Hoyt). If the bow is found to have a structural failure, the riser will be repaired or replaced under the normal conditions of Hoyt's Limited Lifetime Warranty. If the bow has no structural failure, the bow will be returned and can resume normal use.

2) **⚠️WARNING:** Extreme care should be taken to avoid impact damage to a Hoyt Carbon Riser. Hoyt Carbon Risers are designed to withstand high stress flexing and high stress loading that would be associated with normal use and function of the bow. However, in general, composite structures do not withstand high load impact such as being dropped from a tree, or by having some other object impact the structure. In the event that your bow does encounter a surface impact, you must carefully inspect the riser for damage. If impacted, inspect the area for visible broken fibers, multitude of separation cracks, cracking that appears to resemble a spider-web, dented surface, or a soft flexible surface at the impact point. If any of the above conditions are apparent or suspected, the bow should be considered damaged and should not be drawn or used any further. In the event that the bow was exposed to an impact and damage is evident as described above, you can return the bow to Hoyt for an evaluation. (See warranty information for instructions on returning product to Hoyt). If the riser is determined to be damaged and not fit for use, Hoyt may offer a replacement of damaged components at the owner's expense. Damage, including impact damage, caused accidentally, whether from misuse of the product, or from use not associated with normal archery practices, is NOT

covered under the Hoyt Limited Lifetime warranty.

3) Hoyt Carbon Risers, or any other component of any Hoyt bow, should not be modified in any way.

⚠️WARNING Never mechanically alter or modify your bow as it will likely cause the bow to break. Drilling holes, cutting, filing, or sanding are examples of mechanically altering your bow.

Any modification to any bow or component will immediately void any and all warranty for the bow and/or component.

4) **⚠️WARNING:** Hoyt Carbon Risers are constructed by various aluminum components that are either attached by adhesive or by mechanical fasteners such as screws to the exterior of the riser. Any attempt to remove any of the aluminum factory attached components will damage the bow and could possibly cause harm or injury to the owner or bystanders and will immediately void any and all warranty for the bow and/or components. Do not attempt to remove or adjust the security screws attaching the stabilizer mount or the sight/arrow rest mounting insert.

5) **⚠️WARNING:** Care should be given to not expose Hoyt Carbon Riser equipped bows to any solvents, lubricants, or other substances that contain silicone as the structure could be weakened. A weakened riser has the potential to cause injury to or damage other components.

6) Care should be given to not expose Hoyt Carbon Riser equipped bows to extreme heat, flame, or other adverse conditions that could possibly damage the bow.



7) Composite constructed components, such as a Hoyt Carbon Riser bows may exhibit a creaking sound during the first few shots when the bow is new. This creaking sound could come and go for the first few 100 shots. This is a normal condition for Composite structures and is not a structural failure.

If a Hoyt Carbon Riser bow has been stored for a prolonged period of time without being used (several weeks at a time), the bow may exhibit creaking sound again for the first few shots. This is a normal condition for composite structures and is not a structural failure.

LIMITED LIFETIME WARRANTY

PLEASE READ THIS DOCUMENT CAREFULLY. IT CONTAINS VERY IMPORTANT INFORMATION ABOUT YOUR RIGHTS AND OBLIGATIONS, AS WELL AS LIMITATIONS AND EXCLUSIONS THAT MAY APPLY TO YOU. Hoyt warrants to the **ORIGINAL OWNER** that the Hoyt compound bow riser, limbs, limb pockets and eccentrics will be free from defects in materials and workmanship for the lifetime of the product under the following terms and conditions:

1. Hoyt bows must be purchased from a Genuine Hoyt Retailer (no exceptions).
2. The original owner must retain and provide an original and dated proof of purchase (sales receipt) from a Genuine Hoyt Retailer. Hoyt bows purchased via mail order, through an unauthorized retailer, or over the Internet voids all warranty.
3. THE ORIGINAL OWNER MUST REGISTER THE BOW WITH HOYT WITHIN 30 DAYS OF PURCHASE. To register your bow, visit www.hoyt.com/customer_service/ to complete the registration process electronically, or contact Hoyt at (801) 363-2990 to request a registration card.

4. All compound bows must have the original serial number factory-attached to the bow. The serial number must remain legible. THIS LIMITED LIFETIME WARRANTY IS NOT TRANSFERABLE.

Exclusions from Warranty Coverage:

This Limited Lifetime Warranty covers normal use of the product, and Hoyt does not warrant and is not responsible for:

1. The use of aftermarket products/accessories that alter Hoyt's specs or design.
2. Damage to strings, cables, bearings, damping materials, finish (including paint, anodize, powder coat and film-dipped finishes) resulting from normal wear-and-tear.
3. If bow shows sign of misuse, alteration, or mishandling, this warranty will be void.
4. Use of arrows weighing less than 5 grains per pound of draw weight will void the warranty.
5. Damage to 'other' accessories.
6. Aftermarket replacement strings.
7. Any modification to any bow or component.
8. Bows returned to Hoyt without a Return Authorization number obtained by a Genuine Hoyt Retailer.

OBTAINING WARRANTY SERVICE

To obtain warranty service, you must return your bow to a Genuine Hoyt Retailer. The retailer can help to determine if Hoyt factory service is required or if the retailer can complete the repair. Genuine Hoyt Retailers may provide additional services and apply additional charges for service work performed by the retailer. If the bow must be returned to the factory, THE BOW OWNER IS RESPONSIBLE FOR THE FREIGHT CHARGES TO HOYT. Hoyt, in turn, will pay for the same return freight of the repaired product.

Before any bow is returned to Hoyt, a Return Authorization (RA)

number must be obtained through a Genuine Hoyt Retailer. Please note that Hoyt will not issue RAs to consumers. Bows returned to the factory without a Return Authorization number obtained from a Genuine Hoyt Retailer may be denied warranty service. If Hoyt determines, in its sole discretion, that a bow qualifies for warranty repair, Hoyt will make every effort to repair the bow. Repairs may be performed with original parts when available. Hoyt reserves the right to make part substitutions on warranty coverage for any reason. If original parts are not available, suitable replacement parts/components may be used. If the Hoyt bow is not repairable, but qualifies for warranty coverage, Hoyt will replace the bow with a bow of similar feature and product class in Hoyt's sole determination.

THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, THAT EXTEND BEYOND THOSE WRITTEN HERE. NO AGENT, EMPLOYEE OR REPRESENTATIVE OF HOYT OR ITS RETAILERS HAVE THE AUTHORITY TO BIND HOYT TO ANY AGREEMENT NOT HEREIN STATED.

LIMITATION OF LIABILITY

IN NO EVENT SHALL HOYT BE LIABLE UNDER ANY CIRCUMSTANCE TO YOU OR ANY OTHER PARTY FOR ANY SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING OUT OF OR IN ANY WAY CONNECTED WITH THE PRODUCTS, EVEN IF THE COMPANY OR ANY OF THE COMPANY AFFILIATES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL HOYT OR ANY HOYT AFFILIATE BE LIABLE TO YOU OR ANY OTHER PARTY FOR LOSS, DAMAGE, OR INJURY OF ANY KIND BEYOND THE BOW ITSELF.

This warranty gives you specific legal rights. You may also have other rights which may vary in states or countries.



593 N. Wright Brothers Drive
Salt Lake City, Utah USA 84116-2887

Phone 801.363.2990 Fax 801.537.1470

www.hoyt.com