

READ AND SAVE THESE INSTRUCTIONS

WATER TREATMENT

Pre-treatment systems

Installation, Operation,
and Maintenance Manual



driSteem 

Warnings and cautions

 WARNING	CAUTION
Indicates a hazardous situation that could result in death or serious injury if instructions are not followed.	Indicates a hazardous situation that could result in damage to or destruction of property if instructions are not followed.

mc_051508_1145

 WARNING
<p> Attention installer Read this manual before installing, and leave this manual with product owner. This product must be installed by qualified HVAC and electrical contractors and in compliance with local, state, federal, and governing codes. Improper installation can cause property damage, severe personal injury, or death as a result of electric shock, burns, or fire. DriSteem Technical Support: 800-328-4447</p> <p>Read all warnings and instructions Read this manual before performing service or maintenance procedures on any part of the system. Failure to follow all warnings and instructions could produce the hazardous situations described, resulting in property damage, personal injury, or death. Failure to follow the instructions in this manual can cause moisture to accumulate, which can cause bacteria and mold growth or dripping water into building spaces. Dripping water can cause property damage; bacteria and mold growth can cause illness.</p> <p>If the IOM is missing, go to www.dristeem.com to download a replacement.</p>
<p> Shut down the energy source Before performing service or maintenance procedures on any part of the system, verify that all energy sources are off. Failure to shut down the energy source could result in fire, explosion, electrical shock, and other hazardous conditions. These hazardous conditions could cause property damage, personal injury, or death. Contact with energized circuits can cause property damage, severe personal injury or death as a result of electrical shock or fire. Do not remove electrical panel cover/door or access panels until electrical power is disconnected. Follow the shutdown procedure in the system IOM before performing service or maintenance procedures on any part of the system.</p>

Warnings and cautions

WARNING	
 	<p>Disconnect electrical power</p> <p>Disconnect electrical power before installing supply wiring or performing service or maintenance procedures on any part of the system. Failure to disconnect electrical power could result in fire, electrical shock, and other hazardous conditions. These hazardous conditions could cause property damage, personal injury, or death.</p> <p>Contact with energized circuits can cause property damage, severe personal injury, or death as a result of electrical shock or fire.</p> <p>Follow the shutdown procedure in this manual before performing service or maintenance procedures on any part of the system.</p>
	<p>Electric shock hazard</p> <p>If the system starts up during maintenance, severe bodily injury or death from electric shock could occur. To prevent such start-up, follow the procedure below before performing service or maintenance procedures on this system:</p> <ol style="list-style-type: none">1. Shut off all electrical power to the system using field-installed fused disconnect, and lock all power disconnect switches in OFF position.2. Close field-installed manual water supply shut-off valve.

FILL IN THE FOLLOWING INFORMATION FOR YOUR RECORDS

Date of purchase _____

Customer's name _____

Model number _____

Serial number _____

Table of contents

WARNINGS AND CAUTIONS	ii
OVERVIEW.....	2
Dechlorinator specifications	2
Single water softener specifications	3
Duplex water softener specifications	4
Optional pretreatment skid mounting	6
Skidded single water softener and dechlorinator specifications	7
Skidded duplex water softener and dechlorinator specifications	8
Skidded duplex water softener specifications	9
INSTALLATION	10
Electrical installation	10
Site requirements.....	11
Start-up checklist	13
System startup.....	14
Plumbing and wiring for dual softener 21, 24, 30 inch models	15

Table of contents

OPERATION	17
Softener and dechlorinator start-up	17
Loading the carbon media	20
Loading the water softener media	21
MAINTENANCE	22
Components	22
Troubleshooting	23
Water quality test strips	28
Water quality test log	29
REPLACEMENT PARTS	30
Water treatment system	30
WARRANTY	32

ATTENTION INSTALLER

Read this manual before installing.
Leave manual with product owner.

DriSteem® Technical Support
800-328-4447

WHERE TO FIND MORE INFORMATION

Our website:

The following documents is available on our web site: www.dristeem.com

- Water Treatment Systems Catalog
- RO 200 series Installation, Operation, and Maintenance Manual
- RO 400 series Installation, Operation, and Maintenance Manual

DriCalc® sizing and selection software:

DriCalc, our software for system sizing and selection, can be ordered at our web site.

Call us at 800-328-4447

Obtaining documents from our web site or from DriCalc is the quickest way to view our literature.

Dechlorinator specifications

DECHLORINATOR

The dechlorinator removes chlorine from the water that degrades the reverse osmosis membranes.

120V, single-phase, 60 Hz, 5A electrical service is required for all dechlorinator models, except for the DC-CB dechlorinator (requires no electrical service).

FIGURE 2-2: WALL MOUNT DECHLORINATOR



FIGURE 2-1: DECHLORINATOR



Table 2-1:
Dechlorinator specifications

Dechlorinator model*	Media volume	Dimensions, diameter x height	Connections, in / out	Backwash flow**	Shipping weight***
DC-CB	Carbon black filter	4" x 20" (102 x 508 mm)	1"	—	—
DC-744	0.5 ft ³ (0.014 m ³)	7" x 44" (178 x 1118 mm)	1"	2.7 gpm (10.2 L/m)	100 lbs (45.4 kg)
DC-844	0.75 ft ³ (0.021 m ³)	8" x 44" (203 x 1118 mm)	1"	3.2 gpm (12.1 L/m)	115 lbs (52.2 kg)
DC-948	1.00 ft ³ (0.028 m ³)	9" x 48" (229 x 1219 mm)	1"	4.2 gpm (15.9 L/m)	130 lbs (59.0 kg)
DC-1054	1.50 ft ³ (0.042 m ³)	10" x 54" (254 x 1372 mm)	1"	5.3 gpm (20.1 L/m)	150 lbs (68.0 kg)
DC-1252	2.00 ft ³ (0.050 m ³)	12" x 52" (305 x 1321 mm)	1"	7.5 gpm (28.4 L/m)	190 lbs (86.2 kg)
DC-1354	2.50 ft ³ (0.071 m ³)	13" x 54" (330 x 1372 mm)	1"	10.0 gpm (37.9 L/m)	225 lbs (102.1 kg)
DC-1465	3.00 ft ³ (0.085 m ³)	14" x 65" (356 x 1651 mm)	1"	12.0 gpm (45.4 L/m)	335 lbs (152.0 kg)
DC-1665	4.00 ft ³ (0.113 m ³)	16" x 65" (406 x 1651 mm)	1"	15.0 gpm (56.8 L/m)	385 lbs (174.6 kg)
DC-2162	6.00 ft ³ (0.170 m ³)	21" x 62" (533 x 1575 mm)	1.5"	25.0 gpm (94.6 L/m)	645 lbs (292.6 kg)
DC-2472	8.00 ft ³ (0.227 m ³)	24" x 72" (610 x 1829 mm)	1.5"	33.0 gpm (124.9 L/m)	950 lbs (430.9 kg)
DC-3072	12.50 ft ³ (0.354 m ³)	30" x 72" (762 x 1829 mm)	2"	50.0 gpm (189.3 L/m)	1535 lbs (696.3 kg)

* DC-CB is wall mounted; all other models are floor mounted.

** Based on 60 to 90 psi (415 to 620 kPa) inlet pressure.

*** DC-2162, DC-2472, and DC-3072 media shipped separate, but included in shipping weight total.

Single water softener specifications

WATER SOFTENER AND BRINE TANK

The water softener and brine tank are floor-mounted and exchange water hardness for sodium.

120V, single-phase, 60 Hz, 5A electrical service is required for all water softener models.

FIGURE 3-1: SINGLE WATER SOFTENER AND BRINE TANK

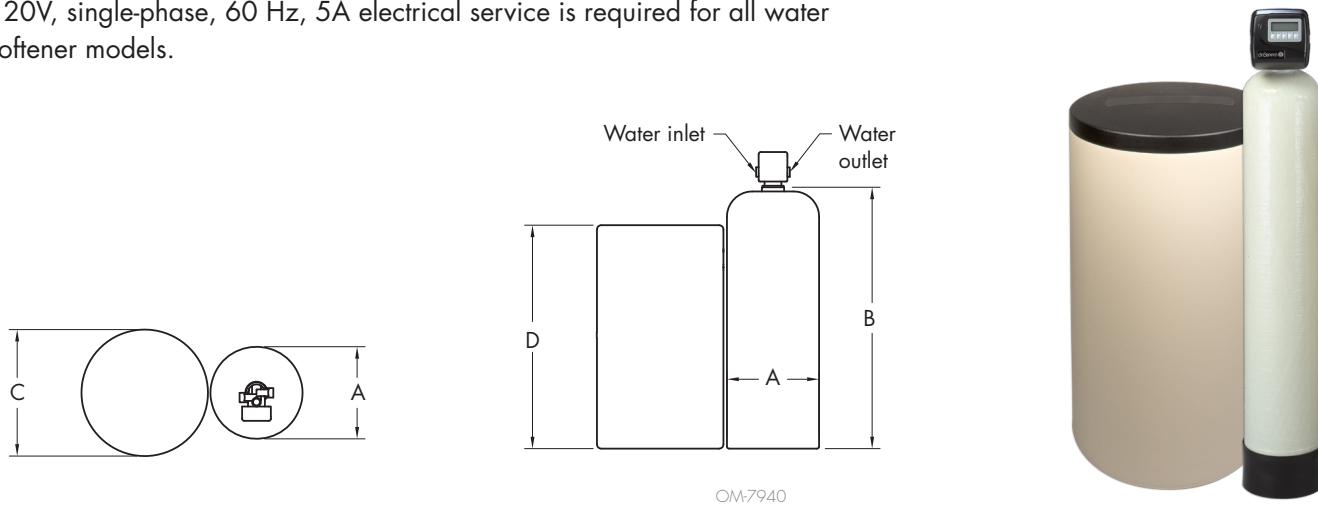


Table 3-1:
Single softener and brine tank specifications

Softener model	Media volume per tank	Resin tank diameter (A) x height (B) (per tank)	Connections, in/out	Backwash flow**	Brine tank diameter (C) x height (D)	Shipping weight***
WS-744	0.5 ft ³ (0.014 m ³)	7" x 44" (178 x 1118 mm)	1"	1.35 gpm (4.9 L/m)	18" x 33" (457 x 838 mm)	110 lbs (49.9 kg)
WS-844	0.75 ft ³ (0.021 m ³)	8" x 44" (203 x 1118 mm)	1"	1.70 gpm (6.4 L/m)	18" x 40" (457 x 1016 mm)	125 lbs (56.7 kg)
WS-948	1.00 ft ³ (0.028 m ³)	9" x 48" (229 x 1219 mm)	1"	2.2 gpm (8.3 L/m)	18" x 40" (457 x 1016 mm)	140 lbs (63.5 kg)
WS-1054	1.50 ft ³ (0.042 m ³)	10" x 54" (254 x 1372 mm)	1"	2.7 gpm (10.2 L/m)	18" x 40" (457 x 1016 mm)	160 lbs (72.6 kg)
WS-1252	2.00 ft ³ (0.050 m ³)	12" x 52" (305 x 1321 mm)	1"	3.2 gpm (12.1 L/m)	18" x 40" (457 x 1016 mm)	200 lbs (90.7 kg)
WS-1354	2.50 ft ³ (0.071 m ³)	13" x 54" (330 x 1372 mm)	1"	4.2 gpm (15.9 L/m)	18" x 40" (457 x 1016 mm)	235 lbs (106.6 kg)
WS-1465	3.00 ft ³ (0.085 m ³)	14" x 65" (356 x 1651 mm)	1"	5.3 gpm (20.1 L/m)	24" x 41" (610 x 1041 mm)	345 lbs (156.5 kg)
WS-1665	4.00 ft ³ (0.113 m ³)	16" x 65" (406 x 1651 mm)	1"	6.5 gpm (24.6 L/m)	24" x 41" (610 x 1041 mm)	395 lbs (179.2 kg)
WS-2162	6.00 ft ³ (0.170 m ³)	21" x 62" (533 x 1575 mm)	1.5"	12.0 gpm (45.4 L/m)	30" x 48" (762 x 1219 mm)	655 lbs (297.1 kg)
WS-2472	8.00 ft ³ (0.227 m ³)	24" x 72" (610 x 1829 mm)	1.5"	15.0 gpm (56.8 L/m)	39" x 48" (991 x 1219 mm)	960 lbs (435.4 kg)
WS-3072	12.50 ft ³ (0.354 m ³)	30" x 72" (762 x 1829 mm)	2"	25.0 gpm (94.6 L/m)	39" x 48" (991 x 1219 mm)	1545 lbs (701.0 kg)

** Based on 60 to 90 psi (415 to 620 kPa) inlet pressure.

*** WS-2162, WS-2472, and WS-3072 media shipped separate, but included in shipping weight total.

Duplex water softener specifications

WATER SOFTENER AND BRINE TANK

The water softener and brine tank are floor-mounted and exchange water hardness for sodium.

120V, single-phase, 60 Hz, 5A electrical service is required for all water softener models.

FIGURE 4-1: DUPLEX WATER SOFTENER AND BRINE TANK

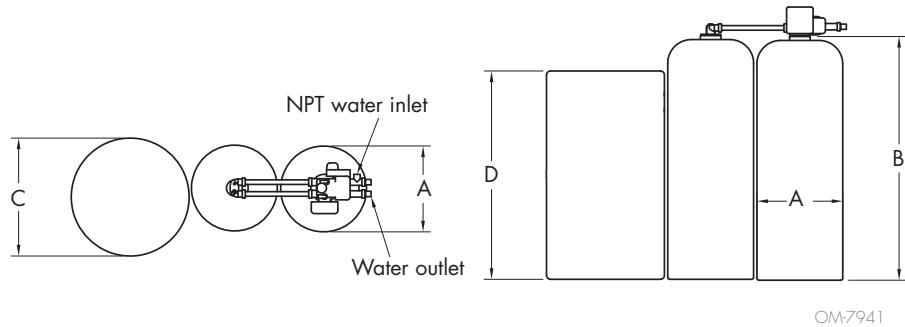


Table 4-1:
Duplex softener and brine tank specifications

Softener model*	Media volume per tank	Resin tank diameter (A) x height (B) (per tank)	Connections, in/out	Backwash flow**	Brine tank diameter (C) x height (D)	Shipping weight
WD-744	0.5 ft ³ (0.014 m ³)	7" x 44" (178 x 1118 mm)	1"	1.35 gpm (4.9 L/m)	100 lbs (45.4 kg)	210 lbs (95.3 kg)
WD-844	0.75 ft ³ (0.021 m ³)	8" x 44" (203 x 1118 mm)	1"	1.7 gpm (6.4 L/m)	18" x 40" (457 x 1016 mm)	250 lbs (113.4kg)
WD-948	1.00 ft ³ (0.028 m ³)	9" x 48" (229 x 1219 mm)	1"	2.2 gpm (8.3 L/m)	18" x 40" (457 x 1016 mm)	270 lbs (122.5 kg)
WD-1054	1.50 ft ³ (0.042 m ³)	10" x 54" (254 x 1372 mm)	1"	2.7 gpm (10.2 L/m)	18" x 40" (457 x 1016 mm)	310 lbs (140.6 kg)
WD-1252	2.00 ft ³ (0.050 m ³)	12" x 52" (305 x 1321 mm)	1"	3.2 gpm (12.1 L/m)	18" x 40" (457 x 1016 mm)	390 lbs (176.9 kg)
WD-1354	2.50 ft ³ (0.071 m ³)	13" x 54" (330 x 1372 mm)	1"	4.2 gpm (15.9 L/m)	18" x 40" (457 x 1016 mm)	460 lbs (208.7 kg)
WD-1465	3.00 ft ³ (0.085 m ³)	14" x 65" (356 x 1651 mm)	1"	5.3 gpm (20.1 L/m)	24" x 41" (610 x 1041 mm)	680 lbs (308.4 kg)
WD-1665	4.00 ft ³ (0.113 m ³)	16" x 65" (406 x 1651 mm)	1"	6.5 gpm (24.6 L/m)	24" x 41" (610 x 1041 mm)	778 lbs (352.9 kg)

** Based on 60 to 90 psi (415 to 620 kPa) inlet pressure.

Duplex water softener specifications

FIGURE 5-1: DUPLEX WATER SOFTENER AND BRINE TANK



Table 5-1:
Duplex softener and brine tank specifications

Softener model*	Media volume per tank	Resin tank diameter (A) x height (B) (per tank)	Connections, in/out	Backwash flow**	Brine tank diameter (C) x height (D)	Shipping weight***
WD-2162	6.00 ft ³ (0.170 m ³)	21" x 62" (533 x 1575 mm)	1.5"	12.0 gpm (45.4 L/m)	30" x 48" (762 x 1219 mm)	1300 lbs (589.7 kg)
WD-2472	8.00 ft ³ (0.227 m ³)	24" x 72" (610 x 1829 mm)	1.5"	15.0 gpm (56.8 L/m)	39" x 48" (991 x 1219 mm)	1910 lbs (866.4 kg)
WD-3072	12.50 ft ³ (0.354 m ³)	30" x 72" (762 x 1829 mm)	2"	25.0 gpm (94.6 L/m)	39" x 48" (991 x 1219 mm)	3080 lbs (1397.1 kg)

** Based on 60 to 90 psi (415 to 620 kPa) inlet pressure.

*** WD-2162, WD-2472, and WD-3072 media shipped separate, but included in shipping weight total.

Optional pretreatment skid mounting

SELECT PRETREATMENT SKID MOUNTING FOR EASE OF INSTALLATION

Reduce installation cost and time by having pretreatment components come pre-assembled. The DriSteem water softener(s), brine tank, and dechlorinator have a single point water inlet, water outlet, and power for all components.

- Save time and cost on installation
- Maximize clearance
- Ensure proper installation and operation

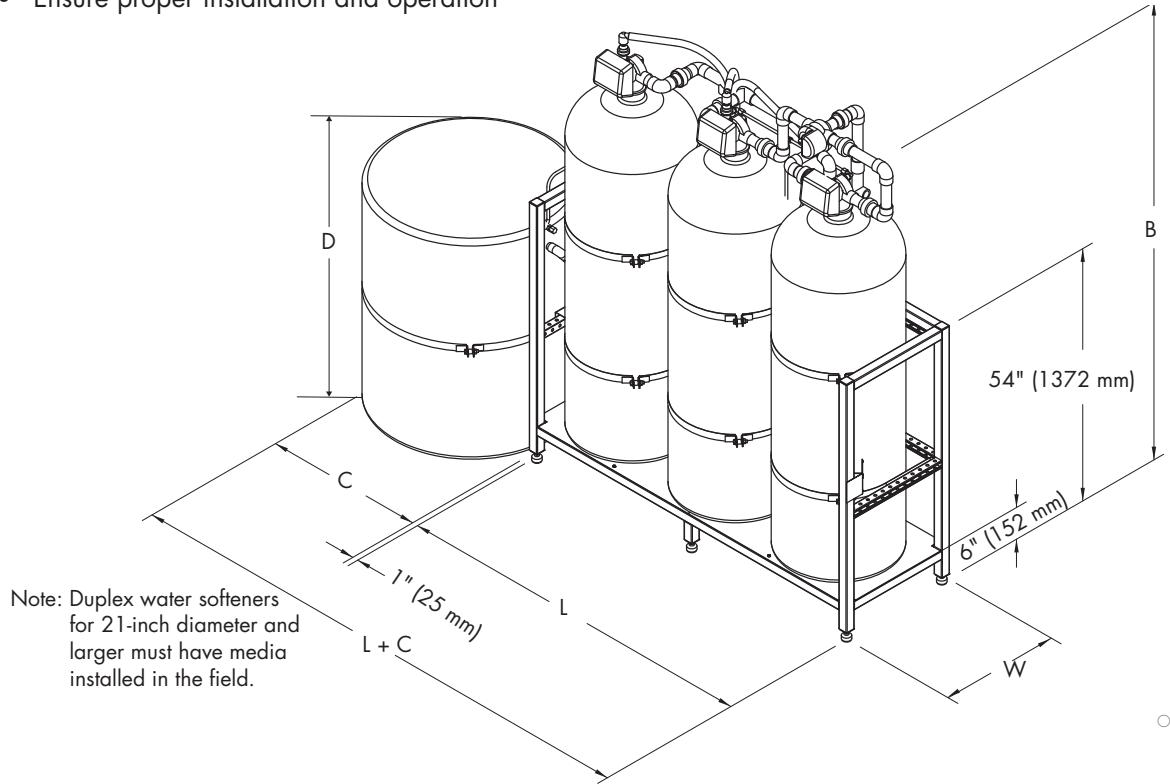


Table 6-1:
Voltages

AC adapter	U.S.
Supply voltage	120 VAC
Supply frequency	60 Hz
Output voltage	12 VAC
Output current	500 mA

Skidded single water softener and dechlorinator specifications

Table 7-1: Skidded single water softener and dechlorinator						
Skid size* (outside dimensions) L x W x H	Tank quantity on skid	Media tank diameter (A) x height (B) (per tank)	Connections, in/out	Backwash flow***	Brine tank diameter (C) x height (D)	Shipping weight
52" x 26" x 54" (1321 x 660 x 1372 mm)	3	7" x 44" (178 x 1118 mm)	1"	1.35 gpm (4.9 L/m)	18" x 33" (457 x 838 mm)	370 lbs (167.8 kg)
52" x 26" x 54" (1321 x 660 x 1372 mm)	3	8" x 44" (203 x 1118 mm)	1"	1.70 gpm (6.4 L/m)	18" x 40" (457 x 1016 mm)	400 lbs (181.4 kg)
52" x 26" x 54" (1321 x 660 x 1372 mm)	3	9" x 48" (229 x 1016 mm)	1"	2.2 gpm (8.3 L/m)	18" x 40" (457 x 1016 mm)	420 lbs (190.5 kg)
52" x 26" x 54" (1321 x 660 x 1372 mm)	3	10" x 54" (254 x 1372 mm)	1"	2.7 gpm (10.2 L/m)	18" x 40" (457 x 1016 mm)	470 lbs (213.2 kg)
52" x 26" x 54" (1321 x 660 x 1372 mm)	3	12" x 52" (305 x 1321 mm)	1"	3.2 gpm (12.1 L/m)	18" x 40" (457 x 1016 mm)	530 lbs (240.4 kg)
52" x 26" x 54" (1321 x 660 x 1372 mm)	3	13" x 54" (330 x 1372 mm)	1"	4.2 gpm (15.9 L/m)	18" x 40" (457 x 1016 mm)	620 lbs (281.2 kg)
66" x 28" x 54" (1676 x 711 x 1372 mm)	3	14" x 65" (356 x 1651 mm)	1"	5.3 gpm (20.1 L/m)	24" x 41" (610 x 1041 mm)	860 lbs (390.1 kg)
66" x 28" x 54" (1676 x 711 x 1372 mm)	3	16" x 65" (406 x 1651 mm)	1"	6.5 gpm (24.6 L/m)	24" x 41" (610 x 1041 mm)	910 lbs (412.8 kg)
100" x 34" x 54" (2540 x 864 x 1372 mm)	3	21" x 62" (533 x 1575 mm)	1.5"	12.0 gpm (45.4 L/m)	30" x 48" (762 x 1219 mm)	1540 lbs (698.5 kg)
66" x 28" x 54" ** (1676 x 711 x 1372 mm)	2	24" x 72" (610 x 1829 mm)	1.5"	15.0 gpm (56.8 L/m)	39" x 48" (991 x 1219 mm)	2090 lbs (948.0 kg)
82" x 28" x 54" ** (2083 x 711 x 1372 mm)	2	30" x 72" (762 x 1829 mm)	2"	25.0 gpm (94.6 L/m)	39" x 48" (991 x 1219 mm)	3280 lbs (1487.8 kg)

* Non-skidded pre-treatment dimensions are 4" (102 mm) less.

** Skid does not include brine tank. The brine tank is floor mounted.

*** Based on 60 to 90 psi (415 to 620 kPa) inlet pressure.

Skidded duplex water softener and dechlorinator specifications

Table 8-1:
Skidded duplex water softener and dechlorinator

Skid size (outside dimensions) L x W x H	Tank quantity on skid	Media tank diameter (A) x height (B) (per tank)	Connections, in/out	Backwash flow***	Brine tank diameter (C) x height (D)	Shipping weight
66" x 28" x 54" (1676 x 711 x 1372 mm)	4	7" x 44" (178 x 1118 mm)	1"	1.35 gpm (4.9 L/m)	18" x 33" (457 x 838 mm)	490 lbs (222.3 kg)
66" x 28" x 54" (1676 x 711 x 1372 mm)	4	8" x 44" (203 x 1118 mm)	1"	1.7 gpm (6.4 L/m)	18" x 40" (457 x 1016 mm)	545 lbs (247.2 kg)
66" x 28" x 54" (1676 x 711 x 1372 mm)	4	9" x 48" (229 x 1016 mm)	1"	2.2 gpm (8.3 L/m)	18" x 40" (457 x 1016 mm)	575 lbs (260.8 kg)
66" x 28" x 54" (1676 x 711 x 1372 mm)	4	10" x 54" (254 x 1372 mm)	1"	2.7 gpm (10.2 L/m)	18" x 40" (457 x 1016 mm)	640 lbs (290.3 kg)
66" x 28" x 54" (1676 x 711 x 1372 mm)	4	12" x 52" (305 x 1321 mm)	1"	3.2 gpm (12.1 L/m)	18" x 40" (457 x 1016 mm)	760 lbs (344.7 kg)
66" x 28" x 54" (1676 x 711 x 1372 mm)	4	13" x 54" (330 x 1372 mm)	1"	4.2 gpm (15.9 L/m)	18" x 40" (457 x 1016 mm)	865 lbs (392.4 kg)
82" x 28" x 54" (2083 x 711 x 1372 mm)	4	14" x 65" (356 x 1651 mm)	1"	5.3 gpm (20.1 L/m)	24" x 41" (610 x 1041 mm)	1215 lbs (551.1 kg)
82" x 28" x 54" (2083 x 711 x 1372 mm)	4	16" x 65" (406 x 1651 mm)	1"	6.5 gpm (24.6 L/m)	24" x 41" (610 x 1041 mm)	1363 lbs (618.2 kg)
82" x 28" x 54" ** (2083 x 711 x 1372 mm)	3	21" x 62" (533 x 1575 mm)	1.5"	12.0 gpm (45.4 L/m)	30" x 48" (762 x 1219 mm)	2145 lbs (972.9 kg)
82" x 28" x 54" ** (2083 x 711 x 1372 mm)	3	24" x 72" (610 x 1829 mm)	1.5"	15.0 gpm (56.8 L/m)	39" x 48" (991 x 1219 mm)	3060 lbs (1387.9 kg)
100" x 34" x 54" ** (2540 x 864 x 1372 mm)	3	30" x 72" (762 x 1829 mm)	2"	25.0 gpm (94.6 L/m)	39" x 48" (991 x 1219 mm)	4855 lbs (2202.2 kg)

* Non-skidded pre-treatment dimensions are 4" (102 mm) less.

** Skid does not include brine tank. The brine tank is floor mounted.

*** Based on 60 to 90 psi (415 to 620 kPa) inlet pressure.

Skidded duplex water softener specifications

Table 9-1: Skidded duplex water softener						
Skid size (outside dimensions) L x W x H	Tank quantity on skid	Media tank diameter (A) x height (B) (per tank)	Connections, in/out	Backwash flow***	Brine tank diameter (C) x height (D)	Shipping weight
52"x 26" x 54" (1321 x 660 x 1372 mm)	3	7" x 44" (178 x 1118 mm)	1"	1.35 gpm (4.9 L/m)	18" x 33" (457 x 838 mm)	370 lbs (167.8 kg)
52"x 26" x 54" (1321 x 660 x 1372 mm)	3	8" x 44" (203 x 1118 mm)	1"	1.7 gpm (6.4 L/m)	18" x 40" (457 x 1016 mm)	410 lbs (185.9 kg)
52"x 26" x 54" (1321 x 660 x 1372 mm)	3	9" x 48" (229 x 1016 mm)	1"	2.2 gpm (8.3 L/m)	18" x 40" (457 x 1016 mm)	430 lbs (195.0 kg)
52"x 26" x 54" (1321 x 660 x 1372 mm)	3	10" x 54" (254 x 1372 mm)	1"	2.7 gpm (10.2 L/m)	18" x 40" (457 x 1016 mm)	470 lbs (213.2 kg)
52"x 26" x 54" (1321 x 660 x 1372 mm)	3	12" x 52" (305 x 1321 mm)	1"	3.2 gpm (12.1 L/m)	18" x 40" (457 x 1016 mm)	550 lbs (249.5 kg)
52"x 26" x 54" (1321 x 660 x 1372 mm)	3	13" x 54" (330 x 1372 mm)	1"	4.2 gpm (15.9 L/m)	18" x 40" (457 x 1016 mm)	620 lbs (281.2 kg)
66"x 28" x 54" (1676 x 711 x 1372 mm)	3	14" x 65" (356 x 1651 mm)	1"	5.3 gpm (20.1 L/m)	24" x 41" (610 x 1041 mm)	860 lbs (390.1 kg)
66"x 28" x 54" (1676 x 711 x 1372 mm)	3	16" x 65" (406 x 1651 mm)	1"	6.5 gpm (24.6 L/m)	24" x 41" (610 x 1041 mm)	958 lbs (434.5 kg)
100"x 34" x 54" (2540 x 864 x 1372 mm)	3	21" x 62" (533 x 1575 mm)	1.5"	12.0 gpm (45.4 L/m)	30" x 48" (762 x 1219 mm)	1540 lbs (698.5 kg)
66"x 28" x 54" ** (1676 x 711 x 1372 mm)	2	24" x 72" (610 x 1829 mm)	1.5"	15.0 gpm (56.8 L/m)	39" x 48" (991 x 1219 mm)	2090 lbs (948.0 kg)
82"x 28" x 54" ** (2083 x 711 x 1372 mm)	2	30" x 72" (762 x 1829 mm)	2"	25.0 gpm (94.6 L/m)	39" x 48" (991 x 1219 mm)	3280 lbs (1487.8 kg)

* Non-skidded pre-treatment dimensions are 4" (102 mm) less.

** Skid does not include brine tank. The brine tank is floor mounted.

*** Based on 60 to 90 psi (415 to 620 kPa) inlet pressure.

Electrical installation


The control valve and fittings are not designed to support the weight of the system or the plumbing.

- Teflon tape is recommended to be used on all threads. Do not use pipe dope, as it may break down the plastics in the control valve.
- Allow one foot of clearance to service WS1.5 valves and two feet of clearance to service WS2 and WS2QC valves.
- The valve will withstand transportation and storage temperatures of -13 °F (-25 °C) to 131 °F (55 °C) and for short periods up to 158 °F (70 °C). If valve has been exposed to freezing conditions let valve warm up to room temperature before running water through it. The valve has been packaged to prevent damage from the effects of normal humidity, vibration and shock.

SINGLE SOFTENER LOCKOUT SWITCH

Single softeners have a RO lockout switch if it is desired to lockout the RO system to prevent any hard water passing to the RO system when the softeners are in backwash. See Figure 10-1 for connections to the RO system lockout terminals.

FIGURE 10-1: SINGLE SOFTENER LOCKOUT SWITCH WIRING

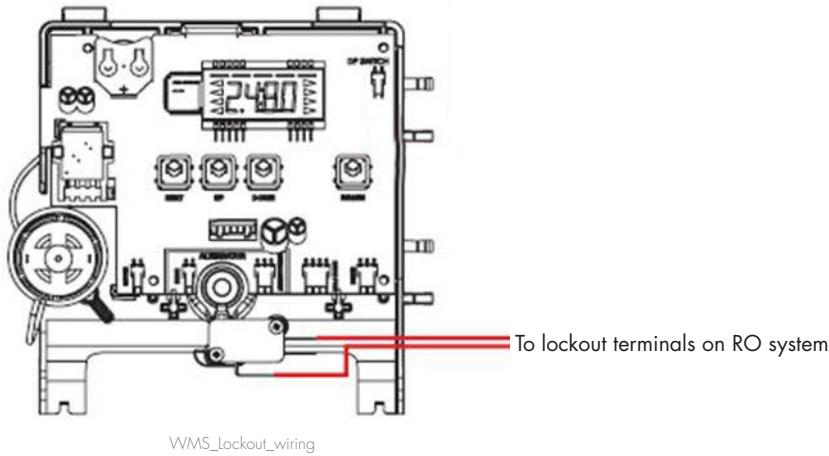

CAUTION

Do not use Vaseline, oils, other hydrocarbon lubricants or spray silicone anywhere. A silicone lubricant may be used on black o-rings but is not necessary.

CAUTION

Hydrocarbons such as kerosene, benzene, gasoline, etc., may damage products that contain o-rings or plastic components. Exposure to such hydrocarbons may cause the products to leak. Do not use the products(s) contained in this document on water supplies that contain hydrocarbons such as kerosene, benzene, gasoline, etc.

CAUTION

DriSteem water meters should not be used as the primary monitoring device for critical or health effect applications.

Site requirements

SITE REQUIREMENTS

1. The plug in Power Adapter is for dry locations only, and should be connected to an uninterrupted outlet installed within 15 feet (4.57 meters) of the water conditioner. If the Power Adapter cord has not yet been connected to the control valve, remove the control valve cover and the drive bracket, and thread the Power Adapter cord through the hole in the back plate. Reinstall the drive bracket. Weave the cord through the hooks on the right hand side of the drive bracket and connect the end to the four-prong connector on the printed circuit board. Replace the cover, and plug the Power Adapter into an uninterrupted outlet.
2. The tanks should be on a firm, level surface.
3. All plumbing should be done in accordance with local codes.
4. Do not locate unit where it or its connections (including the drain and overflow lines) will ever be subjected to room temperatures below 40° F (4° C).
5. INLET/OUTLET PLUMBING: Connect to a supply line downstream of outdoor spigots. Install an inlet shutoff valve and plumb to the unit's inlet. Installation of a bypass valve is recommended. If using plastic fittings, ground the water conditioner per local electrical codes. Do not install any water conditioner with less than 10 feet of piping between its outlet and the inlet of a water heater. If a water meter is used, install the water meter on the outlet side of the control valve. The turbine assembly may be oriented in any direction, but is usually oriented pointing up to reduce drainage out of the pipe during service.
6. Locate the water conditioner so the distance between the drain and the water conditioner is as short as possible. All units are shipped without a drain line flow control washer. Correctly size the drain line and install an appropriately sized drain line flow control. 1.5" valves are shipped with a $\frac{3}{4}$ " fitting that can be used with the drain line flow controls up to 10 gpm, or an optional 1" fitting can be purchased to be used with drain line flow controls up to 25 gpm. For higher backwash rates, the adapter can be removed and the 1 $\frac{1}{4}$ " NPT threaded drain outlet can be used. For 2" valves the drain outlet is 1.5" NPT threads. Solder joints near the drain must be done prior to connecting the drain line flow control fitting. Leave at least 6" (152.4mm) between the drain line flow control fitting and the solder joints to prevent heat from damaging the flow control. Avoid elevating the drain line above the control valve where possible. Discharge the drain line through an air gap to a receptacle in accordance with local plumbing codes.

IMPORTANT: Never insert a drain line directly into a drain, sewer line or trap. Always allow an air gap between the drain line and the receptacle to prevent back siphonage.


Site requirements

7. Regenerator tanks should be accessible for easy refilling. If the control valve is to be used to regenerate the water conditioner with brine (saturated salt solution) or other regenerants, use a polyethylene tube to connect the brine valve contained in the regenerator tank to the regenerator port on the control valve. It is recommended the brine valve contain a safety float. The 1.5" control valve's regenerator port has a $\frac{1}{2}$ " fitting. Note: $\frac{1}{2}$ " tubing that runs longer than 6 feet may restrict draw rates with G and H injectors. A 5/8" fitting is also available.

The 2" control valve regenerator port has a 1" threaded connection. To ensure acceptable operation of the injectors, use 1" pipe to connect to the brine tank.

An overflow drain line from the regenerator tank that discharges into an acceptable drain is recommended, as a regenerator overflow could damage furnishings or the building structure. Connect a line to the overflow fitting on the regenerator tank. If an overflow fitting is not already installed on the regenerator tank, install one. Do not elevate the overflow drain line. Discharge the overflow drain line through an air gap to a receptacle in accordance with local plumbing codes.

FIGURE 12-1: WATER SOFTENER CLEARANCE

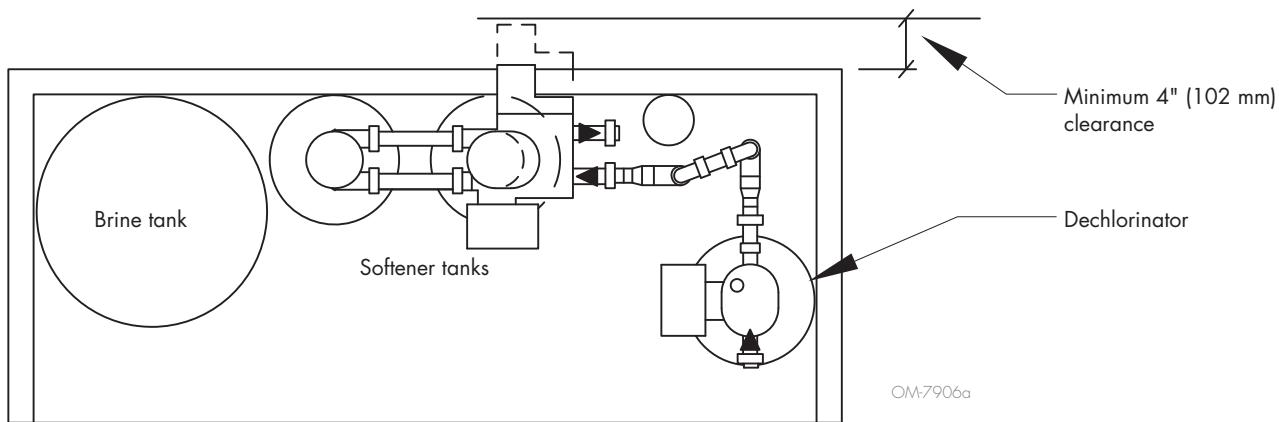

Start-up checklist

If an item in the Start-up checklist below does not apply to your system, skip to the next item and continue the process.

- Read this manual and all other information that was provided with your system.
- Verify that all field wiring is done according to the instructions in this manual and in the unit wiring diagram.
- Confirm that proper grounding and an approved earth ground are provided.
- Slowly turn on the water supply and confirm there are no leaks.
- Add water to the brine tank. 1/3 water (12-inches) water and 2/3 salt.
- Systems with tank-style carbon filter with control valve: Ensure that elastomeric Drain Line Flow Control restrictor washer is installed correctly in drain outlet plumbing assembly. This is required to prevent overflow and potential carry-over of carbon to the drain system.

See "Dechlorinator" on Page 22 of this manual.

- Inspect to insure that no flexible plumbing lines have been kinked or damaged during installation.

System startup

1. After installation is completed, turn on the supply water to check for leaks.
2. Fully open a cold water faucet downstream of the system.
3. Allow water to run until clear.
4. Close the cold water faucet.
5. Turn off the supply water.
6. The system is now ready for startup.

SYSTEM STARTUP

7. Initiate manual regeneration of the control valve to regenerate: press the REGEN button for three seconds.
8. Ensure drain line flow remains steady for 10 minutes or until clear. Step through the different regeneration cycles by pressing the REGEN button again.
9. Observe regeneration effluent and continue to regenerate until discharge is clear. Steps 7 and 8 may need to be repeated as necessary.
10. Observe that the brine tank is filling during brine tank refill cycle.
11. Install brine tank overflow line. Attach plastic tubing to the fittings from the brine tank and run to an open drain. This drain line will not be under pressure. Do not tie into the backwash drain line. This line should be higher than the normal drain line, and must be a separate line from fitting to drain. It is a safety overflow drain and will not be in use during normal operation.
12. Observe that the valve advances through the different regeneration cycles and ends in service. Step through the different regeneration cycles by pressing REGEN.
13. Fill brine tank with salt. Salt may be sodium chloride (NaCl) or potassium chloride (KCl). Fill tank to only 2/3 full. Note: The brine tank holds a large quantity of salt, so you will not need to refill at frequent intervals. Refilling the brine tank with salt should be performed after your system is successfully installed and has been operating trouble-free. Brine tank should be refilled with salt at least two hours before the next generation is performed.
14. Review Tables 17-1 and 18-1 to ensure settings are properly programmed before placing the softener in service.

Plumbing and wiring for dual softener 21, 24, 30 inch models


Note:

- All plumbing is to be done in accordance with state and local codes.
- The control valve, fittings and/or bypass are designed to accommodate minor plumbing misalignments but are not designed to support the weight of a system or the plumbing.
- Connect to a supply line downstream of outdoor spigots. Install an inlet shutoff valve and plumb them to the unit's inlet. Installation of a bypass valve is recommended. If using plastic fittings, ground the water conditioner per local electrical codes.
- Do not use pipe dope or other sealant on threads. Use teflon tape on threaded inlet, outlet and drain fittings.

1. Plumb the Motorized Alternating Valve (MAV) according to Figure 15-1. Note: Ensure that the valve labeled "Alt A" is connected to the "A" port on the MAV, and the valve labeled "Alt B" is connected to the "B" port.
2. Install connecting piping between raw water source and input pipe on control valve.
3. Install drain line from control valve to a free flowing drain. Solder joints near the drain must be done prior to connecting the drain line flow control fitting. Leave at least 6" (152.4mm) between the drain line flow control fitting and the solder joints to prevent heat from damaging the flow control. Avoid elevating the drain line above the control valve where possible. Discharge the drain line through an air gap to a receptacle in accordance with local plumbing codes.

Important: Never insert a drain line directly into a drain, sewer line or trap. Always allow an air gap between the drain line and the receptacle to prevent back siphonage.

FIGURE 15-1: PLUMBING THE MOTORIZED ALTERNATING VALVE

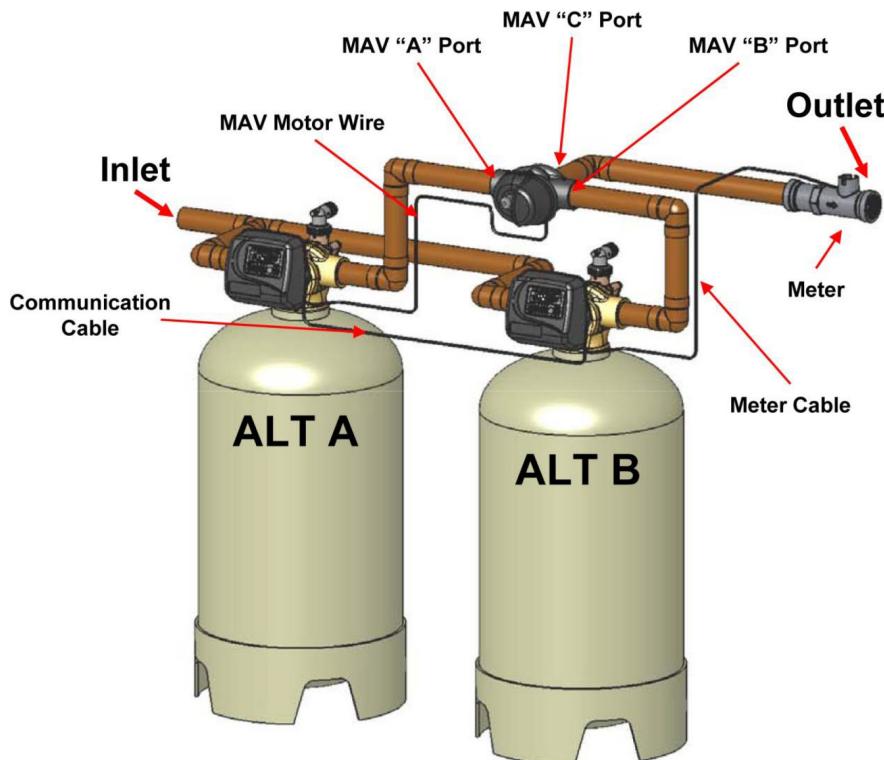

Plumbing and wiring for dual softener 21, 24, 30 inch models

4. Install the water meter on the outlet side of the control valve. The meter may be threaded directly into the valve or may be plumbed separately downstream of the unit. Ensure the arrow on the meter body is going the same direction as the water flow. The turbine assembly may be oriented in any direction, but is usually oriented pointing up to reduce drainage out of the pipe during service. Meter can be installed horizontally or vertically.
5. Install piping between meter output and point of use.
6. Use a tee to install Brine/Refill line between brine tank and regenerant line.
7. Install an overflow drain line from the regenerant tank. Connect a line to the 1" overflow fitting on the regenerant tank. Do not elevate the overflow drain line. Discharge the overflow drain line through an air gap to a receptacle in accordance with local plumbing codes.

VALVE WIRING

1. Connect MAV Motor Wire & Interconnect cable to valve head Alt A:
 - On the backside of the valve, remove the strain relief cover with a screwdriver.
 - Remove the cover of the valve by pulling out on the release tabs located on each side of the cover.
 - Feed the MAV motor wire and interconnect (communication) cable through the hole in the back of the valve.
 - Connect the MAV motor wire to the two pin connector labeled "DRIVE" on the PC Board.
 - Connect the interconnect (communication) cable to the three pin connector labelled "INTERCONNECT CABLE" on the PC Board.
 - After connecting the cables, weave the wires through the strain relief on the backside of the valve, and replace the strain relief cover and screw. Replace the valve cover.
2. Connect MAV Cables to valve head Alt B:
 - On the backside of the valve, remove the strain relief cover with a screwdriver.
 - Remove the cover of the valve by pulling out on the release tabs located on each side of the cover.
 - Feed the other end of the interconnect (communication) cable & the meter cable through the hole in the back of the valve.
 - Connect the interconnect cable to the three pin connector labelled "INTERCONNECT CABLE" on the PC Board.
 - After connecting the cables, weave the wires through the strain relief on the backside of the valve, and replace the strain relief cover and screw. Replace the valve cover.
 - Ensure meter cable is connected to the meter assembly.

Softener and dechlorinator start-up

Table 17-1:
Set time of day

Buttons	Description
	<p>1. Press NEXT until the time of day screen is displayed. 2. Press and hold the \uparrow or \downarrow until the SET indicator is displayed and the hour flashes. 3. Press the \uparrow or \downarrow until the correct hour is displayed. 4. Press NEXT. The minutes will flash. 5. Press \uparrow or \downarrow until the correct minute is displayed. 6. Press NEXT to return to the display screen.</p>
	<p>Note: In the event of a prolonged power outage, time of day flashes, indicating that it needs to be reset. All other information will be stored in memory no matter how long the power outage. Complete the steps above to reset the time of day.</p>

Softener start-up

Table 18-1:
Softener start-up

Buttons	Description
	To enter Installer Display press NEXT and up simultaneously for about 5 seconds and release.
	Press up or down to enter the volumetric capacity in gallons. See Table 19-1. Press NEXT to go to the Day Override screen. Press REGEN to return to previous step.
	Day Override: When volume capacity is set to "off", sets the number of days between regenerations. When volume capacity is set to AUTO or to a volume, sets the maximum number of days between regenerations. If value set to "off", regeneration initiation is triggered solely by volume used. If value is set in days (allowable range from 1 to 28) regeneration initiation will be called for on that day regardless of actual water usage. Set Day Override using up or down : <ul style="list-style-type: none">• number of days between regeneration (1 to 28); or• "off". Press NEXT. Press REGEN to return to previous step.
	Next Regeneration Time (hour): Set the hour of day for regeneration using up or down . The default time is 2:00. This display will show "REGEN on 0 GAL" if "on 0" is selected in Set Regeneration Time. Press NEXT. Press REGEN to return to previous step.
	Next Regeneration Time (minutes): Set the minutes of day for regeneration using up or down . Press NEXT to exit Installer Display Settings. Press REGEN to return to previous step.
EXIT INSTALLER DISPLAY SETTINGS	

Softener start-up

SALT USAGE AND GRAINS CAPACITY SETTINGS

The softener can be set to use different amounts of salt per regeneration. The higher the quantity of salt used, the higher the resin's hardness removing capacity will be. DriSteem recommends using 10lbs/cu. ft. Alternatively, higher salt usage may be set in order to maximize resin capacity between regenerations, or a lower salt usage settings can be used to reduce salt consumption, but this will result in more frequent regeneration.

- To find volume capacity:
 - Find the model and desired salt setting from Table 19-1. DriSteem recommends using 10lbs/cu. ft. to find the total grains capacity for the tank model.
 - Divide the grains capacity by the number of grains per gallon of hardness present in the feed water. (Example: If feed water is 10 grains per gallon hardness, the WS-744 [with 10cu. ft. salt setting] has 14,500 grains capacity. $14,500 \div 10 = 1,450$ gallon capacity).
- To find brine fill time:
 - Use number from Brine fill time column for the model number in the appropriate salt settings column.

Water softener salt quantity estimate

Total brine tank volume (cubic inches) = $\pi r^2 h$

- r = radius of the brine tank in inches
- h = height of the brine tank in inches

Pounds of salt needed =

$$2/3 \times (\text{Brine Tank Volume} / 1728) \times 28$$

Example

For a WS-1465 softener, the pounds of salt needed = $2/3 \times (\pi \times 242 \times 41 / 1728) \times 28 = 200$ lbs

Table 19-1:
Capacity (per tank) at various pounds of salt per regeneration settings

Model	15 lbs/cu. ft.			10 lbs/cu. ft. (Recommended)			7.5 lbs/cu. ft.			5 lbs/cu. ft.		
	Grains capacity	Salt used per regen (pounds)	Brine fill time (minutes)	Grains capacity	Salt used per regen	Brine fill time (minutes)	Grains capacity	Salt used per regen	Brine fill time (minutes)	Grains capacity	Salt used per regen	Brine fill time (minutes)
WS-744	15,000	7.5	5.0	14,500	5.0	3.3	12,850	3.8	2.5	10,000	2.5	1.7
WS-844	18,000	9.0	6.0	17,400	6.0	4.0	15,420	4.5	3.0	12,000	3.0	2.0
WS-948	22,500	11.3	7.5	21,750	7.5	5.0	19,275	5.6	3.8	15,000	3.8	2.5
WS-1054	37,500	18.8	12.5	36,250	12.5	8.3	32,125	9.4	6.3	25,000	6.3	4.1
WS-1252	52,500	26.3	17.5	50,750	17.5	11.6	44,975	13.1	8.8	35,000	8.8	5.8
WS-1354	60,000	30.0	20.0	58,000	20.0	13.2	51,400	15.0	10.0	40,000	10.0	6.6
WS-1465	90,000	45.0	30.0	87,000	30.0	19.8	77,100	22.5	15.0	60,000	15.0	9.9
WS-1665	105,000	52.5	35.0	101,500	35.0	23.1	89,950	26.3	17.5	70,000	17.5	11.6
WS-2162	198,000	90.0	60.0	174,000	60.0	40.0	152,400	45.0	30.0	120,000	30.0	20.0
WS-2472	264,000	120.0	80.0	232,000	80.0	53.3	203,200	60.0	40.0	160,000	40	26.7
WS-3072	412,500	188.0	28.5	362,500	125.0	18.9	317,000	94.0	14.2	250,000	63.0	9.5

Loading the carbon media

LOADING THE CARBON MEDIA

1. Place tank on a level, solid surface in the correct position for installation. Lift the riser tube from the tank, keeping the attached hub within the opening of the tank. Within the tank, assemble the laterals onto the hub, twisting each lateral into the hub to lock securely. Gently lower the assembly to the bottom of the tank. The top of the riser tube should be about level with the top of the tank. (See Figure 20-1).
2. The "riser tube" inside the media/resin tank delivers treated water to your control valve. It will need to be temporarily covered with tape on the top end to prevent anything from falling down inside the tube during loading.
3. Step back and look at the tank to make sure it is standing straight, and not tilted. The black base on the bottom of the tank should also be straightened before filling the tank. If your tank is tilted, simply pick up the tank 2-3 inches off the floor and drop it gently (but firmly) down, favoring the side of the base that needs to be adjusted.
4. Before loading the media, fill the tank with 2-3 feet of water (or 1/3 full, depending on the tank size), to soften the fall of the rocks and prevent damage to the distributor. To load the media, use a funnel in the top of the media tank with the riser tube still inside. Make sure the riser tube is covered with tape to keep media out.
5. Scoop the media into the funnel, slowly letting it fall down inside the media tank around the riser tube. Fill the tank with the media provided, pouring the media in the following order (1st will end up on the bottom of the tank, last will end up at the top of the tank, etc.). Note: The tank will be approximately 1/2 - 2/3 full after loading is complete.
 - I. Gravel – YMGRVL11618 – 1 CF (100 lbs.) per bag
 - II. Gravel 1/4" x 1/8" – YMGRVL1418 – 0.5 CF (50 lbs) per bag (not used in DC-2162)
 - III. YMC1240RCOAL – 1 CF (27.5 lbs.) per bag
6. Remove the funnel from the top of the tank, and the tape from the end of the riser tube. Brush any loose media or resin off the top opening of the tank.
7. The bottom of the control valve has an opening with O-rings inside; lubricate the O-ring with a non-petroleum based lubricant. Position the valve over the top of the media tank, making sure the top of the riser tube inserts inside the opening in the bottom of the valve.
8. Screw the valve down into the media tank. Another person should hold the tank as the valve is being snugly tightened onto the tank. Do not over-tighten. Tighten until snug, tighten a bit more, then Stop. The large o-ring will seal itself.

FIGURE 20-1: LOADING THE MEDIA

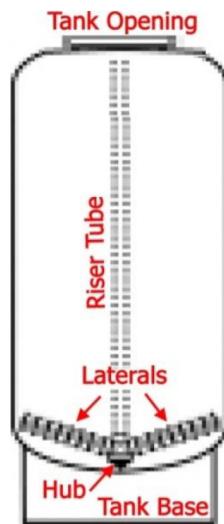


Table 20-1:
Carbon media quantity per model

Carbon model	I. Gravel 1/16 x 1/8	II. Gravel 1/4 x 1/8	III. Carbon
DC-2162	1 CF (100 lbs)	N/A (0)	6 CF (165 lbs)
DC-2472	1 CF (100 lbs)	1 CF (100 lbs)	8 CF (220 lbs)
DC-3072	2 CF (200 lbs)	2 CF (200 lbs)	12.5 CF (344 lbs)

Loading the water softener media

LOADING THE WATER SOFTENER MEDIA

1. Place each resin tank on a level, solid surface in the correct position for installation, taking note of correct ALT A and ALT B tank positions. Lift the riser tube from the tank, keeping the attached hub within the opening of the tank. Within the tank, assemble the laterals onto the hub, twisting each lateral into the hub to lock securely. Gently lower the assembly to the bottom of the tank. The top of the riser tube should be about level with the top of the tank. (See Figure 20-1).
2. The "riser tube" inside the media/resin tank delivers treated water to your control valve. It will need to be temporarily covered with tape on the top end to prevent anything from falling down inside the tube during loading.
3. Step back and look at the tank to make sure it is standing straight, and not tilted. The black base on the bottom of the tank should also be straightened before filling the tank. If your tank is tilted, simply pick up the tank 2-3 inches off the floor and drop it gently (but firmly) down, favoring the side of the base that needs to be adjusted.
4. Before loading the media, fill the tank with 2-3 feet of water (or 1/3 full, depending on the tank size), to soften the fall of the rocks and prevent damage to the distributor. To load the media, use a funnel in the top of the media tank with the riser tube still inside. Make sure the riser tube is covered with tape to keep media out.
5. Scoop the media into the funnel, slowly letting it fall down inside the media tank around the riser tube. Fill the tank with the media provided, pouring the media in the following order (1st will end up on the bottom of the tank, last will end up at the top of the tank, etc.). Note: The tank will be approximately 1/2 - 2/3 full after loading is complete. Refer to Table 21-1 for the proper quantities of each media.
 - I. Gravel – YMGRVL11618 – 1 CF (100 lbs.) per bag
 - II. Gravel 1/4" x 1/8" – YMGRVL1418 – 0.5 CF (50 lbs) per bag (not used in DC-2162)
 - III. Resin - CGS - 1CF (50 lbs) per bag
6. Remove the funnel from the top of the tank, and the tape from the end of the riser tube. Brush any loose media or resin off the top opening of the tank.
7. The bottom of the control valve has an opening with O-rings inside; lubricate the O-ring with a non-petroleum based lubricant. Position the valve over the top of the media tank, making sure the top of the riser tube inserts inside the opening in the bottom of the valve.
8. Screw the valve down into the media tank. Another person should hold the tank as the valve is being snugly tightened onto the tank. Do not over-tighten. Tighten until snug, tighten a bit more, then Stop. The large o-ring will seal itself.

Table 21-1:
Water softener resin and media quantity per model

Water softener model	I. Gravel 1/16 x 1/8	II. Gravel 1/4 x 1/8	III. Softening resin (per tank)
DC-2162	1 CF (100 lbs)	N/A (0)	6 CF (300 lbs)
DC-2472	1 CF (100 lbs)	1 CF (100 lbs)	8 CF (400 lbs)
DC-3072	2 CF (200 lbs)	2 CF (200 lbs)	12.5 CF (638 lbs)

Components

DECHLORINATOR

1. Visually inspect components for leaks or breakage.
2. Monthly, have a water sample taken after dechlorinator to check for chlorine. If 2 ppm or greater, replace carbon media.

WATER SOFTENER

1. Check brine tank salt level at least weekly. Maintain salt level above the half-full mark at all times.
Note: DriSteem recommends using pulverized salt because it dissolves easily.
2. Visually inspect all components for leaks or breakage.
3. Annually, have a water sample taken downstream from water softener to check for hardness. If water hardness is 15 ppm or greater, make sure there is salt in brine tank. If there is salt, and water hardness is 15 ppm or greater, contact DriSteem for water softener resin replacement.

Troubleshooting

Table 23-1:
Troubleshooting

Issue	Possible Cause	Solution
1. No display.	No power at electric outlet.	Repair outlet or use working outlet.
	Control valve power adapter not plugged into outlet or power cord end not connected to PC board connection.	Plug power adapter into outlet or connect power cord end to PC board connection.
	Improper power supply.	Verify proper voltage is being delivered to PC board.
	Poor connection between POD connector and PC board.	Check connector on POD, possible broken wire or terminal pin not inserted properly in connector. Clean pins on PC board by plugging & unplugging the POD connector a few times to remove excess protective coating.
	Defective power adapter.	Replace power adapter.
	Defective PC board.	Replace PC board.
2. Does not display correct time of day.	Power Adapter plugged into electric outlet controlled by light switch.	Use uninterrupted outlet.
	Tripped breaker switch and/or tripped GFI.	Reset breaker switch and/ or GFI switch.
	Power outage.	Reset time of day.
	Defective PC board.	Replace PC board.
3. Display does not indicate that water is flowing. Refer to user instructions for how the display indicates water is flowing.	Bypass/ isolation valve in bypass position.	Turn bypass/ isolation handles to place in service position.
	Meter is not connected to meter connection on PC board.	Connect meter to three pin connection labeled FLOW on PC board.
	Restricted/ stalled meter turbine.	Remove meter and check for rotation or foreign material.
	Meter wire not installed securely into three pin connector.	Verify meter cable wires are installed securely into three pin connector labeled FLOW.
	Defective meter.	Replace meter
	Defective PC board.	Replace PC board.
4. Control valve regenerates at wrong time of day.	Power outage.	Reset time of day.
	Time of day not set correctly.	Reset to correct time of day.
	Time of regeneration set incorrectly.	Reset regeneration time.
	Control valve set at "on 0" (immediate regeneration).	Check programming setting and reset to dEL (for a delayed regen time)
5. Time of day flashes on and off.	Power outage.	Reset time of day.
6. Control valve does not regenerate automatically when the REGEN button is depressed and held.	Broken drive gear or drive cap assembly.	Replace drive gear or drive cap assembly. Contact Dristeem technical support.
	Defective PC board.	Replace PC board.
	For the case of systems, another unit in regen would not allow another unit to go into regeneration.	Wait for unit in regeneration to finish.

Troubleshooting

Table 24-1:
Troubleshooting

Issue	Possible Cause	Solution
7. Control valve does not regenerate automatically but does when the REGEN button is depressed and held.	Bypass/ isolation valves in bypass position.	Turn bypass/ isolation valves handles to place in service position.
	Meter is not connected to meter connection on PC board.	Connect meter to three pin connection labeled FLOW on PC board.
	Restricted/ stalled meter turbine.	Remove meter and check for rotation or foreign material.
	Incorrect programming.	Check for programming error.
	Meter wire not installed securely into three pin connector.	Verify meter cable wires are installed securely into three pin connector labeled FLOW.
	Defective meter.	Replace meter.
8. Hard or untreated water is being delivered.	Check water quality directly at unit outlet.	
	Water quality is good <ul style="list-style-type: none"> Bypass/ isolation valves are open or faulty 	External bypass leak <ul style="list-style-type: none"> Fully close bypass/ isolation valves or replace
	Water quality is poor <ul style="list-style-type: none"> Damaged seal/stack assembly Faulty riser tube or seal Control valve body type and piston type mismatched 	Internal bypass leak <ul style="list-style-type: none"> Replace seal/stack assembly Verify seal placement & engagement with riser Verify proper control valve body type and piston type match
	Media is exhausted, water quality is poor <ul style="list-style-type: none"> Higher than anticipated water usage Meter not registering No regenerant or low level of regenerant in regenerant tank Control fails to draw in regenerant Water quality fluctuation Fouled media bed 	No internal leaks <ul style="list-style-type: none"> Check program settings or diagnostics for abnormal water usage See Troubleshooting Guide #3 Check refill setting in programming. Check refill flow control for restrictions or debris and clean or replace, check refill flow control rate for proper fill time. Refer to Troubleshooting Guide # 12 Test water and adjust program values accordingly Replace media bed
	Improper refill setting or refill fill flow control is not sized properly	Check refill setting and check refill flow control for proper refill rate.
9. Control valve uses too much regenerant.	Improper program settings	Check program setting to make sure they are specific to the water quality and application needs.
	Control valve regenerates frequently	Check for leaking fixtures that may be exhausting capacity or system is undersized.
	Low water pressure	Check incoming water pressure – water pressure must remain at minimum of 25 psi.
10. Residual regenerant being delivered to service.	Plugged, fouled, or incorrect injector size	Inspect and clean or replace injector, or replace injector with correct size for the application.
	Restricted drain line	Check drain line for restrictions or debris and clean.

Troubleshooting

Table 25-1:
Troubleshooting

Issue	Possible Cause	Solution
11. Excessive water in regenerant tank	Tank is being overfilled <ul style="list-style-type: none"> • Improper program settings • Missing refill flow controller Previous regenerant is not being drawn out	Excess from fill cycle <ul style="list-style-type: none"> • Verify program settings • Visual inspection / measure volume output into container See Troubleshooting Guide #12
12. Control valve fails to draw in regenerant	Injector is plugged	Remove injector and clean or replace
	Faulty regenerant piston	Replace regenerant piston
	Regenerant line connection leak	Inspect regenerant line for air leak
	Drain line restriction or debris cause excess back pressure	Inspect drain line and clean to correct restriction
	Drain line too long or too high	Shorten length and/or height
	Low water pressure	Check incoming water pressure – water pressure must remain at minimum of 25 psi
	Damaged seal/ stack assembly	Inspect seal stack assembly for damage and replace
13. Water running to drain	Power outage during regeneration or unit is currently in regeneration	Upon power being restored control will finish the remaining regeneration time. Reset time of day.
	Damaged seal/ stack assembly	Replace seal/ stack assembly
	Piston assembly failure	Replace piston assembly
	Drive cap assembly not tightened properly	Re-tighten the drive cap assembly
14. Err – 1001 = Control unable to sense motor movement	Motor not inserted fully to engage pinion, motor wires broken or disconnected	Disconnect power, make sure motor is fully engaged, check for broken wires, make sure two pin connector on motor is connected to the two pin connection on the PC Board labeled REGEN. Press NEXT and REGEN buttons for about 3 seconds to resynchronize software with piston position.
	PC Board not properly snapped into drive bracket	Properly snap PC Board into drive bracket and then Press NEXT and REGEN buttons for about 3 seconds to resynchronize software with piston position.
	Missing reduction gears	Replace missing gears
	Damaged or dirty reduction gear reflectors	Clean or replace reduction gear
	Faulty or dirty optics on back of PC board	Clean or replace PC board

Troubleshooting

Table 26-1:
Troubleshooting

Issue	Possible Cause	Solution
15. Err – 1002 = Control valve motor ran too short and was unable to find the next cycle position and stalled	Foreign material is lodged in control valve	Open up control valve and pull out piston assembly and seal/ stack assembly for inspection. Press NEXT and REGEN buttons for about 3 seconds to resynchronize software with piston position.
	Mechanical binding	Check piston and seal/ stack assembly, check reduction gears, check drive bracket and main drive gear interface. Press NEXT and REGEN buttons for about 3 seconds to resynchronize software with piston position. Check that pinion is not pressed up tight against motor
	Main drive gear too tight	Loosen main drive gear. Press NEXT and REGEN buttons for about 3 seconds to resynchronize software with piston position. Verify free motion by rotating main drive gear by hand, driving piston in and out
	Improper voltage being delivered to PC board	Verify that proper voltage is being supplied. Press NEXT and REGEN buttons for about 3 seconds to resynchronize software with piston position.
16. E4, Err – 1004, Err – 104 = Control valve motor ran too long and timed out trying to reach home position	Drive bracket not snapped in properly and out enough that reduction gears and drive gear do not interface	Snap drive bracket in properly then Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
17. Err -1006, Err – 106, Err - 116 = MAV/ SEPS/ NHBP/ AUX MAV valve motor ran too long and unable to find the proper park position. Motorized Alternating Valve = MAV Separate Source = SEPS No Hard Water Bypass = NHBP Auxiliary MAV = AUX MAV	Control valve programmed for ALT A or b, nHbP, SEPS, or AUX MAV with out having a MAV or NHBP valve attached to operate that function	Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect. Then re-program valve to proper setting
	MAV/ NHBP motor wire not connected to PC Board	Connect MAV/ NHBP motor to PC Board two pin connection labeled DRIVE. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	MAV/ NHBP motor not fully engaged with reduction gears	Properly insert motor into casing, do not force into casing Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	Foreign matter built up on piston and stack assemblies creating friction and drag enough to time out motor	Replace piston and stack assemblies. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
18. Err – 1007, Err – 107, Err - 117 = MAV/ SEPS/ NHBP/ AUX MAV valve motor ran too short (stalled) while looking for proper park position Motorized Alternating Valve = MAV Separate Source = SEPS No Hard Water Bypass = NHBP Auxiliary MAV = AUX MAV	Foreign material is lodged in MAV/ NHBP valve	Open up MAV/ NHBP valve and check piston and seal/ stack assembly for foreign material. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	Mechanical binding	Check piston and seal/ stack assembly, check reduction gears, drive gear interface, and check MAV/ NHBP black drive pinion on motor for being jammed into motor body. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.

System operating log

Table 27-1:
System operating log

Date						
Time						
Chlorine						
Cartridge in psi						
Cartridge out psi						
Water temperature						
TDS in						
TDS out						
System psi						
Concentrate psi						
Cartridge filter change						
Membrane change						
Recorded by						

Notes

Water quality test strips


Carbon filters in the system should be changed regularly to maintain proper pressure and flow and water quality.

The carbon filter removes chlorine. Change the carbon filter when chlorine from supply water starts to pass through. Check regularly for chlorine pass through.

To check for chlorine, obtain a water sample from the concentrate drain line and test the water. If chlorine is present, change the carbon filter and record the interval to estimate the next carbon filter change.

For best results, test water chlorine every two weeks.

To order more Water Quality Test Strips, contact your local DriSteem rep, or call 1-800-328-4447.

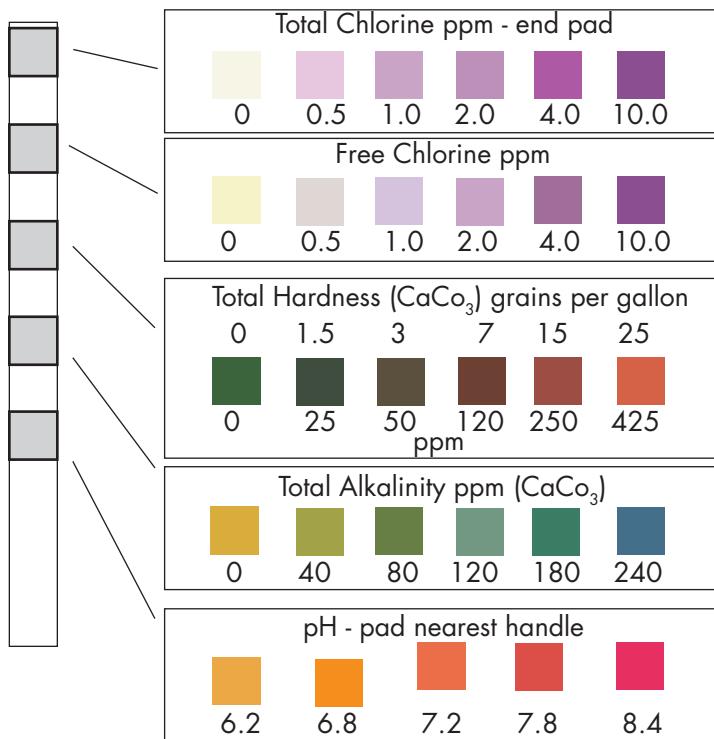

DIRECTIONS:

1. Dip entire strip into water for 1 second (or pass under water stream), remove. Do not shake excess water from the test strip. Hold the strip for 30 seconds.
2. Compare TOTAL HARDNESS, TOTAL ALKALINITY and pH pads to color chart to the left.
3. Dip strip into the water again and move back and forth for 30 seconds (or hold two chlorine pads under water stream for 10 seconds).
4. Compare CHLORINE pads to color chart to the left.
5. Track results in the chart.

Water quality test log

Date tested	Total Chlorine ppm	Free Chlorine ppm	Total Hardness	Total Alkalinity	pH
Week 1 _____					
Week 3 _____					
Week 5 _____					
Week 7 _____					
Week 9 _____					
Week 11 _____					
Week 13 _____					
Week 15 _____					
Week 17 _____					
Week 19 _____					

Water treatment system

FIGURE 30-1: REPLACEMENT PARTS



Water treatment system

Table 31-1:
Water softener replacements parts

Description	Qty.	Part No.
Single tank water softener		
Softener single control valve 1" inlet (7" - 16" tank)	1	550134-001
Softener single control valve 1.5" inlet (21" - 24" tank)	1	550134-002
Softener single control valve 2" inlet (30" tank)	1	550134-003
Dual tank water softener		
Dual softener control valve 1" inlet (7" - 16" tank)	1	550134-021
Dual softener control valve 1.5" inlet (21" - 24" tank)	1	550134-022
Dual softener control valve 2" inlet (30" tank)	1	550134-023

Table 31-1:
Dechlorinator replacements parts

Description	Qty.	Part No.
Housing filter wall mount accessory 20" with valves (filter not included)	1	550028-001
Carbon filter, 4x20"	1	550027-002
Dechlorinator single control valve 1" inlet (7" - 16" tank)	1	550134-011
Dechlorinator single control valve 1.5" inlet (21" - 24" tank)	1	550134-012
Dechlorinator single control valve 2" inlet (30" tank)	1	550134-013

Expect quality from the industry leader

Since 1965, DriSteem has led the industry with innovative methods for humidifying and cooling air with precise control. Our focus on ease of ownership is evident in the design of our Water Treatment Systems, which feature low maintenance and comprehensive control. DriSteem also leads the industry with a Two-year Limited Warranty and optional extended warranty.

For more information

www.dristeem.com
sales@dristeem.com

For the most recent product information visit our Web site: www.dristeem.com

TWO-YEAR LIMITED WARRANTY

DRI-STEEM Corporation ("DriSteem") warrants to the original user that its products will be free from defects in materials and workmanship for a period of two (2) years after installation or twenty-seven (27) months from the date DriSteem ships such product, whichever date is the earlier.

If any DriSteem product is found to be defective in material or workmanship during the applicable warranty period, DriSteem's entire liability, and the purchaser's sole and exclusive remedy, shall be the repair or replacement of the defective product, or the refund of the purchase price, at DriSteem's election. DriSteem shall not be liable for any costs or expenses, whether direct or indirect, associated with the installation, removal or reinstallation of any defective product. The Limited Warranty does not include cylinder replacement for electrode steam humidifiers or media replacement for Wetted Media Systems.

DriSteem's Limited Warranty shall not be effective or actionable unless there is compliance with all installation and operating instructions furnished by DriSteem, or if the products have been modified or altered without the written consent of DriSteem, or if such products have been subject to accident, misuse, mishandling, tampering, negligence or improper maintenance. Any warranty claim must be submitted to DriSteem in writing within the stated warranty period. Defective parts may be required to be returned to DriSteem. Excluded from the Limited Warranty are all consumable and wear and tear items such as cylinders, membranes, filters, or media replacements. These items are subject to usual wear and tear during usage.

DriSteem's Limited Warranty is made in lieu of, and DriSteem disclaims all other warranties, whether express or implied, including but not limited to any IMPLIED WARRANTY OF MERCHANTABILITY, ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, any implied warranty arising out of a course of dealing or of performance, custom or usage of trade. DriSteem SHALL NOT, UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, REVENUE OR BUSINESS) OR DAMAGE OR INJURY TO PERSONS OR PROPERTY IN ANY WAY RELATED TO THE MANUFACTURE OR THE USE OF ITS PRODUCTS. The exclusion applies regardless of whether such damages are sought based on breach of warranty, breach of contract, negligence, strict liability in tort, or any other legal theory, even if DriSteem has notice of the possibility of such damages.

By purchasing DriSteem's products, the purchaser agrees to the terms and conditions of this Limited Warranty.

EXTENDED WARRANTY

The original user may extend the term of the DriSteem Limited Warranty for a limited number of months past the initial applicable warranty period and term provided in the first paragraph of this Limited Warranty. All the terms and conditions of the Limited Warranty during the initial applicable warranty period and term shall apply during any extended term. An extended warranty term of an additional twelve (12) months or twenty four (24) months of coverage may be purchased. The extended warranty term may be purchased until eighteen (18) months after the product is shipped, after which time no extended warranties are available. When a DriSteem humidifier is purchased with a DriSteem RO system, an extended twenty-four (24) month coverage is included.

Any extension of the Limited Warranty under this program must be in writing, signed by DriSteem, and paid for in full by the purchaser.

DRI-STEEM Corporation

a subsidiary of Research Products Corporation
DriSteem U.S. operations are ISO
9001:2015 certified

U.S. Headquarters:

14949 Technology Drive
Eden Prairie, MN 55344
800-328-4447 or 952-949-2415
952-229-3200 (fax)

European office:

Grote Hellekensstraat 54 b
B-3520 Zonhoven
Belgium
+3211823595 (voice)
E-mail: dristeem-europe@dristeem.com
Continuous product improvement is a policy of DriSteem; therefore, product features and specifications are subject to change without notice.

DriSteem and Vapor-logic are registered trademarks of Research Products Corporation and are filed for trademark registration in Canada and the European community.

Product and corporate names used in this document may be trademarks or registered trademarks. They are used for explanation only without intent to infringe.

© 2019 Research Products Corporation