




003-004 Overhead Set

General Information



WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

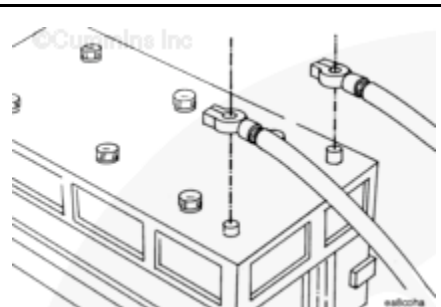

NOTE: Read the entire procedure for overhead adjustment before attempting to perform this operation.

Valves and injectors **must** be correctly adjusted for the engine to operate efficiently. Valve and injector adjustment **must** be performed using the values listed in this section.

CELECT™ Plus Valve and Injector Adjustment Values

CELECT™ Plus Injector Adjustment: Bottom plunger, release, and bottom timing plunger. Back out two flats (120 degrees).

	mm	in



©Cummins Inc

CELECT™ Plus Valve and Injector Adjustment Values

CELECT™ Plus Injector Adjustment: Bottom plunger, release, and bottom timing plunger. Back out two flats (120 degrees).

	mm	in
Intake Valve	0.35	0.014
Exhaust Valve	0.68	0.027
Engine brake	0.58	0.023

The preferred method of performing normal valve and step timing control (STC) injector overhead adjustment is to use the outer base circle (OBC) method, where the crush of the injector plunger to cup is set by tightening the injector rocker lever adjusting screw to a prescribed torque. If the STC injectors have been removed for cleaning and calibration, or if new ReCon injectors are being installed, use the OBC overhead set procedure.

STC Valve and Injector Adjustment Values

STC Injector Adjustment (OBC Method): Torque to 14 N•m [125 in-lb].

	mm	in
Intake Valve	0.35	0.014
Exhaust Valve	0.68	0.027
Engine brake	0.58	0.023

©Cummins Inc

Preparatory Steps

- Disconnect the batteries. See equipment manufacturer service information.
- Remove the rocker lever covers. Refer to Procedure 003-011 in Section 3.
- Remove the engine brakes, if applicable. Refer to Procedure 020-024 in Section 20.



©Cummins Inc




c180wa

Adjust

CELECT™ or CELECT™ Plus


All overhead (valve and injector) adjustments **must** be made when the engine is cold (any stabilized coolant temperature at 60°C [140°F] or below).

©Cummins Inc

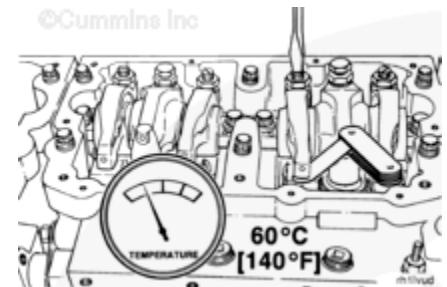

NOTE: After an engine rebuild or any major repair where the injector setting must be disturbed, set all the valves and injectors.


CELECT™ Plus injectors will provide acceptable engine performance with lash (OBC) anywhere from 0.51 to 2.04 mm [0.020 to 0.080 in]. The procedure for CELECT™ Plus injector reset will produce lash between 0.51 and 0.74 mm [0.020 and 0.029 in]. Under

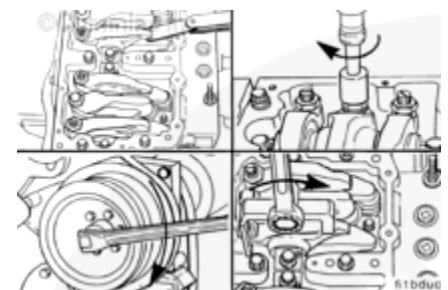

normal operation, there is **never** a reason to adjust SELECT™ Plus injectors for excessive lash between scheduled maintenance intervals.

Tighten the rocker lever shaft capscrews.

Torque Value: 156 n.m [115 ft-lb]

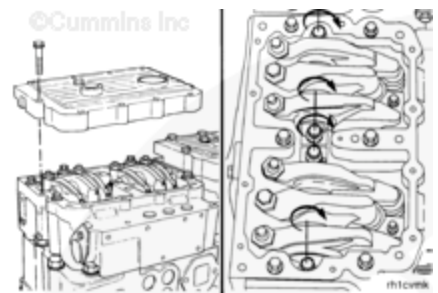

Tighten the rocker lever housing capscrews in the sequence illustrated (1 through 6).

Tighten the rocker lever housing capscrews in the sequence illustrated (7 and 8).

Torque Value:


Capscrews 1 Through 6

1. 115 n.m [85 ft-lb]

Torque Value:


Capscrews 7 and 8

1. 47 n.m [35 ft-lb]

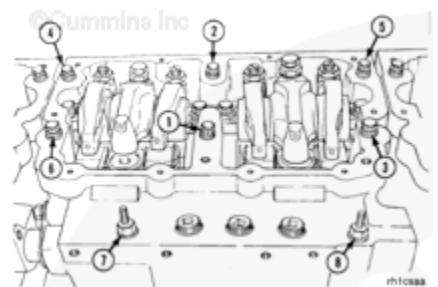

Tighten the injector hold down capscrews.

Torque Value: 41 n.m [30 ft-lb]

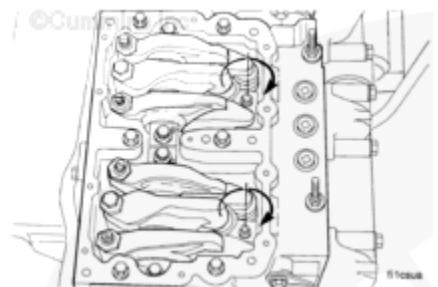


⚠ WARNING ⚠

Do not pull or pry on the fan to manually rotate the engine. To do so can damage the fan blades. Damaged fan blades can cause premature fan failures which can result in serious personal injury or property damage.

The valve set marks are located on the accessory drive pulley. The marks align with a pointer on the gear cover.


Use the accessory drive shaft to rotate the crankshaft.

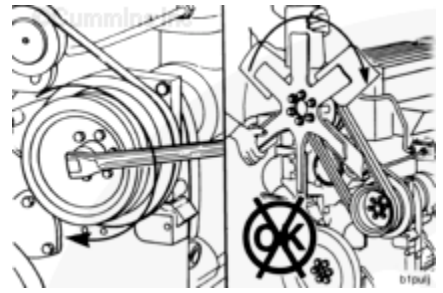

The crankshaft rotation is **clockwise** when viewed from the front of the engine.

The cylinders are numbered from the front end of the engine.


The engine firing order is 1-5-3-6-2-4.

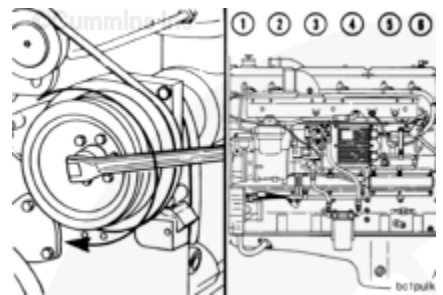

Each cylinder has three rocker levers. The rocker lever nearest to the center of the housing is the intake lever.

- Exhaust rocker lever (1)
- Injector rocker lever (2)
- Intake rocker lever (3)

The two levers closest to the center of each rocker housing are the intake rocker levers. The two levers closest to the ends of the rocker housing are the exhaust levers.

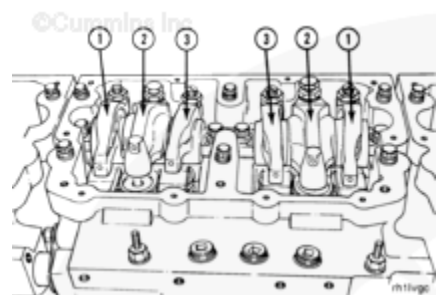

The valves and the injectors on the same cylinder are adjusted at the same index mark on the accessory drive pulley.

One pair of valves and one injector are adjusted at each pulley index mark before rotating the accessory drive to the next index mark.

Two crankshaft revolutions are required to adjust **all** of the valves and injectors.

CELECT™ Plus Engines

Injector and Valve Adjustment Sequence

Bar Engine in Direction of Rotation	Pulley Position	Set Cylinder	
		Injector	Valve
Start	A	1	1
Advance to	B	5	5
Advance to	C	3	3
Advance to	A	6	6
Advance to	B	2	2
Advance to	C	4	4

Firing Order: 1-5-3-6-2-4

©Cummins Inc



ck80wa

Rotate the accessory drive in the direction of engine rotation. The accessory drive will rotate **clockwise**, on a right hand engine, when looking at the front of the engine. Align the "A" or "1-6 VS" mark on the accessory drive pulley with the pointer on the gear cover.

©Cummins Inc

A or
1-6 VS

C or
3-4 VS

B or
2-5 VS


A

bc1pule

Check the valve rocker levers on cylinder number 1 to see if both valves are closed.

NOTE: Both valves are closed when both rocker levers are loose and can be moved from side to side. If both valves are not closed, rotate the accessory drive one complete revolution; and align the "A" mark with the pointer again.

If the valve rocker lever adjusting screws have been loosened and **not** yet adjusted, watch the valve push tubes as the engine rolls upon the "A" mark. Both valve push tubes will have moved to the downward (valve closed) position if the engine is on the correct stroke.

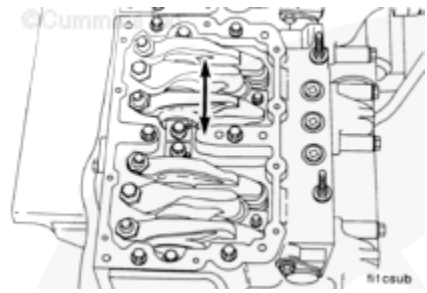

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

Clean the timing plunger to remove the varnish from the top edge.


Apply a non-chlorinated carburetor cleaner (Pyroil or equivalent) using a narrow bore orifice or extension tube of 2.0 mm [0.79 in] maximum outside diameter, into the injector weep hole.

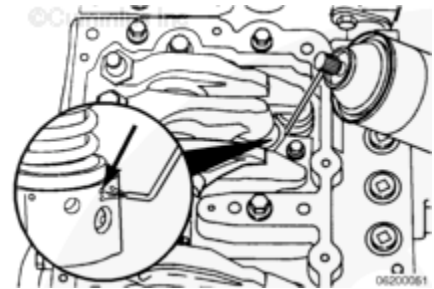

If the entire overhead is to be reset, every injector is to be sprayed at this time.

Loosen the injector adjusting screw lock nut on cylinder number 1. Bottom the injector timing plunger by tightening and loosening the adjusting screw three or four times to remove the fuel.


When removing the excess fuel, do **not** apply crush to the injector timing plunger by further tightening the adjusting screw after the plunger is bottomed.

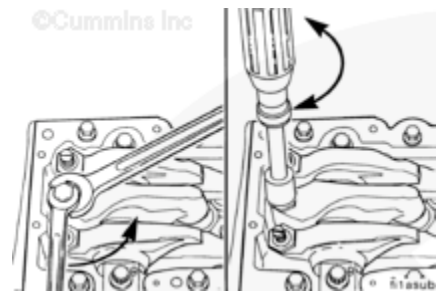

⚠ CAUTION ⚠

Do **not** apply crush to the injector timing plunger by further tightening the adjusting screw. Doing so will result in an incorrect injector lash setting and can cause excessive injection train wear.

Tighten the adjusting screw on the injector rocker lever until the timing plunger just touches bottom.

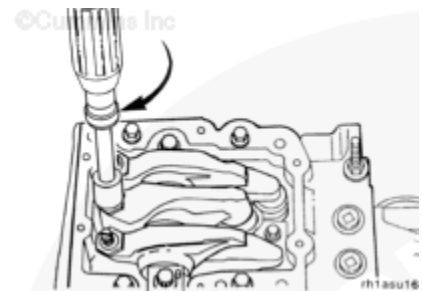


⚠ CAUTION ⚠

After bottoming the CELECT™ Plus injector timing plunger, make certain to back out the adjusting screw two flats (120 degrees) or damage to the injector will result.

Back out the adjusting screw on the injector rocker lever two flats (120 degrees).


Two flats will provide 0.56 mm [0.022 in] lash.

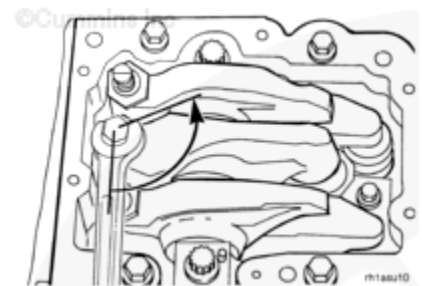

The specification is 0.50 to 0.74 mm [0.020 to 0.029 in] lash.


Hold the adjusting screw and tighten the lock nut.

Torque Value: 65 n.m [50 ft-lb]

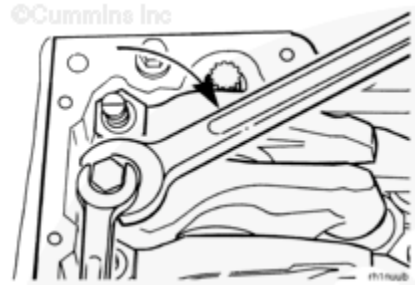

After setting the injector on a given cylinder, set the valves on the same cylinder.


With the "A" set mark aligned with the pointer on the gear cover and both valves closed on cylinder number 1, loosen the lock nuts on the intake and the exhaust valve adjusting screws.

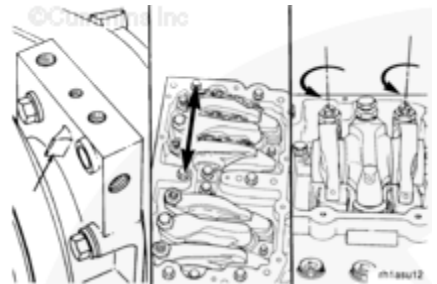

Select a feeler gauge for the correct valve lash specification.

Valve Lash Specifications	
Intake	Exhaust
0.35 mm [0.014 in]	0.68 mm [0.027 in]

Insert the feeler gauge between the top of the crosshead and the rocker lever pad.

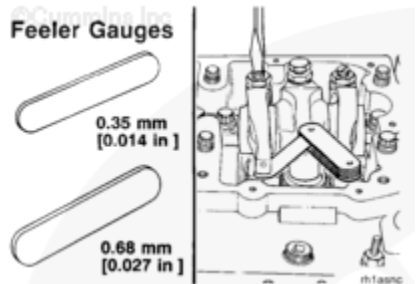


Two different methods for establishing valve lash clearance are described below. Either method can be used; however, the torque wrench method has proven to be the most consistent.

- **Torque Wrench Method:** Use the inch pound torque wrench, Part Number 3376592, and tighten the adjusting screw.

Torque Value: 0.68 n.m [5 in-lb]

- **Feel Method:** Tighten the adjusting screw until a slight drag is felt on the feeler gauge.

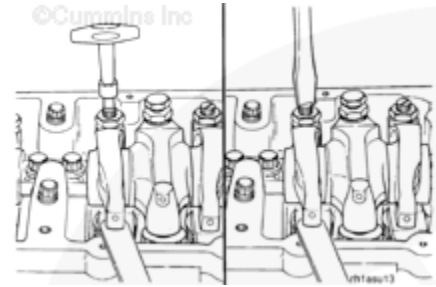

Hold the adjusting screw in this position. The adjusting screw **must not** turn when the lock nut is tightened.

Torque Value:


Without Torque Wrench Adapter:

1. 68 n.m [50 ft-lb]


Torque Value:

With Torque Wrench Adapter, Part Number ST-669:


1. 54 n.m [40 ft-lb]

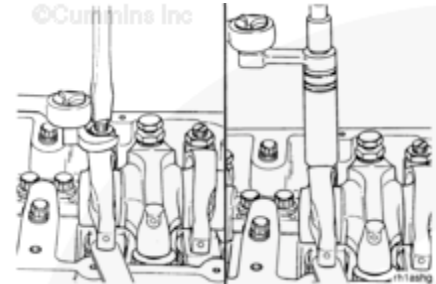


After tightening the lock nut to the correct torque value, check to make sure the feeler gauge will slide backward and forward between the crosshead and the rocker lever with only a slight drag.

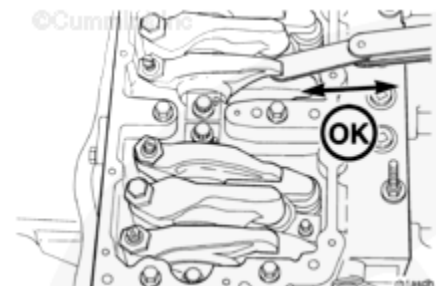

If using the feel method, attempt to insert a feeler gauge that is 0.03 mm [0.001 in] thicker between the crosshead and the rocker lever pad. The valve lash is **not** correct when a thicker feeler gauge will fit.

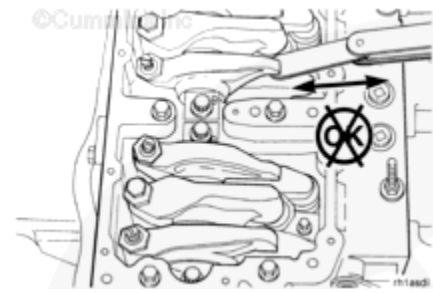

After adjusting the injector on cylinder number 1 and the valves on cylinder number 1, rotate the accessory drive and align the next valve set mark with the pointer.

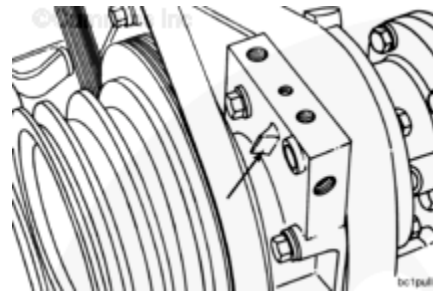

Adjust the appropriate injector and valves following the Injector and Valve Adjustment Sequence in the table below.

Repeat the process to adjust all injectors and valves correctly.



CELECT™ Plus Engines

Injector and Valve Adjustment Sequence


Bar Engine in Direction of Rotation	Pulley Position	Set Cylinder	
		Injector	Valve
Start	A	1	1
Advance to	B	5	5
Advance to	C	3	3
Advance to	A	6	6
Advance to	B	2	2

CELECT™ Plus Engines**Injector and Valve Adjustment Sequence**

Bar Engine in Direction of Rotation	Pulley Position	Set Cylinder	
		Injector	Valve
Advance to	C	4	4
Firing Order: 1-5-3-6-2-4			

STC

Loosen the lock nut on the injector adjusting screw on the cylinder number 5.

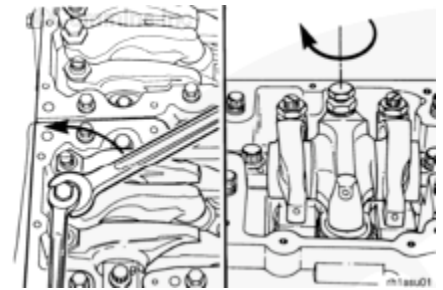


▲ CAUTION ▲

An overtightened setting on the injector adjusting screw will produce increased stress on the injector train and the camshaft injector lobes, which can result in engine damage.

Use a dial type torque wrench to tighten the injector rocker lever adjusting screw to the specified torque. If the screw causes chattering during setting, repair the screw and lever as required.

Hold the torque wrench in a position that allows the direct view of the dial. This is to make

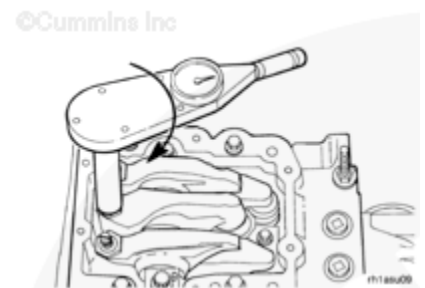


certain that the reading on the dial is accurate.


Torque Value: 14 n.m [125 in-lb]

Hold the adjusting screw in this position. The adjusting screw **must not** turn when the lock nut is tightened. Tighten the lock nut.

Torque Value: 65 n.m [50 ft-lb]

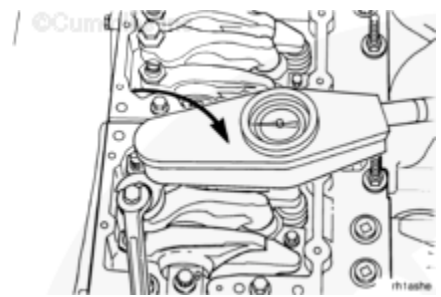

With the "B" mark aligned with the pointer on the gear cover and both valves closed on cylinder number 5, loosen the locknuts on the intake and the exhaust valve adjusting screws.

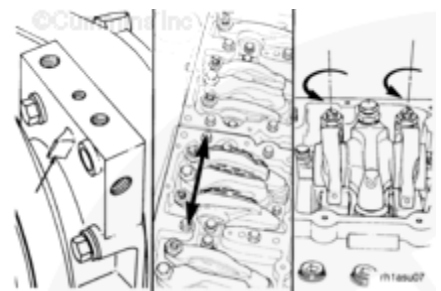

Select a feeler gauge for the correct valve lash specification.


Valve Lash Specifications

	mm		in
Intake	0.35	NOM	[0.014]
Exhaust	0.68	NOM	[0.027]

Insert the feeler gauge between the top of the crosshead and the rocker lever nose.



Feeler Gauges

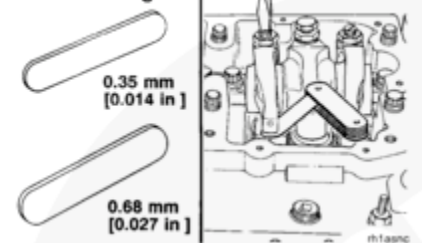


Two different methods for establishing valve lash clearance are described below. Either method can be used; however, the torque wrench method has proven to be the most consistent.

Torque Wrench Method

- Use the inch-pound torque wrench, Part Number 3376592 or equivalent, (normally used to set preload on STC injectors), and tighten the adjusting screw.

Torque Value: 0.56 to 0.68 n.m [5 to 6 in-lb]

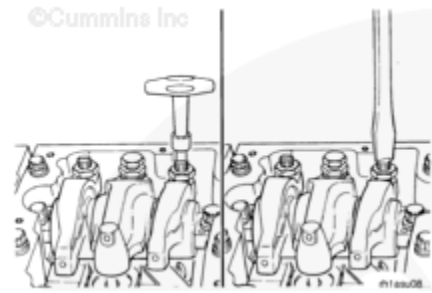

Feel Method

- Hold the adjusting screw in this position. The adjusting screw must not turn when the locknut is tightened. Tighten the locknut.

Torque Value:


With torque wrench adapter, Part Number 3163196 or equivalent:

1. 55 n.m [40 ft-lb]


Torque Value:

Without torque wrench adapter:


1. 65 n.m [50 ft-lb]

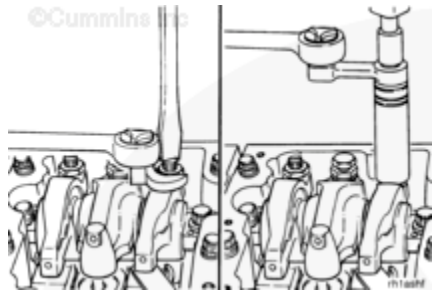

After tightening the locknut to the correct torque value, check to make sure the feeler gauge will slide backward and forward between the crosshead and the rocker lever with **only** a slight drag.

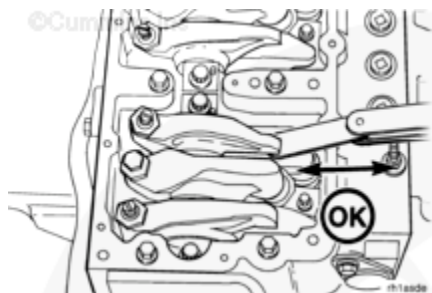


If using the feel method, attempt to insert a feeler gauge that is 0.03 mm [0.001 in] thicker between the crosshead and the rocker lever pad. The valve lash is **not** correct when a thicker feeler gauge will fit.

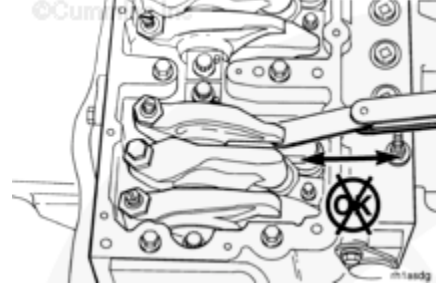

After adjusting the injector on cylinder number 5 and the valves on cylinder number 5, rotate the accessory drive.

Align the next valve set mark with the pointer.

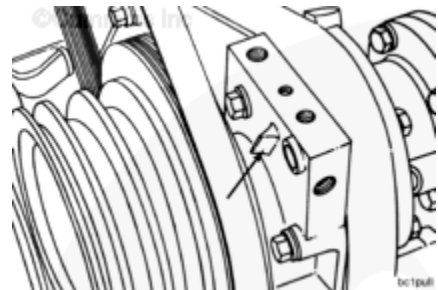

Adjust the appropriate injector and valves following the Injector and Valve Adjustment Sequence in the table below.

Repeat the process to adjust all injectors and valves correctly.

STC Engine Outer Base Circle (OBC)

Injector and Valve Adjustment Sequence

Bar Engine in Direction of Rotation	Pulley Position	Set Cylinder	
		Injector	Valve
Start	B	5	5
Advance to	C	3	3

©Cummins Inc

STC Engine Outer Base Circle (OBC)**Injector and Valve Adjustment Sequence**

Bar Engine in Direction of Rotation	Pulley Position	Set Cylinder	
		Injector	Valve
Advance to	A	6	6
Advance to	B	2	2
Advance to	C	4	4
Advance to	A	1	1
Firing Order: 1-5-3-6-2-4			

Finishing Steps

- Install the rocker lever covers. [Refer to Procedure 003-011 in Section 3.](#)
- Install the engine brakes, if applicable. [Refer to Procedure 020-024 in Section 20.](#)
- Connect the batteries. See equipment manufacturer service information.



©Cummins Inc



c1800wa

Last Modified: 28-Nov-2016

Copyright © 2000-2010 Cummins Inc. All rights reserved.