



LG

Life's Good

Internal Use Only

OLED TV

SERVICE MANUAL


CHASSIS : EA64B

MODEL : OLED55B6P OLED55B6P-U

OLED65B6P OLED65B6P-U

CAUTION

BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

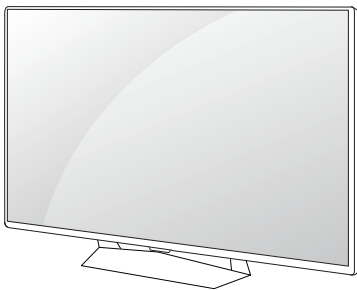

P/NO : MFL69589301 (1604-REV00)

CONTENTS

CONTENTS	2
SAFETY PRECAUTIONS	3
SERVICING PRECAUTIONS	4
SPECIFICATION	6
ADJUSTMENT INSTRUCTION	9
BLOCK DIAGRAM.....	20
EXPLODED VIEW	28
DISASSEMBLY	29
SCHEMATIC CIRCUIT DIAGRAM	APPENDIX
TROUBLE SHOOTING GUIDE	APPENDIX

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by \triangle in the Schematic Diagram and Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and its components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1 W), keep the resistor 10 mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1 M Ω and 5.2 M Ω .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5 K / 10 watt resistor in parallel with a 0.15 uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which corresponds to 0.5 mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

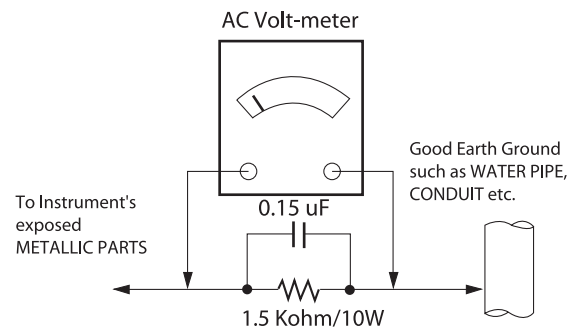

When 25A is impressed between Earth and 2nd Ground for 1 second, Resistance must be less than 0.1 Ω

*Base on Adjustment standard

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the **SAFETY PRECAUTIONS** on page 3 of this publication.
NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.
CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".
3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10 % (by volume) Acetone and 90 % (by volume) isopropyl alcohol (90 % - 99 % strength)
CAUTION: This is a flammable mixture.
Unless specified otherwise in this service manual, lubrication of contacts is not required.
5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
Always remove the test receiver ground lead last.
8. Use with this receiver only the test fixtures specified in this service manual.
CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.

2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25 cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device

Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.

3. Solder the connections.

CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.
CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

1. Application range

This spec sheet is applied to the LED TV used EA64B chassis

3. Test method

- (1) Performance: LGE TV test method followed
- (2) Demanded other specification
 - Safety : UL, CSA, CE, IEC specification
 - EMC : FCC, ICES, CE, IEC specification

2. Test condition

Each part is tested as below without special notice.

- (1) Temperature : 25 °C ± 5 °C(77±9°F), CST : 40 °C±5 °C
- (2) Relative Humidity: 65 % ± 10 %
- (3) Power Voltage
 - Standard input voltage (100~240V@ 50/60Hz)
 - * Standard Voltage of each products is marked by models.
- (4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
- (5) The receiver must be operated for about 20 minutes prior to the adjustment.

4. General Specification

4.1. Model Specification

No	Item	Specification	Remark	
1	Market	North America		
2	Broadcasting system	Digital : DVB-T2, ATSC /64 & 256 QAM, ATSC Analog : NTSC-M / NTSC-M		
3	Available Channel	VHF : 2 ~ 13		
		UHF : 14 ~ 69		
		DTV : 2 ~ 69		
		CATV : 1 ~ 135		
		CADTV : 1 ~ 135		
		DTV(UHD) : 2 ~ 69		
4	Receiving system	Digital : ATSC Analog : NTSC-M		
5	Video Input	NTSC-M	Rear RCA	
6	Component Input	Y/Cb/Cr, Y/ Pb/Pr	Rear RCA	
7	HDMI Input	HDMI 1	PC / DTV format, Support HDCP2.2	Rear, Support 6Gbps
		HDMI 2	PC / DTV format, Support HDCP2.2	Rear, Support 6Gbps, Support ARC
		HDMI 3	PC / DTV format, Support HDCP2.2	Rear, , Support MHL 3.0 (external IC)
		HDMI 4	PC / DTV format, Support HDCP2.2	Rear, Support 6Gbps(Only E6 / B6 model)
8	Audio Input	Component / AV Audio / DVI audio	L/R Input ; Rear Component and av and DVI use same jack ; Rear (Gender)	
9	SPDIF out(1EA)	Optical Audio out	Rear (1EA),	
10	USB Input(3EA)	EMF, DivX HD, For SVC (download)	JPEG, MP3, DivX HD	

5. External input format

5.1. 2D Mode

5.1.1. Component input(Y, PB, PR)

No	Resolution	H-freq(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed
1	720*480i	15.73	59.94	13.50	SDTV, DVD 480i(525I)
2	720*480i	15.75	60.00	13.51	SDTV, DVD 480i(525I)
3	720*576i	15.62	50.00	13.50	SDTV, DVD 576i(625I) 50Hz
4	720*480p	31.47	59.94	27.00	SDTV 480P
5	720*480p	31.50	60.00	27.02	SDTV 480P
6	720*576p	31.25	50.00	27.00	SDTV 576P 50Hz
7	1280*720	44.96	59.94	74.17	HDTV 720P
8	1280*720	45.00	60.00	74.25	HDTV 720P
9	1280*720	37.50	50.00	74.25	HDTV 720P 50Hz
10	1920*1080	28.12	50.00	74.25	HDTV 1080I 50Hz,
11	1920*1080	33.72	59.94	74.17	HDTV 1080I
12	1920*1080	33.75	60.00	74.25	HDTV 1080I
13	1920*1080	56.25	50	148.5	HDTV 1080P
14	1920*1080	67.43	59.94	148.5	HDTV 1080P
15	1920*1080	67.50	60.00	148.5	HDTV 1080P

5.1.2. HDMI Input (PC/DTV)

No.	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock(MHz)	Proposed	Remarks
	HDMI-PC					
1	640*350	31.46	70.09	25.17	EGA	
2	720*400	31.46	70.08	28.32	DOS	
3	640*480	31.46	59.94	25.17	VESA(VGA)	
4	800*600	37.87	60.31	40	VESA(SVGA)	
5	1024*768	48.36	60.00	65	VESA(XGA)	
6	1360*768	47.71	60.01	84.75	VESA(WXGA)	
7	1152*864	54.34	60.05	80	VESA	
8	1280*1024	63.98	60.02	109.00	SXGA	Support to HDMI-PC
9	1920*1080	67.5	60	158.40	WUXGA(Reduced Blanking)	
10	3840*2160	54	24.00	297.00	UDTV 2160P	
11	3840*2160	56.25	25.00	297.00	UDTV 2160P	
12	3840*2160	67.5	30.00	297.00	UDTV 2160P	
13	4096*2160	53.95	23.97	296.70	UDTV 2160P	
14	4096*2160	54	24	297	UDTV 2160P	

No	Resolution	H-freq.(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed	Remarks
	DTV mode					
1	640*480	31.46	59.94	25.12	SDTV 480P	
2	640*480	31.5	60.00	25.12	SDTV 480P	
3	720*480	15.73	59.94	13.50	SDTV, DVD 480I(525I)	Spec. out but display
4	720*480	15.75	60.00	13.51	SDTV, DVD 480I(525I)	
5	720*576	15.62	50.00	13.50	SDTV, DVD 576I(625I) 50Hz	
6	720*480	31.47	59.94	27	SDTV 480P	
7	720*480	31.5	60.00	27.02	SDTV 480P	
8	720*576	31.25	50.00	27	SDTV 576P	
9	1280*720	44.96	59.94	74.17	HDTV 720P	
10	1280*720	45	60.00	74.25	HDTV 720P	
11	1280*720	37.5	50.00	74.25	HDTV 720P	
12	1920*1080	28.12	50.00	74.25	HDTV 1080I	
13	1920*1080	33.72	59.94	74.17	HDTV 1080I	
14	1920*1080	33.75	60.00	74.25	HDTV 1080I	
15	1920*1080	26.97	23.97	63.29	HDTV 1080P	
16	1920*1080	27.00	24.00	63.36	HDTV 1080P	
17	1920*1080	33.71	29.97	79.120	HDTV 1080P	
18	1920*1080	33.75	30.00	79.20	HDTV 1080P	
19	1920*1080	56.25	50.00	148.5	HDTV 1080P	
20	1920*1080	67.43	59.94	148.35	HDTV 1080P	
21	1920*1080	67.5	60.00	148.50	HDTV 1080P	
22	3840*2160	53.95	23.98	296.70	UDTV 2160P	
23	3840*2160	54	24.00	297.00	UDTV 2160P	
24	3840*2160	56.25	25.00	297.00	UDTV 2160P	
25	3840*2160	61.43	29.97	296.70	UDTV 2160P	
26	3840*2160	67.5	30.00	297.00	UDTV 2160P	
27	3840*2160	112.5	50.00	594	UDTV 2160P	When HDMI1,2,3 UHD DEEP COLOUR ON
28	3840*2160	134.86	59.94	593.40	UDTV 2160P	When HDMI1,2,3 UHD DEEP COLOUR ON
29	3840*2160	135	60.00	594	UDTV 2160P	When HDMI1,2,3 UHD DEEP COLOUR ON
30	4096*2160	53.95	23.98	296.70	UDTV 2160P	
31	4096*2160	54	24.00	297	UDTV 2160P	
32	4096*2160	56.25	25.00	297	UDTV 2160P	
33	4096*2160	61.43	29.97	296.70	UDTV 2160P	
34	4096*2160	67.5	30.00	297	UDTV 2160P	
35	4096*2160	112.5	50.00	594	UDTV 2160P	When HDMI1,2,3 UHD DEEP COLOUR ON
36	4096*2160	134.86	59.94	593.40	UDTV 2160P	When HDMI1,2,3 UHD DEEP COLOUR ON
37	4096*2160	135	60.00	594	UDTV 2160P	When HDMI1,2,3 UHD DEEP COLOUR ON

ADJUSTMENT INSTRUCTION

1. Application Range

This spec. sheet applies to EA64B Chassis applied LED TV all models manufactured in TV factory

2. Specification.

- (1) Because this is not a hot chassis, it is not necessary to use an isolation transformer. However, the use of isolation transformer will help protect test instrument
- (2) Adjustment must be done in the correct order.
- (3) The adjustment must be performed in the circumstance of 25 °C ±5 °C of temperature and 65 % ± 10 % of relative humidity if there is no specific designation
- (4) The input voltage of the receiver must keep 100 V~240 V, 50/60Hz
- (5) The receiver must be operated for about 5 minutes prior to the adjustment when module is in the circumstance of over 15°C

- In case of keeping module is in the circumstance of 0°C, it should be placed in the circumstance of above 15°C for 2 hours
- In case of keeping module is in the circumstance of below -20°C, it should be placed in the circumstance of above 15°C for 3 hours

* (Caution) When still image is displayed for a period of 20 minutes or longer (especially where W/B scale is strong. Digital pattern 13ch and/or Cross hatch pattern 09ch), there can some afterimage in the black level area.


3. PCB assembly adjustment method

3.1. MAC Address, ESN Key, Wide-vine Key, HDCP 2.2 Download

- D/L Program : keydownload.exe

3.1.1. Equipment & Condition


- (1) Play file: keydownload.exe
- (2) Key Write: Com 1,2,3,4 and 115200 (Baudrate)
- (3) Barcode: Com 1,2,3,4 and 9600 (Baudrate)

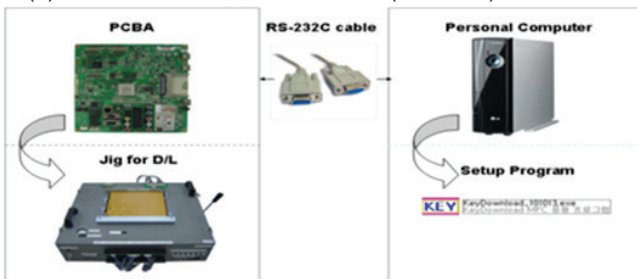

3.1.2. Download Process

(MAC + WIDEVINE + ESN+HDCP2.2)

- (1) Execute "keydownload.exe" on PC
- (2) Select the download items.
- (3) Mode check : Online only
- (4) Check the test process
 - DETECT -> MAC_WRITE -> ESN_WRITE (only Colombia/Panama) -> WIDEVINE_WRITE
- (5) Play: START
- (6) Check of result: Ready, Test, OK or NG

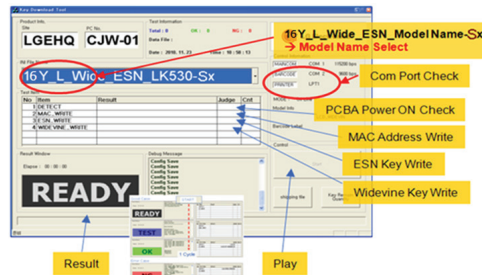

3.1.3. Inspection : ININSTART menu, check these keys.

3.2. LAN Test(Ping-test)

3.2.1. PING Test(LAN Operating Test)

3.2.1.1. Check PCBA


- (1) Connect LAN to PCBA& Power On.(Default IP can be set to automatic setting. When power ON, IP can be Automatically be achieved from the router)
- (2) Push ADJ key on Adjust remote-controller.
- (3) Enter "13. ACAP PING TEST" & check Network.

3.2.1.2. Check Set(Manufacturer)

- (1) Connect TV-Set & PC with Cross LAN cable.(PC IP : 12.12.2.3)
- (2) Execute "PINT Test program", Check setting data of program. (TV-Set IP : 12.12.2.2)




- (3) Push Power Only key on Adjust remote-controller.
- (4) Click "RUN", Check "OK" or "NG"

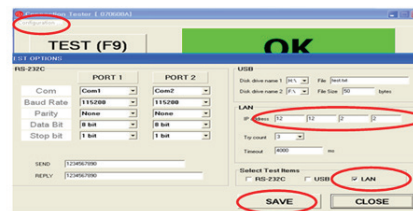


3.3. Main S/W program download

3.3.1. Using the Memory Stick

- ** USB DOWNLOAD : Service Mode
- (1) Insert the USB memory Stick to the USB port
 - (2) Automatically detect the SW Version.
-> S/W download process is executed automatically.
 - (3) Show the message "Copy the file from the Memory"

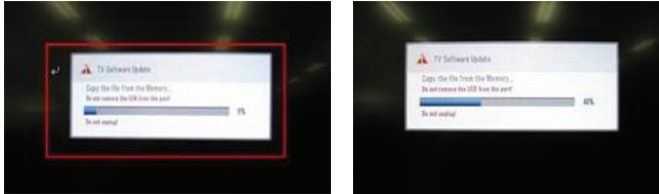

- (4) After Finished the Download, Automatically DC Off -> On

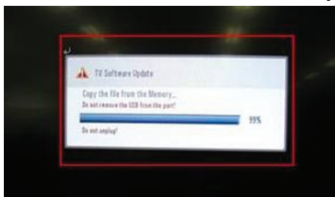

- (5) If the TV IS Turn On, Check the updated SW Version and Tool Option.

3.4. Input tool option

Adjust tool option refer to the BOM.

- Tool Option Input : PCBA Check Process
- Area Option Input : Set Assembly Process

After Input Tool Option and AC off
Before PCBA check, you have to change the Tool option and have to AC off/on (Plug out and in)
(If missing this process, set can operate abnormally)

3.4.1. Profile

Must be changed the option value because being different with some setting value depend on module maker, inch and market

3.4.2. Equipment

adjustment remote control.

3.4.3. Adjustment method

- The input methods are same as other chassis.(Use ADJ Key on the Adjust Remocon.)
(If not changed the option, the input menu can differ the model spec.)
Refer to Job Expression of each main chassis ass'y (EBTxxxxxxx) for Option value

(Caution)
Don't Press "IN-STOP" key after completing the function inspection.

3.5. EDID D/L method

Recommend that don't connect HDMI and RGB(D-SUB) cable when downloading the EDID.
If not possible, recommend that connect the MSPG equipment.
There are two methods of downloading the edid data

It is a VESA regulation. A PC or a MNT will display an optimal resolution through information
Sharing without any necessity of user input. It is a realization of "Plug and Play"

3.5.1. 1st Method

EDID data's are automatically downloaded when adjusting the Tool Options.
Automatically downloaded when pushing the enter key in the EDID D/L menu.
It takes about 2seconds.

3.5.2. 2nd Method

(Caution)
Must be checked that the tool option is right or not.
If tool option is wrong, HDMI edid data could not be downloaded well.

- (1) Press the ADJ key
- (2) Move to the 13. EDID D/L and Press the right direction key(▶)
- (3) Press the right direction key(▶) at Start.
- (4) After about a few seconds, appear "Waiting.." => "OK", then complete.

3.5.3. RS-232C command Method

(1) Command : AE 00 10
(Caution)
Don't connect HDMI and RGB(D-SUB) cable when downloading the EDID.
If the cables are connected, Downloading of edid could be failed.

3.5.4. EDID data

3.5.4.1. DTS

Input	2D				3G : HDMI Deep Color Off 6G : HDMI Deep Color On
	6G		3G		
HDMI 1	9F	B6	9F	DC	For EA62E, EA64B
HDMI 2	9F	A6	9F	CC	
HDMI 3	9F	96	9F	BC	
HDMI 4	9F	86	9F	AC	

- * DTS Checksum (HDMI 1/2/3/4)
- B6 Only @Power Only Mode
- Due to External EEPROM for HDMI3&4, EDID C/S is shown below @ power only mode

Input	HDMI Deep Color On FFh (Checksum)		HDMI Deep Color Off FFh (Checksum)	
HDMI1	9F	B6	9F	DC
HDMI2	9F	A6	9F	CC
HDMI3	9F	BC	9F	BC
HDMI4	9F	AC	9F	AC

(1) 2D_6G

- HDMI1 6G_UHD Deep Color ON

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58
40	8A	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40
50	58	2C	45	00	40	84	63	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	88	3C	00	0A	20	20	20	20	20	20	00	00	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F
80	02	03	42	F1	50	61	10	22	20	05	04	03	02	01	5D	5E
90	5F	66	62	63	64	29	3D	06	C0	15	07	50	09	57	07	6E
A0	03	0C	00	10	00	B8	3C	20	00	80	01	02	03	04	67	D8
B0	5D	C4	01	78	80	03	E3	05	C0	00	E3	0F	01	10	E3	06
C0	07	01	01	1D	80	18	71	1C	16	20	58	2C	25	00	40	84
D0	63	00	00	9E	66	21	50	B0	51	00	1B	30	40	70	36	00
E0	40	84	63	00	00	1E	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	B6

- HDMI2 6G_UHD Deep Color ON

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58
40	8A	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40
50	58	2C	45	00	40	84	63	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	88	3C	00	0A	20	20	20	20	20	20	00	00	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F
80	02	03	42	F1	50	61	10	22	20	05	04	03	02	01	5D	5E
90	5F	66	62	63	64	29	3D	06	C0	15	07	50	09	57	07	6E
A0	03	0C	00	10	00	B8	3C	20	00	80	01	02	03	04	67	D8
B0	5D	C4	01	78	80	03	E3	05	C0	00	E3	0F	01	10	E3	06
C0	07	01	01	1D	80	18	71	1C	16	20	58	2C	25	00	40	84
D0	63	00	00	9E	66	21	50	B0	51	00	1B	30	40	70	36	00
E0	40	84	63	00	00	1E	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	A6

- HDMI3 6G_UHD Deep Color ON

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58
40	8A	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40
50	58	2C	45	00	40	84	63	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	88	3C	00	0A	20	20	20	20	20	20	00	00	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F
80	02	03	42	F1	50	61	10	22	20	05	04	03	02	01	5D	5E
90	5F	66	62	63	64	29	3D	06	C0	15	07	50	09	57	07	6E
A0	03	0C	00	10	00	B8	3C	20	00	80	01	02	03	04	67	D8
B0	5D	C4	01	78	80	03	E3	05	C0	00	E3	0F	01	10	E3	06
C0	07	01	01	1D	80	18	71	1C	16	20	58	2C	25	00	40	84
D0	63	00	00	9E	66	21	50	B0	51	00	1B	30	40	70	36	00
E0	40	84	63	00	00	1E	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	96

- HDMI4 6G_UHD Deep Color ON

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58
40	8A	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40
50	58	2C	45	00	40	84	63	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	88	3C	00	0A	20	20	20	20	20	20	20	20	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F
80	02	03	42	F1	50	61	10	22	20	05	04	03	02	01	5D	5E
90	5F	66	62	63	64	29	3D	06	C0	15	07	50	09	57	07	6E
A0	03	0C	00	10	00	B8	3C	20	00	80	01	02	03	04	67	D8
B0	5D	C4	01	78	80	03	E3	05	C0	00	E3	0F	01	10	E3	06
C0	07	01	01	1D	80	18	71	1C	16	20	58	2C	25	00	40	84
D0	63	00	00	9E	66	21	50	B0	51	00	1B	30	40	70	36	00
E0	40	84	63	00	00	1E	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	86

(2) 2D_3G

- HDMI1 3G_UHD Deep Color ON

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26	01
10	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80	26
20	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58	80
30	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40	58
40	2C	45	00	40	84	63	00	00	1E	00	00	00	00	FD	00	3A
50	1E	88	3C	00	0A	20	20	20	20	20	20	20	20	00	00	FC
60	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F	FC
70	03	34	F1	4E	5D	10	22	20	05	04	03	02	01	5E	5F	9F
80	63	64	29	3D	06	C0	15	07	50	09	57	07	6E	03	0C	5F
90	10	00	B8	3C	20	00	80	01	02	03	04	E3	0E	61	66	0C
A0	06	07	01	01	1D	80	18	71	1C	16	20	58	2C	25	00	FC
B0	84	63	00	00	9E	66	21	50	B0	51	00	1B	30	40	70	71
C0	00	40	84	63	00	00	1E	00	00	00	00	00	00	00	00	50
D0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
E0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	DC
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	8B

- HDMI2 3G_UHD Deep Color ON

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58
40	8A	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40
50	58	2C	45	00	40	84	63	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	88	3C	00	0A	20	20	20	20	20	20	20	20	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F
80	02	03	42	F1	50	61	10	22	20	05	04	03	02	01	5E	5F
90	62	63	64	29	3D	06	C0	15	07	50	09	57	07	6E	03	0C
A0	00	20	00	B8	3C	20	00	80	01	02	03	04	E3			

- HDMI3 3G_UHD Deep Color ON

0	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58
40	8A	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40
50	58	2C	45	00	40	84	63	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	88	3C	00	0A	20	20	20	20	20	20	20	20	01	9F
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F
80	02	03	34	F1	4E	5D	10	22	20	05	04	03	02	01	5E	5F
90	62	63	64	29	3D	06	C0	15	07	50	09	57	07	6E	03	0C
A0	00	30	00	B8	3C	20	00	80	01	02	03	04	E3	0E	61	66
B0	E3	06	07	01	01	1D	80	18	71	1C	16	20	58	2C	25	00
C0	40	84	63	00	00	9E	66	21	50	B0	51	00	1B	30	40	70
D0	36	00	40	84	63	00	00	1E	00	00	00	00	00	00	00	00
E0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

- HDMI4 3G_UHD Deep Color OFF

0	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	1A	01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	08	E8	00	30	F2	70	5A	80	B0	58
40	8A	00	40	84	63	00	00	1E	02	3A	80	18	71	38	2D	40
50	58	2C	45	00	40	84	63	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	88	3C	00	0A	20	20	20	20	20	20	20	20	01	9F
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	9F
80	02	03	34	F1	4E	5D	10	22	20	05	04	03	02	01	5E	5F
90	62	63	64	29	3D	06	C0	15	07	50	09	57	07	6E	03	0C
A0	00	40	00	B8	3C	20	00	80	01	02	03	04	E3	0E	61	66
B0	E3	06	07	01	01	1D	80	18	71	1C	16	20	58	2C	25	00
C0	40	84	63	00	00	9E	66	21	50	B0	51	00	1B	30	40	70
D0	36	00	40	84	63	00	00	1E	00	00	00	00	00	00	00	00
E0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

3.6. ADC Calibration

Comp 480i/Comp 1080p/RGB

3.6.1. ADC Calibration : Internal Auto ADC

ADC calibration is not necessary because MAIN SoC (LGExxxx) is already calibrated from IC Maker

3.6.2. Manual ADC Calibration

3.6.2.1. Equipment & Condition

- (1) Adjustment Remocon
- (2) 801GF (802B, 802F, 802R) or MSPG925FA Pattern Generator
 - Resolution : 480i Comp1 (MSPG-925FA: model-209, pattern-65)
 - Resolution : 1080p Comp1 (MSPG-925FA: model-225, pattern-65)
 - Resolution : 1080p RGB (MSPG-925FA: model-225, pattern-65)
 - Pattern : Horizontal 100% Color Bar Pattern
 - Pattern level: 0.7±0.1 Vp-p

3.6.2.2. Adjust method

3.6.2.2.1. ADC 480i/1080p Comp

- (1) Check connected condition of Comp cable to the equipment
- (2) Give a 480i Mode, Horizontal 100% Color Bar Pattern to Comp1. (MSPG-925FA -> Model: 209, Pattern: 65)
- (3) Change input mode as Component1 and picture mode as "Standard"
- (4) Press the In-start Key on the ADJ remote after at least 1 min of signal reception. Then, select
- (5) External ADC. And Press OK or Right Button for going to sub menu.
- (6) Press OK in Comp 480i menu
- (7) Give a 1080p Mode, Horizontal 100% Color Bar Pattern to Comp1. (MSPG-925FA -> Model: 225, Pattern: 65)
- (8) Press OK in Comp 1080p menu
- (9) If ADC Comp is successful, "ADC Component Success" is displayed.
- (10) If ADC calibration is failure, "ADC Component Fail" is displayed.
- (11) If ADC calibration is failure, after rechecking ADC pattern or condition, retry calibration
- (12) If ADC calibration is failure, after recheck ADC pattern or condition, retry calibration

3.7. Check SW Version


3.7.1. Method

- (1) Push In-star key on Adjust remote-controller.
- (2) SW Version check

IN START		Adjust Check	
Model Name :	49UH9300-NA	1.Adjust Check	
Serial Number :	012PTED6N500	2.ADC Data	Country Group
S/W Version :	3.02.06.01	3.Power Off Status	Country Group Code
MICOM Version :	3.05.3	4.System1	Country Group
BOOT Version :	1.02.22	5.System2	Country
UHD BE Version :	OK(40.00.1b.00)	6.System3	Area Option
Chip Type :	LG1312	7.Model Number D/L	Tool Option
Wi-Fi Channel :	1	8.Test Option	Tool Option1
Wi-Fi MAC :	E8:F2:E2:69:06:CA	9.Spread Spectrum	Tool Option2
Wi-Fi Speed :	USB 2.0	10.Stable Count	Tool Option3
MAC Address :	3C:CD:93:4F:CB:5D	11.SDP Server Selection	Tool Option4
IP Address :	0.0.0.0	12.RF Remocon Test	Tool Option5
SFU Key :	OK	13.Access Code	Tool Option6
Widevine :	LGTV10L000011618	14.Twin TV	Tool Option7
ESN Num. :	LGTV20162*21001000272		Tool Option9
HDCP1.4 :	OK		Tool CRC
HDCP2(Miracast/HDMI) :	OK/OK		Adjust White Balance :
DTCP :	OK		Adjust ADC(OTP) :
RF Receiver Version :	1.3.4.18		Component :
Wi-Fi/Magic Search :	OK/OK		EDID :
Camera Ver. :	NULL		HDMI1
Debug Status :	Release		HDMI2
SIGN Key :	DEVELKEY		HDMI3
Eye Check :	OK		OK(0x7F,0xCB)
Control Key :	OK		OK(0x7F,0xBB)
Access USB Status :	1 / -(T) / -(C)		OK(0x7F,0xAB)
UTT : 40	75		
APP History Version	146(deathvalley)		
PQL DB :	LGD_EGDE_S12178B_XXXX55		
Video :	NULL		

3.8. Camera Port Inspection

- (1) Objective : To check PCBA's CAMERA Port.
- (2) How-it-works
 - 1) Connect the PCBA like below Picture.
 - 2) Send specific RS-232C Command for displaying Camera Preview.
- * CAMERA need to be status of Slide up

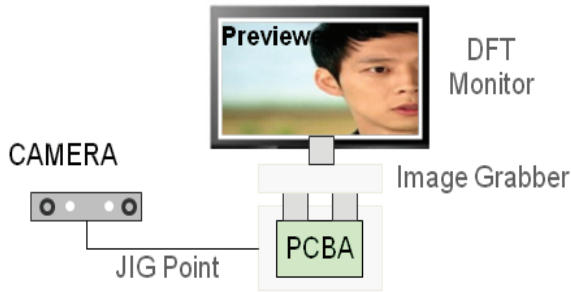

3) RS-232C Command

RS-232C COMMAND			Explanation
CMD	DATA	ID	
Ai	00	23	Camera Function Start.
Ai	00	24	Camera Function End.

4. SET assembly adjustment method

4.1. Input Area-Option

4.1.1. Profile

Must be changed the Area option value because being different of each Country's Language and signal Condition.

4.1.2. Equipment

adjustment remote control.

4.1.3. Adjustment method

- The input methods are same as other chassis.(Use IN-START Key on the Adjust Remocon.)
- Refer to Job Expression of each main chassis ass'y (EBTxxxxxxx) for Option value.

4.2. Adjustment of White Balance


- * In case of keeping module is in the circumstance of 0°C, it should be placed in the circumstance of above 15°C for 2 hours
- * In case of keeping module is in the circumstance of below -20°C, it should be placed in the circumstance of above 15°C for 3 hours.
- Purpose : Adjust the color temperature to reduce the deviation of the module color temperature.
- Principle : To adjust the white balance without the saturation, Fix the one of R/G/B gain to 192 (default data) and decrease the others.
- Adjustment mode : Three modes – Cool / Medium / Warm

* Required Equipment

- Remote controller for adjustment
- Color Analyzer : CA100+ or CA-210 or same product (should be used in the calibrated ch by CS-1000)
 - LCD TV : CH-9
 - PDP TV : CH-10
 - White LED TV : CH-14
 - ALEF : CH-18
 - RGB LED(MNT) : CH-16
 - Auto W/B adjustment instrument(only for Auto adjustment)

4.2.1. Adjustment of White Balance (For Automatic Adjustment)

Connecting diagram of equipment for measuring (For Automatic Adjustment)

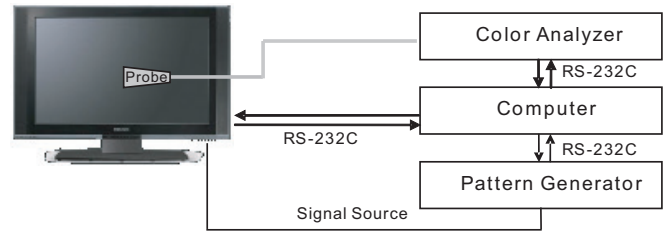

* If TV internal pattern is used, not needed

- (1) Set TV in ADJ mode using P-ONLY key (or POWER ON key)
- (2) Place optical probe on the center of the display
- (3) It need to check probe condition of zero calibration before adjustment.
- (4) Connect RS-232C Cable
- (5) Select mode in ADJ Program and begin a adjustment.
- (6) When WB adjustment is completed with OK message, check adjustment status of pre-set mode (Cool, Medium, Warm)
- (7) Remove probe and RS-232C cable.

- W/B Adj. must begin as start command "wb 00 00" , and finish as end command "wb 00 ff", and Adj. offset if need

4.2.2. Adjustment of White Balance (for Manual adjustment)

4.2.2.1. Adj. condition and cautionary items

- (1) Lighting condition in surrounding area surrounding lighting should be lower 10 lux. Try to isolate adj. area into dark surrounding.
- (2) Probe location: Color Analyzer (CA-210) probe should be within 10cm and perpendicular of the module surface (80°~100°)
- (3) Aging time
 - 1) After Aging Start, Keep the Power ON status during 5 Minutes.
 - 2) In case of LCD, Back-light on should be checked using no signal or Full-white pattern.

4.2.2.2. Equipment

- (1) Color Analyzer: CA-210 (NCG: CH 9 / WCG: CH12 / LED: CH14)
- (2) Adj. Computer (During auto adj., RS-232C protocol is needed)
- (3) Adjust Remocon
- (4) Video Signal Generator MSPG-925F 720p/216-Gray (Model: 217, Pattern: 78)

4.2.2.3. Adjustment

- (1) Set TV in Adj. mode using POWER ON
- (2) Zero Calibrate the probe of Color Analyzer, then place it on the center of LCD module within 10cm of the surface.
- (3) Press ADJ key -> EZ adjust using adj. R/C -> 6. White-Balance then press the cursor to the right (KEY▶). When KEY(▶) is pressed 216 Gray internal pattern will be displayed.
- (4) One of R Gain / G Gain / B Gain should be fixed at 192, and the rest will be lowered to meet the desired value.
- (5) Adj. is performed in COOL, MEDIUM, WARM 3 modes of color temperature.

▪ If internal pattern is not available, use RF input. In EZ Adj. menu 6.White Balance, you can select one of 2 Test-pattern: ON, OFF. Default is inner(ON). By selecting OFF, you can adjust using RF signal in 216 Gray pattern.

4.2.3. OLED White balance table

4.2.3.1. Cool Mode


- (1) Purpose : To reduce each Panel's W/B deviation
- (2) Principle : When R/G/B gain in the OSD is at 192, it means the panel is at its Full Dynamic Range. In order to prevent saturation of Full Dynamic range and data, one of R/G/B is fixed at 192, and the other two is lowered to find the desired value.
- (3) Adjustment mode : : normal temperature
 - 1) Surrounding Temperature: 25 °C ± 5 °C
 - 2) Warm-up time: About 5 Min
 - 3) Surrounding Humidity: 20% ~ 80%
 - 4) Before White balance adjustment, Keep power on status, don't power off

▪ Standard color coordinate and temperature when using the CA210 equipment(CH 14)

Mode	Coordinate		Temp	△uv
	X	Y		
Cool	0.277±0.002	0.278±0.002	11000K	-0.0030
Medium	0.286±0.002	0.289±0.002	9,300 K	0.000
Warm	0.313±0.002	0.329±0.002	6,500K	+0.0030

4.2.3.2. Auto WB calibration & 10% window pattern brightness check(HDR)

- (1) Set TV in ADJ mode using P-ONLY key (or POWER ON key)
 - (2) Place optical probe on the center of the display
- It need to check probe condition of zero calibration before adjustment.
 - (3) Connect RS-232C Cable
 - (4) Select mode in ADJ Program and begin a adjustment.
 - (5) When WB adjustment is completed with OK message, check adjustment status of pre-set mode (Cool, Medium, Warm, 10% window pattern brightness check)
 - (6) Remove probe and RS-232C cable.
- W/B Adj. must begin as start command "wb 00 00" , and finish as end command "wb 00 ff", and Adj. offset if need

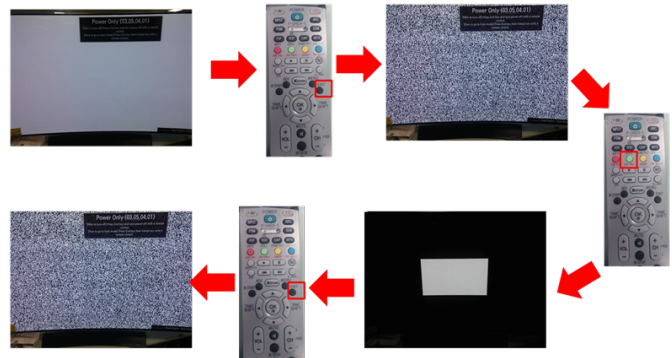

4.2.4. LED White balance table

4.2.4.1. Cool Mode

- (1) Purpose : Especially G-gain fix adjust leads to the luminance enhancement. Adjust the color temperature to reduce the deviation of the module color temperature.
- (2) Principle : To adjust the white balance without the saturation, Adjust the G gain more than 172 (If R gain or G gain is more than 255 , G gain can adjust less than 172) and change the others (R/B Gain).
- (3) Adjustment mode : mode – Cool

4.2.4.2. Medium / Warm Mode

- (1) Purpose : Adjust the color temperature to reduce the deviation of the module color temperature.
- (2) Principle : To adjust the white balance without the saturation,Fix the one of R/G/B gain to 192 (default data) and decrease the others.
- (3) Adjustment mode : Two modes – Medium / Warm

▪ Standard color coordinate and temperature when using the CA210 equipment(CH 14)

Mode	Coordinate		Temp	△uv
	X	Y		
Cool	0.271±0.002	0.270±0.002	13000K	0.0000
Medium	0.286±0.002	0.289±0.002	9,300 K	0.000
Warm	0.313±0.002	0.329±0.002	6,500K	0.003

- The Time Table of color coordinates by SET Aging Time
(1) Edge LED Models(UH8/UH9)_nomarl line

	Aging time (Min)	Cool		Medium		Warm	
		X	Y	X	Y	X	Y
		271	270	286	289	313	329
1	0-2	282	289	297	308	324	348
2	3-5	281	287	296	306	323	346
3	6-9	279	284	294	303	321	343
4	10-19	277	280	292	299	319	339
5	20-35	275	277	290	296	317	336
6	36-49	274	274	289	293	316	333
7	50-79	273	272	288	291	315	331
8	80-119	272	271	287	290	314	330
9	Over 120	271	270	286	289	313	329

- In the SET applied LED module (LM9600), cause of the physical characteristics of LED Module, sets are taken a 120 minutes by aging time to stabilize a color coordinates. So White Balance Control equipments have to get the SET Aging Time from the SET and then going to control the W/B by revise color coordinates at each time


- To check the Coordinates of White Balance, you have to measure at the below conditions.

- Picture Mode : select Vivid and change
 Dynamic Contrast : Off ,
 Dynamic Colour : Off,
 Clear White : Off
 -> Picture Mode change : Vivid -> Vivid(User)

(If you miss the upper condition, the coordinates of W/B can be lower than the spec.)

4.3. LAN Inspection

- (1) LAN Port connection with PCB
- (2) Network setting at MENU Mode of TV
- (3) Setting automatic IP
- (4) Setting state confirmation
- (5) If automatic setting is finished, you confirm IP and MAC Address

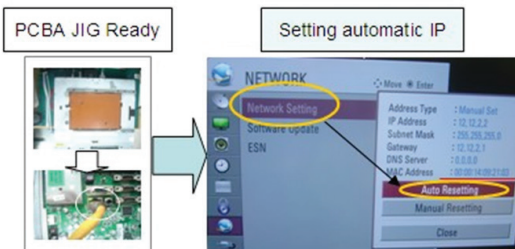

4.4. WIDEVINE Key Inspection

- (1) Confirm Key input Data at the "IN START" MENU Mode



4.5. Model name & Serial number D/L

4.5.1. Notice

- (1) Serial number D/L is using of scan equipment.
- (2) Setting of scan equipment operated by Manufacturing Technology Group.
- (3) Serial number D/L must be conformed when it is produced in production line, because serial number D/L is mandatory by D-book 4.0
- (4) Check the model name In-start menu -> Factory name displayed
- (5) Check the Diagnostics (DTV country only) -> Buyer model displayed


4.5.2. Method : Auto

- (1) Press "Power on" key of service remocon.(Baud rate : 115200 bps)
- (2) Connect RS232 Signal Cable to RS-232 Jack
- (3) Write Serial number by use RS-232.
- (4) Must check the serial number at Instart menu.

4.5.3. Method : Manual

* If the TV set is downloaded By OTA or Service man, Sometimes model name or serial number is initialized. (Not always) It is impossible to download by bar code scan, so It need Manual download.

- (1) Press the 'instart' key of ADJ remote controller.
- (2) Go to the menu '6.Model Number D/L' like below photo.
- (3) Input the Factory model name or Serial number like photo.

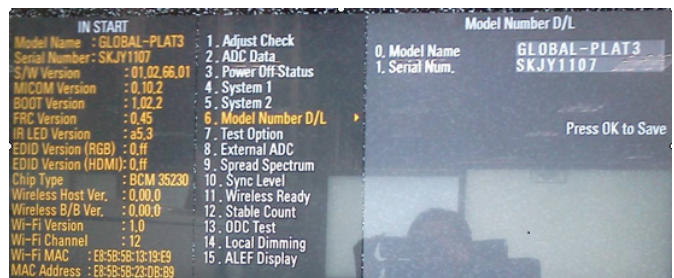

4.6. Wi-Fi MAC Address Check

4.6.1. Using RS232 Command

	Command	Set ACK
Transmission	[A][][Set ID][][20][Cr]	[O][K][x] or [N][G]


4.6.2. Check the menu on in-start



4.7. Local Dimming Inspection (Optional)

4.7.1. ALEF models with local dimming

- Press 'TILT' key of the Adj. R/C and check moving patterns. The black bar patterns moves from top left to bottom right.
- If local dimming function does not work, a whole screen shows full white.

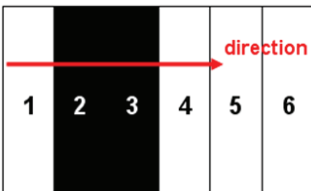

4.8. GND and Hi-Pot test

4.8.1. GND & HI-POT auto-check preparation

- Check the POWER CABLE and SIGNAL CABLE insertion condition

4.8.2. GND & HI-POT auto-check

- Pallet moves in the station. (POWER CORD / AV CORD is tightly inserted)
- Connect the AV JACK Tester.
- Controller (GWS103-4) on.
- GND Test (Auto)
 - If Test is failed, Buzzer operates.
 - If Test is passed, execute next process (Hi-pot test). (Remove A/V CORD from A/V JACK BOX)
- HI-POT test (Auto)
 - If Test is failed, Buzzer operates.
 - If Test is passed, GOOD Lamp on and move to next process automatically.

4.8.3. Check point

- Test voltage
 - 3 Poles
 - GND: 1.5KVac/min at 100mA
 - SIGNAL: 3KVac/min at 100mA
 - TEST time: 1 second
 - TEST POINT
 - 3 Poles
 - GND Test = POWER CORD GND and SIGNAL CABLE GND.
 - Hi-pot Test = POWER CORD GND and LIVE & NEUTRAL.
- LEAKAGE CURRENT: At 0.5mArms

4.9. Motion Remote controller Inspection

- Equipment : Motion remote controller for test, IR-KEY-CODE remote controller for test
 - Check battery before test. (Recommend : Change battery for every Lot.)
- Process
 - If you select the 'start key(wheel)' on the controller, you can pairing with the TV SET.
 - You can check the cursor on the TV Screen, when select the 'Wheel Key' on the controller
 - You must remove the pairing with the TV Set by select 'Back + Home Key' on the controller

4.10. AUDIO output check

No	Item	Min	Typ	Max	Unit	Remark
1	Audio practical max Output, L/R (Distortion=10% max Output)	9.0 8.5	10.0 8.10	12.0 9.88	W Vrms	Measurement condition
2	Speaker (8Ω Impedance)		10.0	15.0	W	Measurement condition

*Measurement condition:

- RF input: Mono, 1KHz sine wave signal, 100% Modulation
- CVBS, Component: 1KHz sine wave signal (0.4Vrms)
- RGB PC: 1KHz sine wave signal (0.7Vrms)

4.11. HDMI ARC Function Inspection

4.11.1. Test equipment

- Optic Receiver Speaker
- MSHG-600 (SW: 1220 ↑)
- HDMI Cable (for 1.4 version)

4.11.2. Test method

- (1) Insert the HDMI Cable to the HDMI ARC port from the master equipment (HDMI1)
- (2) Check the sound from the TV Set



- (3) Check the Sound from the Speaker or using AV & Optic TEST program (It's connected to MSHG-600)

Flow Line



Cell Line




- * Remark: Inspect in Power Only Mode and check SW version in a master equipment




4.12. Camera Port Inspection

- (1) Objective : To check how it connects between Camera and PCBA normally, and their Function
- (2) Test Method : This Inspection is available only Power-Only Status.
 - 1) Push Camera Up
 - 2) Camera's Preview picture appears on TV Set
- (3) Push Camera Down

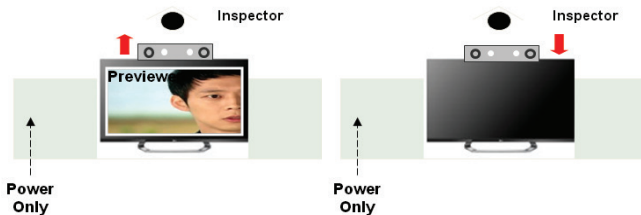

4.13. PIP/W&R Function Inspection

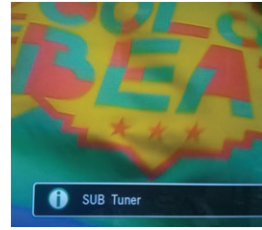

- (1) Objective : To check the connection between sub tuner and PCBA, and their Function
- (2) Test Method : This Inspection is available only Power-Only Status.
 - 1) Press exit key of the Adj. R/C and Press PIP key.
 - 2) Check that the SUB TUNER pop up window on the TV Set.
- (3) Check that the normal operation (picture, sound) of DTV on the TV Set.

** Appendix **

A. DDC Adjustment Command set

	Adjustment content	CMD (HEX)	ADR	VALUE	detail
1	Aging On/Off	F3	00	FF/00	FF : ON / 00 : OFF
2	Input select	F4	00		0x10 : TV 0x20 : AV1 0x21 : AV2 0x40 : Component1 0x41 : Component2 0x60 : RGB 0x90 : HDMI1 0x91 : HDMI2
3	R GAIN	16	00	00 - C0	Gain Value Adjustment CSM COOL
4	G GAIN	18		00 - C0	
5	B GAIN	1A		00 - C0	
6	R GAIN	16	01	00 - C0	Gain Value Adjustment CSM NORMAL
7	G GAIN	18		00 - C0	
8	B GAIN	1A		00 - C0	
9	R GAIN	16	02	00 - C0	Gain Value Adjustment CSM WARM
10	G GAIN	18		00 - C0	
11	B GAIN	1A		00 - C0	
12	CSM mode	F2	00	00	COOL
				01	NORMAL
				02	WARM
13	AUTO ADC	F1	00	0, 1, 2	0: Offset Value Adjustment 1: Gain Value Adjustment 2: Offset and Gain Value Adjustment
14	EEPROM Read	E7	00	00	EEPROM read
15	EEPROM Write	E8	00	data	EEPROM write

B. DDC command protocol

1. Signal TABLE

START 6E A 50 A 84 A 03 A CMD A ADR A VAL A CS A STOP

2. E²PROM Data Write

(1) Signal TABLE

START 6E A 50 A 84+n A 03 A CMD A ADH A ADL A
Data_1 A ... Data_n A CS A STOP Delay 20

LEN : 84h+Bytes
CMD : E8h
ADH : E2PROM Slave Address(A0,A2,A4,A6),
Not 00h(Reserved by BufferToEEPROM)
ADL : E2PROM Sub Address(00~FF)
Data : Write data
Delay : 20ms

(2) Command Set

	Adjustment content	CMD(hex)	LEN	Detail
1	EEPROM READ	E8h	94h	16-Byte Write
2			(84+n)h	n-byte Write

3. E²PROM Data Read

(1) Command Sequential TABLE

START 6E A 50 A 84 A 03 A CMD A ADH A ADL A CS A STOP

Delay 150ms

START 6E A D1 A 128 Bytes Dn A STOP

(2) COMMAND SET

No.	Adjustment content	CMD (hex)	ADH (hex)	ADL (hex)	Detail
1	EEPROM READ	E7	A0	0	0-Page 0~7F Read
2				80	0-Page 80~FF Read
3			A2	0	1-Page 0~7F Read
4				80	1-Page 80~FF Read
5			A4	0	2-Page 0~7F Read
6				80	2-Page 80~FF Read
7			A6	0	3-Page 0~7F Read
8				80	3-Page 80~FF Read

C. RS-232C Command Protocol

RS-232C COMMAND			Explanation
CMD	ID	DATA	
wb	00	00	White Balance Adjust Start.
wb	00	10	Gain Adjust Start (Internal white pattern)
wb	00	1f	Gain Adjust Stop.
wb	00	20	Offset Adjust Start. (Internal white pattern)
wb	00	2f	Offset Adjust Stop.
wb	00	ff	White Balance Adjust Stop (Internal pattern Exit)
xb	00		10 : Analog, 20 : Video 1, 21 : Video 2, 40 : Component 1, 41 : Component 2, 50 : RGB_DTV, 60 : RGB_PC 90 : HDMI 1, 91 : HDMI 2, 92 : HDMI
ad	00	10	ADC Start


D. Bluetooth S/W Upgrade by using USB drive Input

(1) Preparation Equipment

1) USB Memory Stick



2) New Bluetooth Software

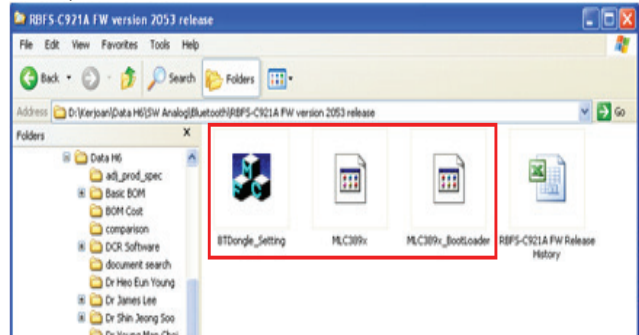

3) Copy New File


Copy Bluetooth software MCL389x.bin file to memory stick with out folder.

(Caution) Do not copy the file to the inside folder

3) Copy New File

Copy Bluetooth software MCL389x.bin file to memory stick with out folder.

(Caution) Do not copy the file to the inside folder

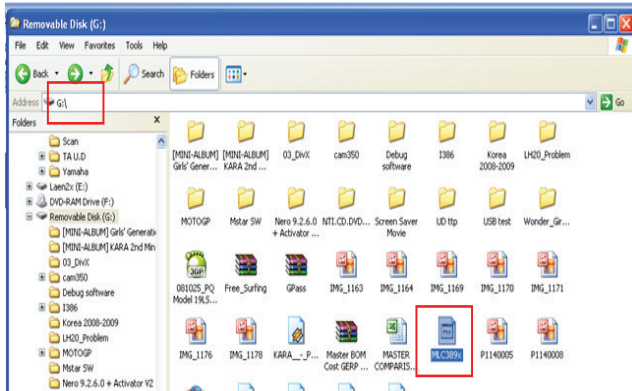

(2) Connection


- Plug-in USB Memory stick to the USB input of the set.

(3) USB input -> Automatically loading menu



* The OSD "USB Device loading" is appeared by automatically...


(4) Selecting Window for Bluetooth Software update

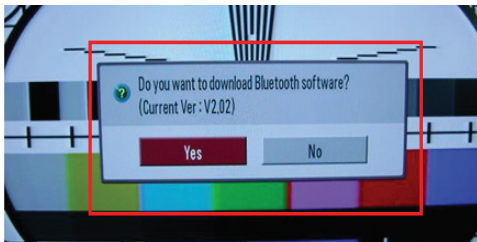

▪ The Pop-up window appears for selecting to update Bluetooth software and information about current Bluetooth software. (Ex : V2.02)

▪ Select "Yes"


(5) Bluetooth S/W Downloading Process

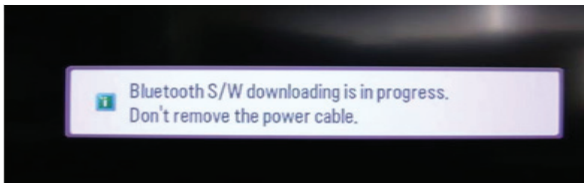

▪ Time Process Downloading new Bluetooth software about 10seconds

▪ Please Wait until finish and do not un-plug power cable

(6) OSD – Bluetooth software updated successfully

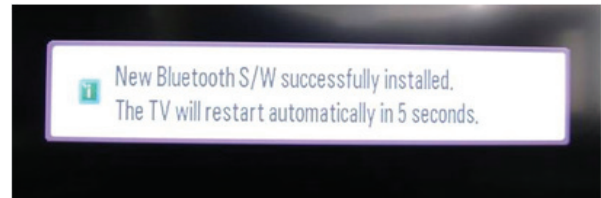

- OSD Information Bluetooth software update success
- LCDTV Set will restart by automatically...
- Time Process to restart about 5seconds


(7) Check S/W Version

- Push "IN-START" button on service remote Controller
- Check Information Bluetooth S/W version will appear on OSD Service Menu.


Example : Bluetooth SW version 2.05

Block Diagram


1.K2L Circuit Block Diagram

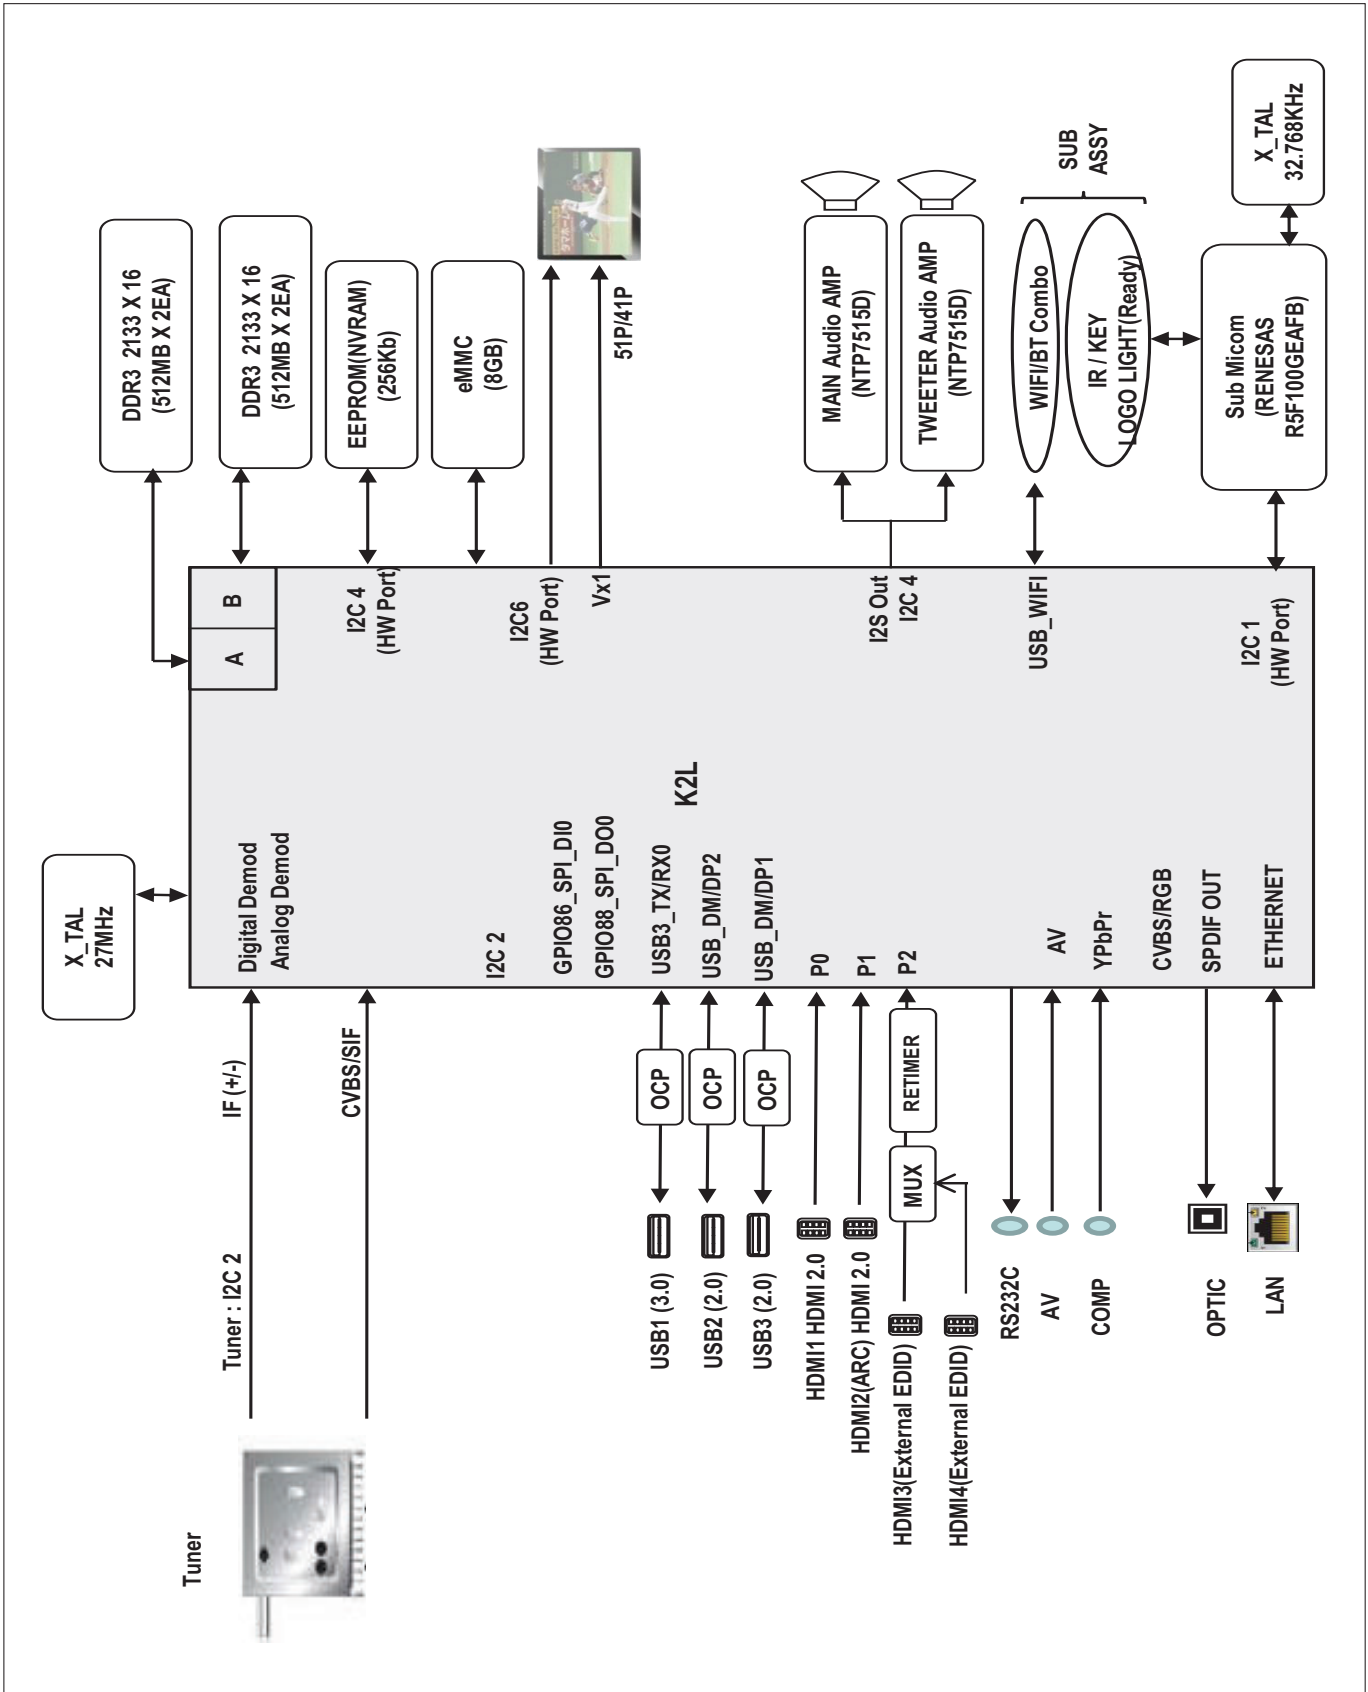


2. K2L I2C Block Diagram

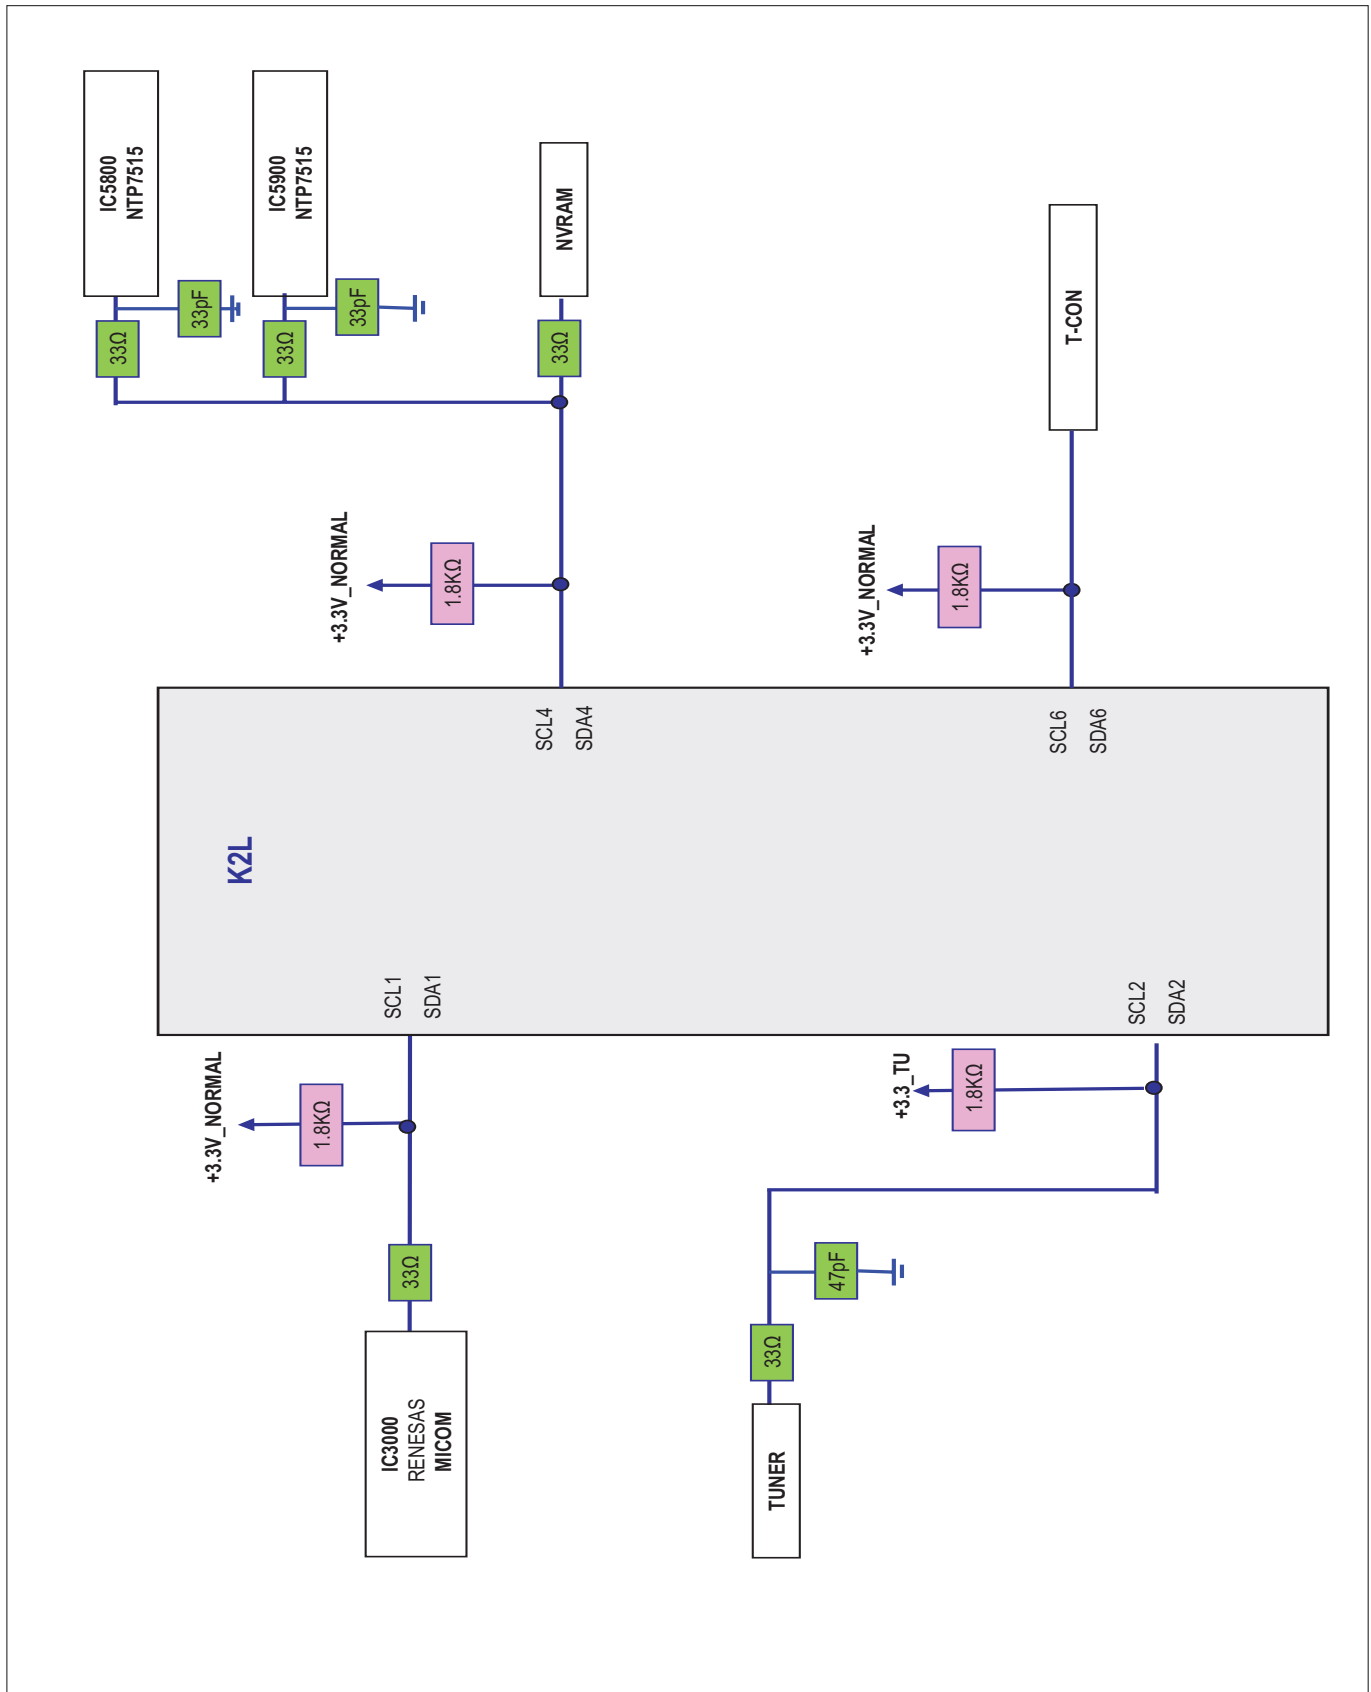


3. K2L Power Block

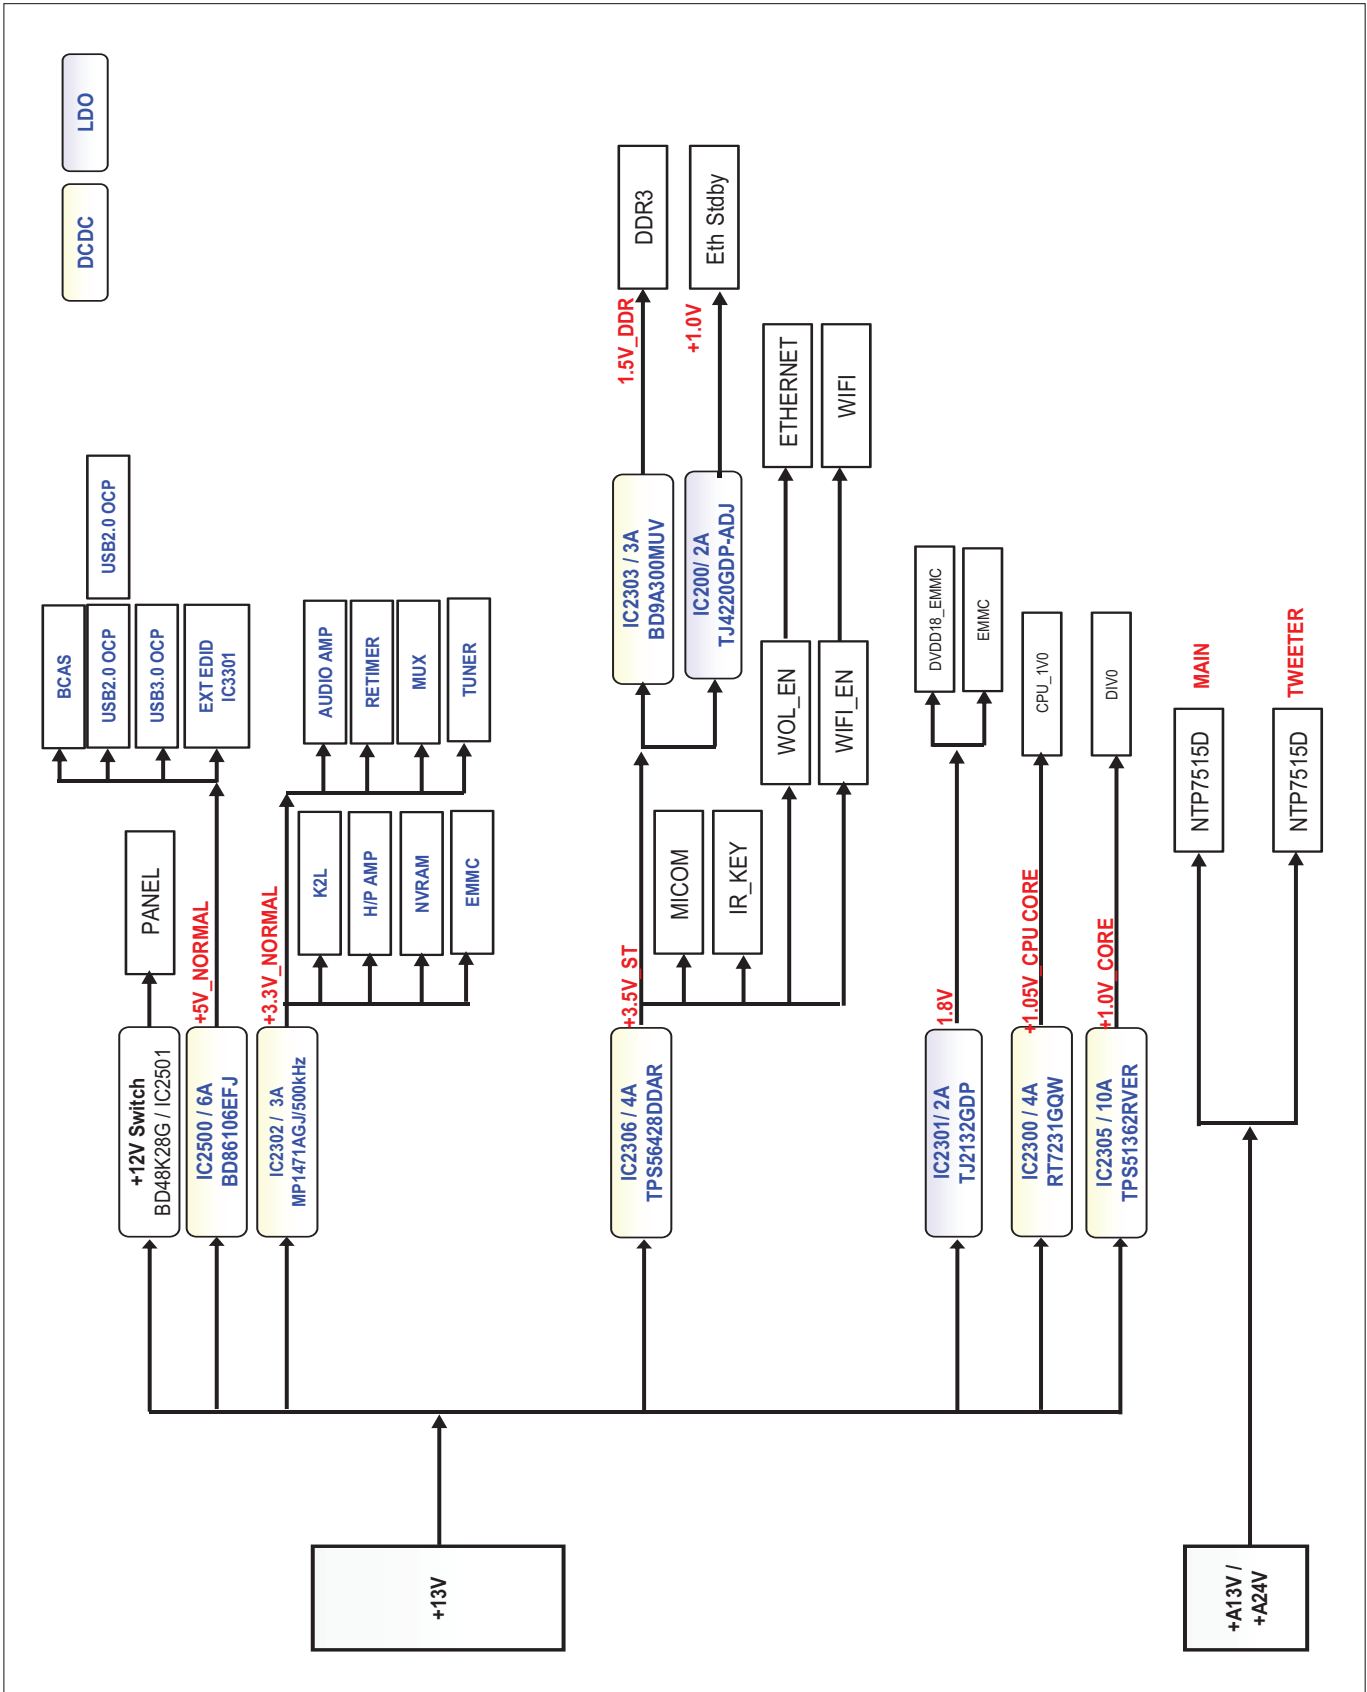


4. Tuner/CI Block Diagram

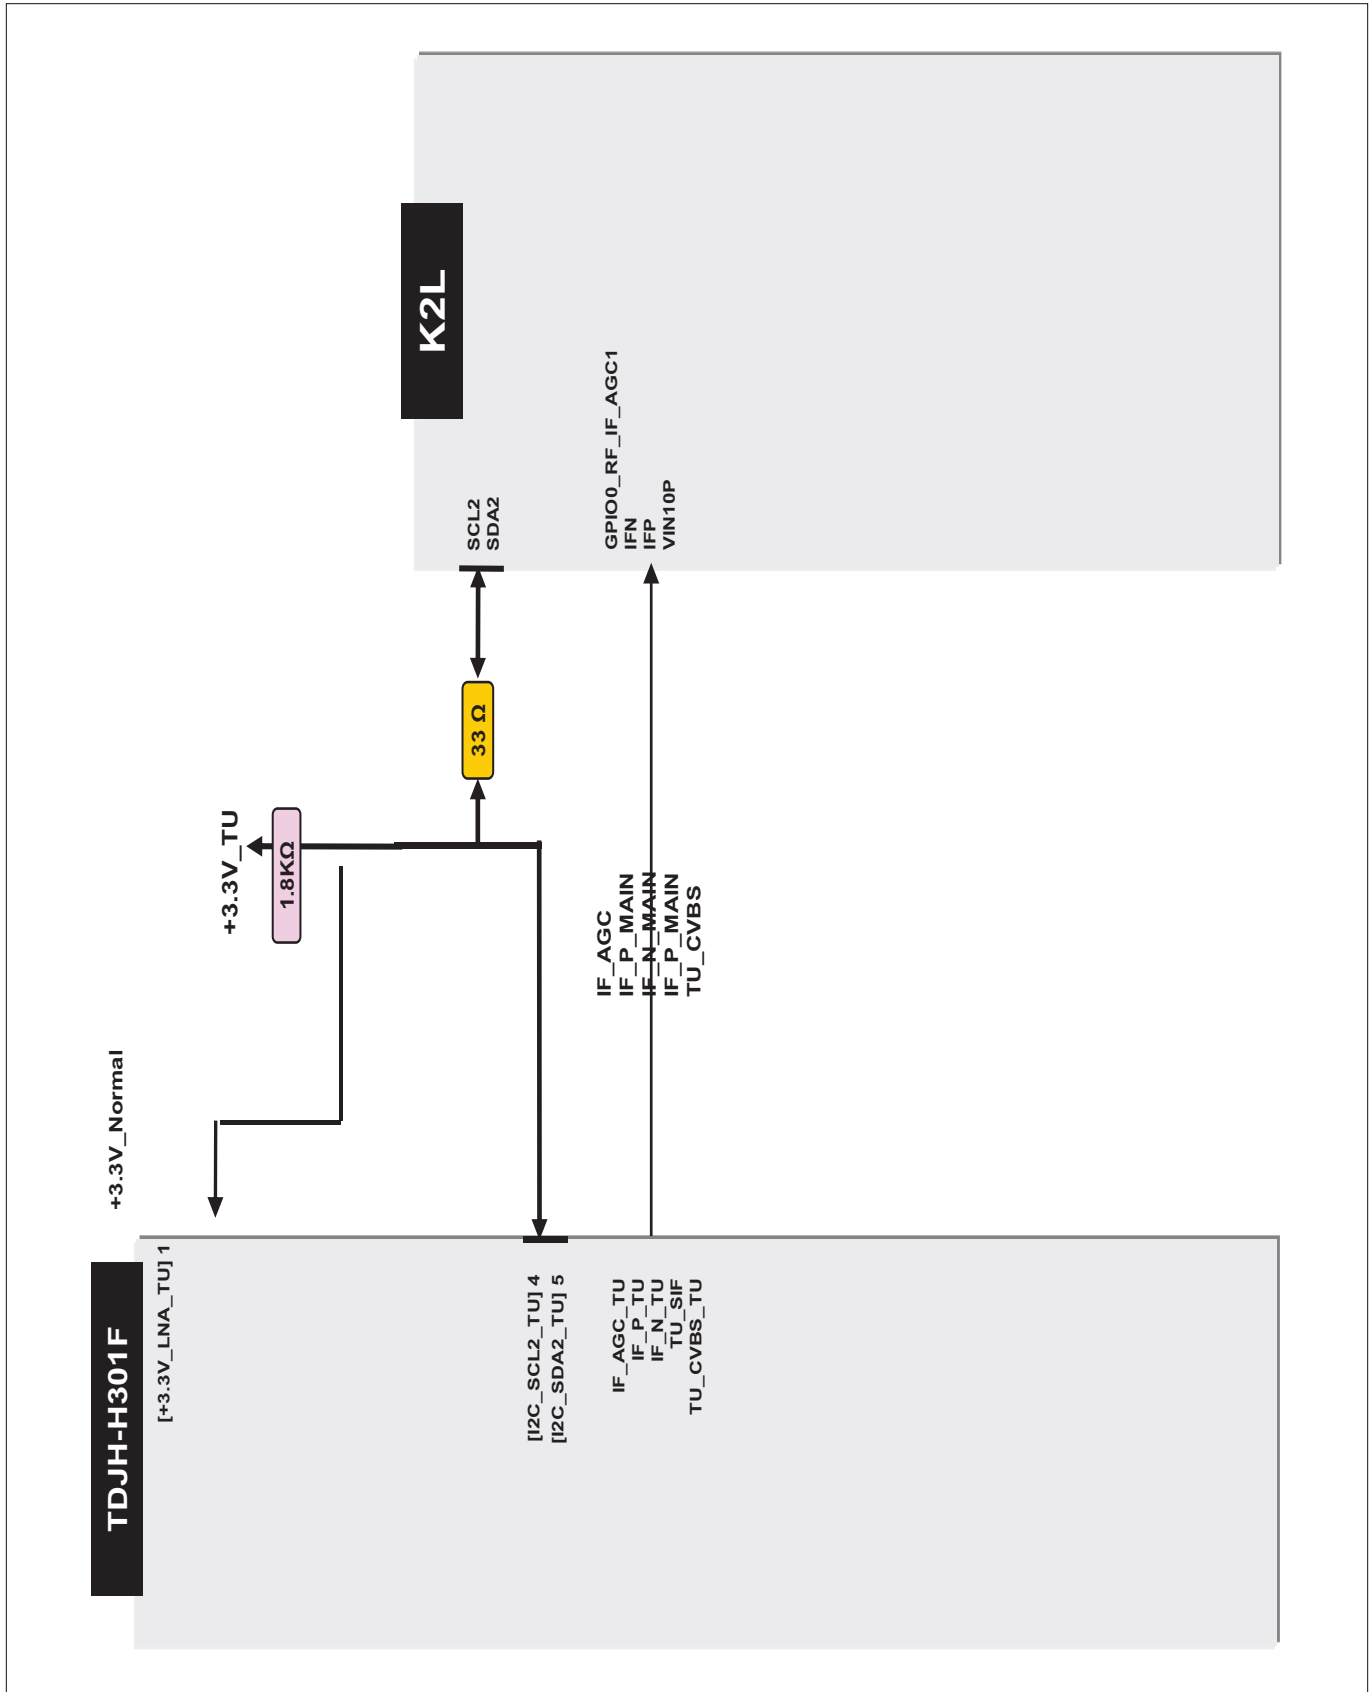


5. Video/Audio In Block Diagram

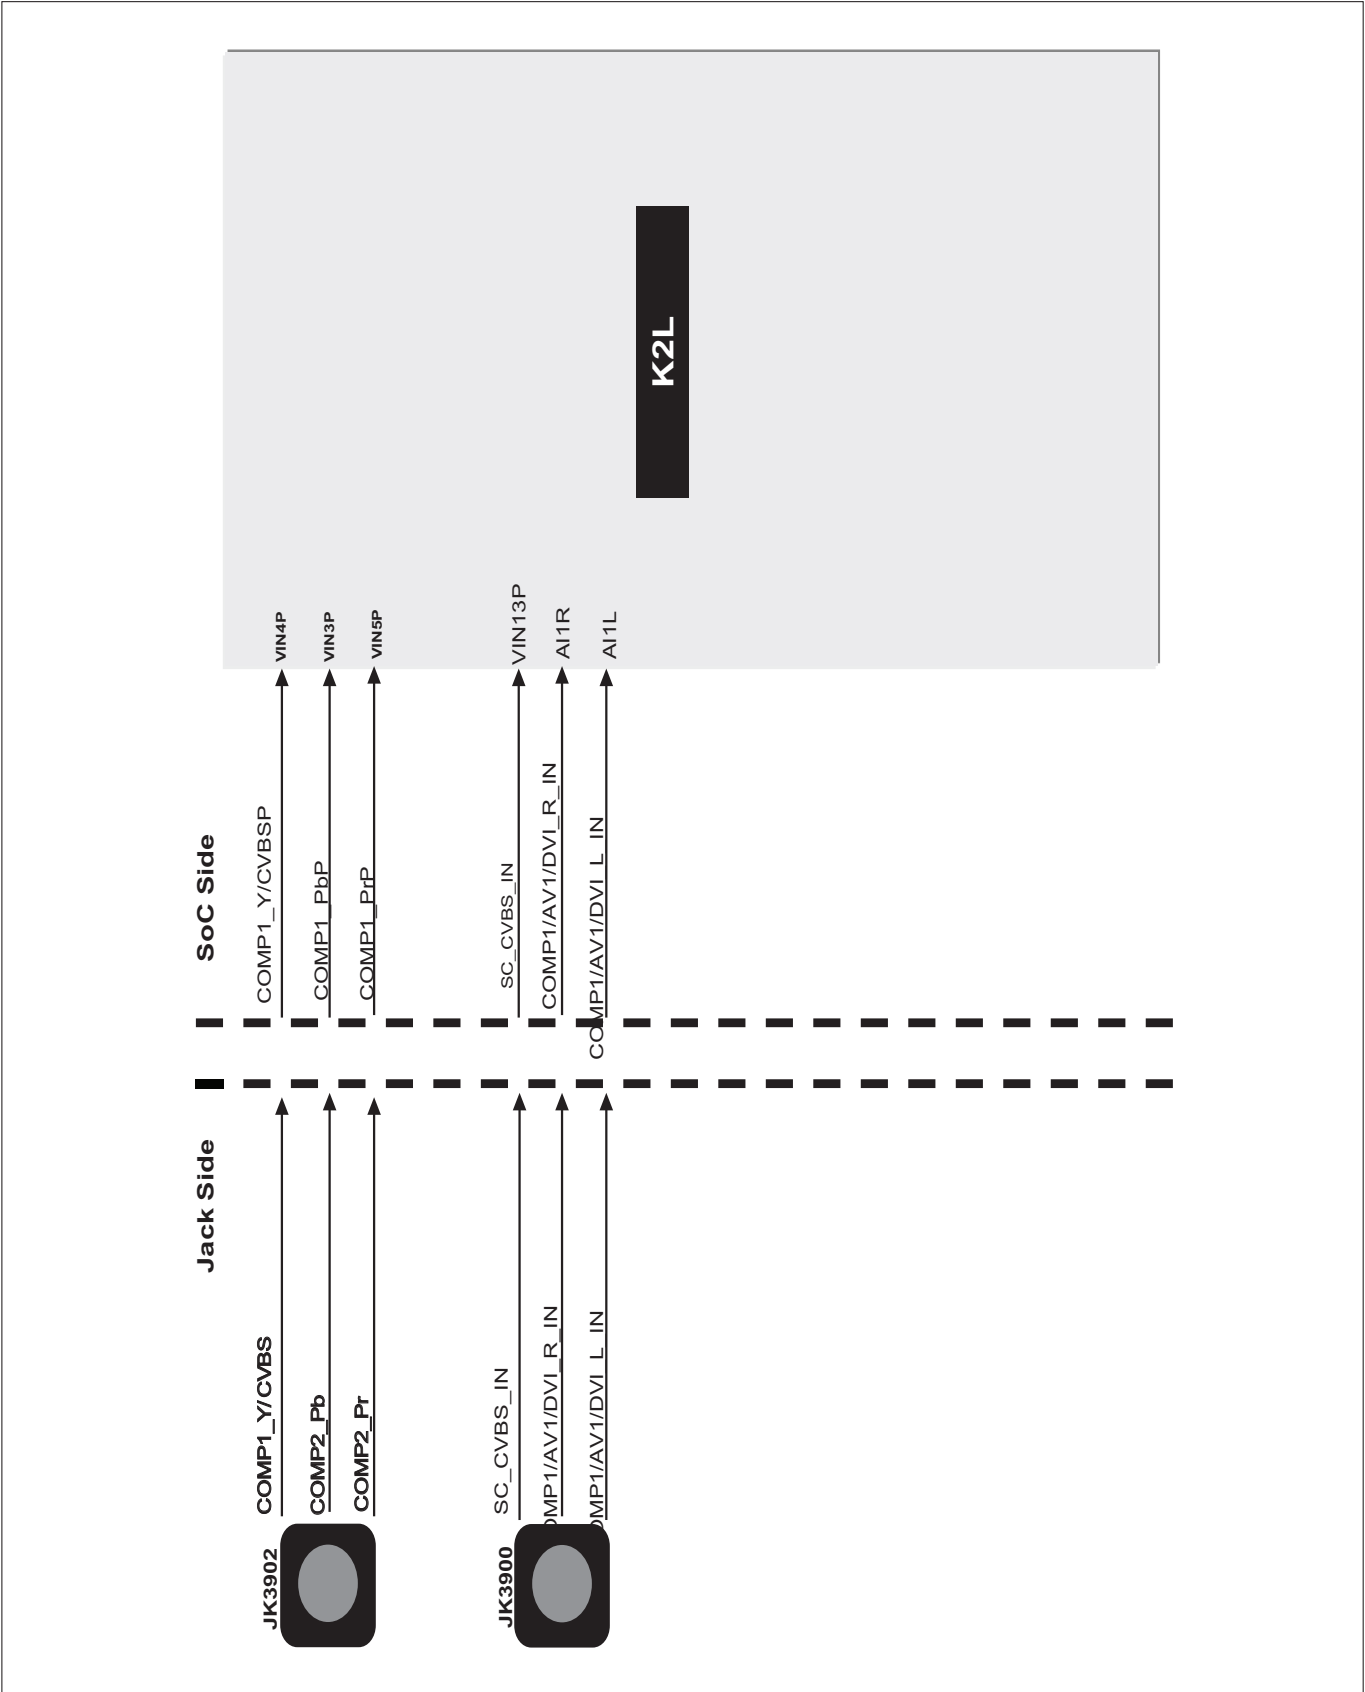


6. Audio Out Block Diagram

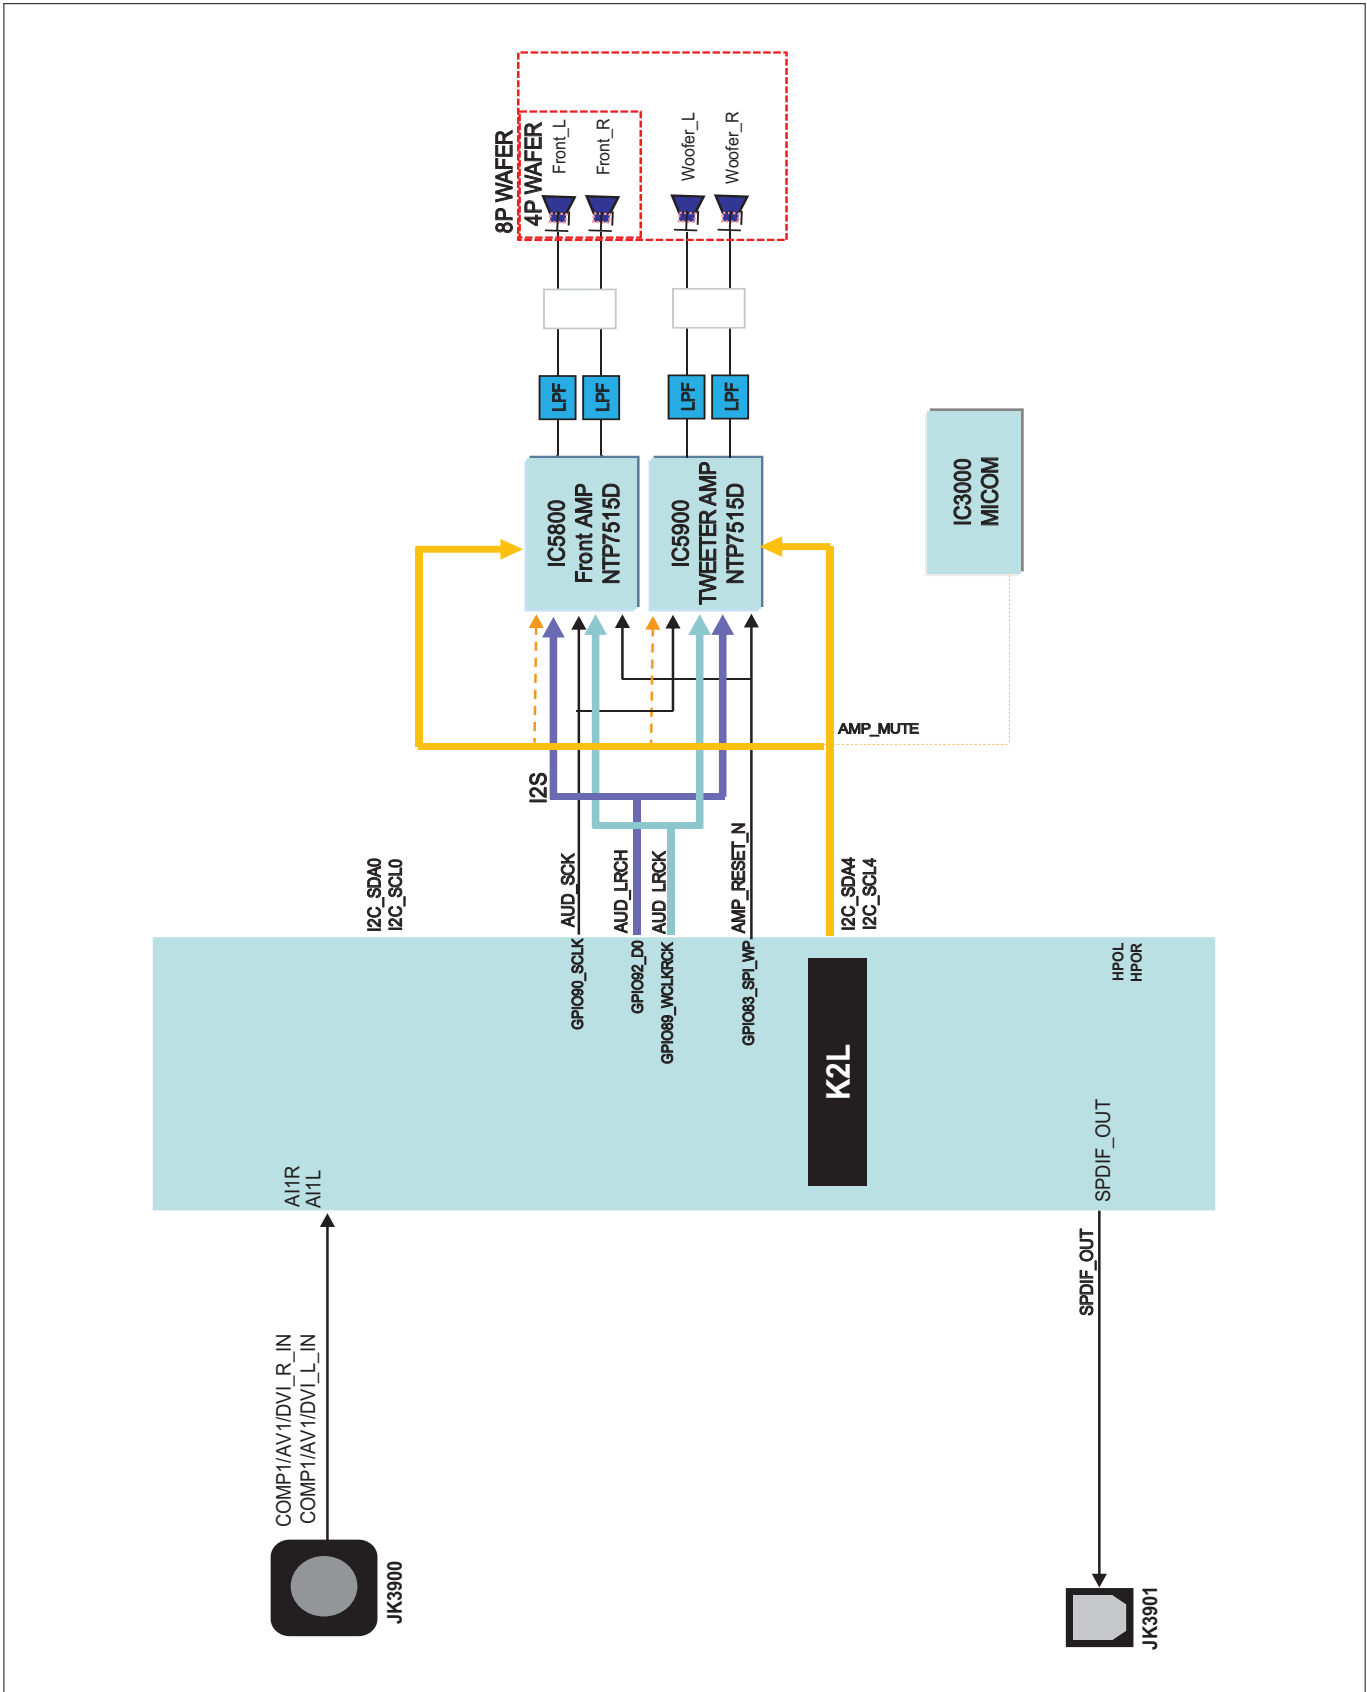

7. HDMI

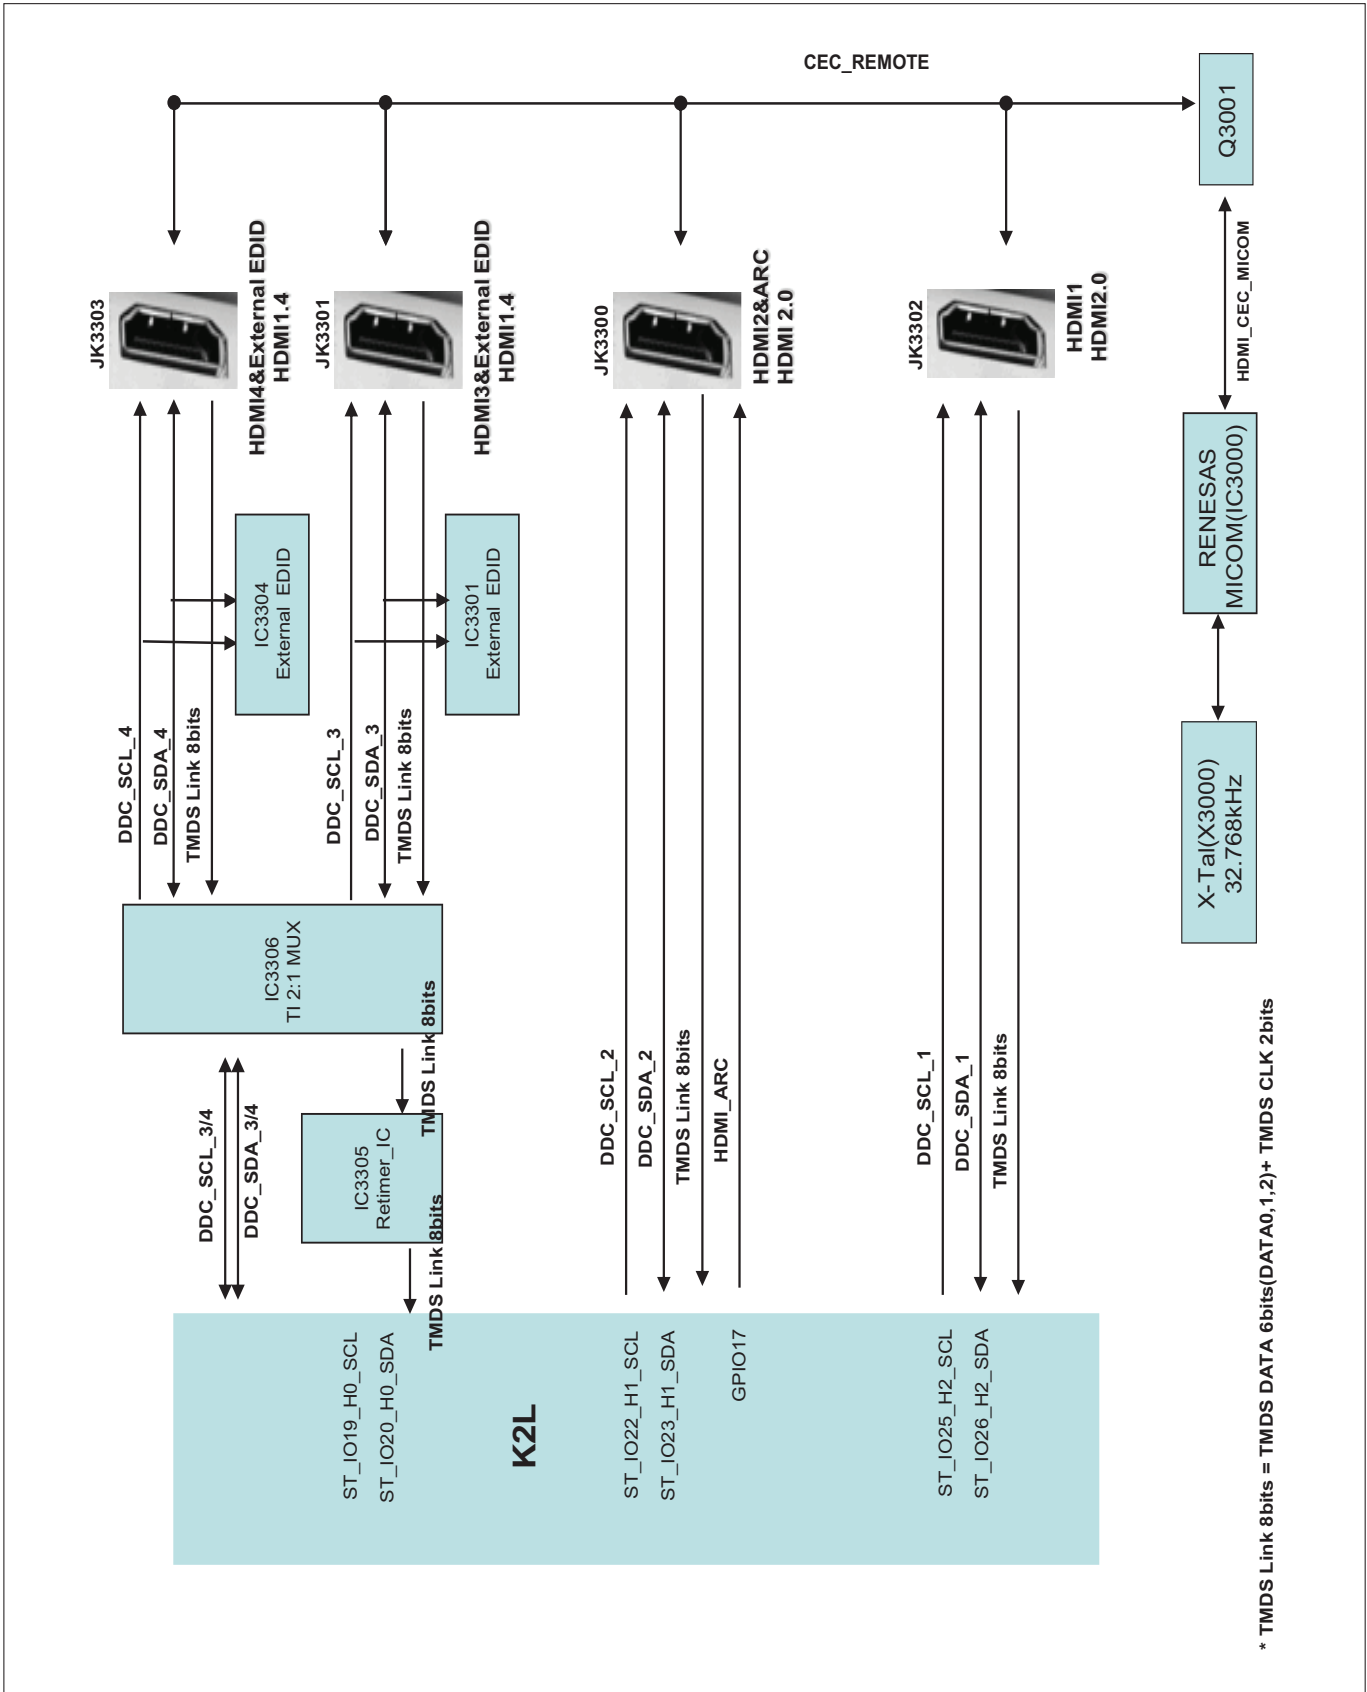


8. USB / WIFI / M-REMOTE / UART

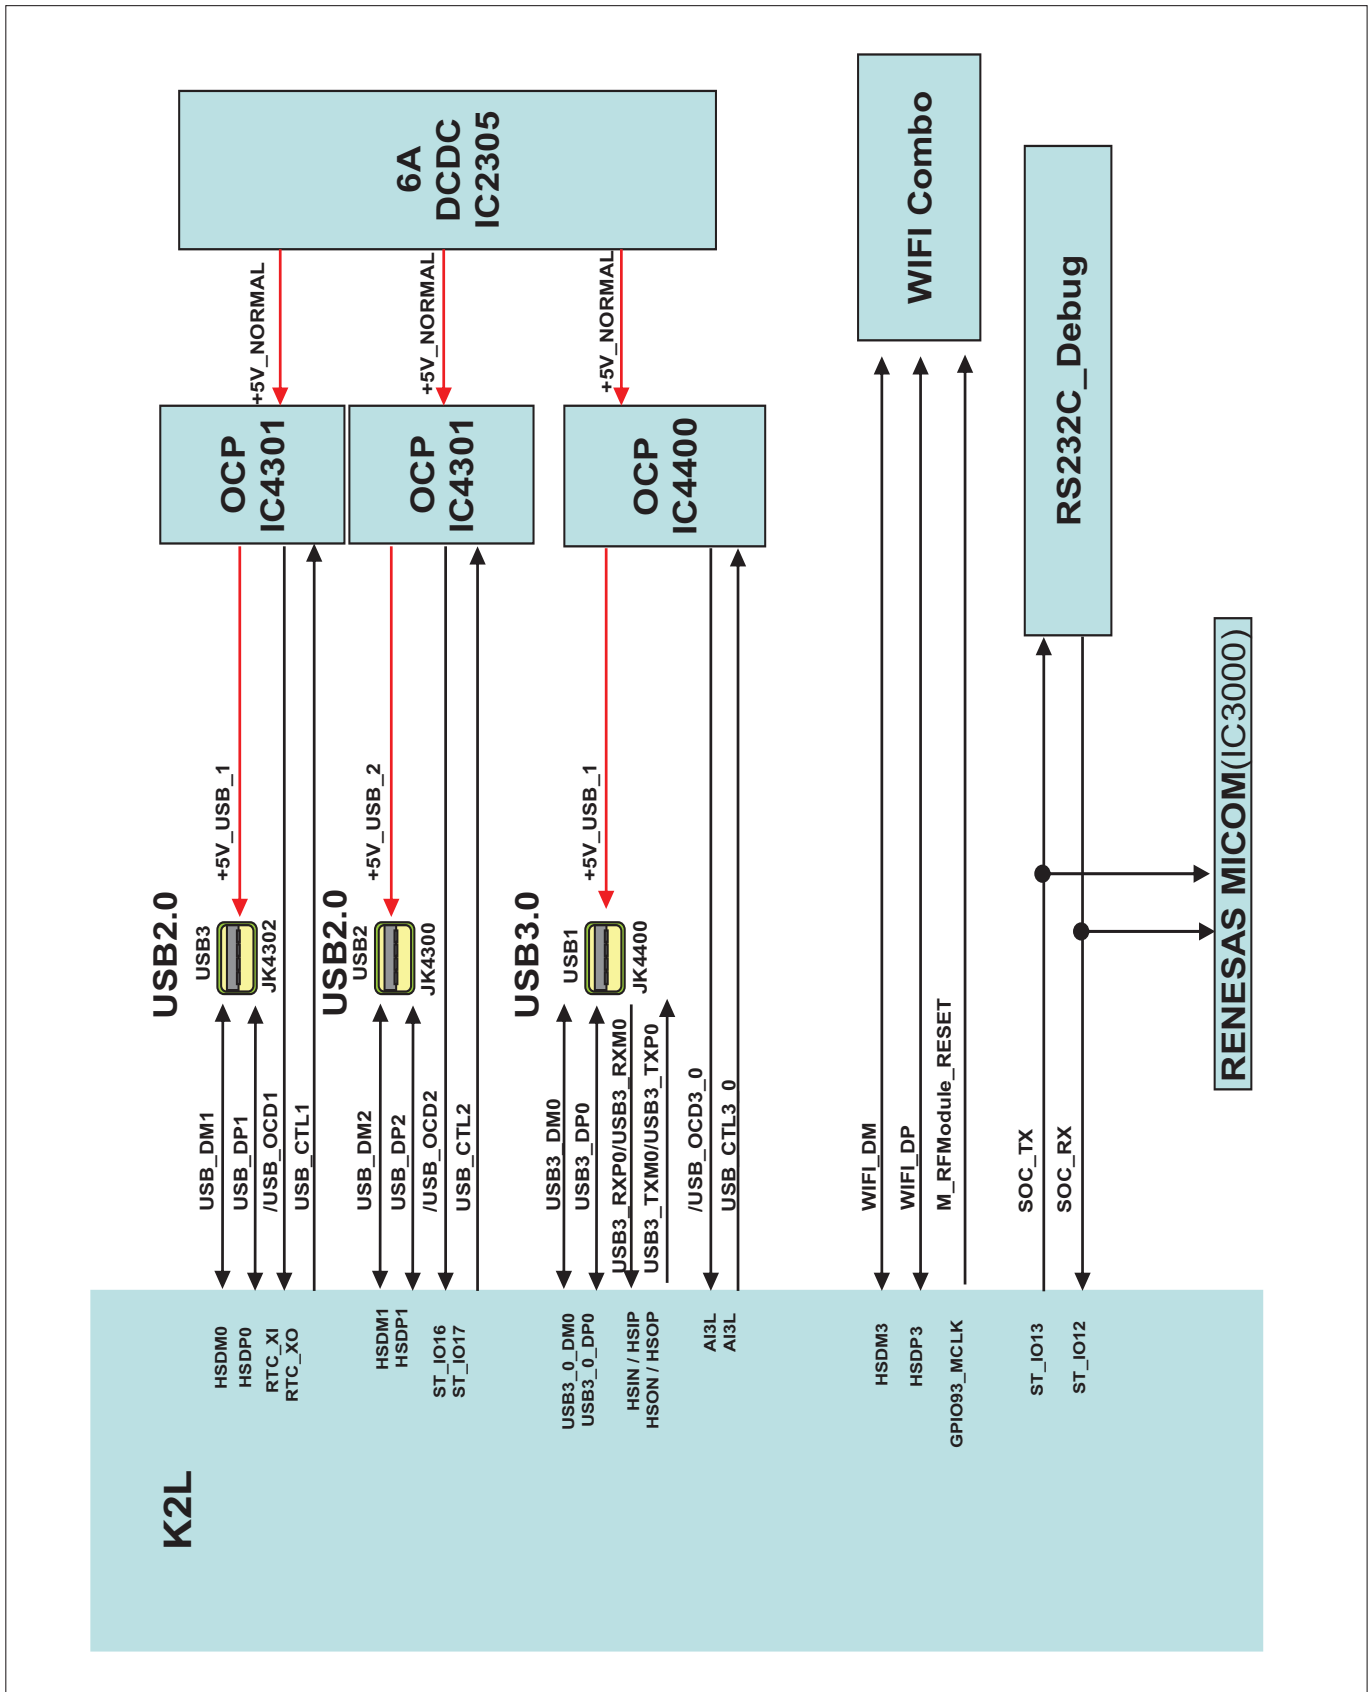

EXPLODED VIEW

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by Δ in the Schematic Diagram and EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards. Do not modify the original design without permission of manufacturer.

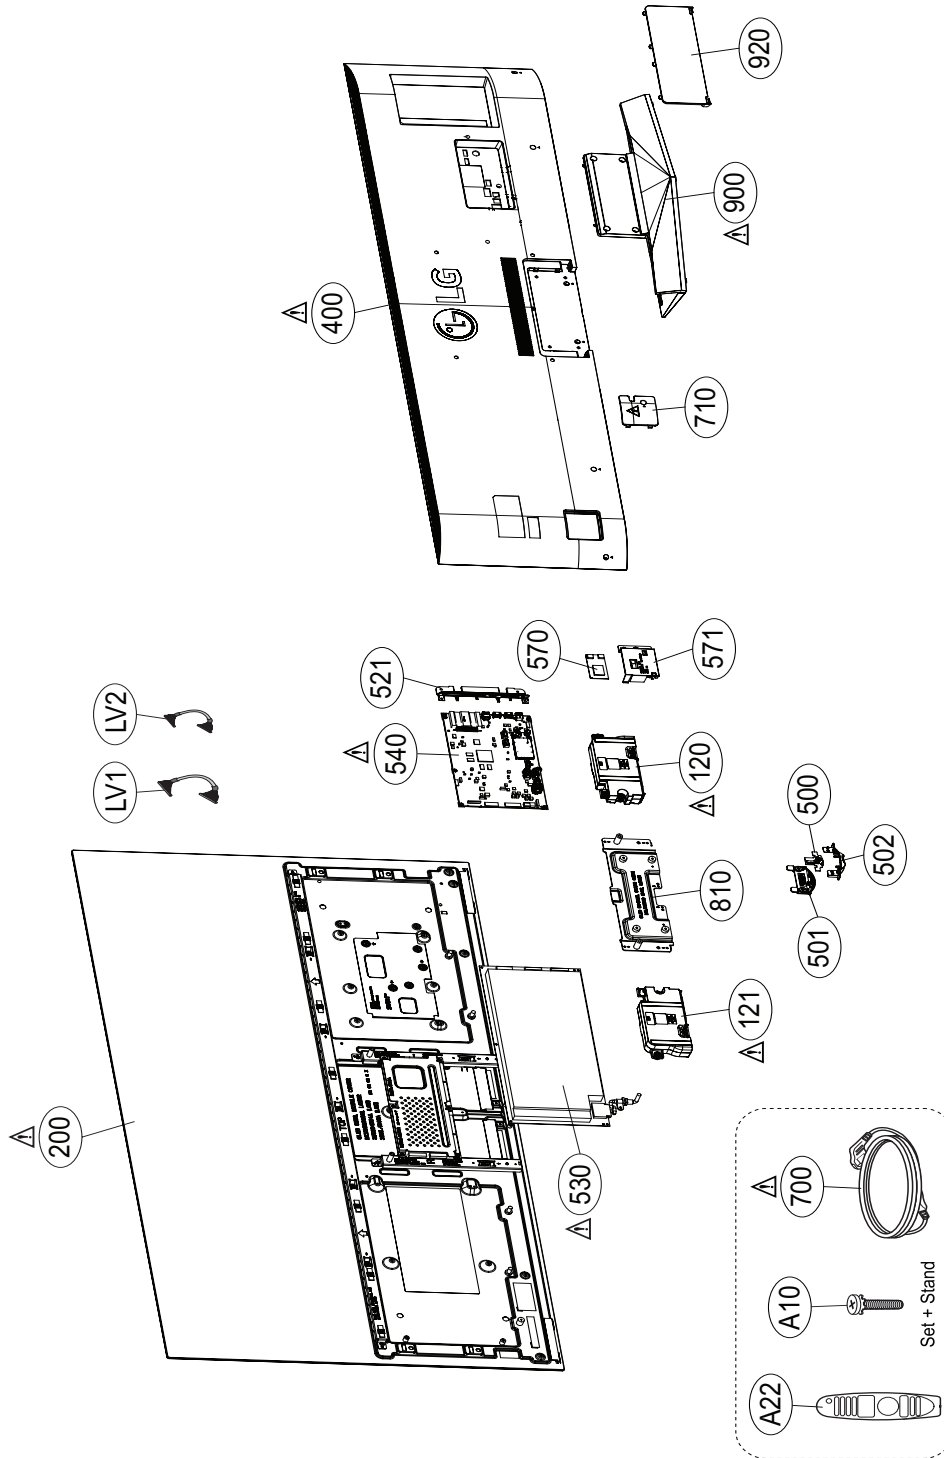

DISASSEMBLY

(1) Put the set on the flat pad.



(3) Remove Stand Screw and Stand



(2) Remove Rear Small Cover



○ FAB30016103 (M4*12mm), 4EA
- Remove Screw 4EA first, next remove Stand

(4) Remove Back Cover Screw



- Pull up bottom of Rear Small Cover to remove.



○ FAB31843216 (M3*5.5mm, Gray) 9EA
-> Common use 55"/65"

○ FAB31843216 (M3*5.5mm, Gray) 1EA
-> Add only 55"

(5) Remove PowerCord Bracket










- Pull up Power Cord, than remove Bracket, next remove cord from PSU.

(6) Remove Back Cover



- Pull up bottom of Back Cover to remove.

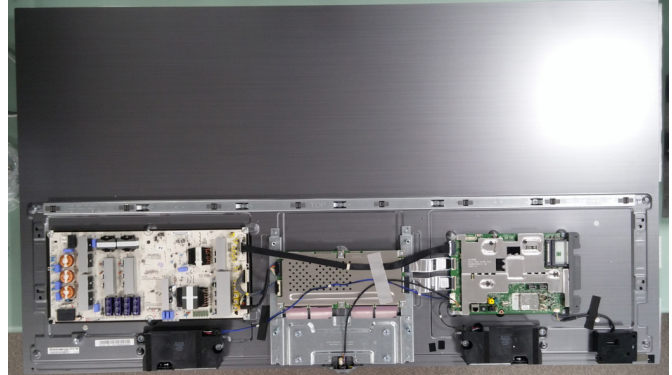

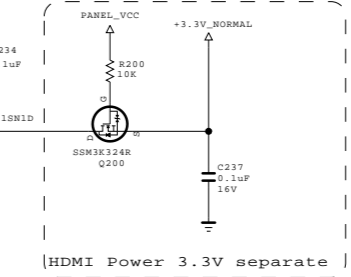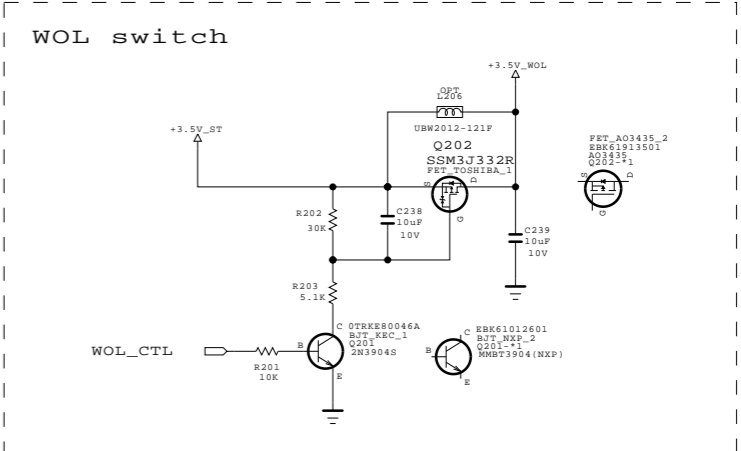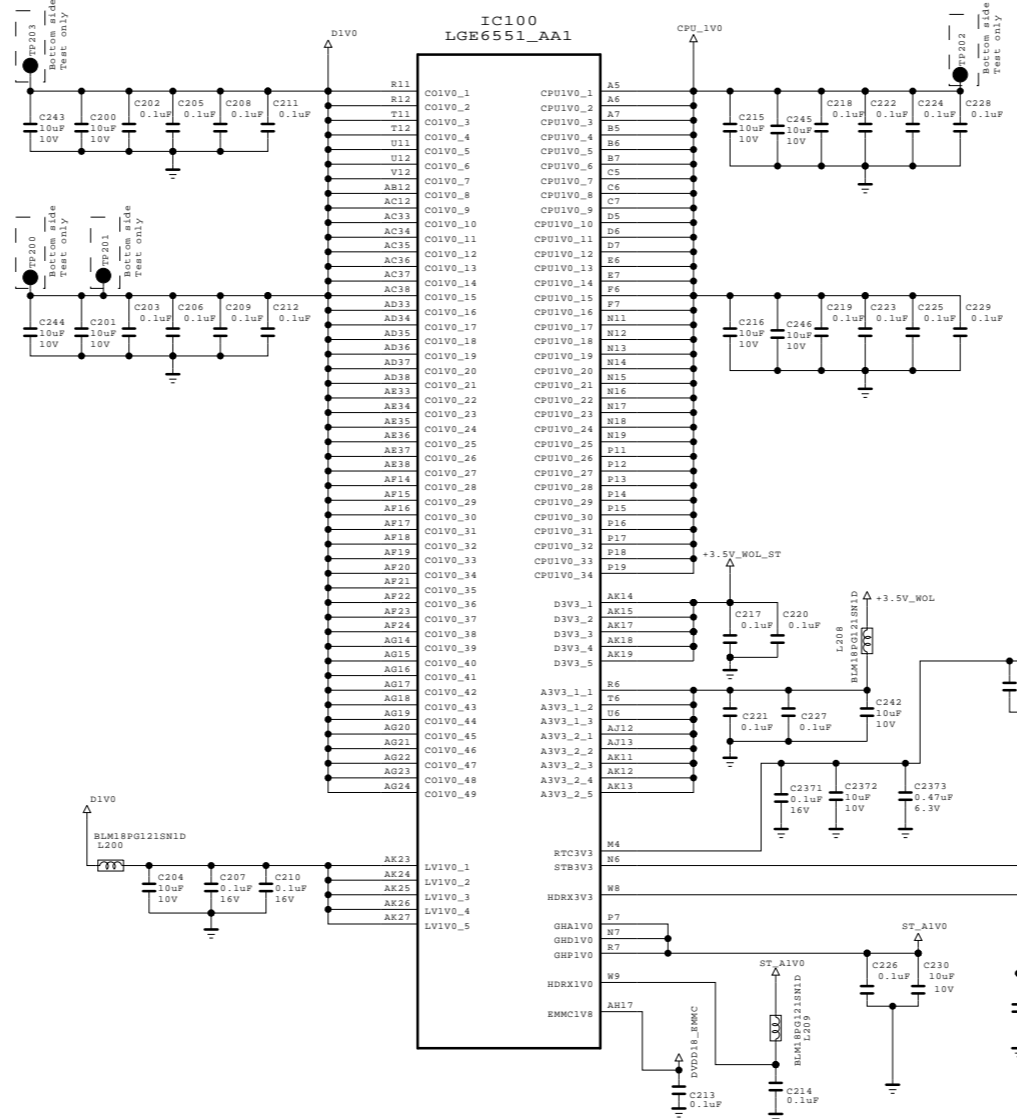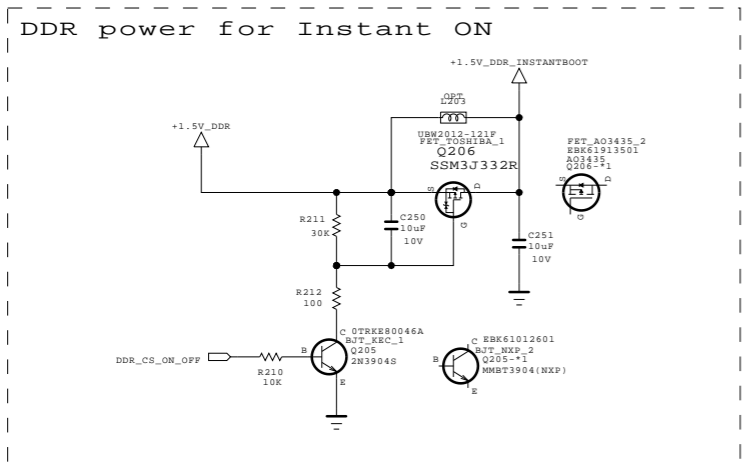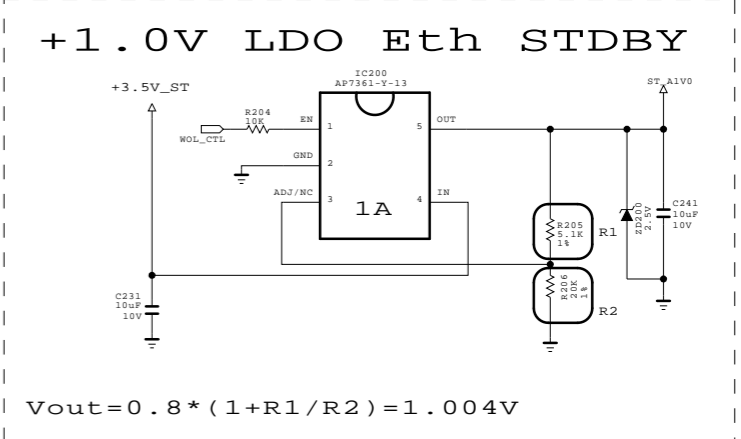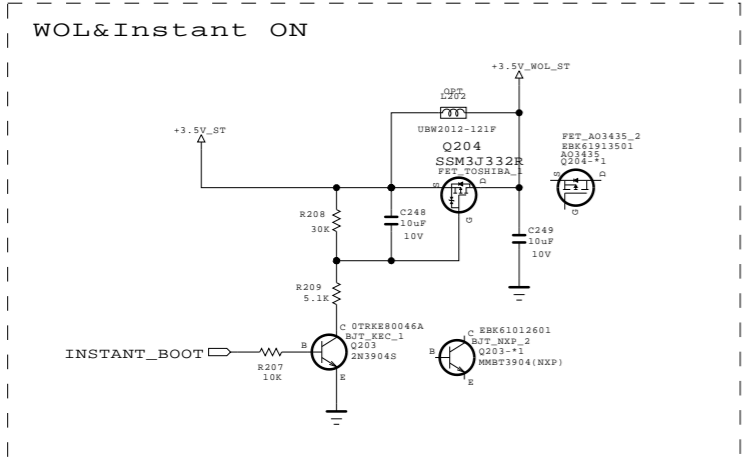


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	K2L	DATE	2015-06-13
BLOCK	K2L POWER	SHEET	02


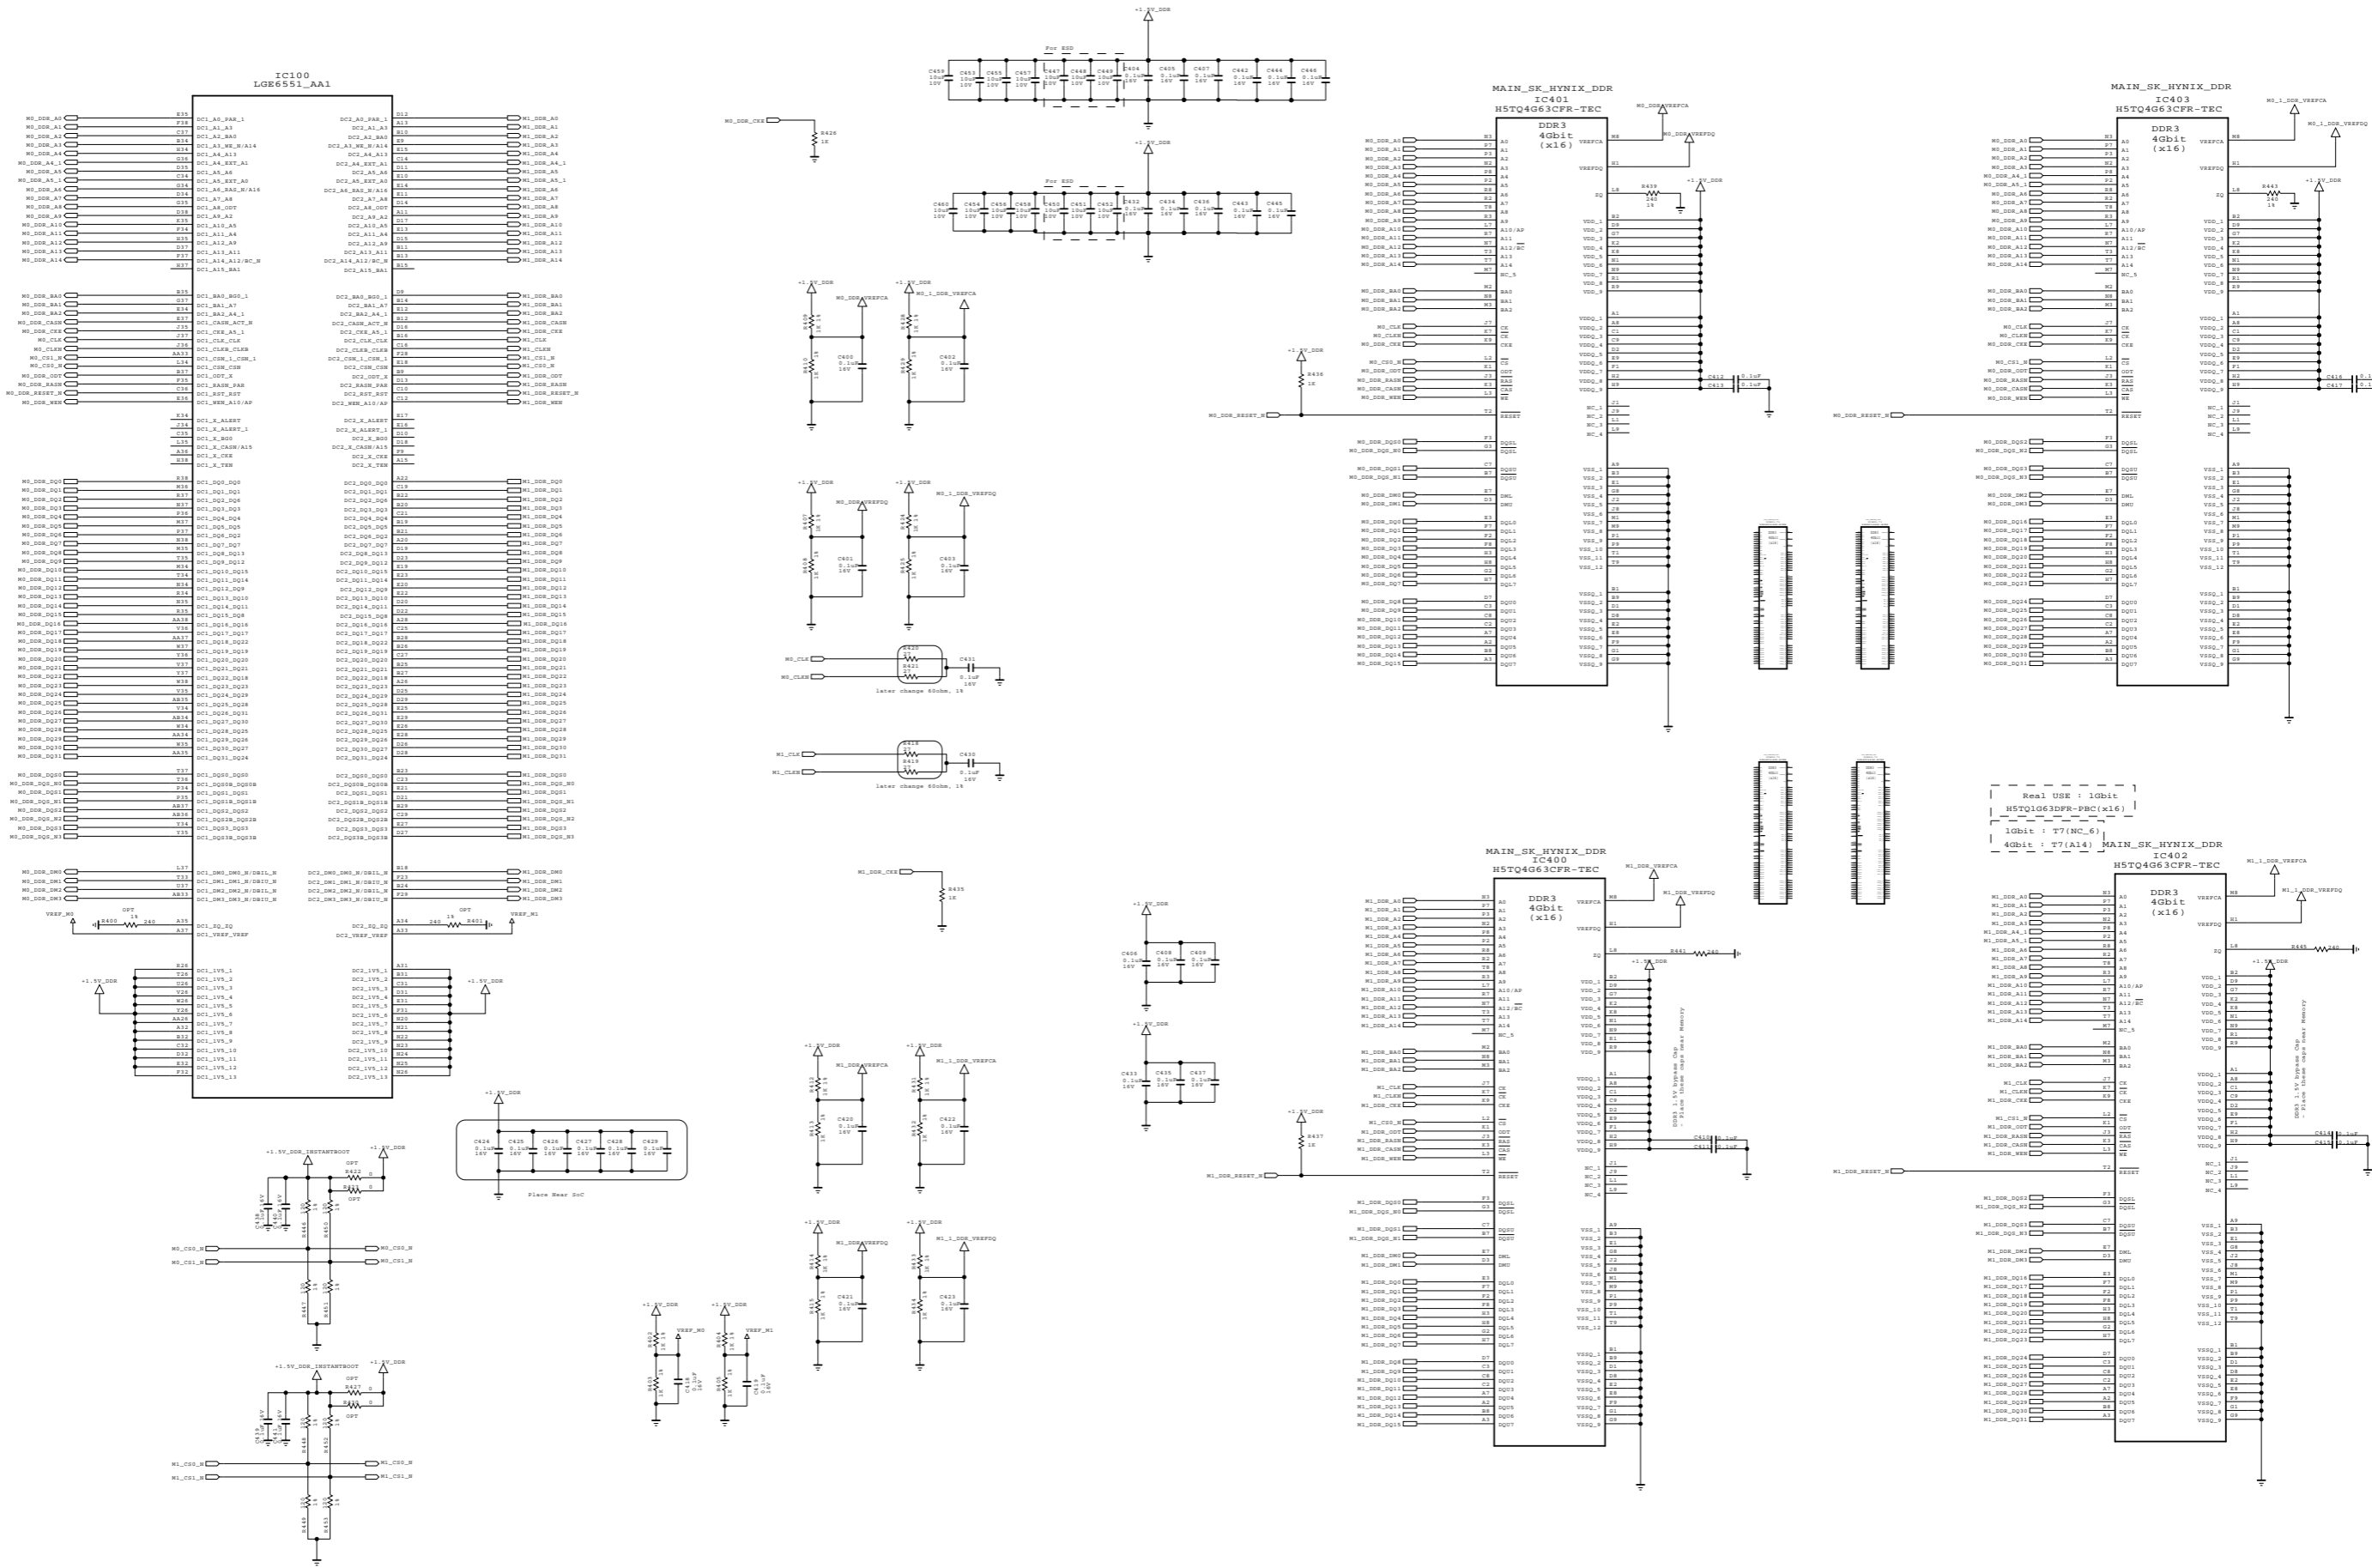


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	K2L	DATE	2015-06-13
BLOCK	K2L_DDR	SHEET	03

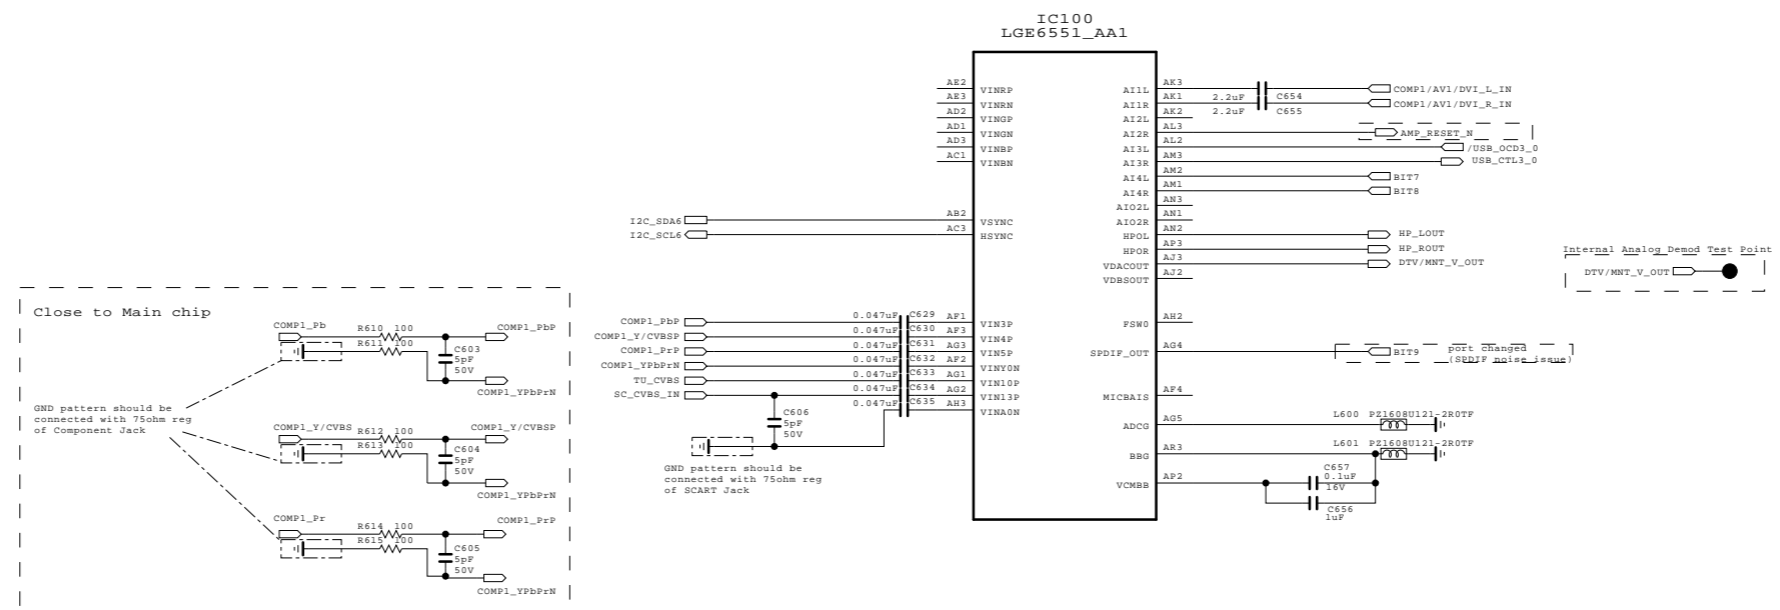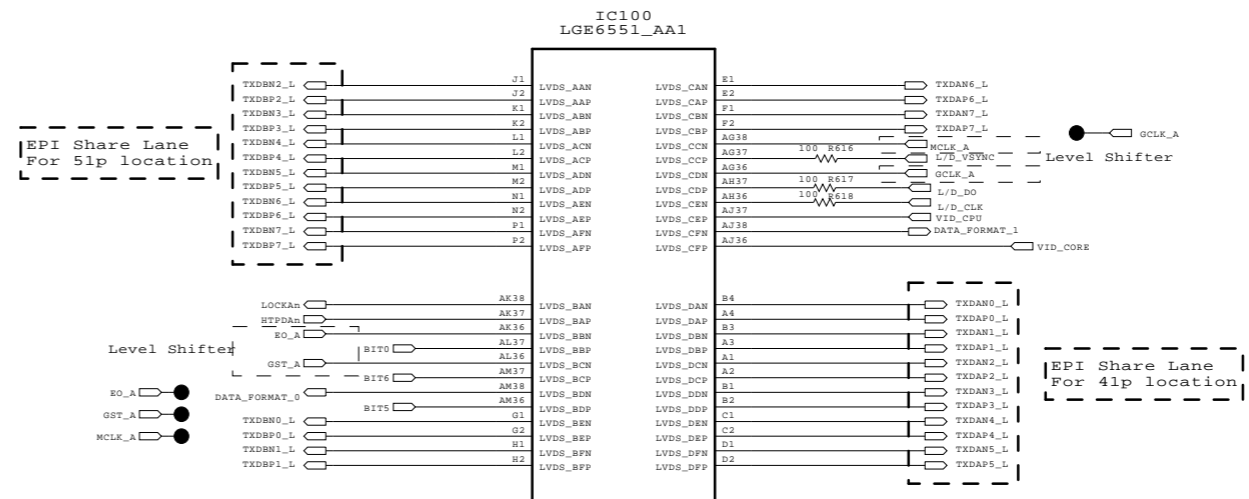

THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.



SECRET
LGElectronics



MODEL	K2L	DATE	15-06-13
BLOCK	MAIN4_EXT_IN/OUTPUT	SHEET	06

IC100
LGR6551_AA1

A0	DOWN_1	DOWN_149	AN11
A1	DOWN_2	DOWN_150	AN12
A2	DOWN_3	DOWN_151	AN13
A3	DOWN_4	DOWN_152	AN14
A4	DOWN_5	DOWN_153	AN15
A5	DOWN_6	DOWN_154	AN16
A6	DOWN_7	DOWN_155	AN17
A7	DOWN_8	DOWN_156	AN18
A8	DOWN_9	DOWN_157	AN19
A9	DOWN_10	DOWN_158	AN20
A10	DOWN_11	DOWN_159	AN21
A11	DOWN_12	DOWN_160	AN22
A12	DOWN_13	DOWN_161	AN23
A13	DOWN_14	DOWN_162	AN24
A14	DOWN_15	DOWN_163	AN25
A15	DOWN_16	DOWN_164	AN26
A16	DOWN_17	DOWN_165	AN27
A17	DOWN_18	DOWN_166	AN28
A18	DOWN_19	DOWN_167	AN29
A19	DOWN_20	DOWN_168	AN30
A20	DOWN_21	DOWN_169	AN31
A21	DOWN_22	DOWN_170	AN32
A22	DOWN_23	DOWN_171	AN33
A23	DOWN_24	DOWN_172	AN34
A24	DOWN_25	DOWN_173	AN35
A25	DOWN_26	DOWN_174	AN36
A26	DOWN_27	DOWN_175	AN37
A27	DOWN_28	DOWN_176	AN38
A28	DOWN_29	DOWN_177	AN39
A29	DOWN_30	DOWN_178	AN40
A30	DOWN_31	DOWN_179	AN41
A31	DOWN_32	DOWN_180	AN42
A32	DOWN_33	DOWN_181	AN43
A33	DOWN_34	DOWN_182	AN44
A34	DOWN_35	DOWN_183	AN45
A35	DOWN_36	DOWN_184	AN46
A36	DOWN_37	DOWN_185	AN47
A37	DOWN_38	DOWN_186	AN48
A38	DOWN_39	DOWN_187	AN49
A39	DOWN_40	DOWN_188	AN50
A40	DOWN_41	DOWN_189	AN51
A41	DOWN_42	DOWN_190	AN52
A42	DOWN_43	DOWN_191	AN53
A43	DOWN_44	DOWN_192	AN54
A44	DOWN_45	DOWN_193	AN55
A45	DOWN_46	DOWN_194	AN56
A46	DOWN_47	DOWN_195	AN57
A47	DOWN_48	DOWN_196	AN58
A48	DOWN_49	DOWN_197	AN59
A49	DOWN_50	DOWN_198	AN60
A50	DOWN_51	DOWN_199	AN61
A51	DOWN_52	DOWN_200	AN62
A52	DOWN_53	DOWN_201	AN63
A53	DOWN_54	DOWN_202	AN64
A54	DOWN_55	DOWN_203	AN65
A55	DOWN_56	DOWN_204	AN66
A56	DOWN_57	DOWN_205	AN67
A57	DOWN_58	DOWN_206	AN68
A58	DOWN_59	DOWN_207	AN69
A59	DOWN_60	DOWN_208	AN70
A60	DOWN_61	DOWN_209	AN71
A61	DOWN_62	DOWN_210	AN72
A62	DOWN_63	DOWN_211	AN73
A63	DOWN_64	DOWN_212	AN74
A64	DOWN_65	DOWN_213	AN75
A65	DOWN_66	DOWN_214	AN76
A66	DOWN_67	DOWN_215	AN77
A67	DOWN_68	DOWN_216	AN78
A68	DOWN_69	DOWN_217	AN79
A69	DOWN_70	DOWN_218	AN80
A70	DOWN_71	DOWN_219	AN81
A71	DOWN_72	DOWN_220	AN82
A72	DOWN_73	DOWN_221	AN83
A73	DOWN_74	DOWN_222	AN84
A74	DOWN_75	DOWN_223	AN85
A75	DOWN_76	DOWN_224	AN86
A76	DOWN_77	DOWN_225	AN87
A77	DOWN_78	DOWN_226	AN88
A78	DOWN_79	DOWN_227	AN89
A79	DOWN_80	DOWN_228	AN90
A80	DOWN_81	DOWN_229	AN91
A81	DOWN_82	DOWN_230	AN92
A82	DOWN_83	DOWN_231	AN93
A83	DOWN_84	DOWN_232	AN94
A84	DOWN_85	DOWN_233	AN95
A85	DOWN_86	DOWN_234	AN96
A86	DOWN_87	DOWN_235	AN97
A87	DOWN_88	DOWN_236	AN98
A88	DOWN_89	DOWN_237	AN99
A89	DOWN_90	DOWN_238	AN100
A90	DOWN_91	DOWN_239	AN101
A91	DOWN_92	DOWN_240	AN102
A92	DOWN_93	DOWN_241	AN103
A93	DOWN_94	DOWN_242	AN104
A94	DOWN_95	DOWN_243	AN105
A95	DOWN_96	DOWN_244	AN106
A96	DOWN_97	DOWN_245	AN107
A97	DOWN_98	DOWN_246	AN108
A98	DOWN_99	DOWN_247	AN109
A99	DOWN_100	DOWN_248	AN110
A100	DOWN_101	DOWN_249	AN111
A101	DOWN_102	DOWN_250	AN112
A102	DOWN_103	DOWN_251	AN113
A103	DOWN_104	DOWN_252	AN114
A104	DOWN_105	DOWN_253	AN115
A105	DOWN_106	DOWN_254	AN116
A106	DOWN_107	DOWN_255	AN117
A107	DOWN_108	DOWN_256	AN118
A108	DOWN_109	DOWN_257	AN119
A109	DOWN_110	DOWN_258	AN120
A110	DOWN_111	DOWN_259	AN121
A111	DOWN_112	DOWN_260	AN122
A112	DOWN_113	DOWN_261	AN123
A113	DOWN_114	DOWN_262	AN124
A114	DOWN_115	DOWN_263	AN125
A115	DOWN_116	DOWN_264	AN126
A116	DOWN_117	DOWN_265	AN127
A117	DOWN_118	DOWN_266	AN128
A118	DOWN_119	DOWN_267	AN129
A119	DOWN_120	DOWN_268	AN130
A120	DOWN_121	DOWN_269	AN131
A121	DOWN_122	DOWN_270	AN132
A122	DOWN_123	DOWN_271	AN133
A123	DOWN_124	DOWN_272	AN134
A124	DOWN_125	DOWN_273	AN135
A125	DOWN_126	DOWN_274	AN136
A126	DOWN_127	DOWN_275	AN137
A127	DOWN_128	DOWN_276	AN138
A128	DOWN_129	DOWN_277	AN139
A129	DOWN_130	DOWN_278	AN140
A130	DOWN_131	DOWN_279	AN141
A131	DOWN_132	DOWN_280	AN142
A132	DOWN_133	DOWN_281	AN143
A133	DOWN_134	DOWN_282	AN144
A134	DOWN_135	DOWN_283	AN145
A135	DOWN_136	DOWN_284	AN146
A136	DOWN_137	DOWN_285	AN147
A137	DOWN_138	DOWN_286	AN148
A138	DOWN_139	DOWN_287	AN149
A139	DOWN_140	DOWN_288	AN150
A140	DOWN_141	DOWN_289	AN151
A141	DOWN_142	DOWN_290	AN152
A142	DOWN_143	DOWN_291	AN153
A143	DOWN_144	DOWN_292	AN154
A144	DOWN_145	DOWN_293	AN155
A145	DOWN_146	DOWN_294	AN156
A146	DOWN_147	DOWN_295	AN157
A147	DOWN_148	DOWN_296	AN158
A148	DOWN_149	DOWN_297	AN159
A149	DOWN_150	DOWN_298	AN160
A150	DOWN_151	DOWN_299	AN161
A151	DOWN_152	DOWN_300	AN162
A152	DOWN_153	DOWN_301	AN163
A153	DOWN_154	DOWN_302	AN164
A154	DOWN_155	DOWN_303	AN165
A155	DOWN_156	DOWN_304	AN166
A156	DOWN_157	DOWN_305	AN167
A157	DOWN_158	DOWN_306	AN168
A158	DOWN_159	DOWN_307	AN169
A159	DOWN_160	DOWN_308	AN170
A160	DOWN_161	DOWN_309	AN171
A161	DOWN_162	DOWN_310	AN172
A162	DOWN_163	DOWN_311	AN173
A163	DOWN_164	DOWN_312	AN174
A164	DOWN_165	DOWN_313	AN175
A165	DOWN_166	DOWN_314	AN176
A166	DOWN_167	DOWN_315	AN177
A167	DOWN_168	DOWN_316	AN178

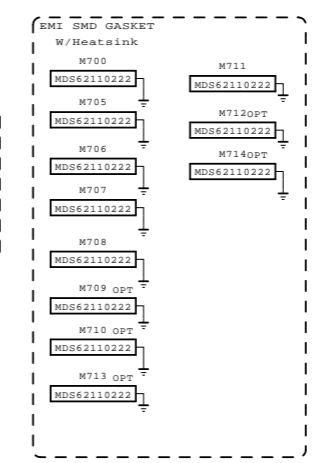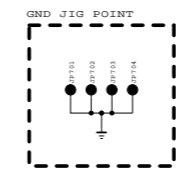


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




MODEL	K2L	DATE	2015-06-13
BLOCK	K2L_GND	SHEET	07 /


CI SLOT

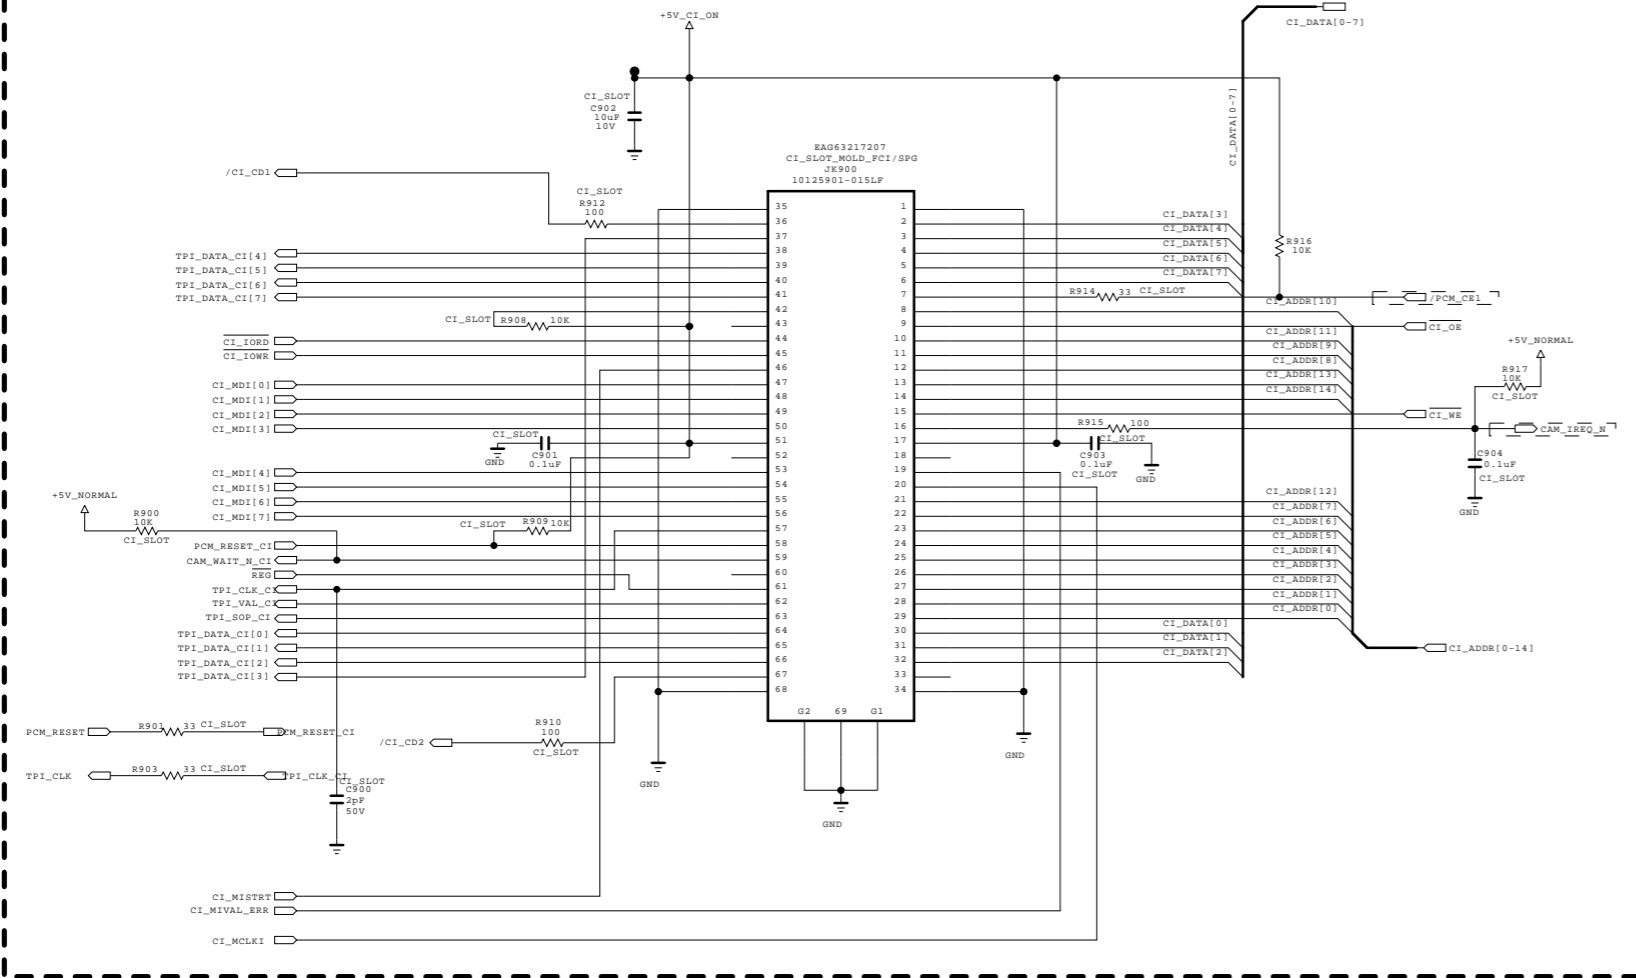


CI HOST I/F

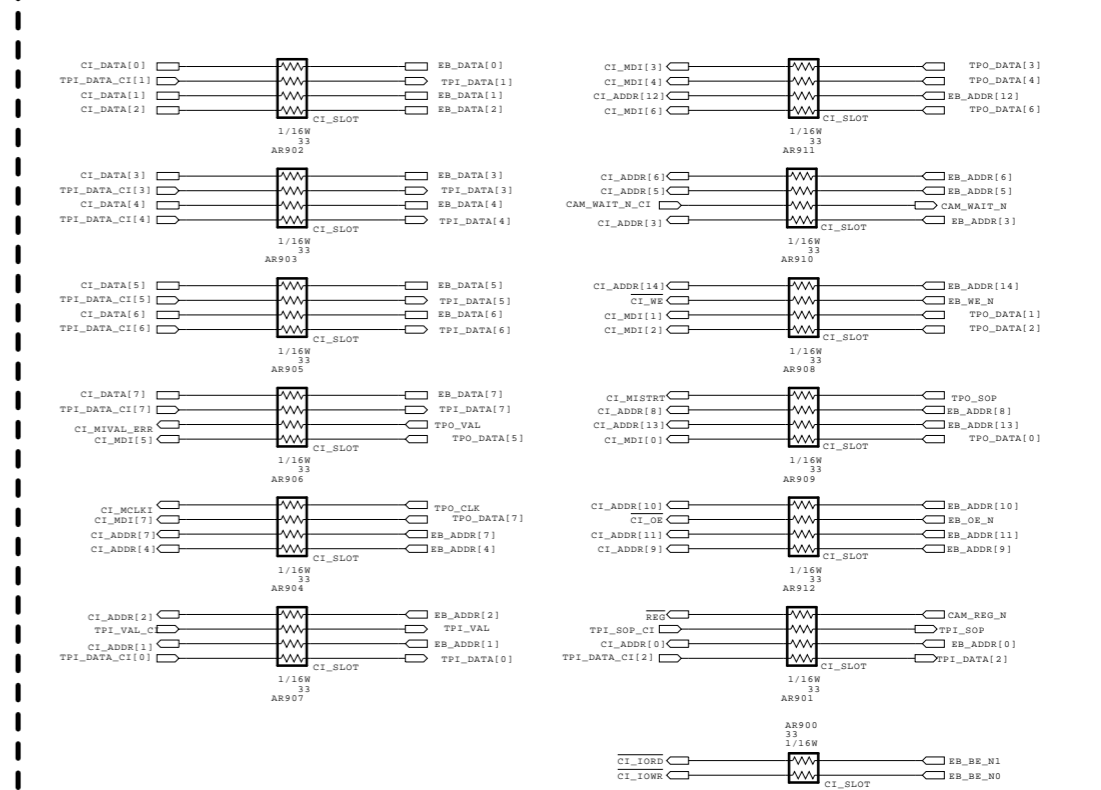


METAL CI SLOT ONLY FOR 43/49UH61

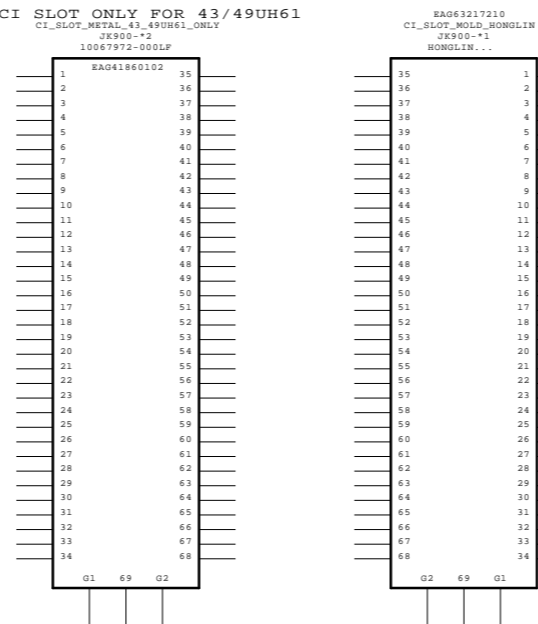

CI DETECT

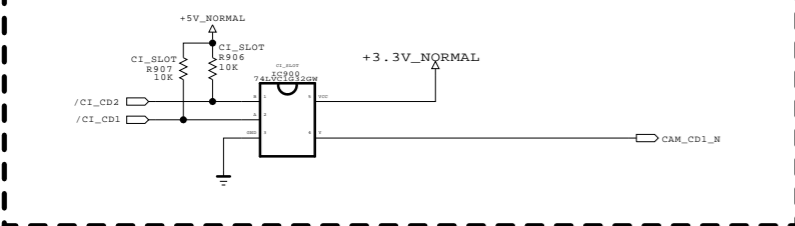

CI POWER ENABLE CONTROL









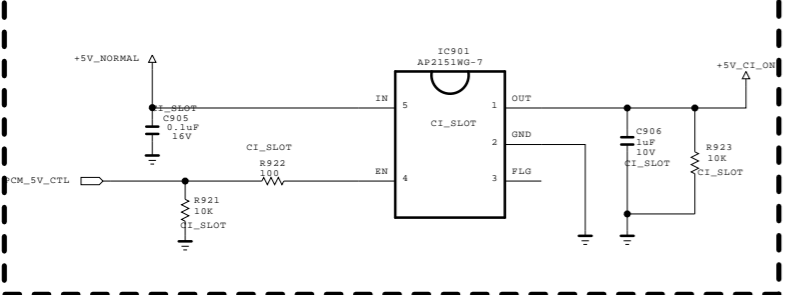


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	K2L / K2Lp	DATE	2015-01-10
BLOCK	PCMC1	SHEET	9 /

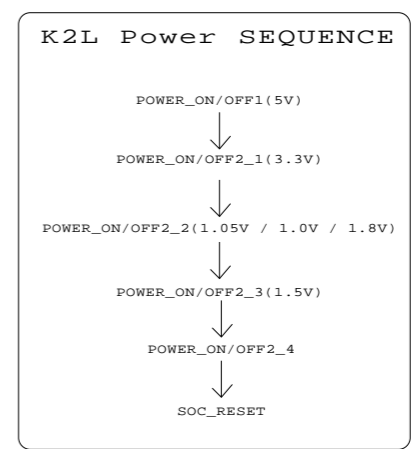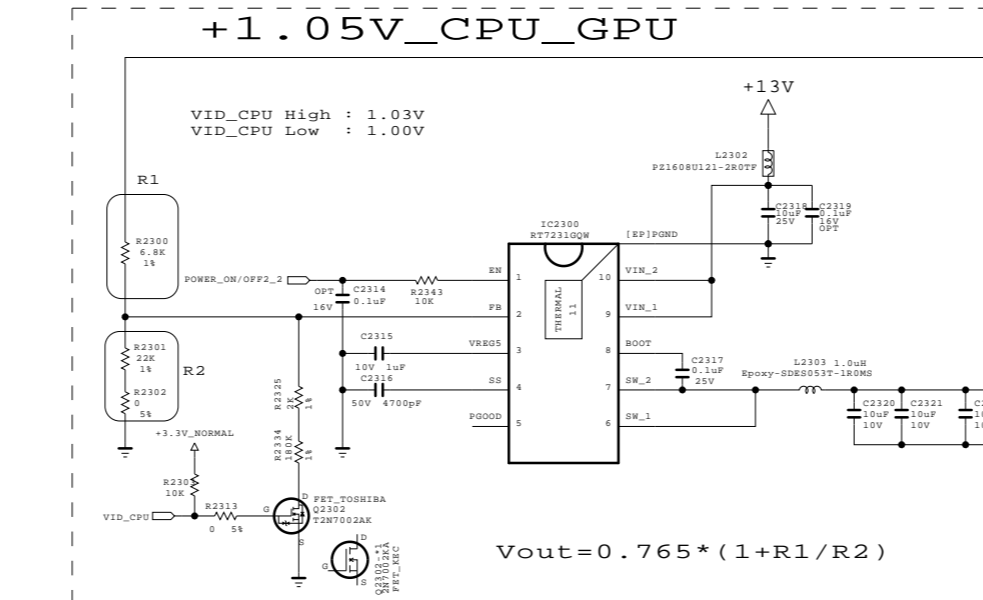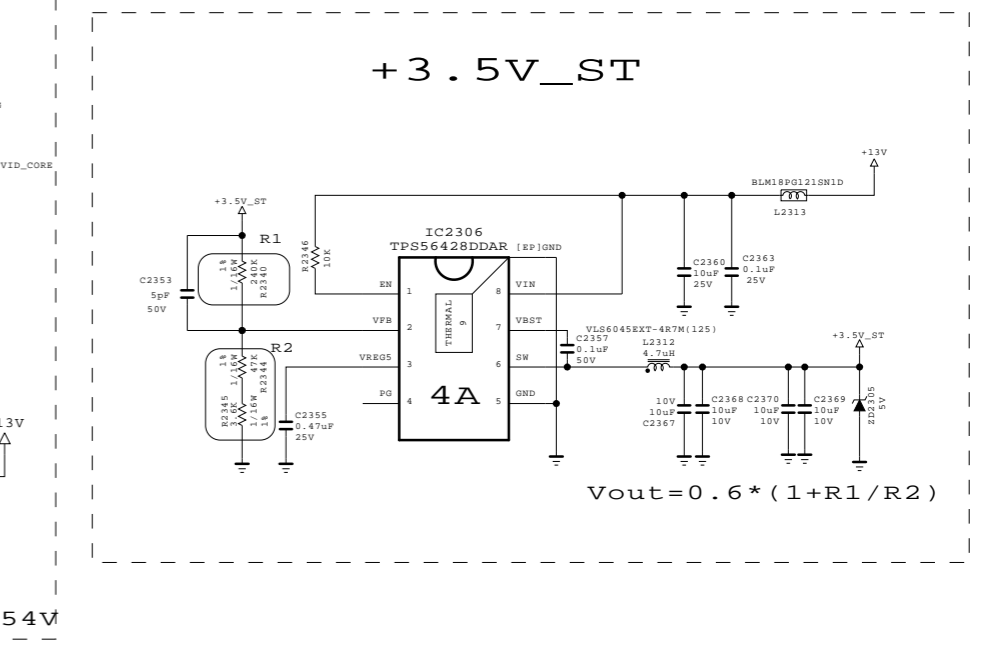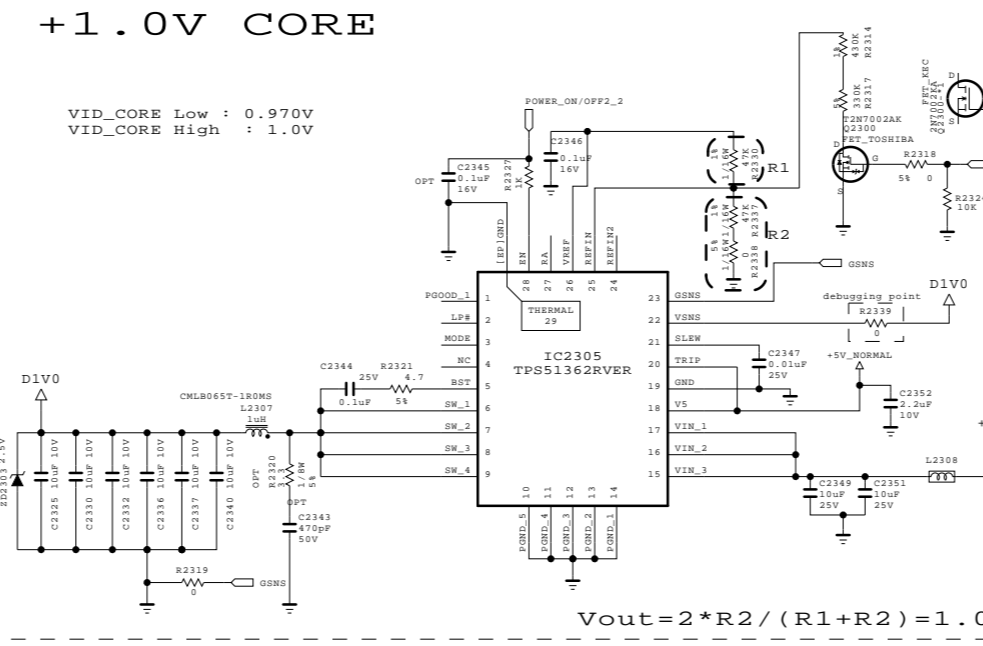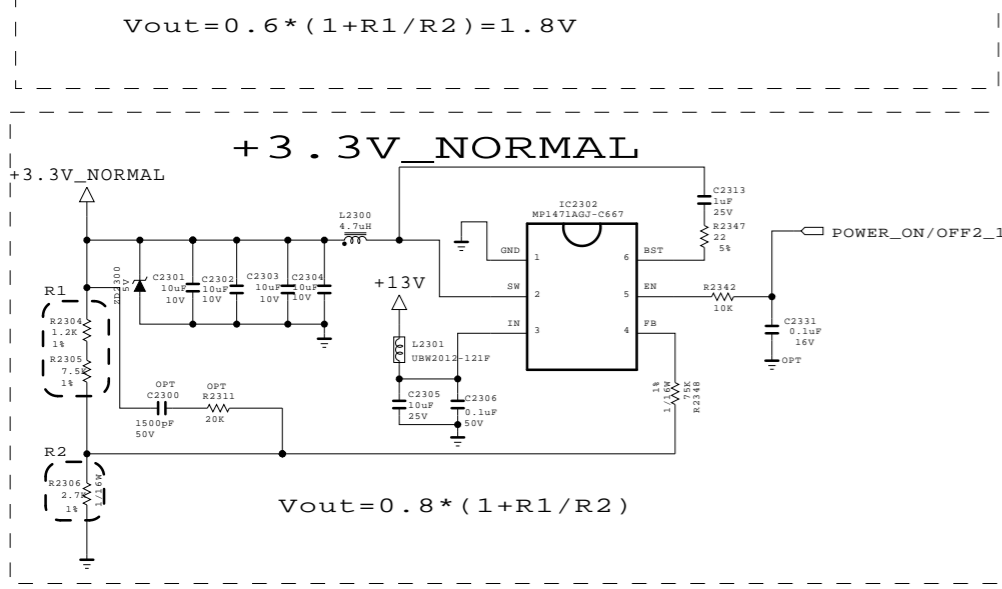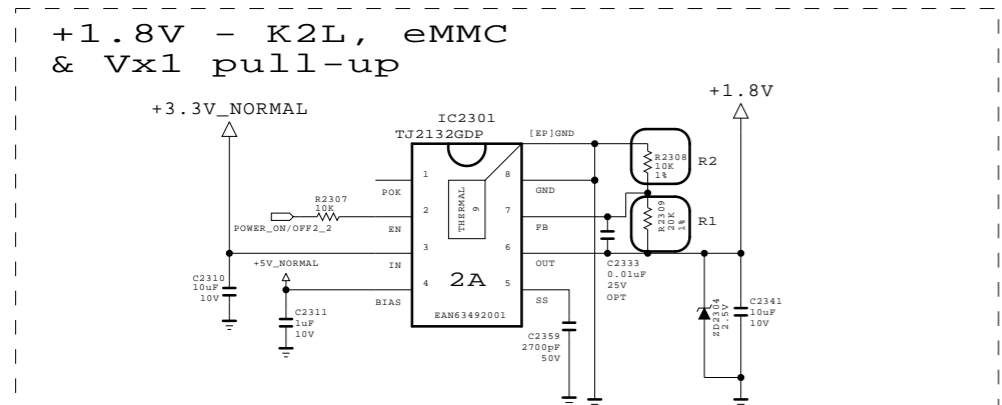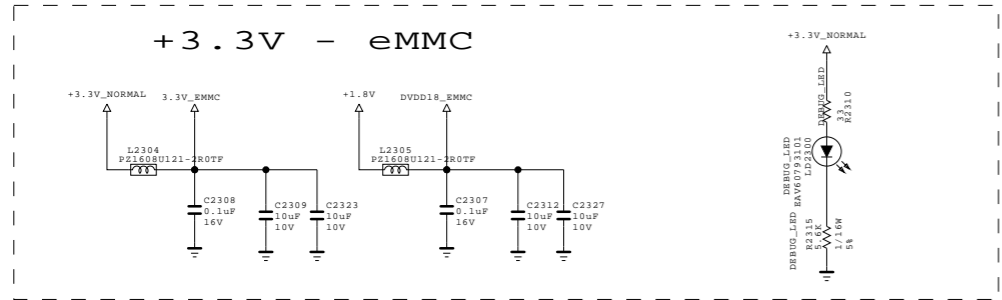
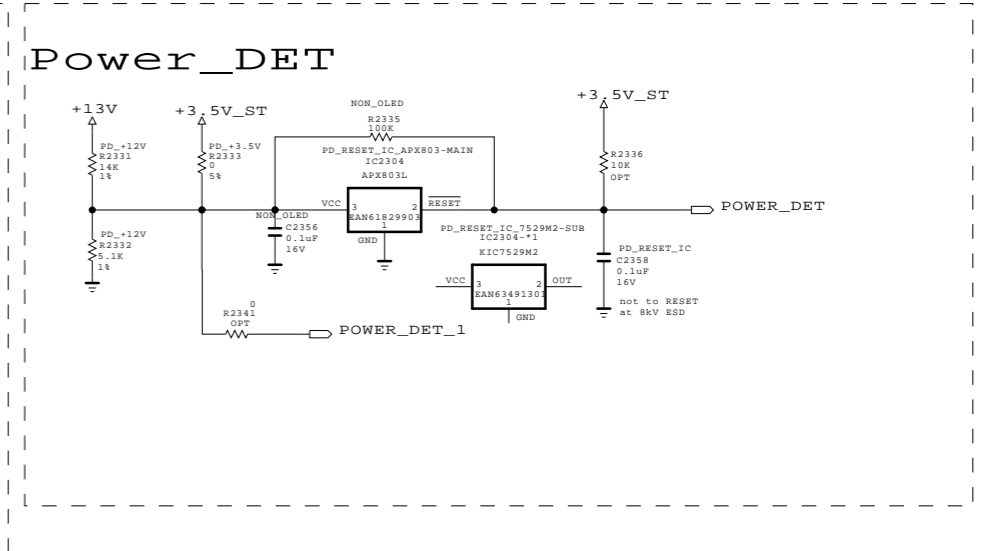
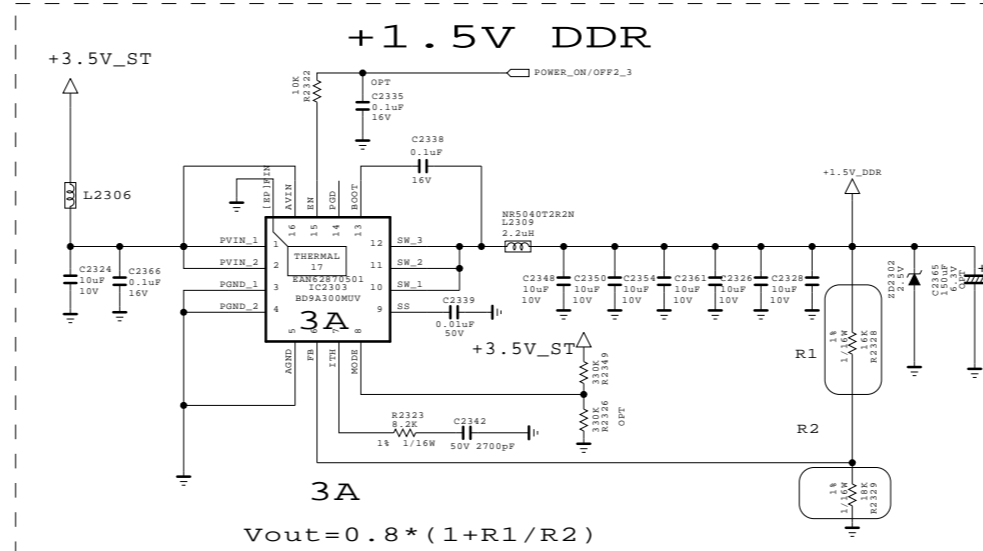


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	K2H	DATE	2015-01-10
BLOCK	PWR_1	SHEET	07

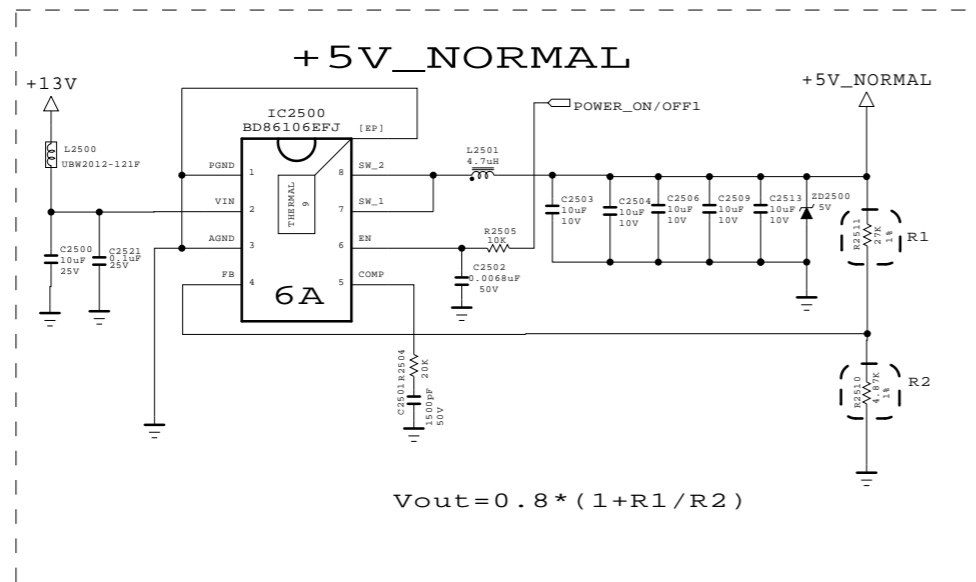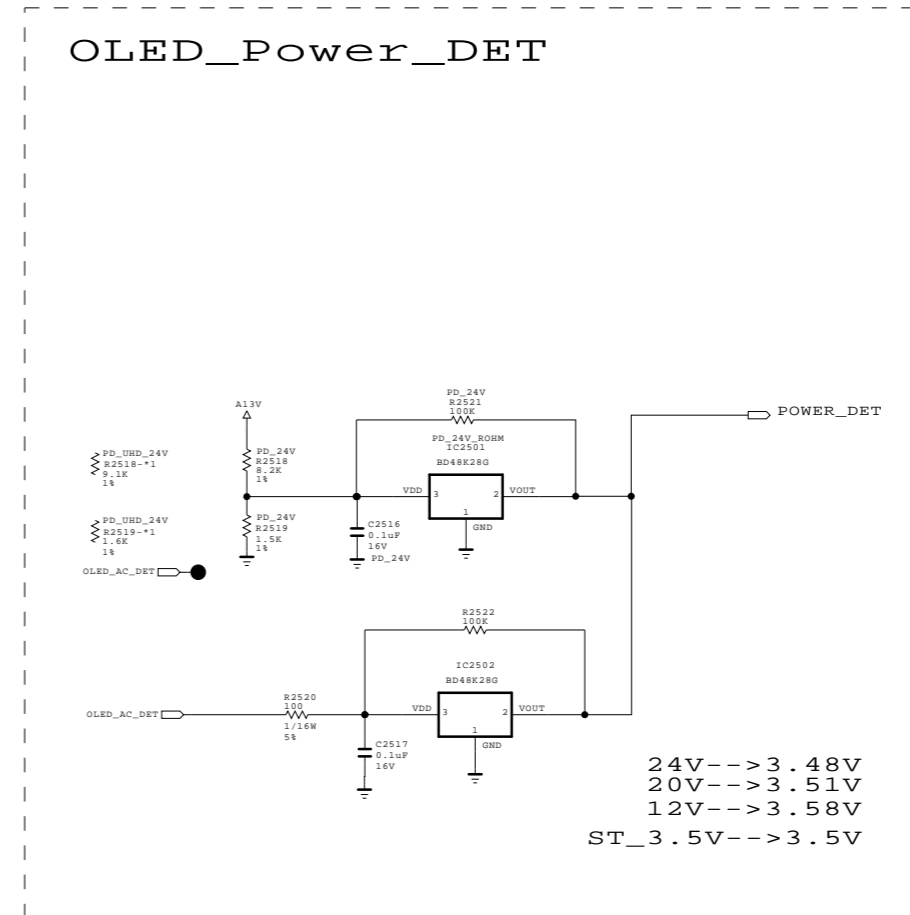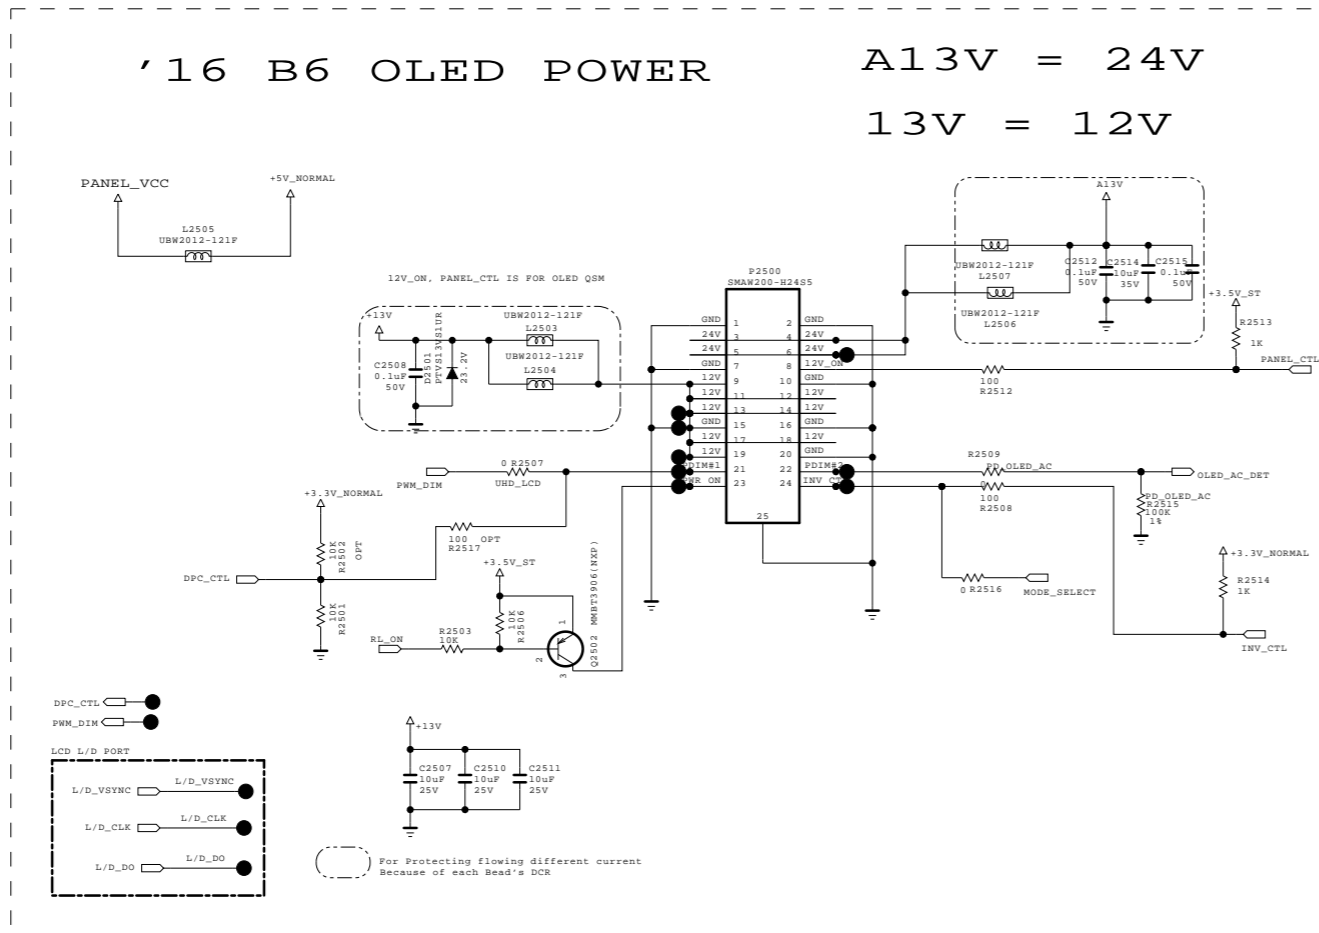


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




MODEL	K2L	DATE	2015-06-13
BLOCK	PWR_2	SHEET	25 /


For Debug

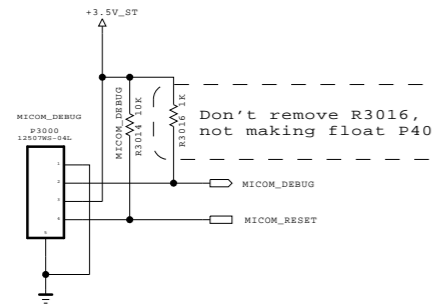

K2L Power SEQUENCE


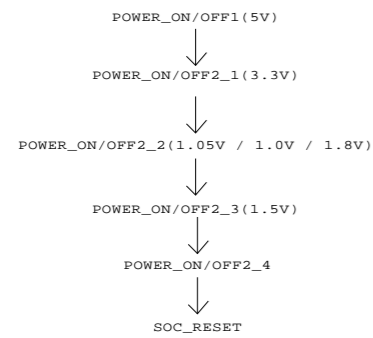


MICOM MODEL OPTION

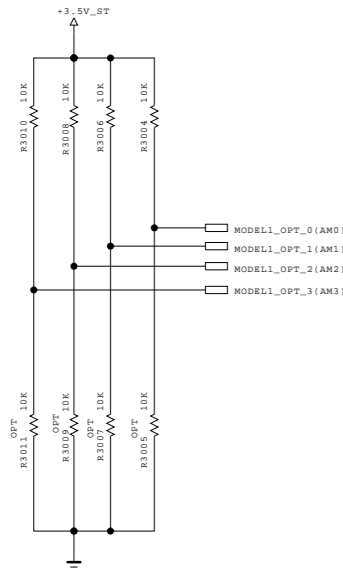


MICOM MODEL OPTION

	0.72V	1.53V	2.27V	3.0V
MODEL1_OPT_0	NON LOGO / LCD	LOGO / LCD	NON LOGO / OLED	LOGO / OLED
MODEL1_OPT_1	TV	BOX	TV	BOX
MODEL1_OPT_2	FHD		UHD	8K
MODEL1_OPT_3 (FHD)	M16		A5LR	M2
MODEL1_OPT_3 (UHD)	M16	RTK	H15	

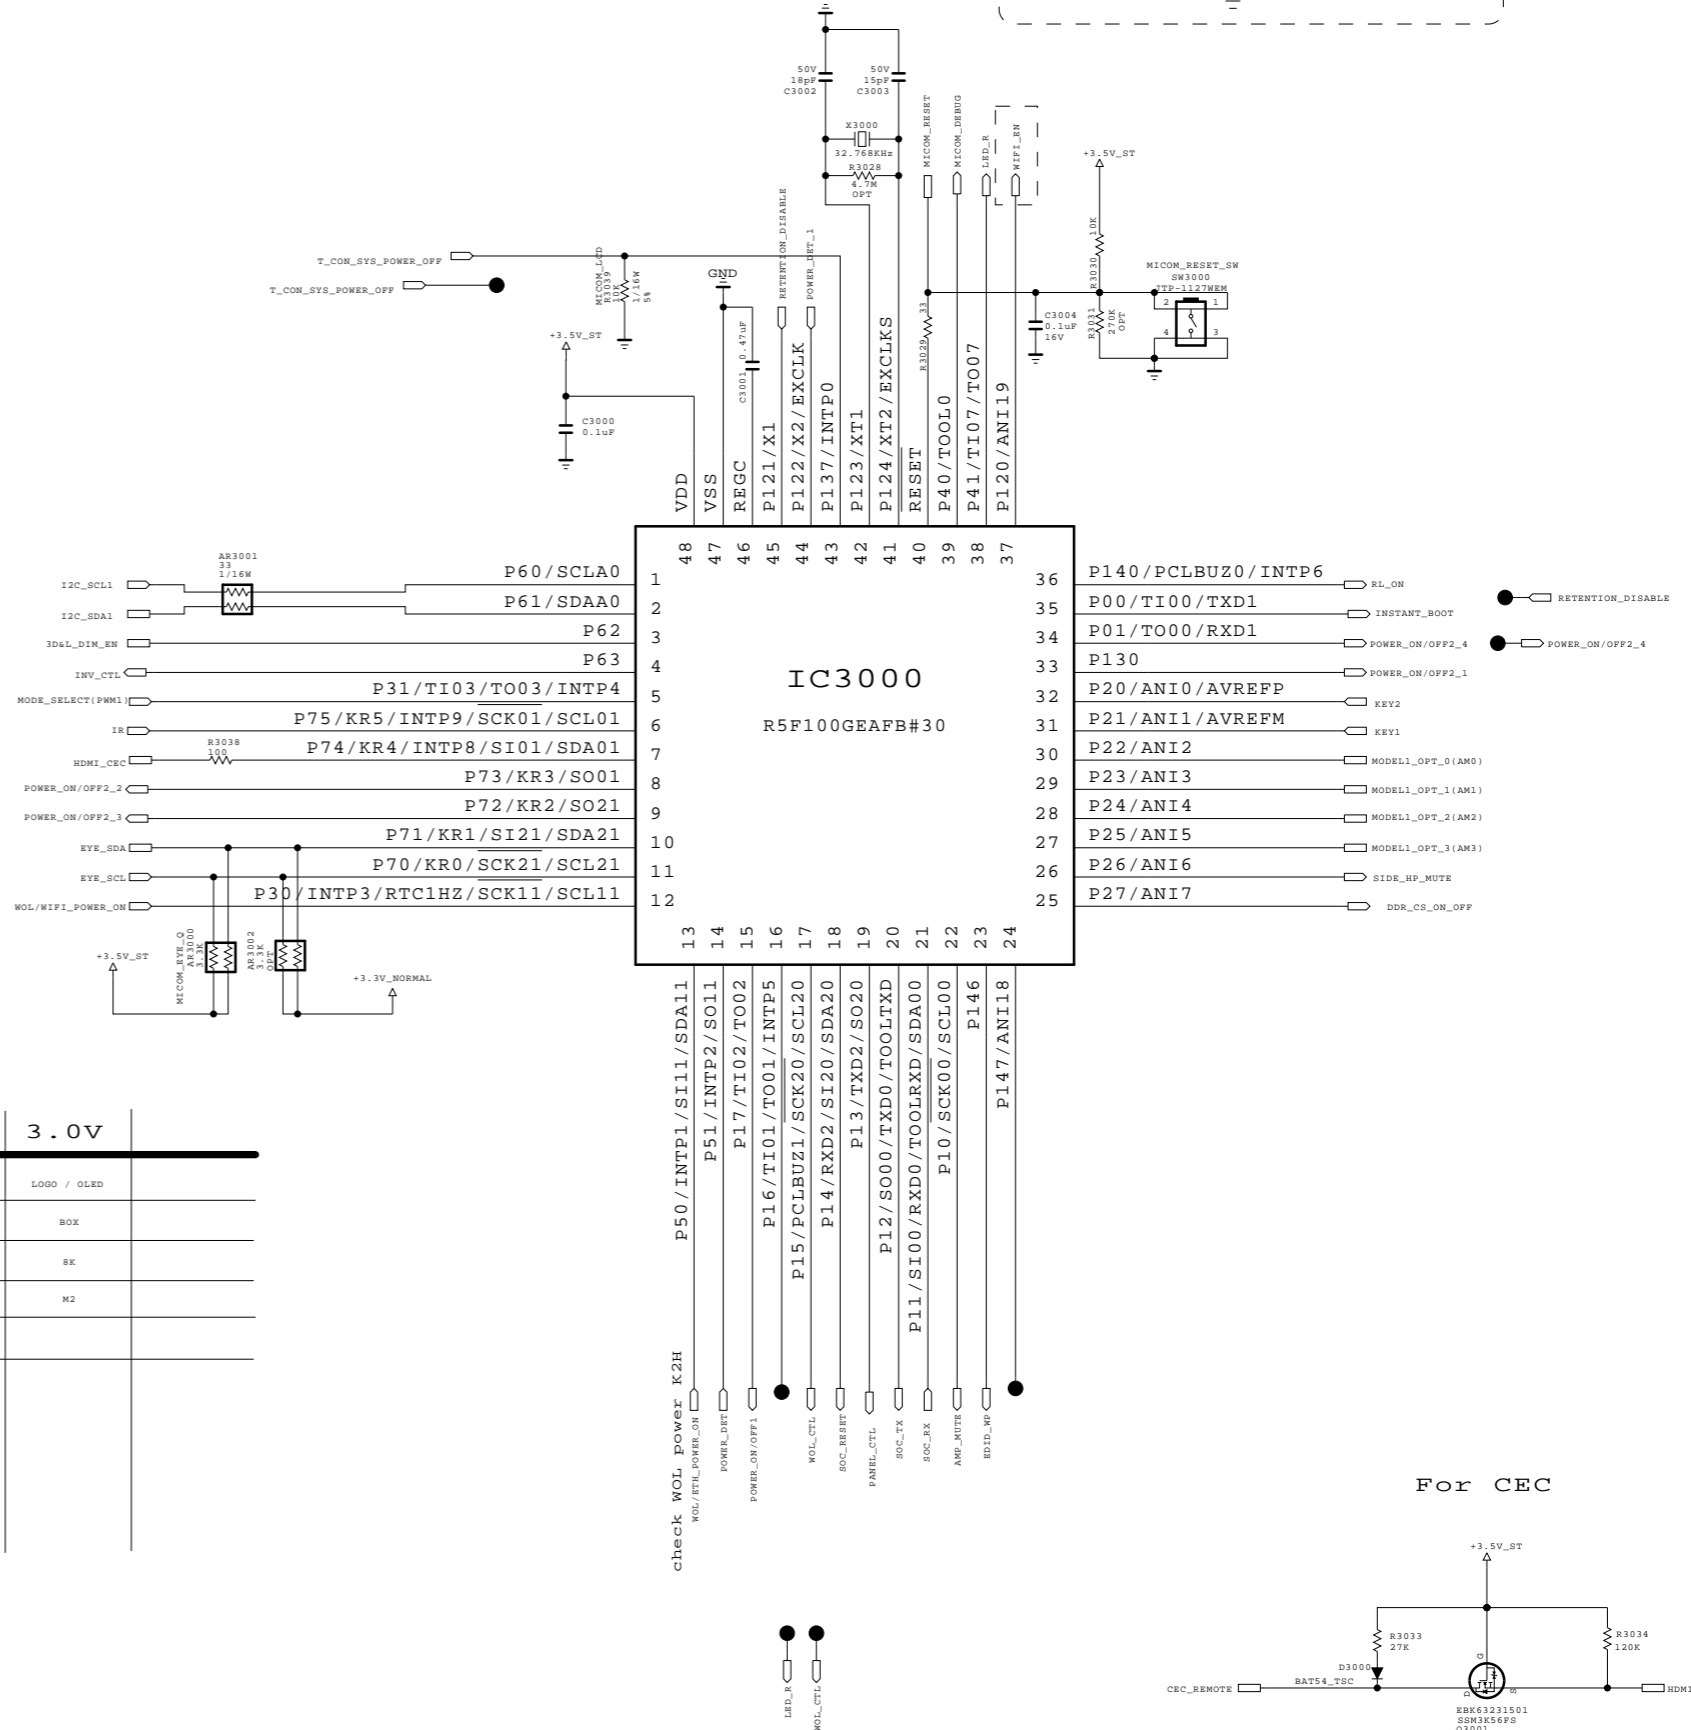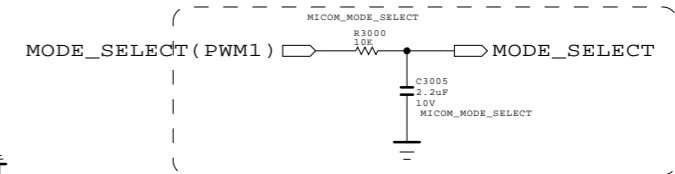

For CEC

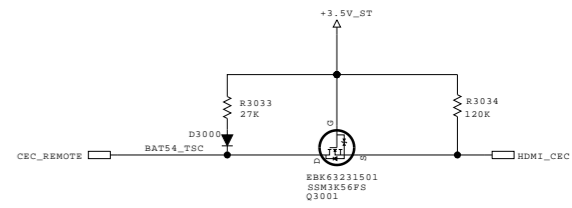

THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics





MODEL	K2L / K2Lp	DATE	2015-06-13
BLOCK	MICOM	SHEET	30 /

MICOM MODEL OPTION

	0.72V (2.7K)	1.53V (8.2K)	2.27V (20K)	3.0V (75K)
MODEL_OPT_0(AM0)	NON LOGO / LCD	LOGO / LCD	NON LOGO / OLED	LOGO / OLED
MODEL_OPT_1(AM1)	TV_NON_EPI	BOX_NON_EPI	TV_EPI	BOX_NON_EPI
MODEL_OPT_2(AM2)	FHD		UHD	8K
MODEL_OPT_3(AM3) (FHD)	M16		A5LR	M2
MODEL_OPT_3(AM3) (UHD)	M16	RTK	H15	

	0.72V (2.7K)	1.53V (8.2K)	2.27V (20K)	3.0V (75K)
MODEL_OPT_0(AM0)	MICOM_NON_LOGO/LCD R3005-*1 2.7K ⚡	MICOM_LOGO/LCD R3005-*2 8.2K ⚡	MICOM_NON_LOGO/OLED R3005-*3 20K ⚡	MICOM_LOGO/OLED R3005-*4 75K ⚡
MODEL_OPT_1(AM1)	MICOM_TV_NON_EPI R3007-*1 2.7K ⚡		MICOM_TV_EPI R3007-*3 20K ⚡	
MODEL_OPT_2(AM2)	MICOM_FHD R3009-*1 2.7K ⚡		MICOM_UHD R3009-*3 20K ⚡	MICOM_8K R3009-*4 75K ⚡
MODEL_OPT_3(AM3) (FHD)	MICOM_M16 R3011-*1 2.7K ⚡	MICOM_RTK R3011-*2 8.2K ⚡	MICOM_H15/A5LR R3011-*3 20K ⚡	MICOM_M2 R3011-*4 75K ⚡
MODEL_OPT_3(AM3) (UHD)				


THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




MODEL	K2H	DATE	2015-01-10
BLOCK	MODEL OPTION	SHEET	30 /


HDMI3/4_Retimer

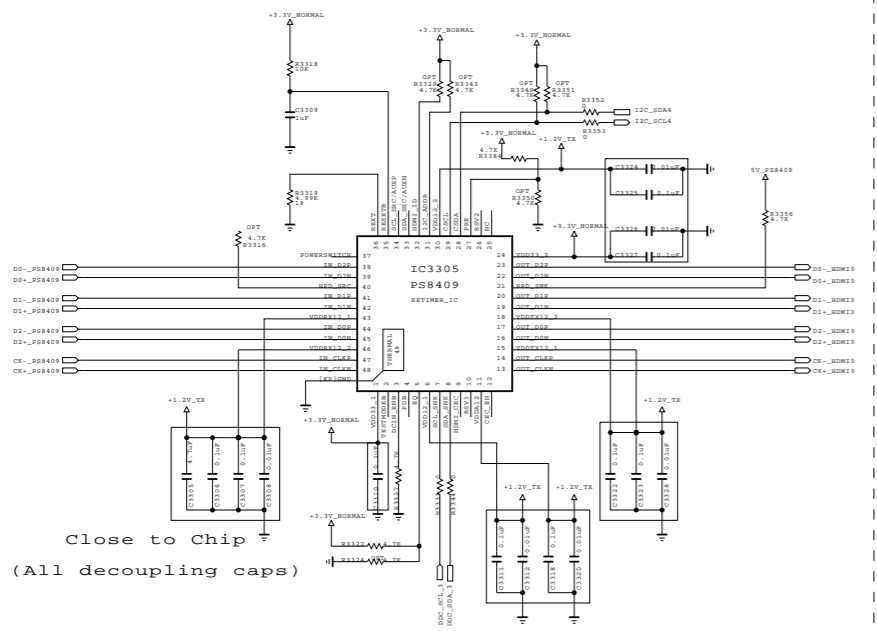





TI 2:1 Mux

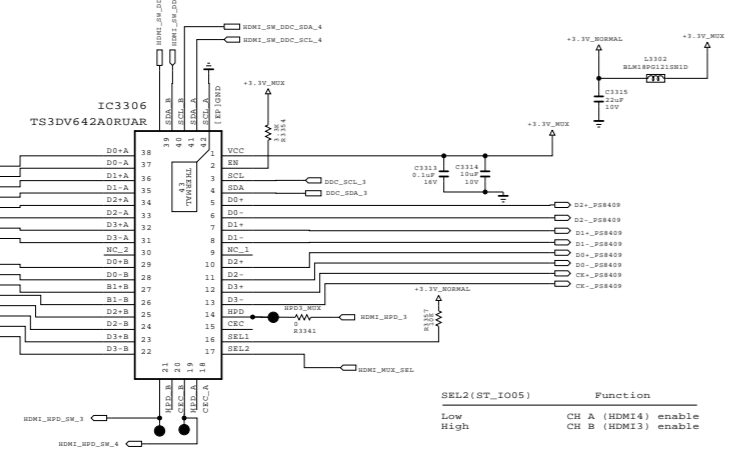


HDMI4 DET GPIO

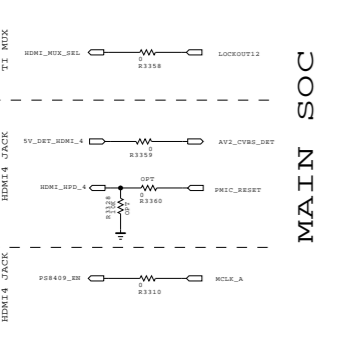


Retimer Power Control

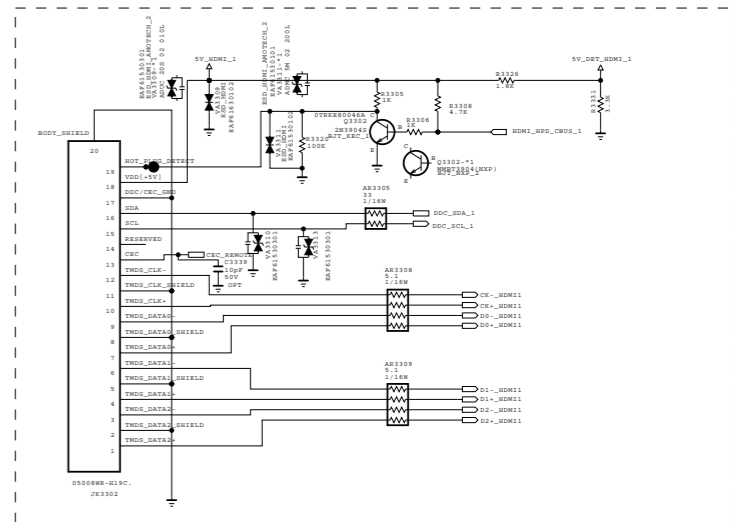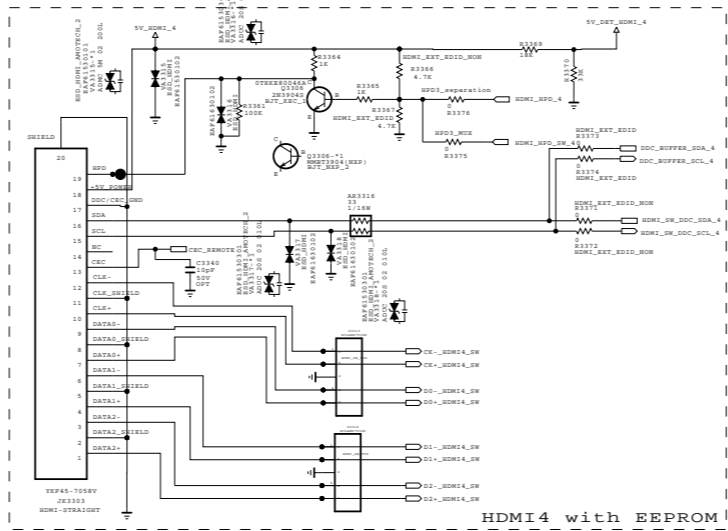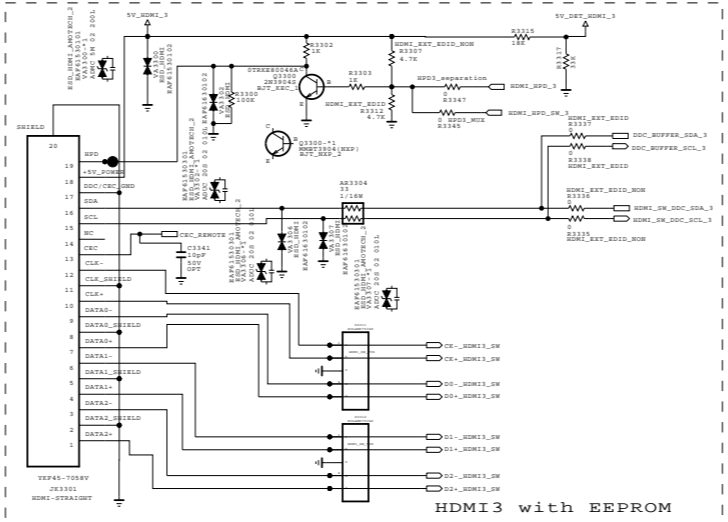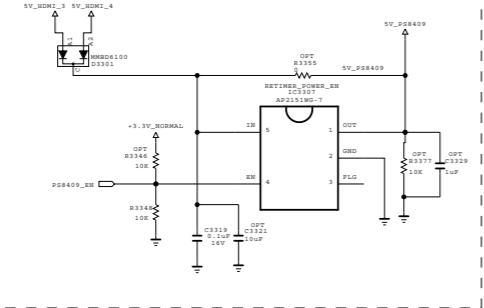


EDID external EEPROM & DDC BUFFER for HDMI3

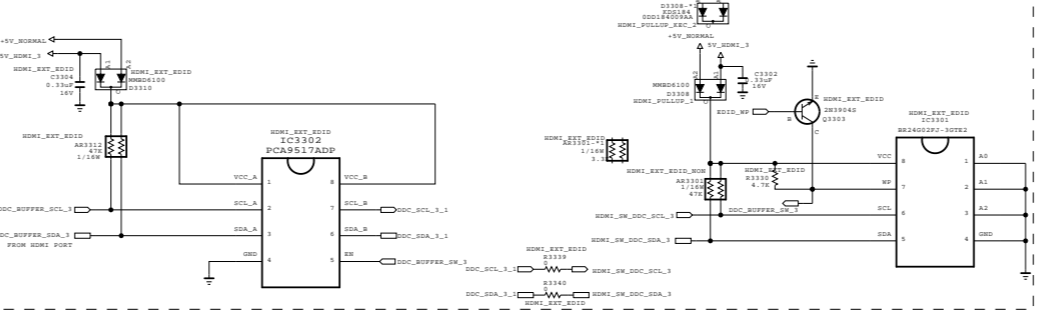


EDID external EEPROM & DDC BUFFER for HDMI4

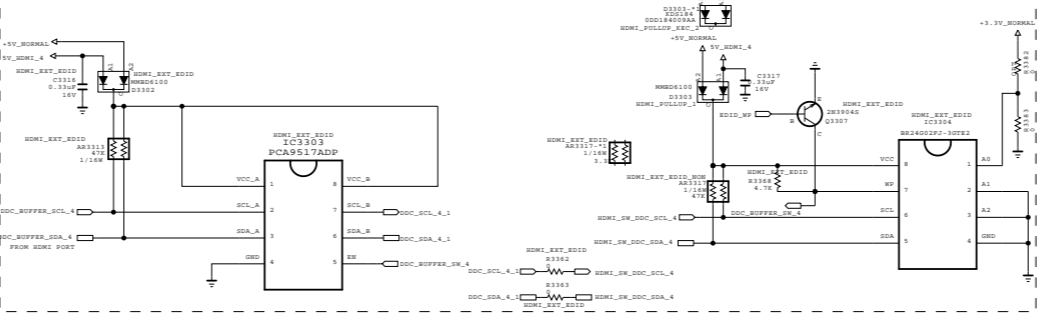

DDC pull-up

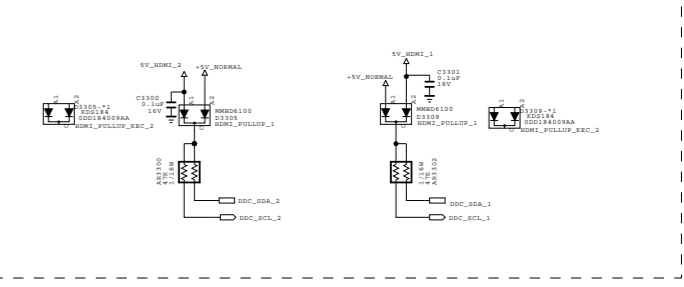

+5V_NORMAL to +1.2V_TX

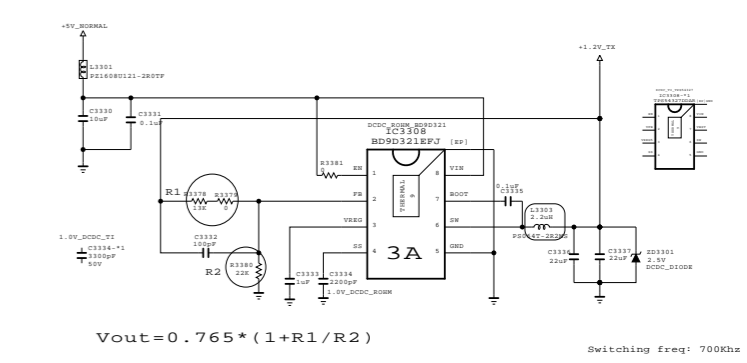

THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.


SECRET
LGElectronics

LG ELECTRONICS


K2L
HDMI
2015-01-10
33

MODEL	DATE
BLOCK	SHEET



OCp USB2.0 PORT3

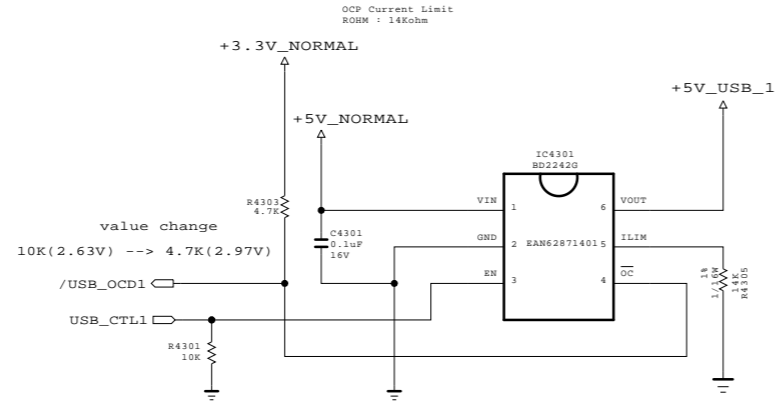

USB2.0 2Port

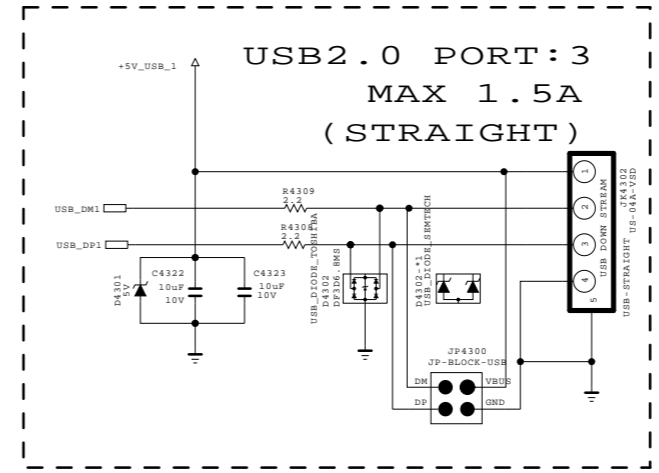

OCp USB PORT2

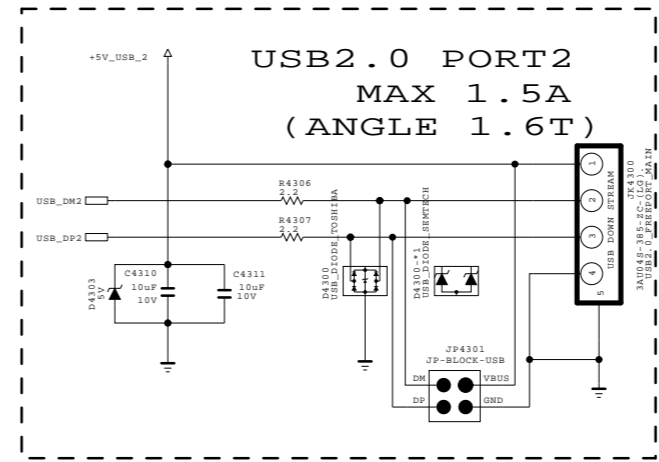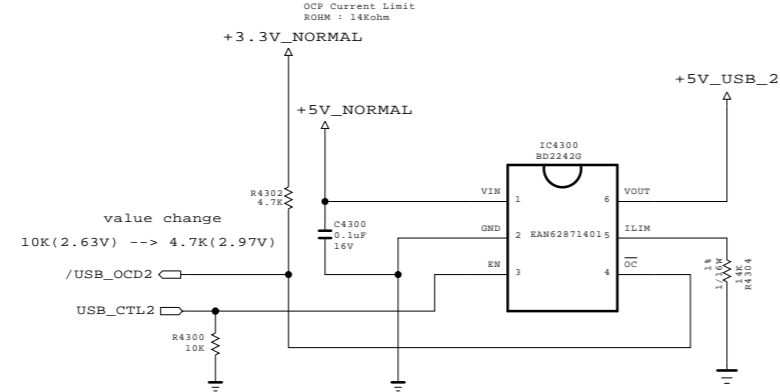


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics

LG ELECTRONICS


MODEL	K2L	DATE	2015-04-27
BLOCK	USB2.0 jack	SHEET	13 /

USB3.0
MAX 1.5A

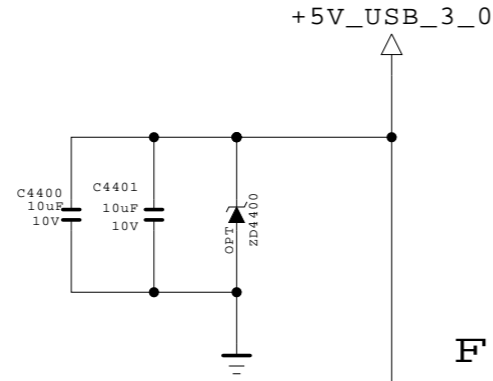

FOR 1.2T PCB


USB3.0_FREEPORT_1.2T JK4400 3AG009S-106N3R6003(1.2T PCB)
USB3.0_CNPLUS_1.2T JK4400-*1 SJ113262

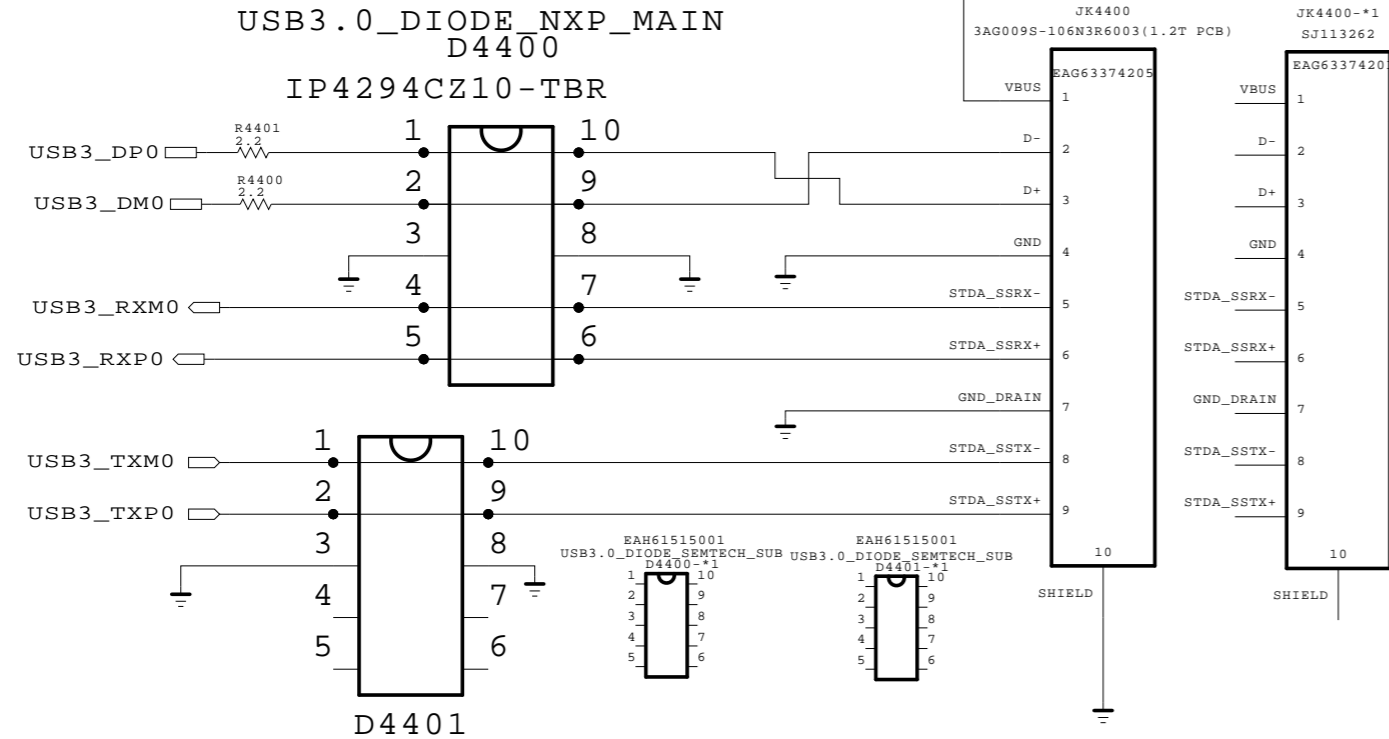


D4401
IP4294CZ10-TBR
USB3.0_DIODE_NXP_MAIN

FOR 1.6T PCB

USB3.0_CNPLUS_1.6T JK4400-*2 5205-56209

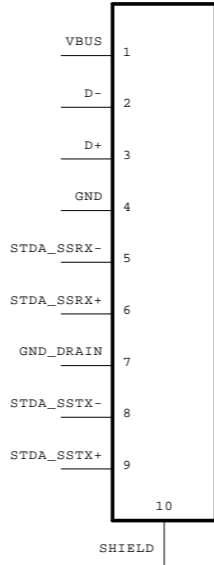

OCP USB3.0
OCP Current Limit 1.5A
ROHM : 14K

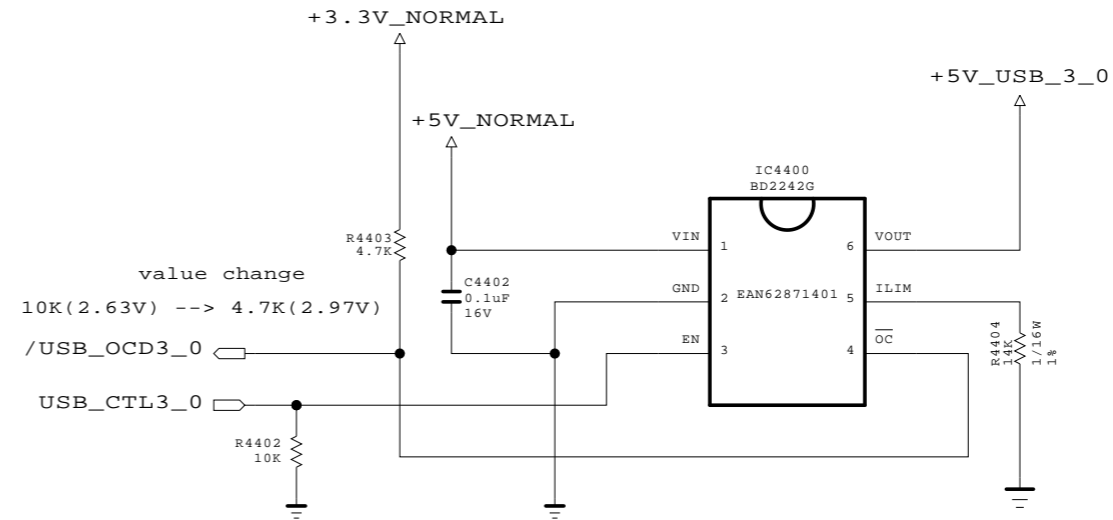


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET	LG ELECTRONICS
LGElectronics	

MODEL	K2H	DATE	2015.02.11
BLOCK	USB 2 & 3	SHEET	15 / 26

043.sht

Ethernet Block

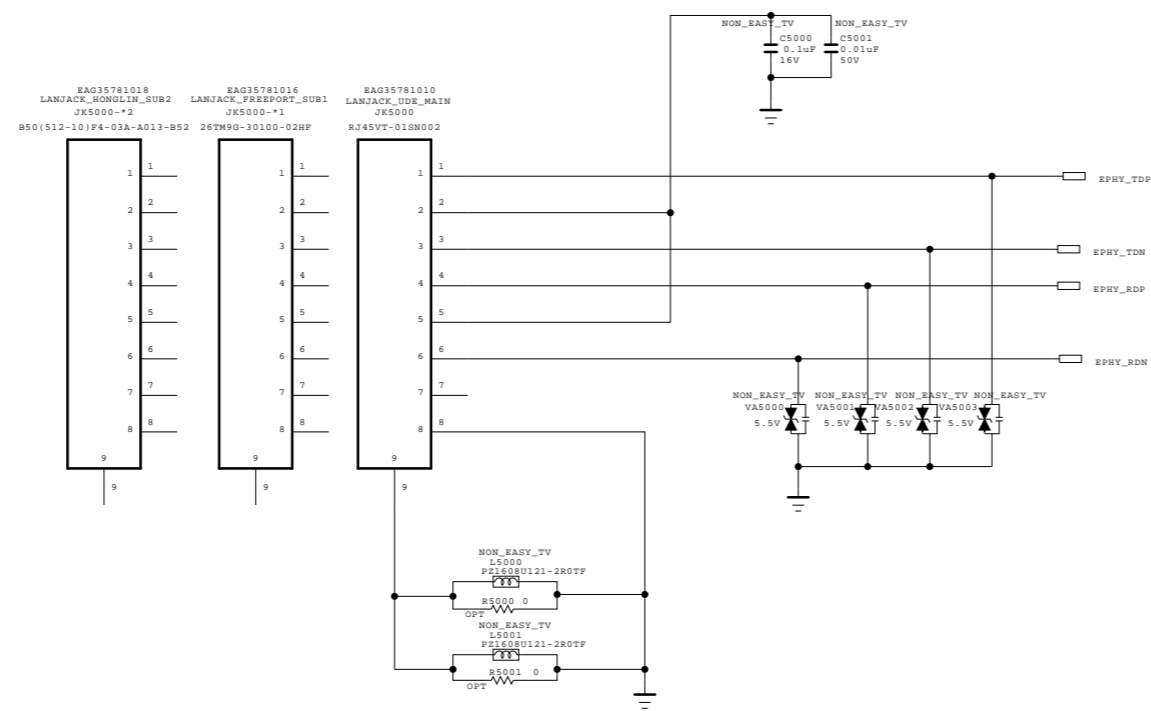




THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	K2H	DATE	2014-12-15
BLOCK	LAN_H	SHEET	50 /

AUDIO AMP (NTP7515)

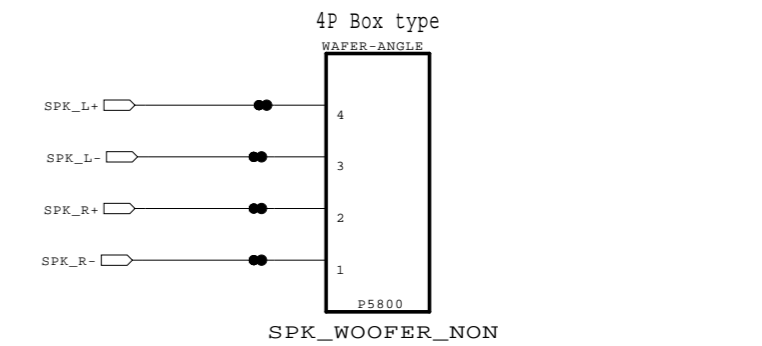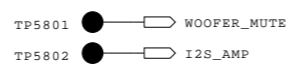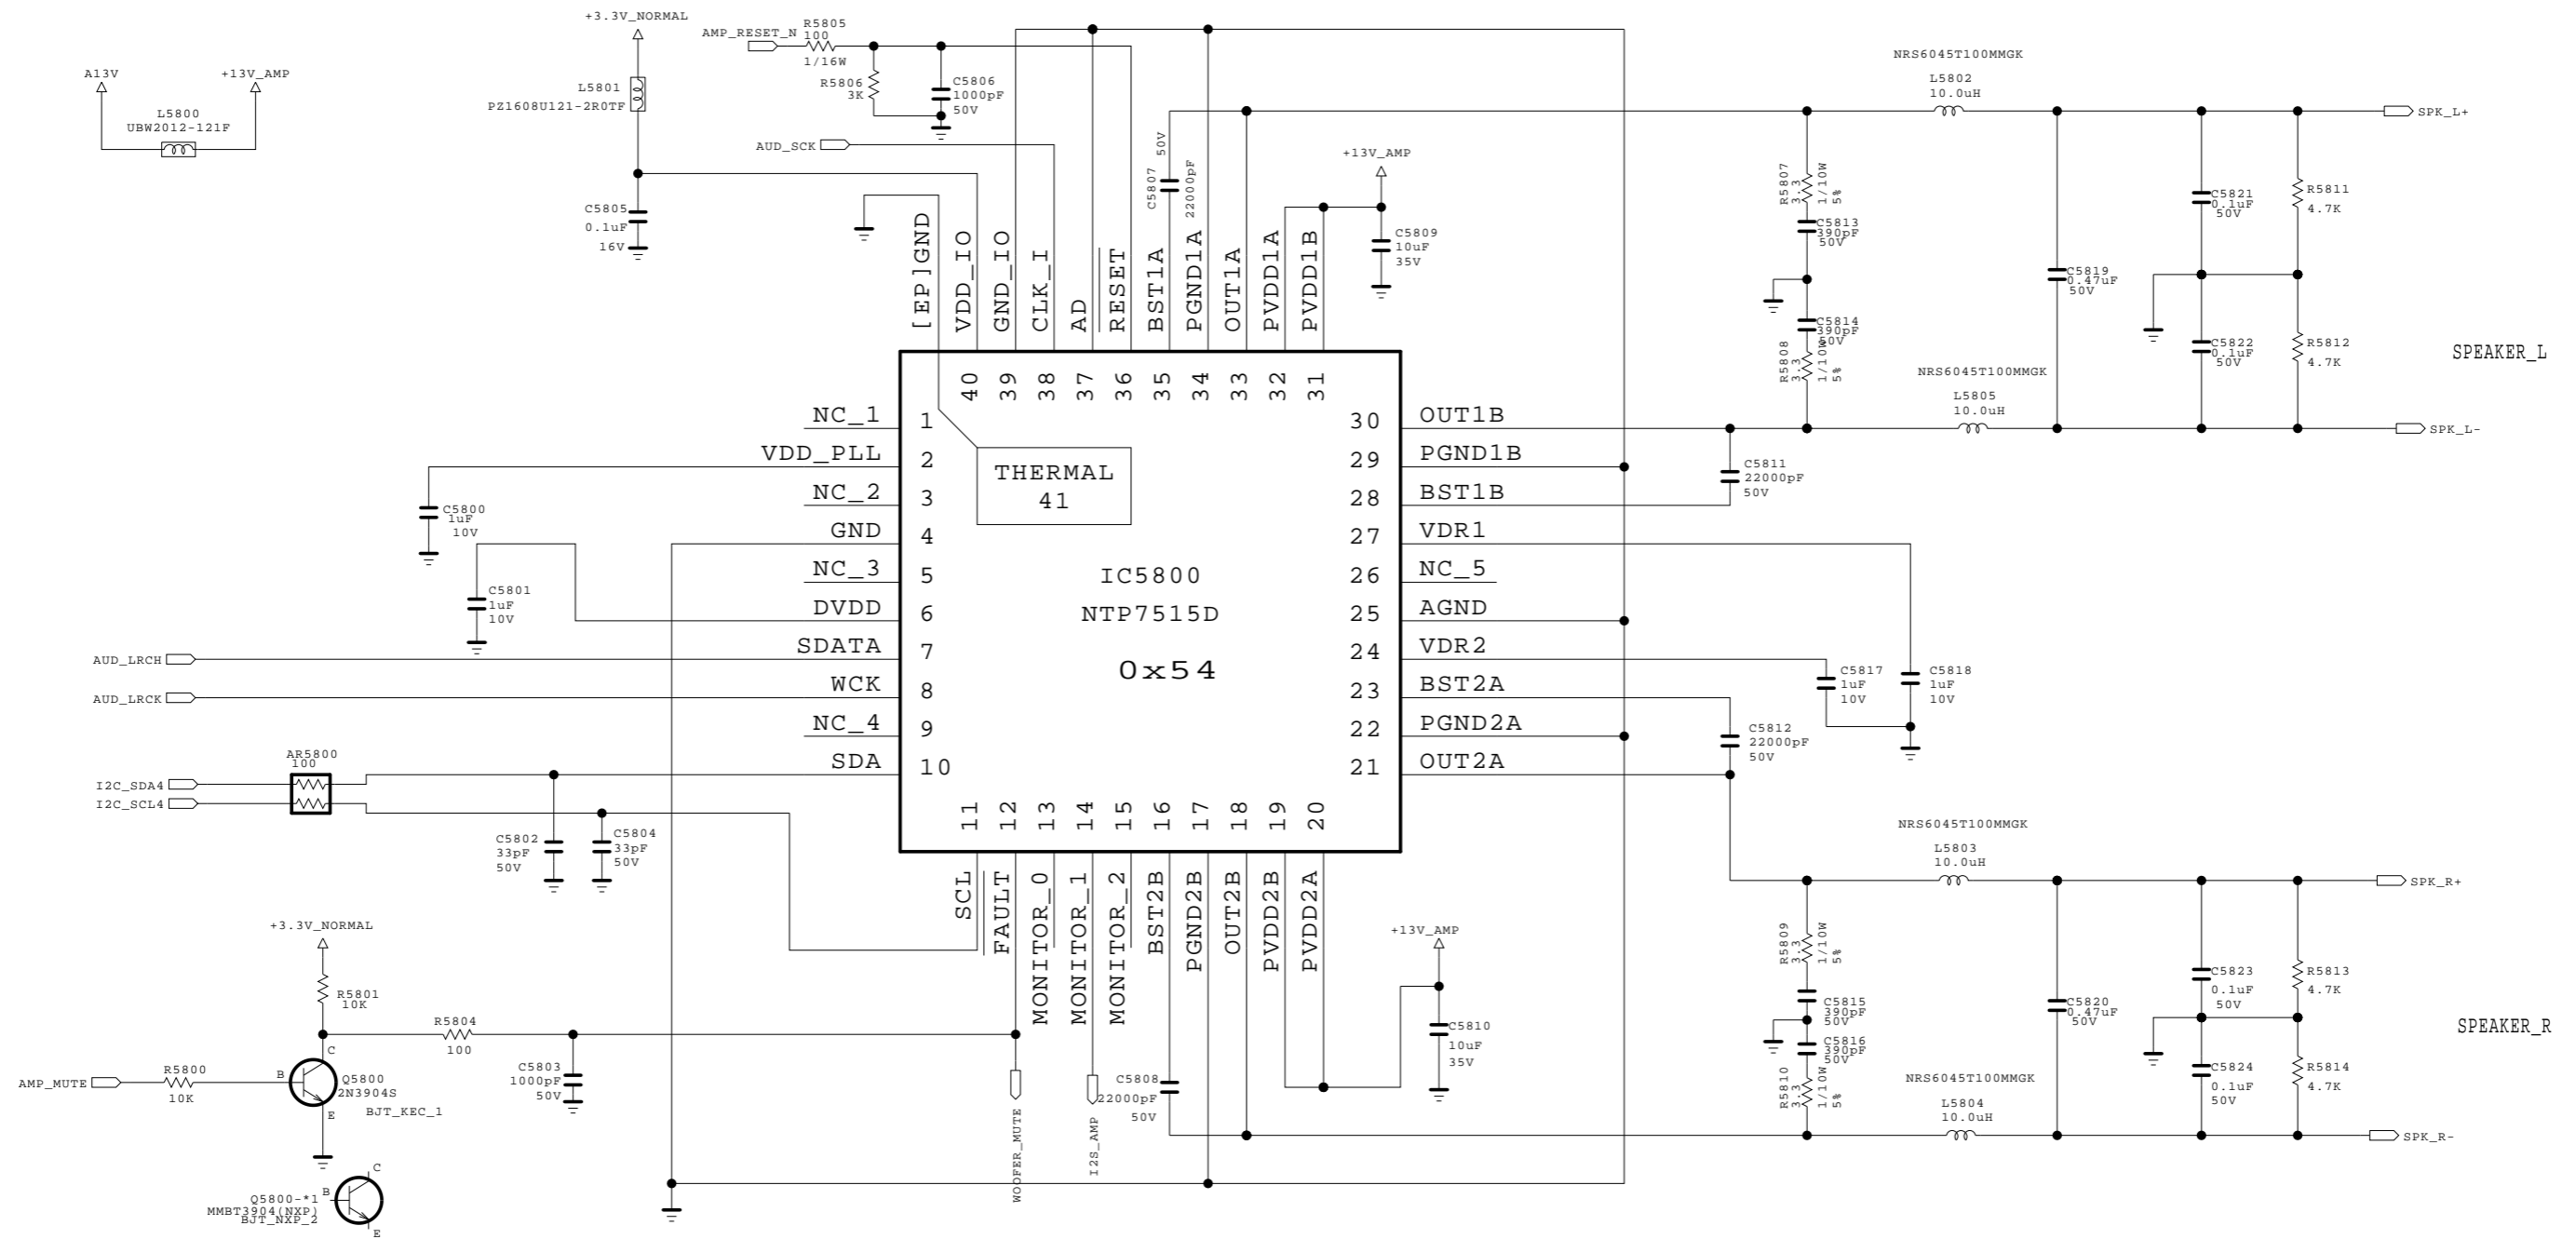


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET	LG ELECTRONICS
LGElectronics	

MODEL		DATE	2014-10-17
BLOCK	MAIN_AMP	SHEET	58 /

AMP - tweeter

Option name : SPK_tweeter

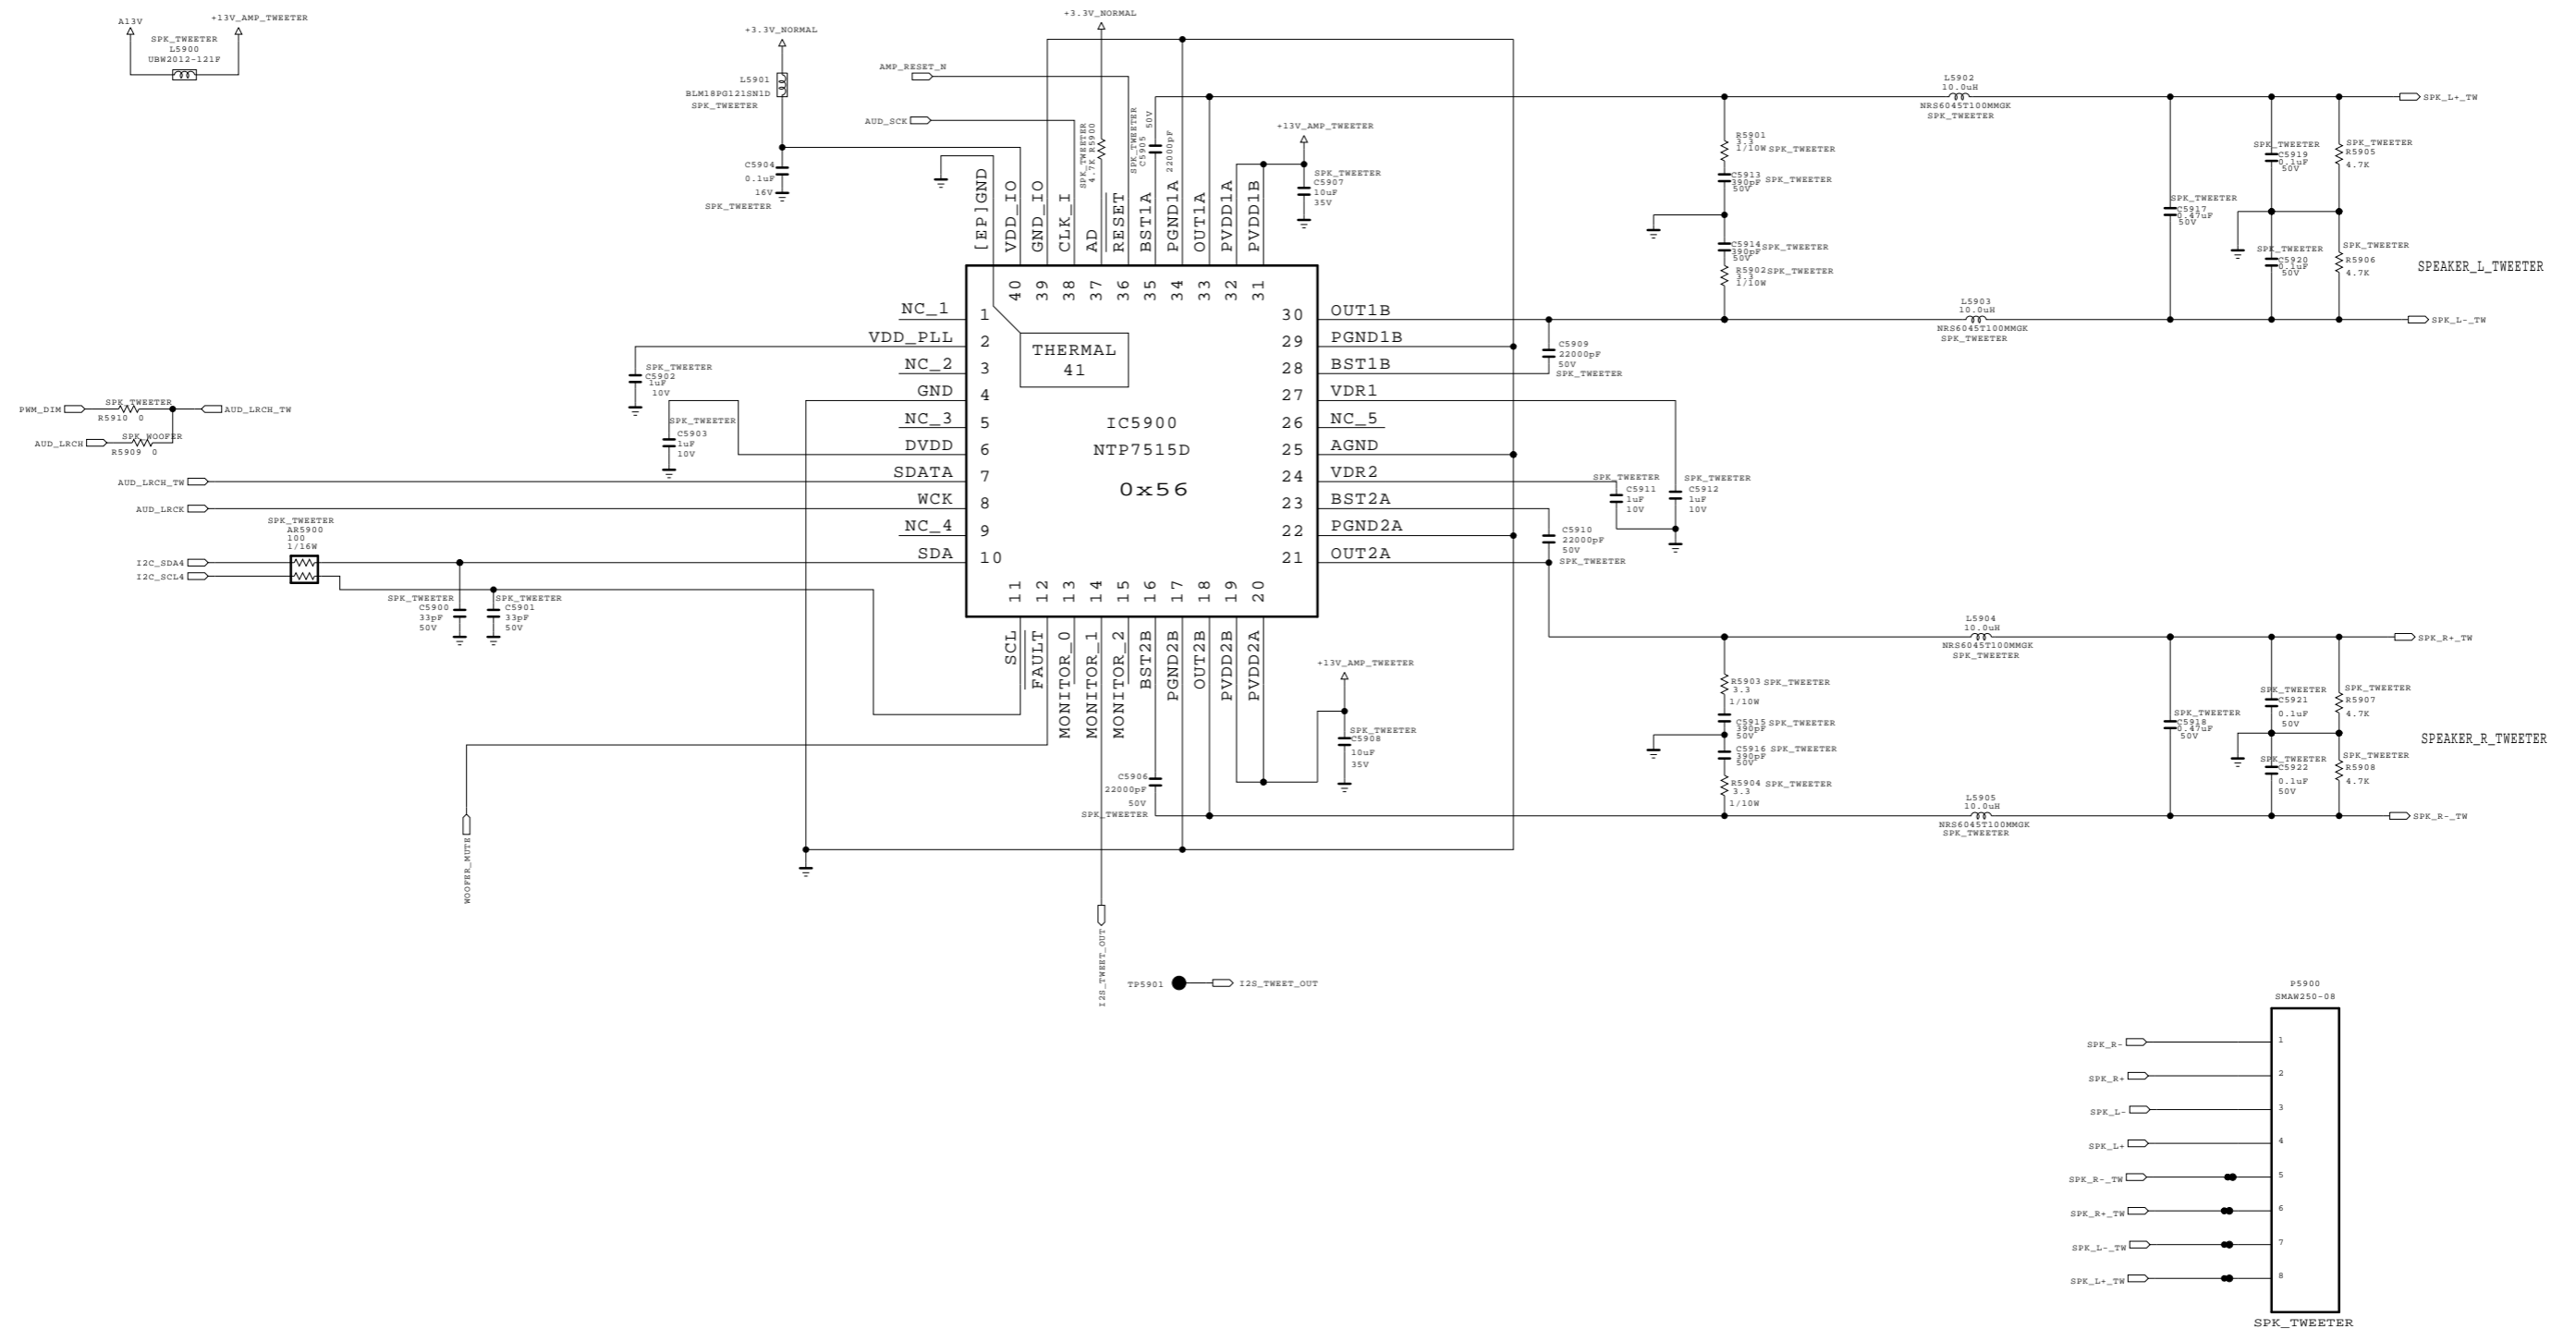


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.



SECRET
LGElectronics



MODEL	K2L	DATE	2015.03.16
BLOCK	WOOFER AMP	SHEET	59 /

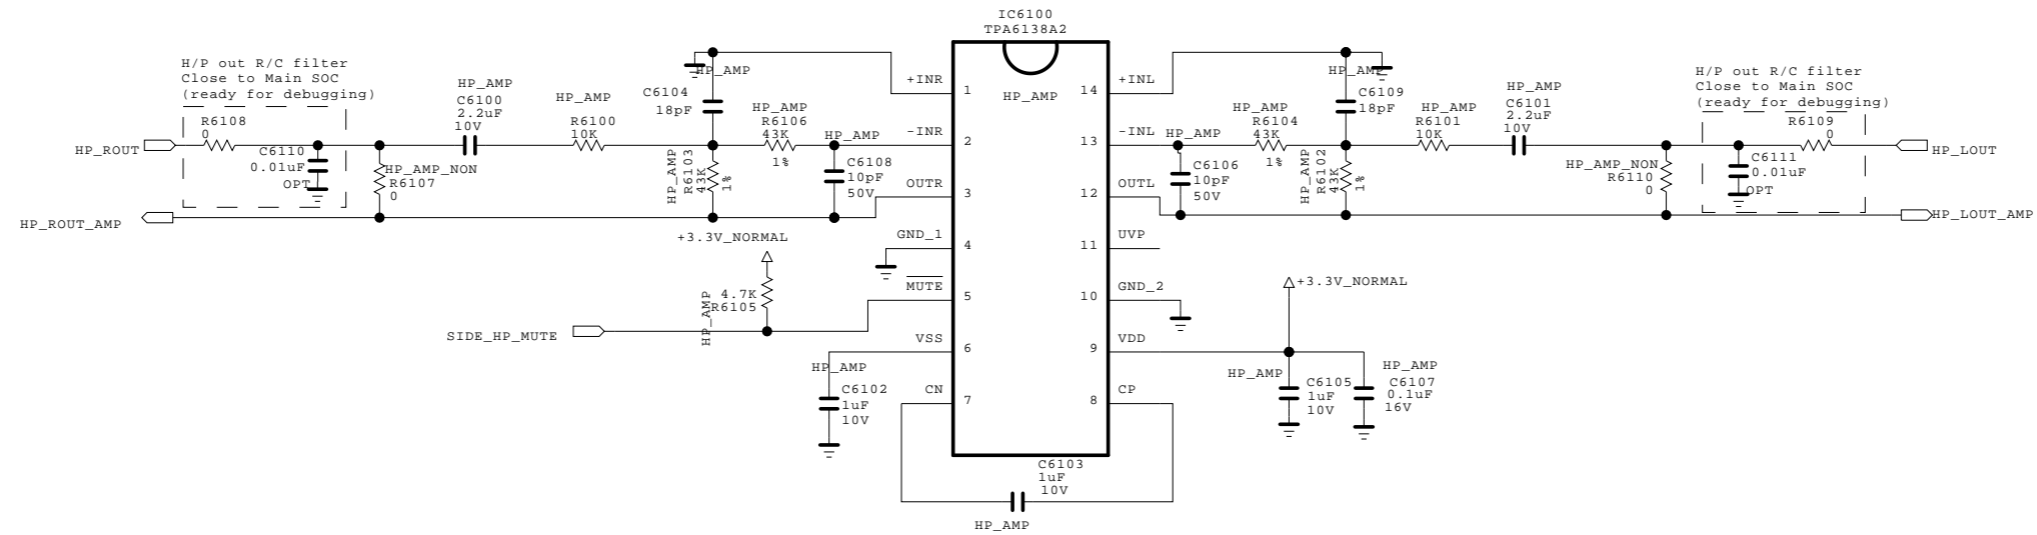EARPHONE AMP




THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	K2H	DATE	2014-11-22
BLOCK	HP_AMP	SHEET	61 /

B-CAS (SMART CARD) INTERFACE

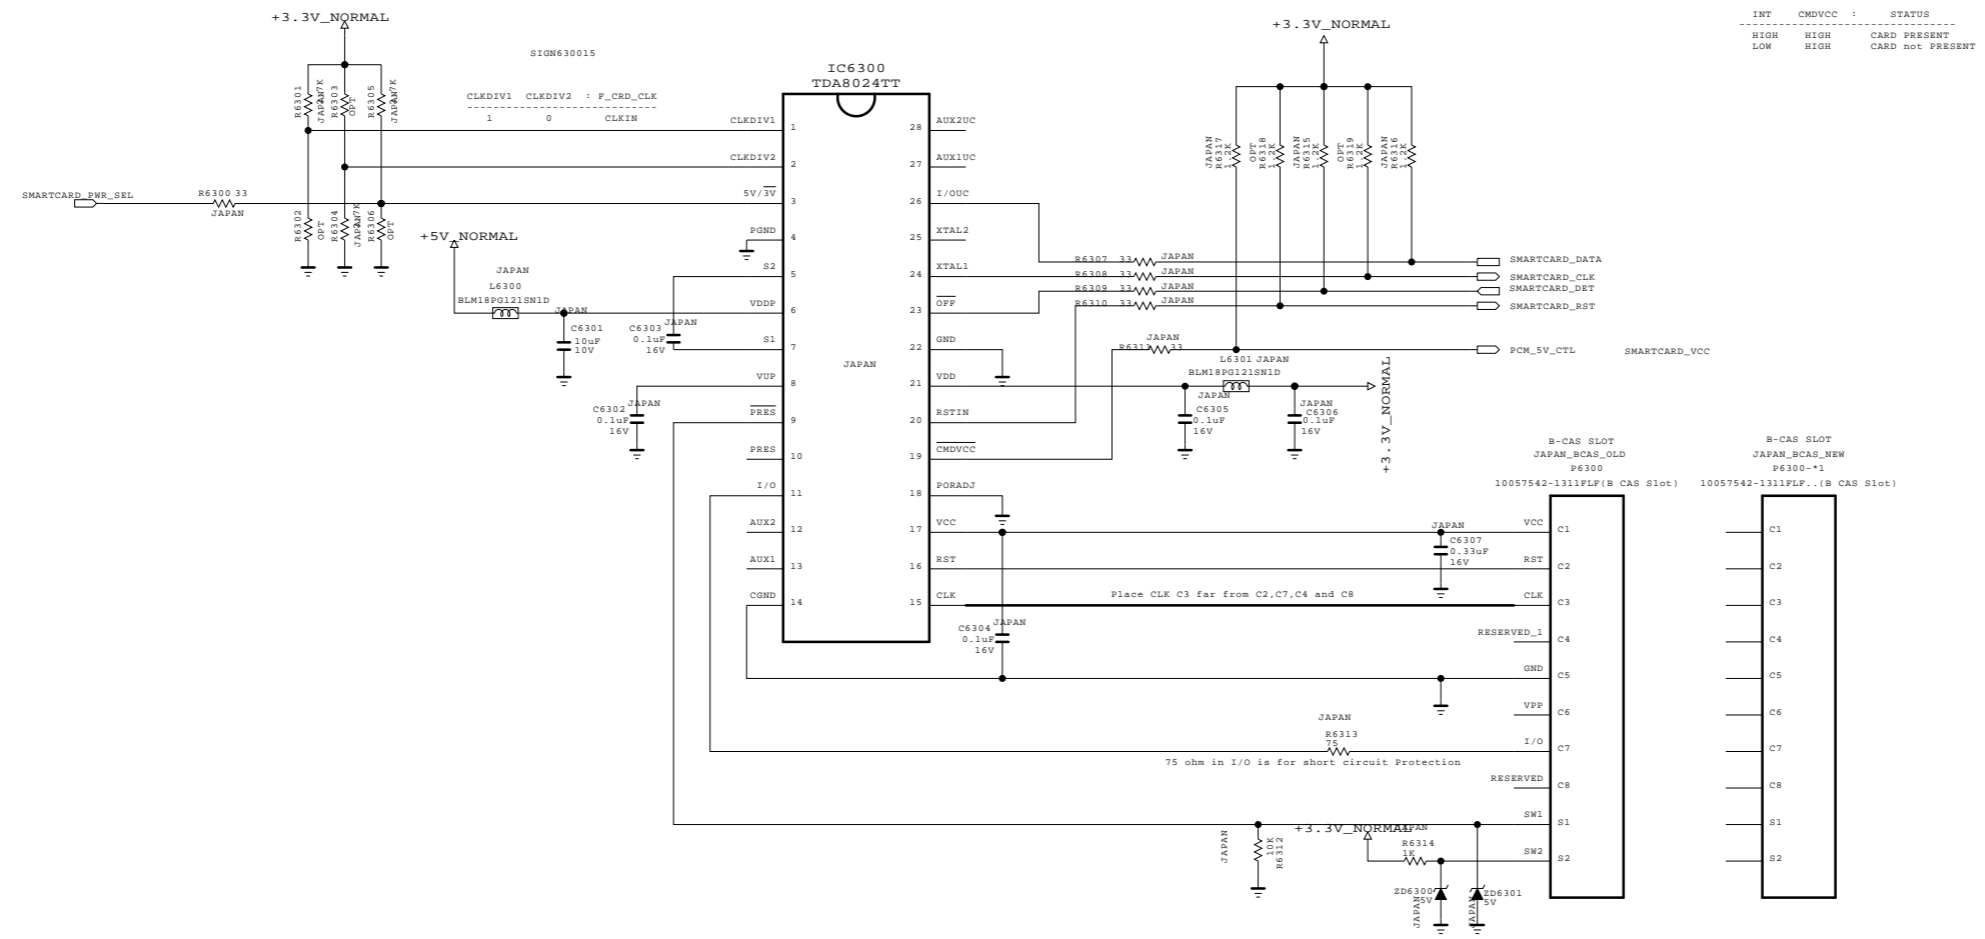


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	JAPAN B-CAS	DATE	2011.04.17
BLOCK		SHEET	63 /



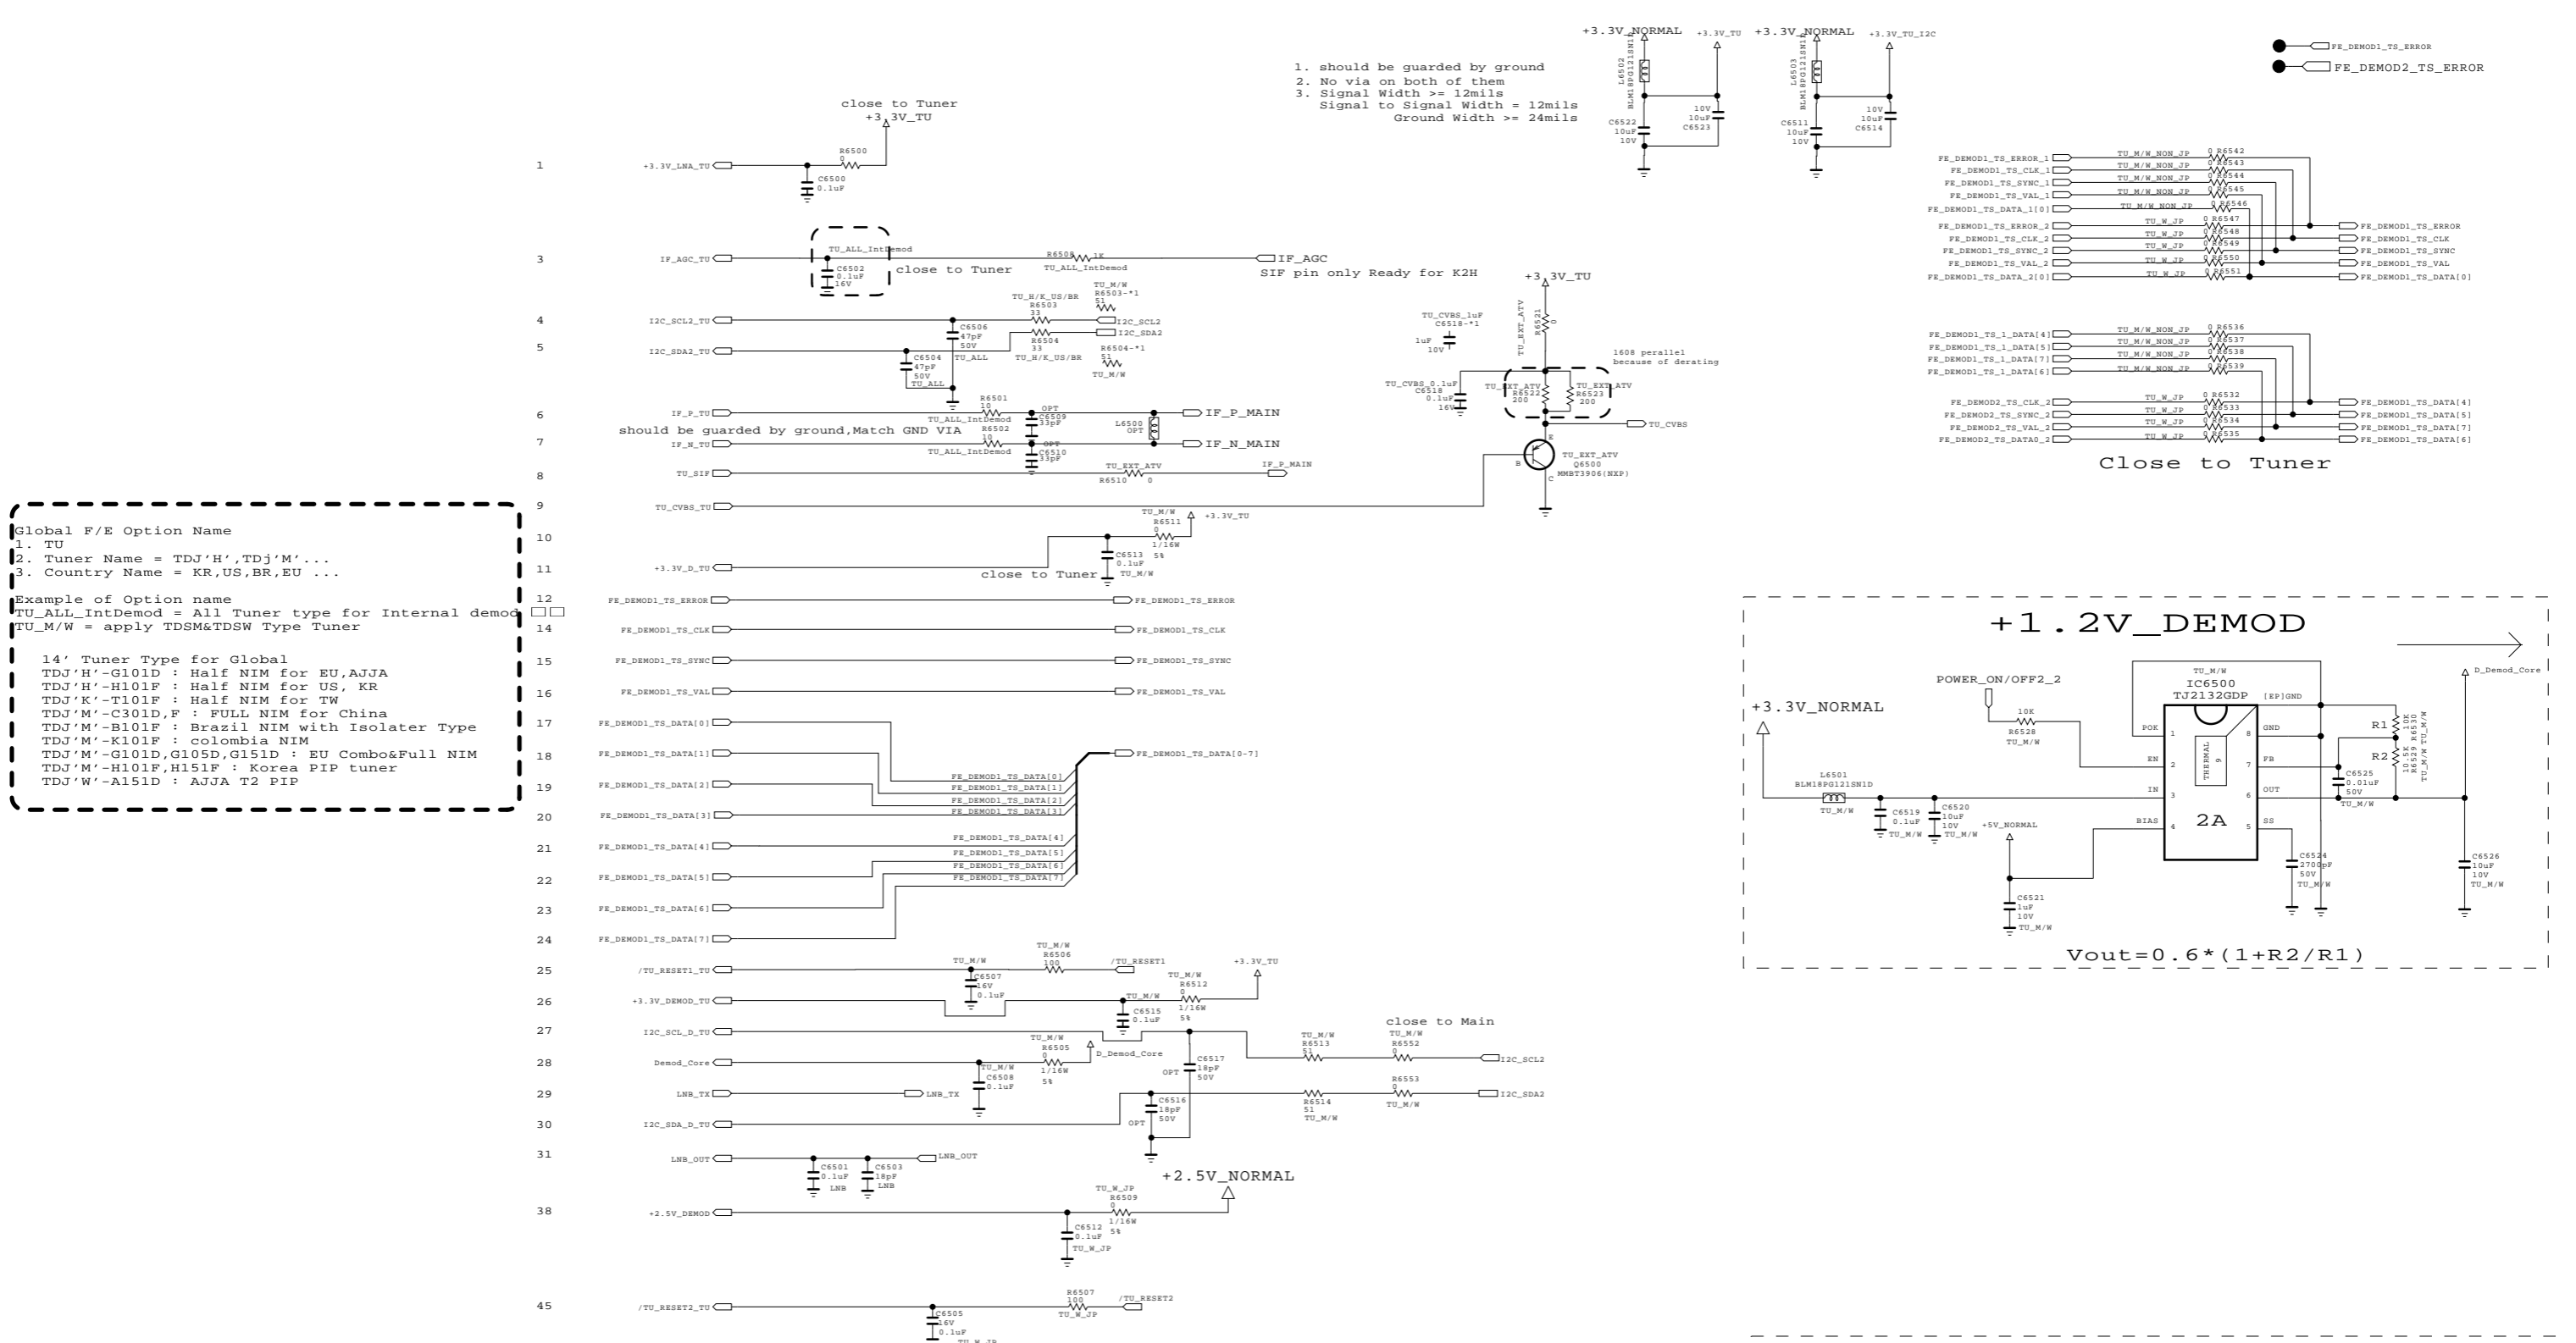


Global F/E Option Name
 1. TU
 2. Tuner Name = TDJ'H',TDJ'M'...
 3. Country Name = KR,US,BR,EU ...

Example of Option name
 TU_ALL_IntDemod = All Tuner type for Internal demod
 TU_M/W = apply TDSM&TDSW Type Tuner

14' Tuner Type for Global
 TDJ'H'-G101D : Half NIM for EU,AJJA
 TDJ'H'-H101F : Half NIM for US, KR
 TDJ'K'-T101F : Half NIM for TW
 TDJ'M'-C301D,F : FULL NIM for China
 TDJ'M'-B101F : Brazil NIM with Isolater Type
 TDJ'M'-K101F : Colombia NIM
 TDJ'M'-G101D,G105D,G151D : EU Combo&Full NIM
 TDJ'M'-H101F,H151F : Korea PIP tuner
 TDJ'W'-A151D : AJJA T2 PIP

1. should be guarded by ground
2. No via on both of them
3. Signal Width >= 12mils
Signal to Signal Width = 12mils
Ground Width >= 24mils

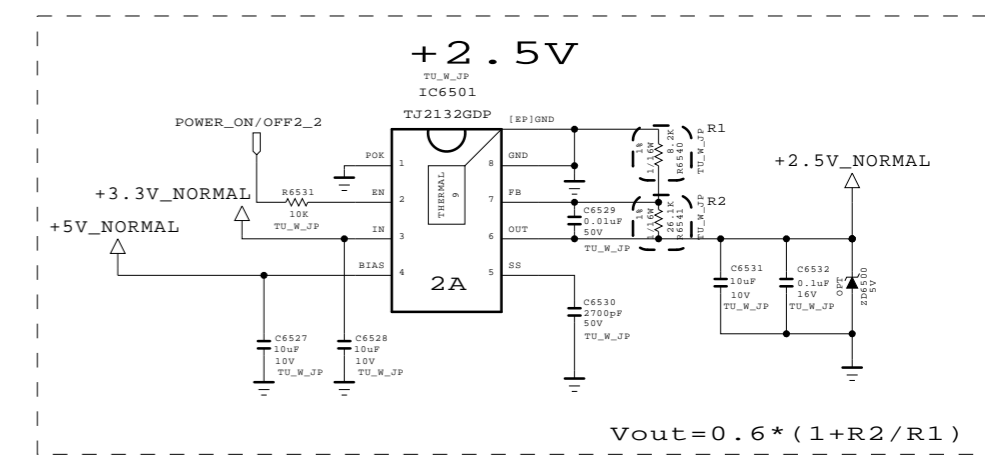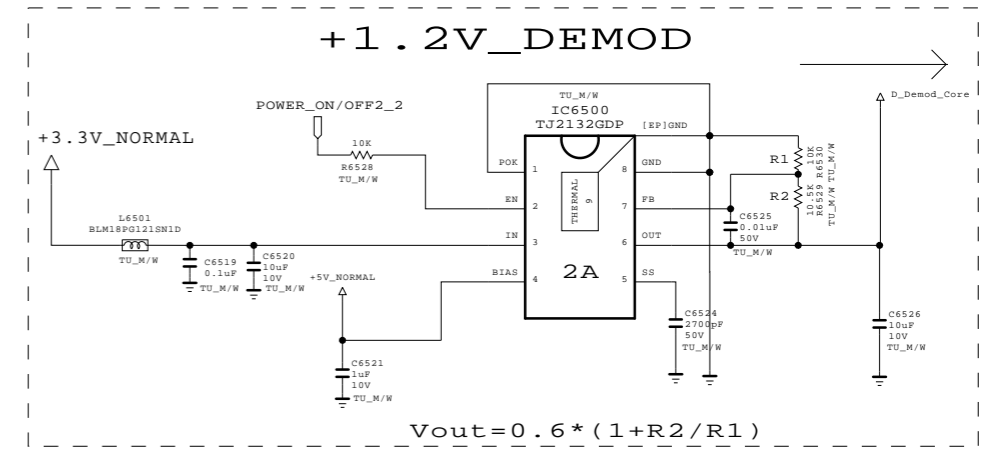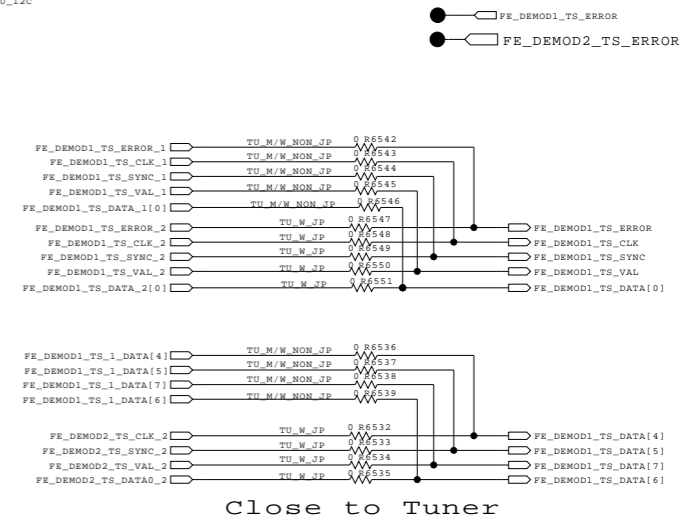


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.


SECRET
 LG Electronics



MODEL	K2H	DATE	2014-10-17
BLOCK	TU_CIRCUIT	SHEET	18


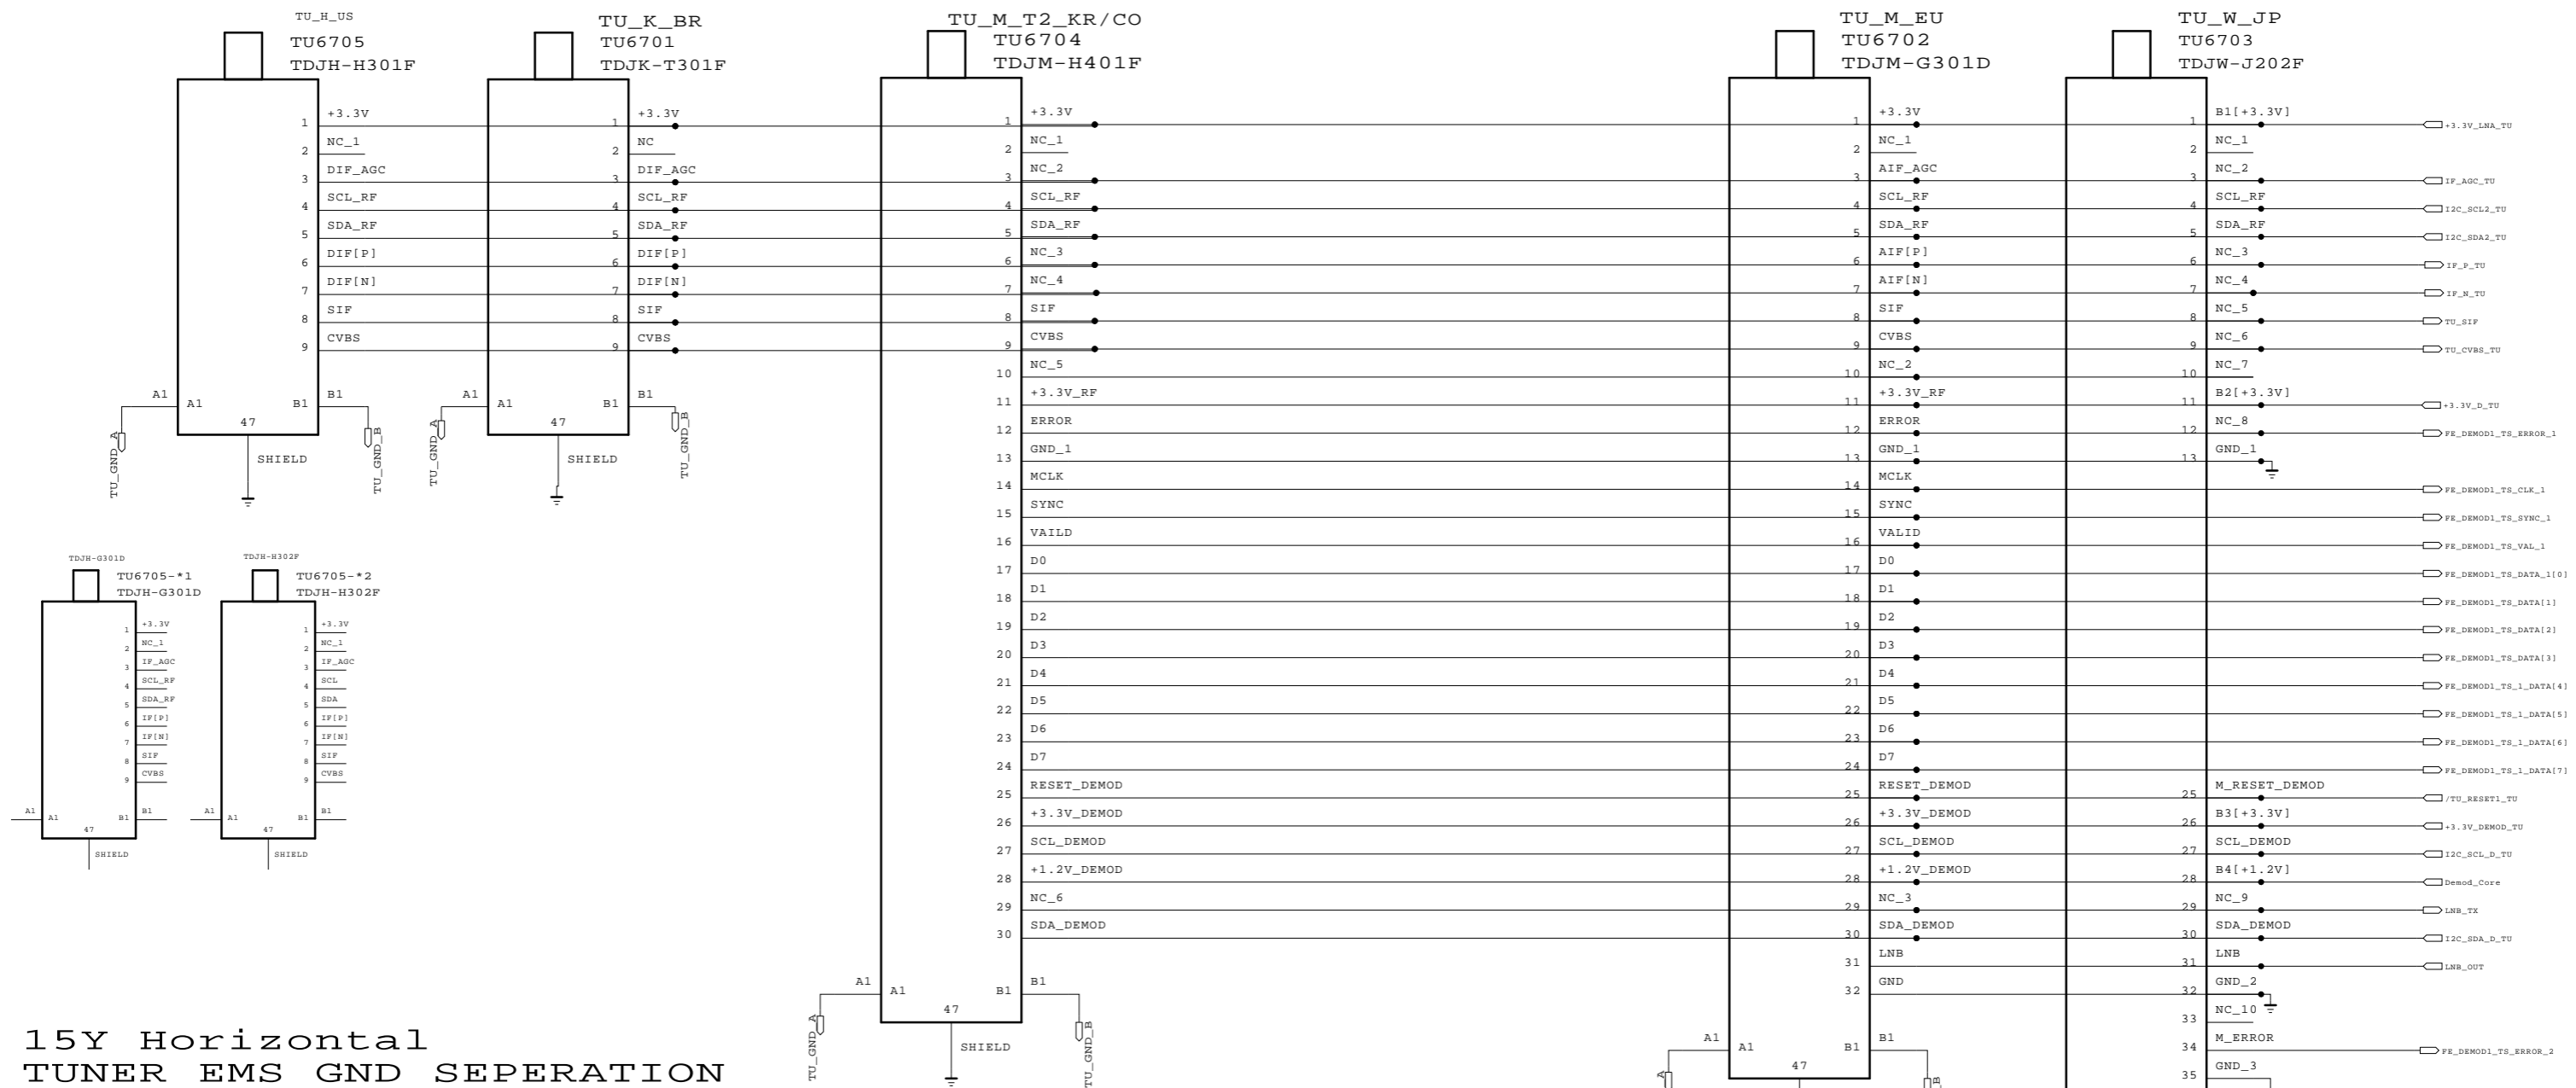


15Y Horizontal TUNER EMS GND SEPERATION

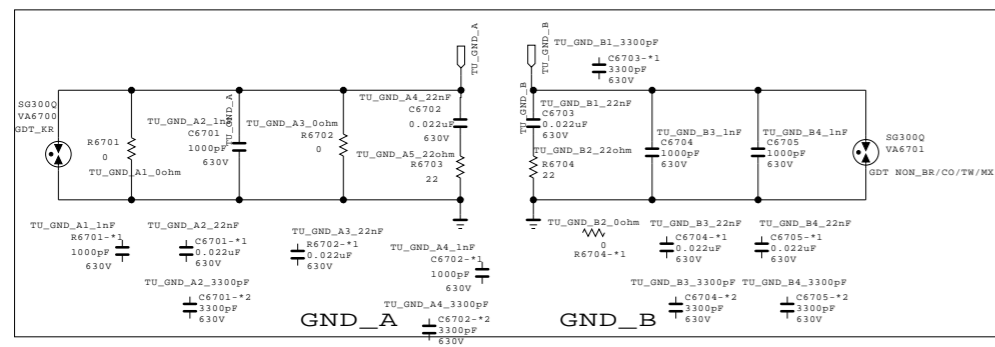

TU_GND_A	EU/CIS	AJJA	TW/COL	CN/RK	KR	US/CA	MX	BR	JP
GND_A_1	0 ohm	0 ohm			X	0 ohm	0 ohm	X	0 ohm
GND_A_2	X	X			22 nF	X	X	22 nF	1 nF
GND_A_3	X	0 ohm			X	0 ohm	X	22 nF	0 ohm
GND_A_4	X	X			22 nF	X	X	22 nF	1 nF
GND_A_5	X	X			22 ohm	X	X	22 ohm	22 ohm

TU_GND_B	EU/CIS	AJJA	TW/COL	CN/RK	KR	US/CA	MX	BR	JP
GND_B_1	X	X			22 nF	22 nF	X	22 nF	X
GND_B_2	X	X			22 ohm	22 ohm	X	22 ohm	X
GND_B_3	1 nF	1 nF			22 nF	1 nF	X	22 nF	1 nF
GND_B_4	1 nF	1 nF			22 nF	1 nF	X	22 nF	1 nF

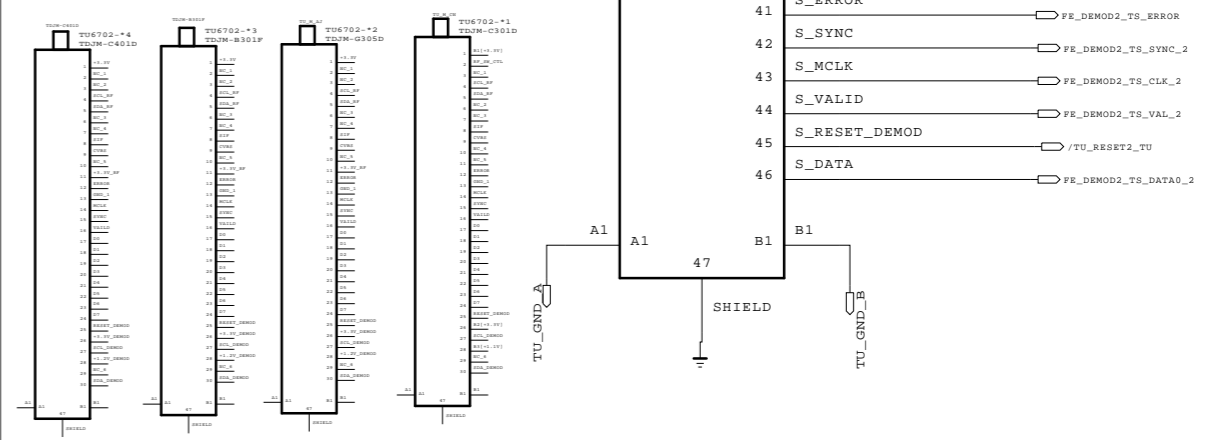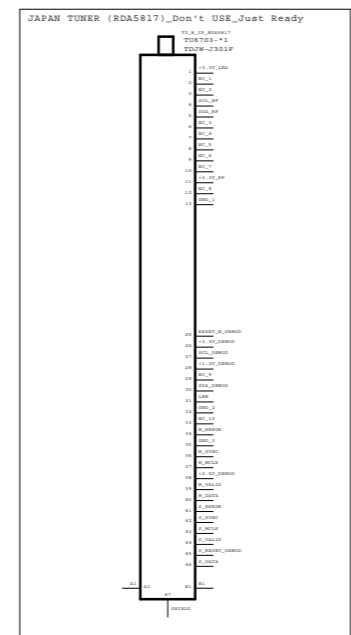

THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




MODEL	K2H	DATE	2014-09-11
BLOCK	TU_SYMBOL_H	SHEET	19

DVB-S2 LNB Part Allegro/DMBT

(Option:LNB)

Input trace widths should be sized to conduct at least 3A
 Output trace widths should be sized to conduct at least 2A

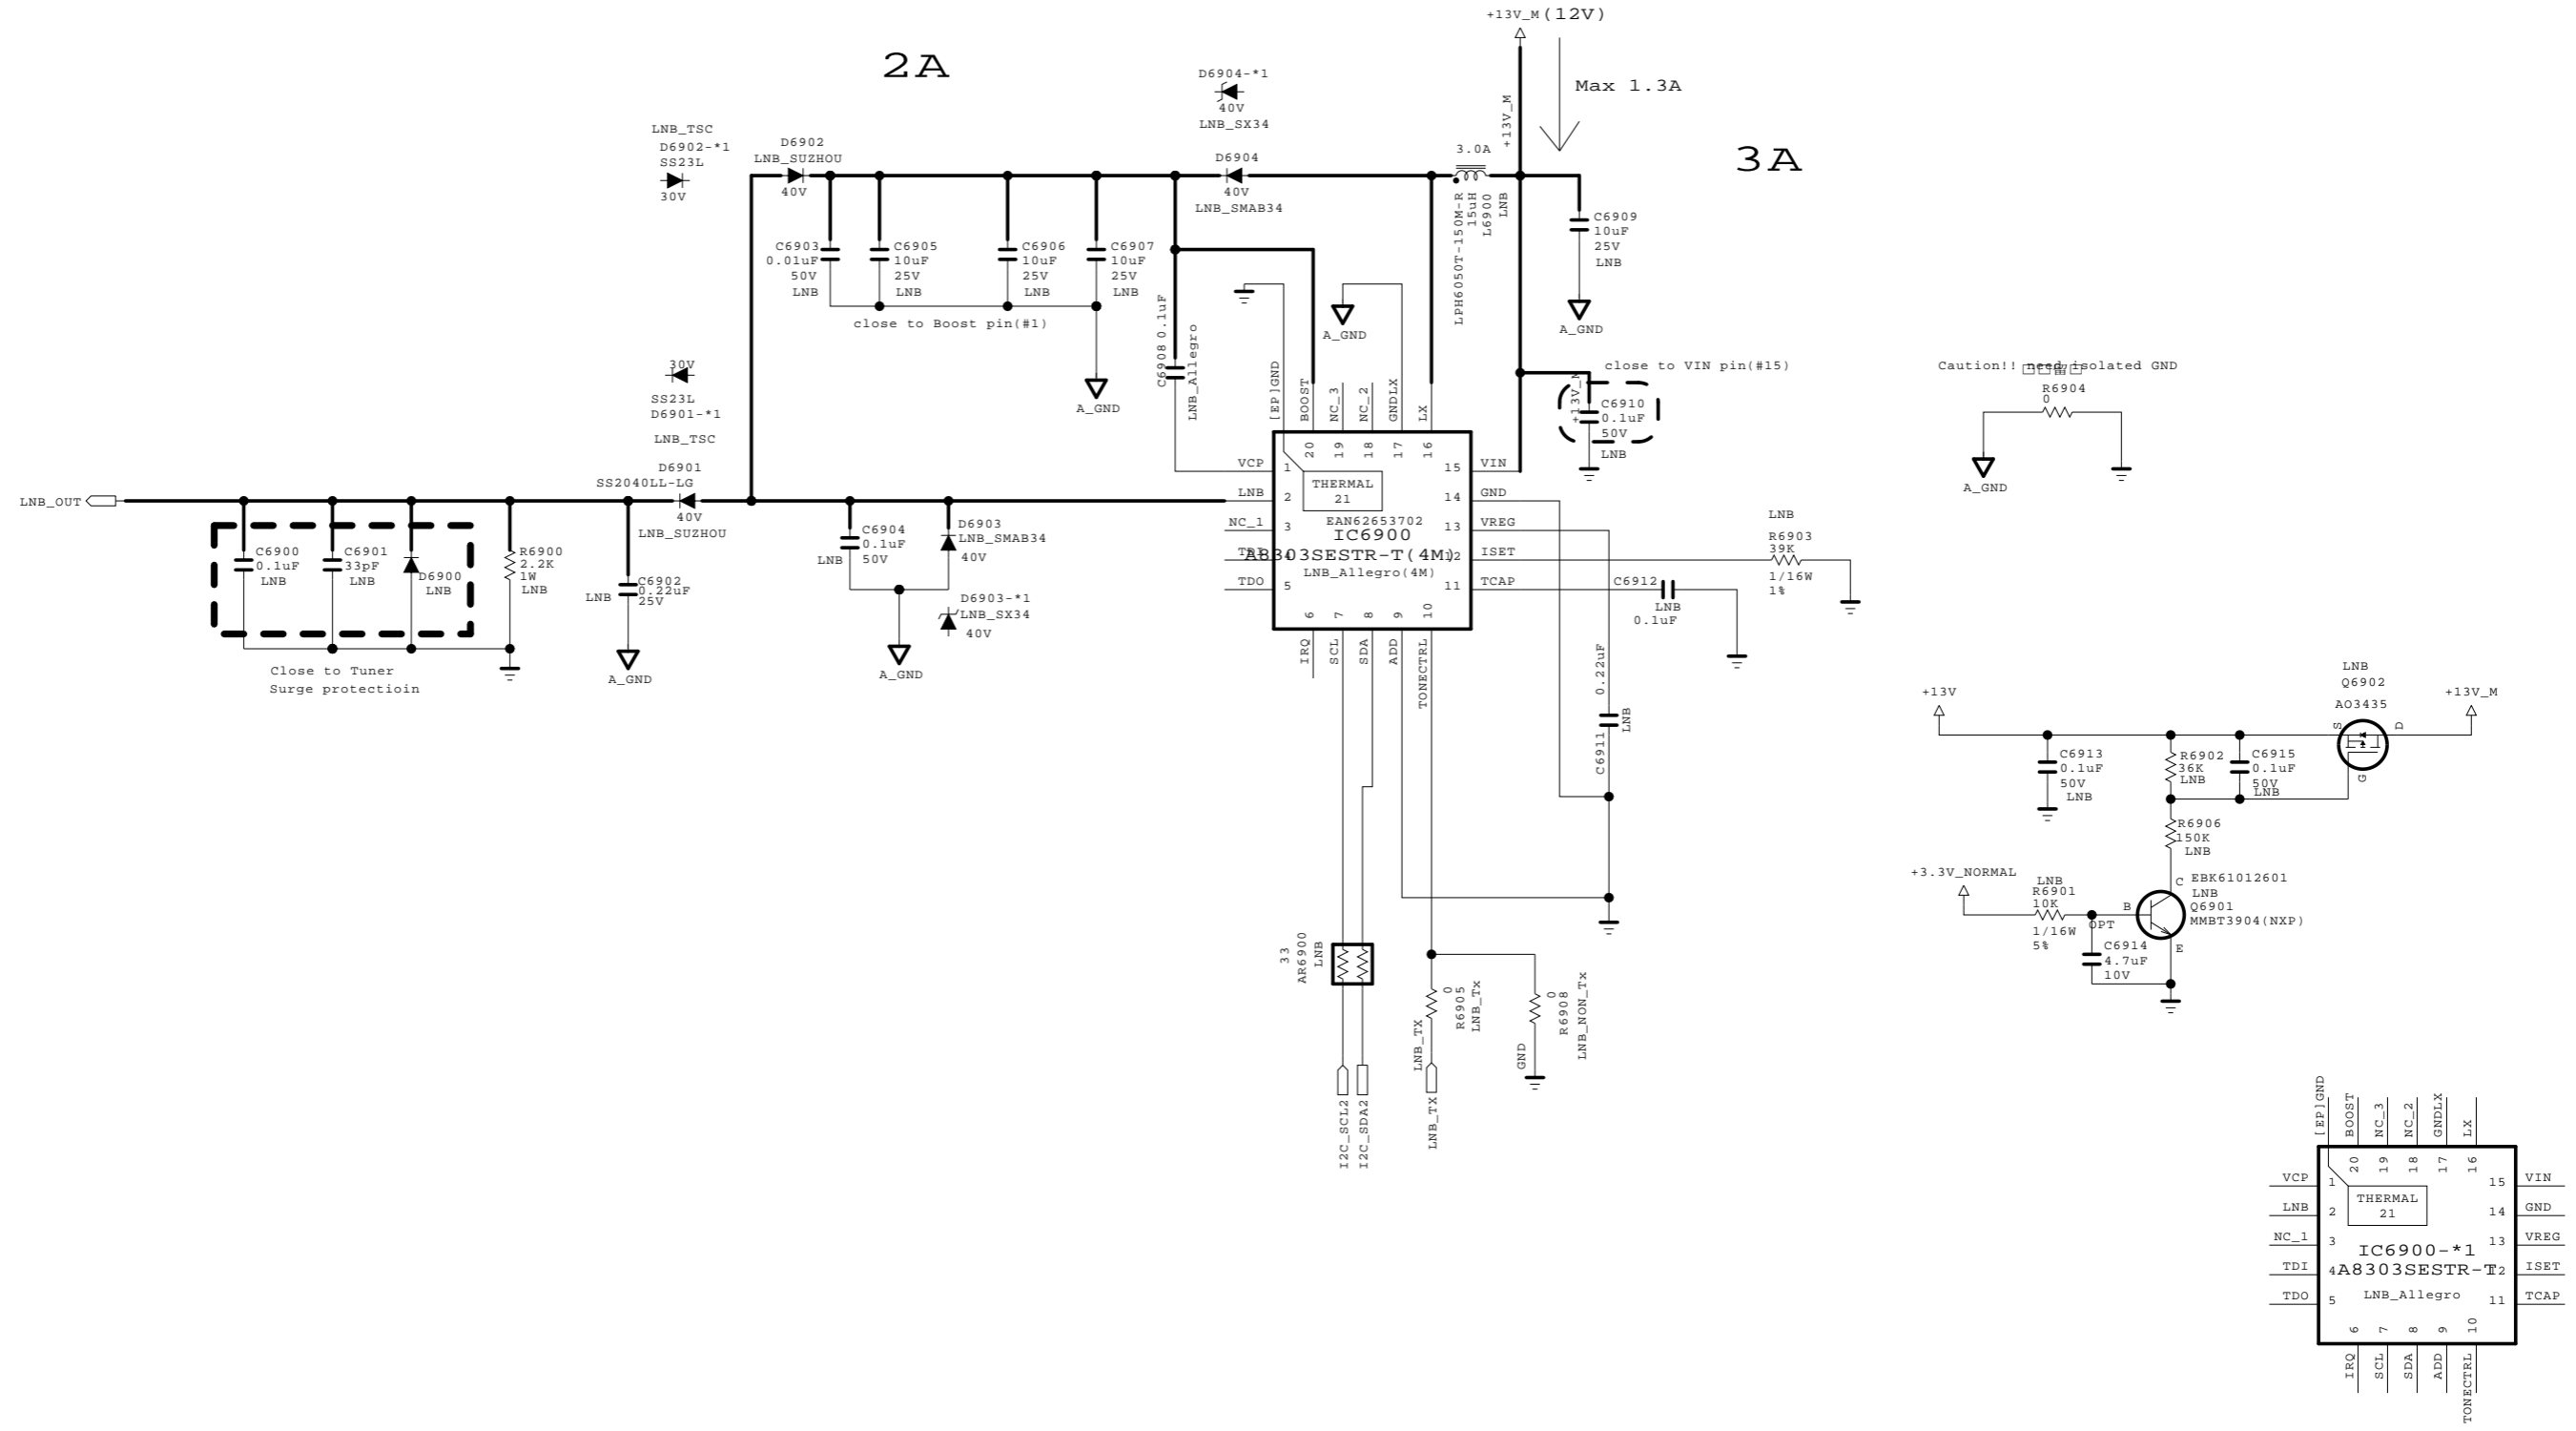






THE ⚠ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMATIC.

SECRET	LG ELECTRONICS
LGElectronics	

MODEL	K2L	DATE	2012.03.08
BLOCK	LNB	SHEET	69 /

[51P Vx1
output wafer]

PANEL_VX1
S7100
SP14-11592-01-51Ppin

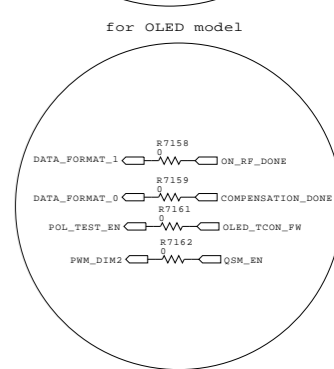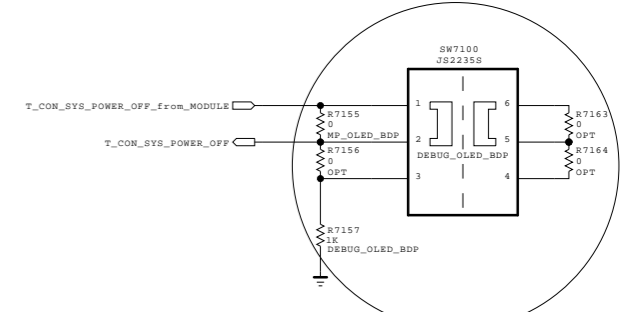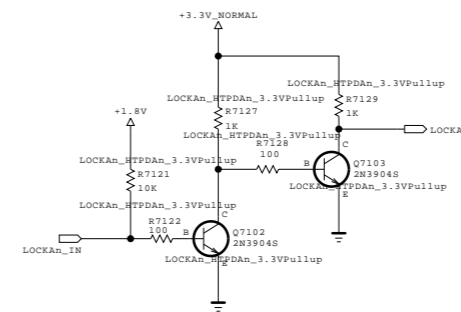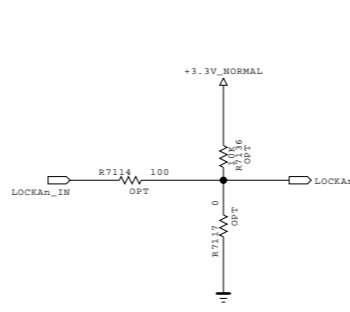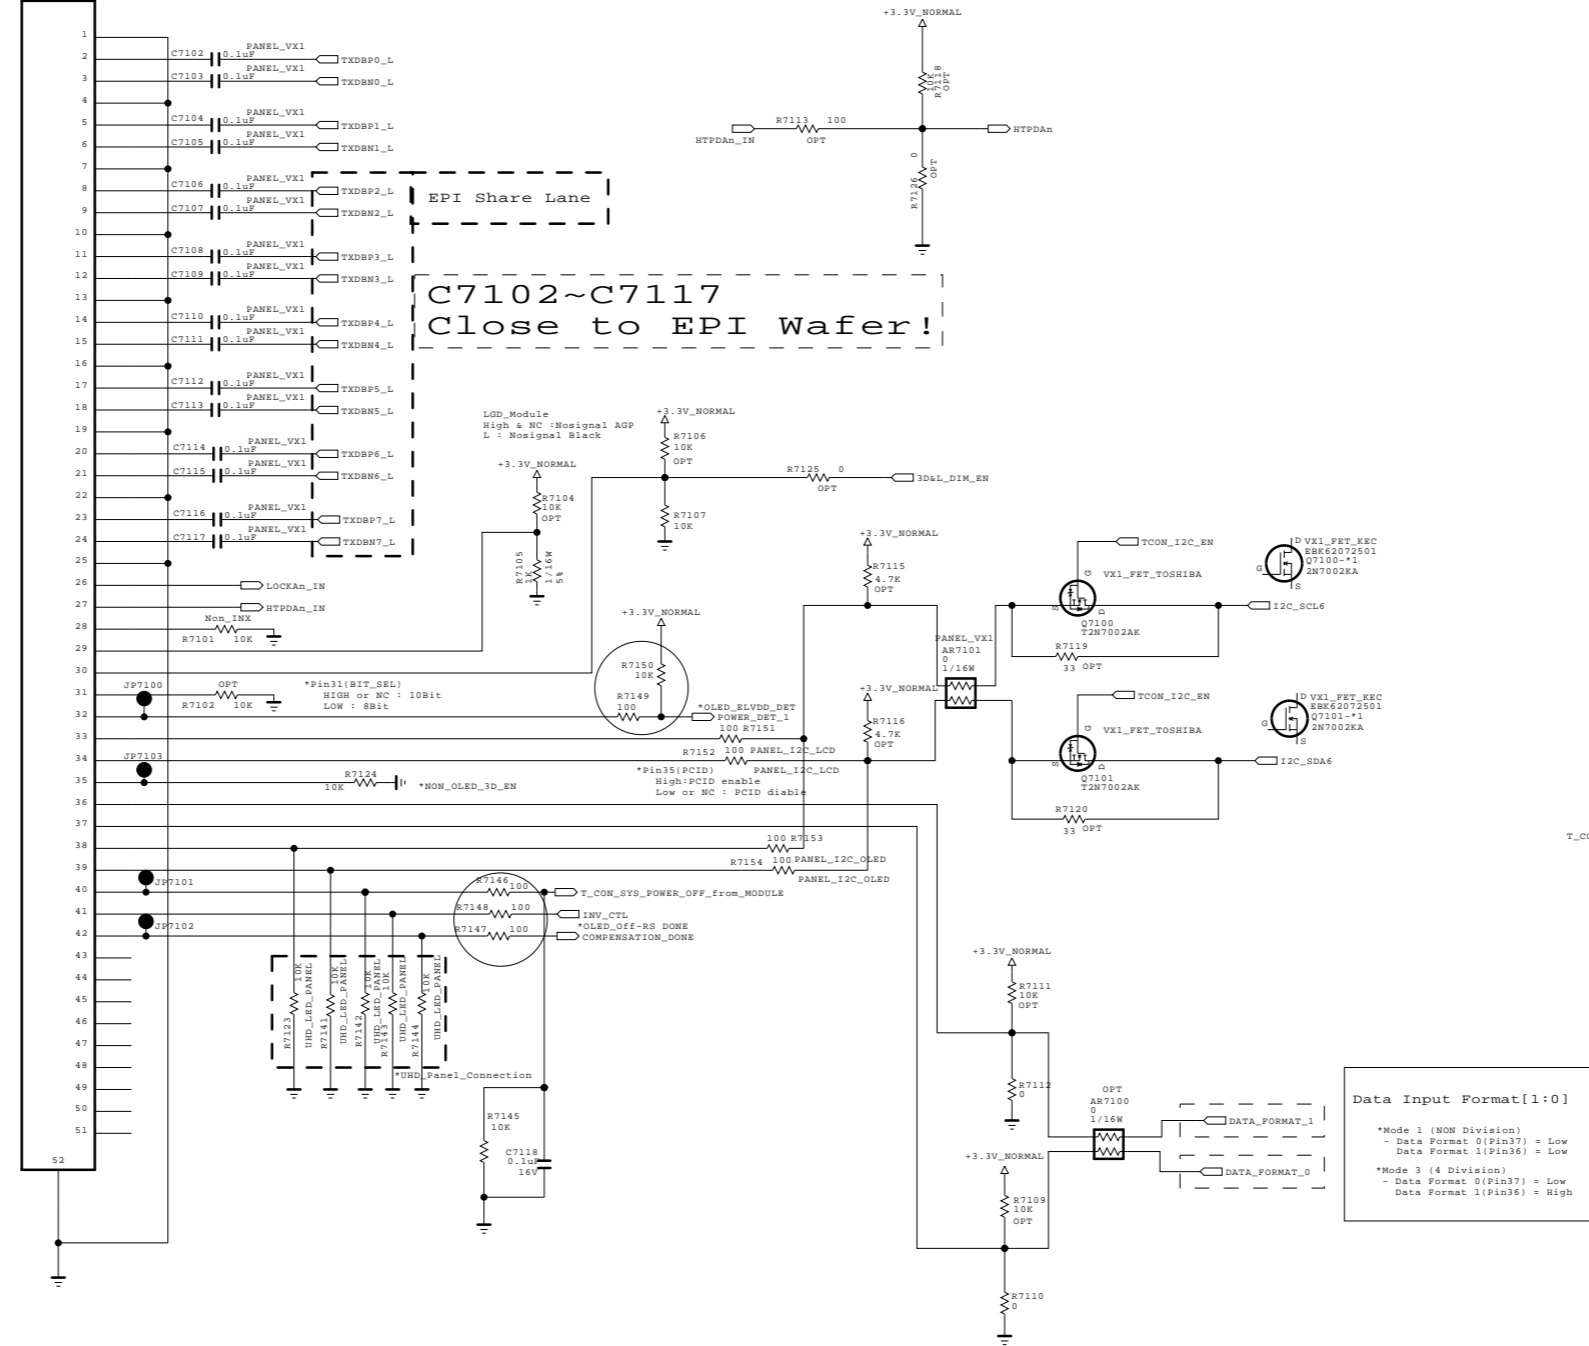

Data Input Format[1:0]
 *Mode 1 (NON Division)
 - Data Format 0(Pin37) = Low
 Data Format 1(Pin36) = Low
 *Mode 3 (4 Division)
 - Data Format 0(Pin37) = Low
 Data Format 1(Pin36) = High


THE Δ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE Δ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	K2H	DATE	2014-08-27
BLOCK	Vx1 51P	SHEET	21 /

[41P Vx1
output wafer]

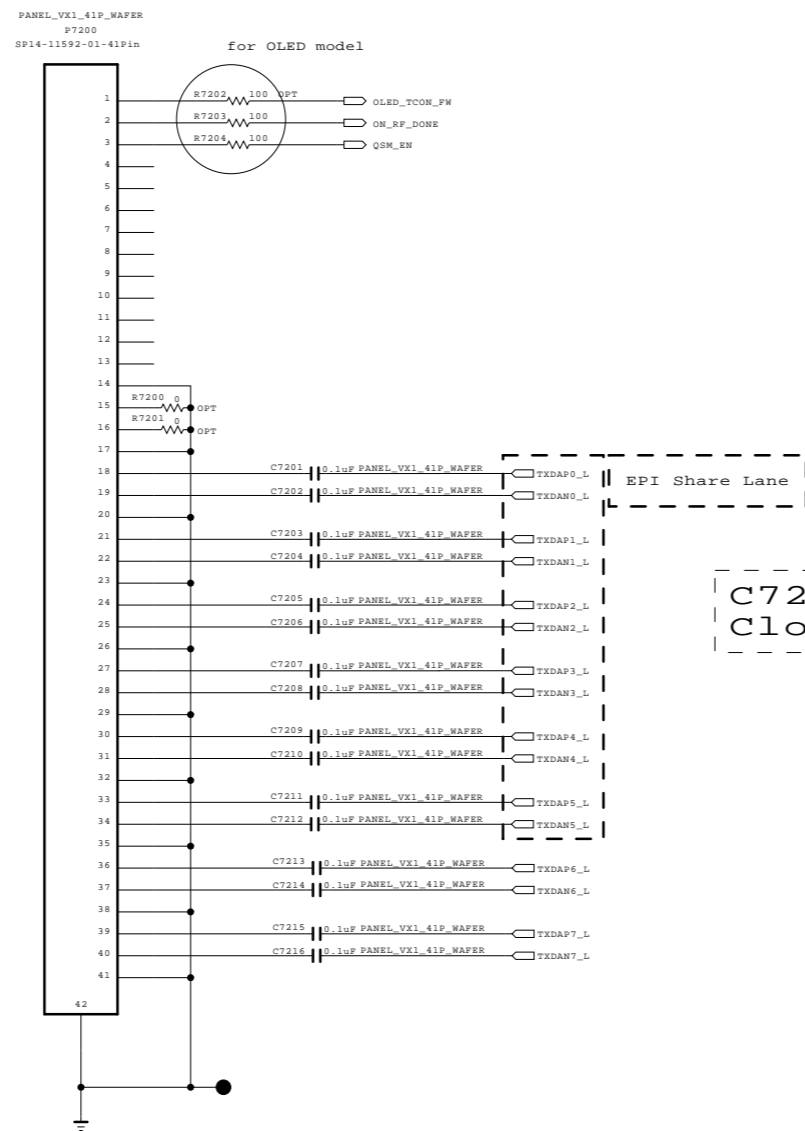


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	UF71/7500	DATE	14/07/19
BLOCK	Vx1 41P	SHEET	22 /

eMMC I/F

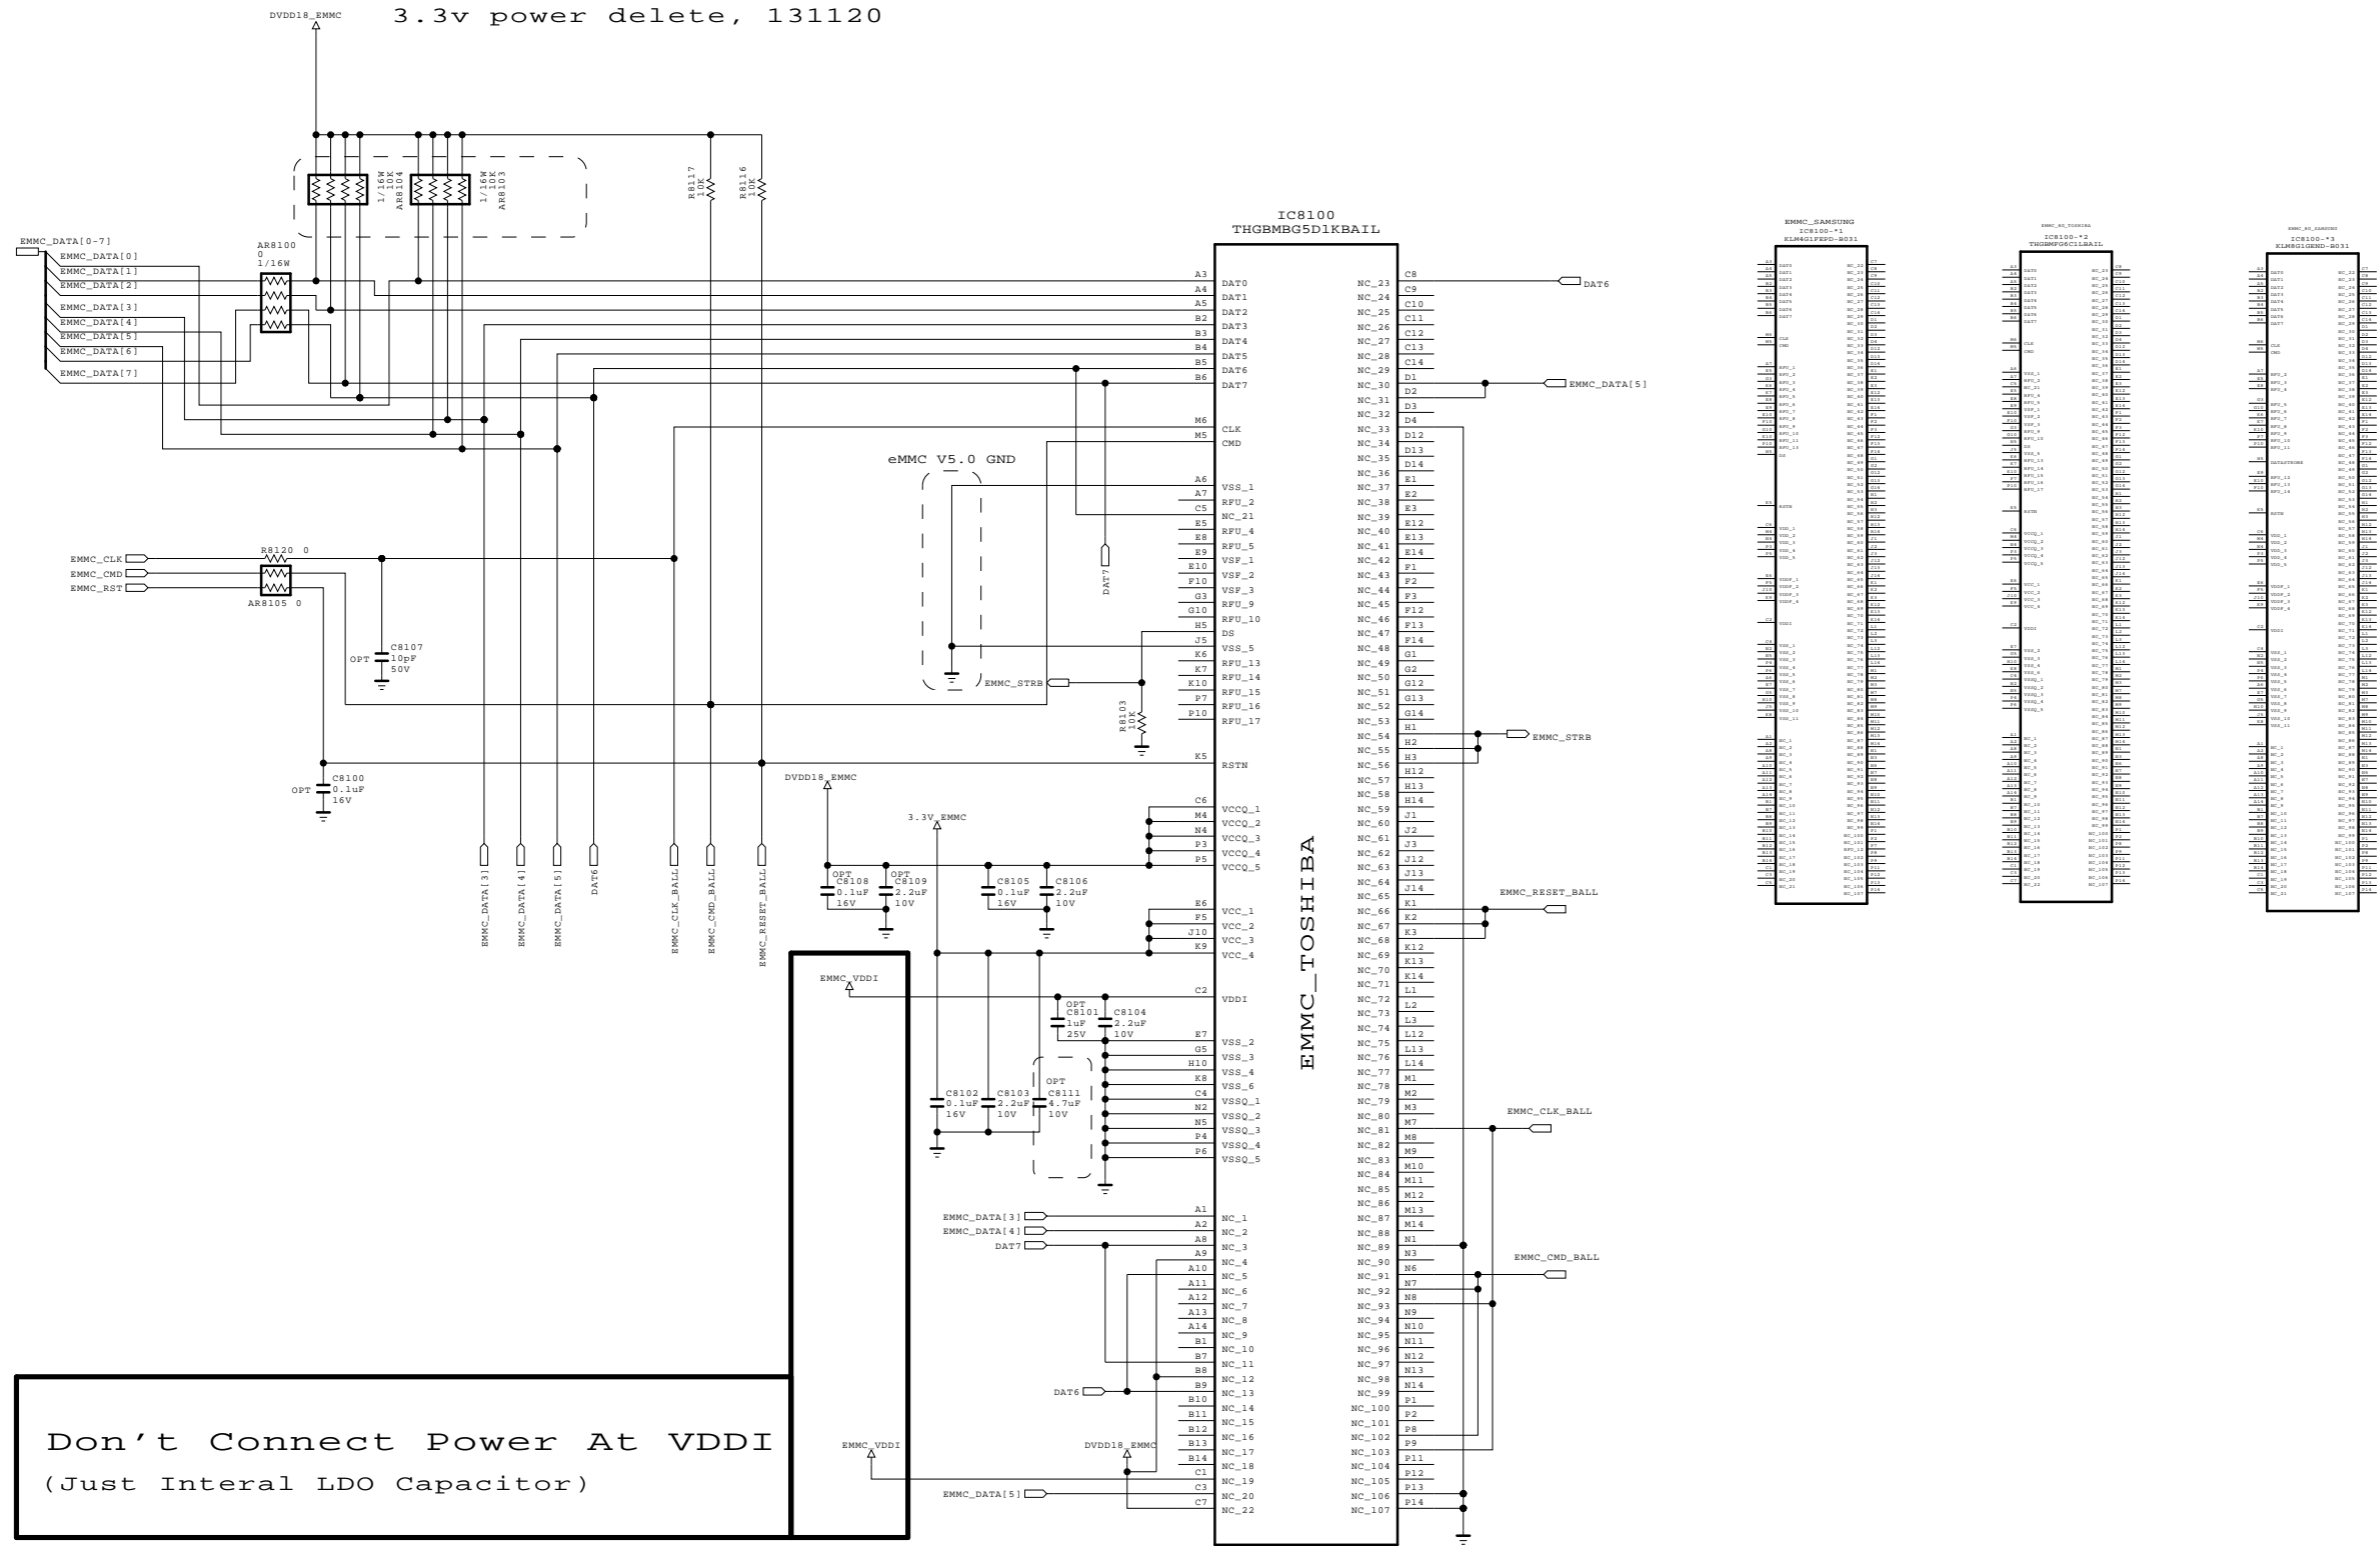


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	K2H	DATE	2014-11-17
BLOCK	eMMC	SHEET	81 /

RS-232C Control INTERFACE

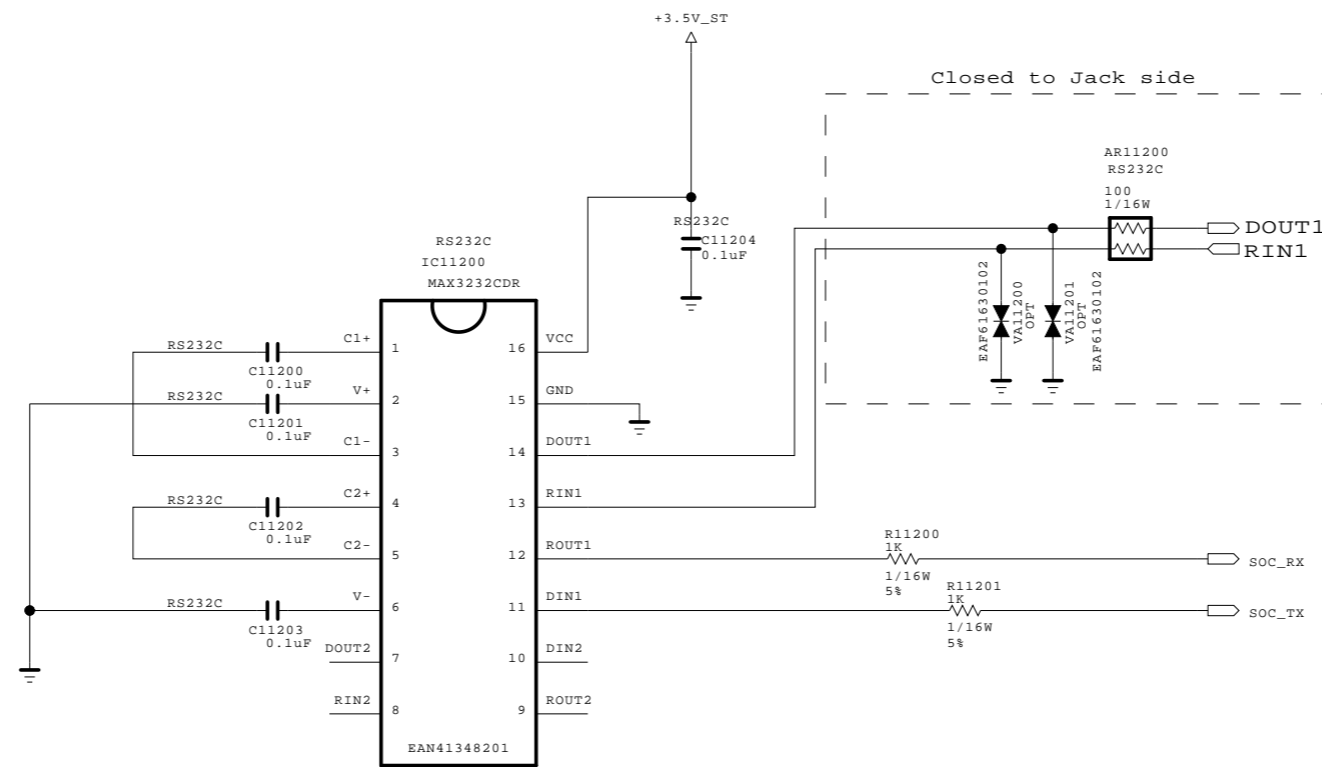

THE ⚠ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




MODEL	UF71/7500	DATE	2014-05-19
BLOCK	RS232C	SHEET	22 /


K2L B6



SMD Bottom

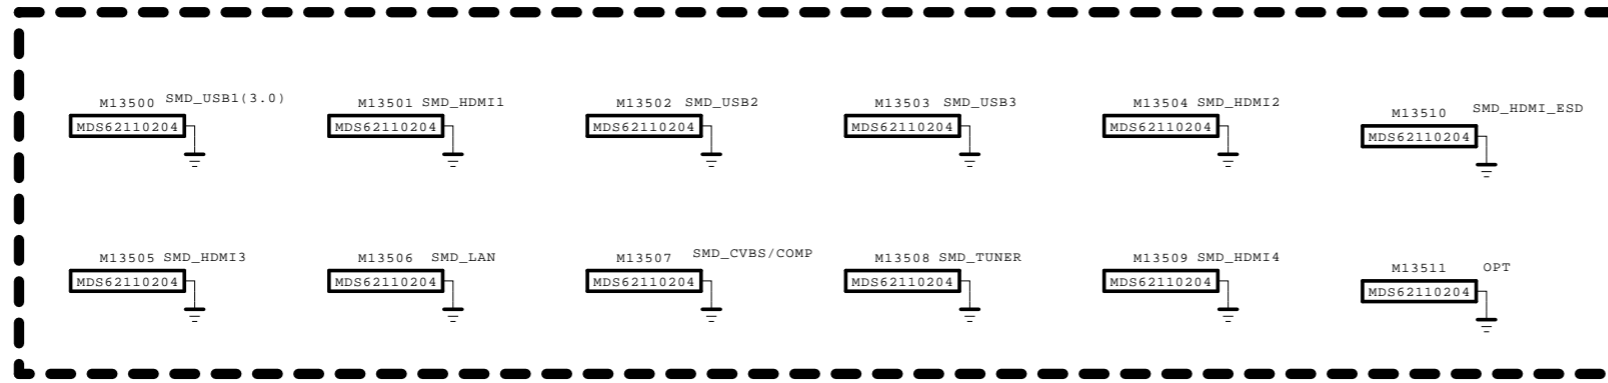5.5T

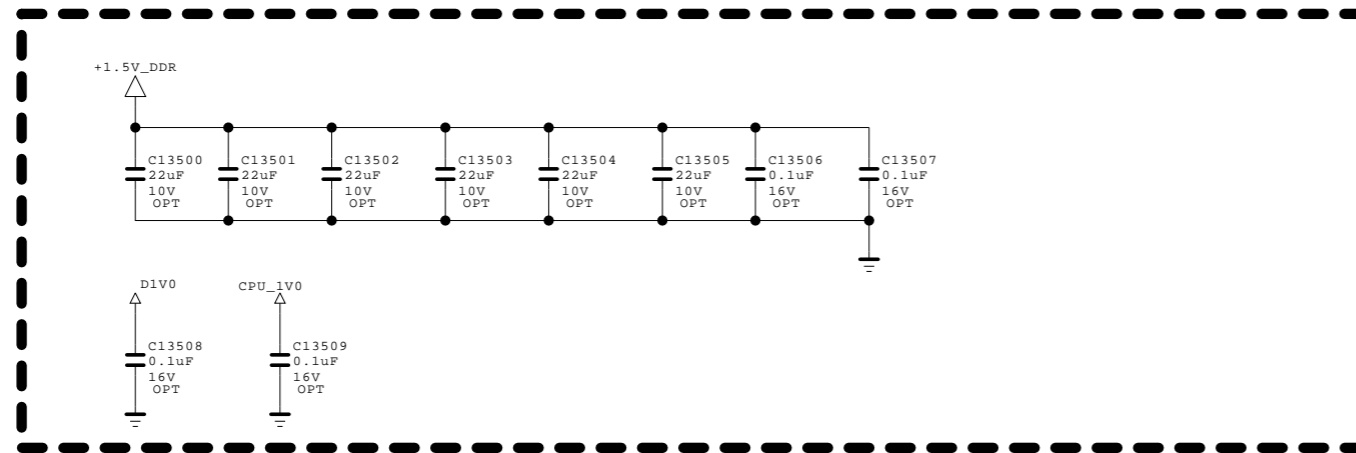

4th Layer



THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FIRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL		DATE	15.10.01
BLOCK	SMD GASKET	SHEET	/



TROUBLE SHOOTING GUIDE


Contents of Standard Repair Process

No.	Error symptom (High category)	Error symptom (Mid category)	Page	Remarks
1	A. Video error	No video/Normal audio	1	
2		No video/No audio	2	
3		Picture broken/ Freezing	3	
4		Color error	4	
5		Vertical/Horizontal bar, residual image, light spot, external device color error	5	
6	B. Power error	No power	6	
7		Off when on, off while viewing, power auto on/off	7	
8	C. Audio error	No audio/Normal video	8	
9		Wrecked audio/discontinuation/noise	9	
10	D. Function error	Remote control & Local switch checking	10	
11		MR15R operating checking	11	
12		Wifi operating checking	12	
13		External device recognition error	13	
14	E. Noise	Circuit noise, mechanical noise	14	
15	F. Exterior error	Exterior defect	15	


First of all, Check whether there is SVC Bulletin in GSCS System for these model.

OLED TV	Error symptom	A. Video error	Established date	
		No video/ Normal audio	Revised date	1/16


**First of all, Check whether all of cables between board is inserted properly or not.
(Main B/D↔ Power B/D, LVDS Cable, Speaker Cable, IR B/D Cable,,)**

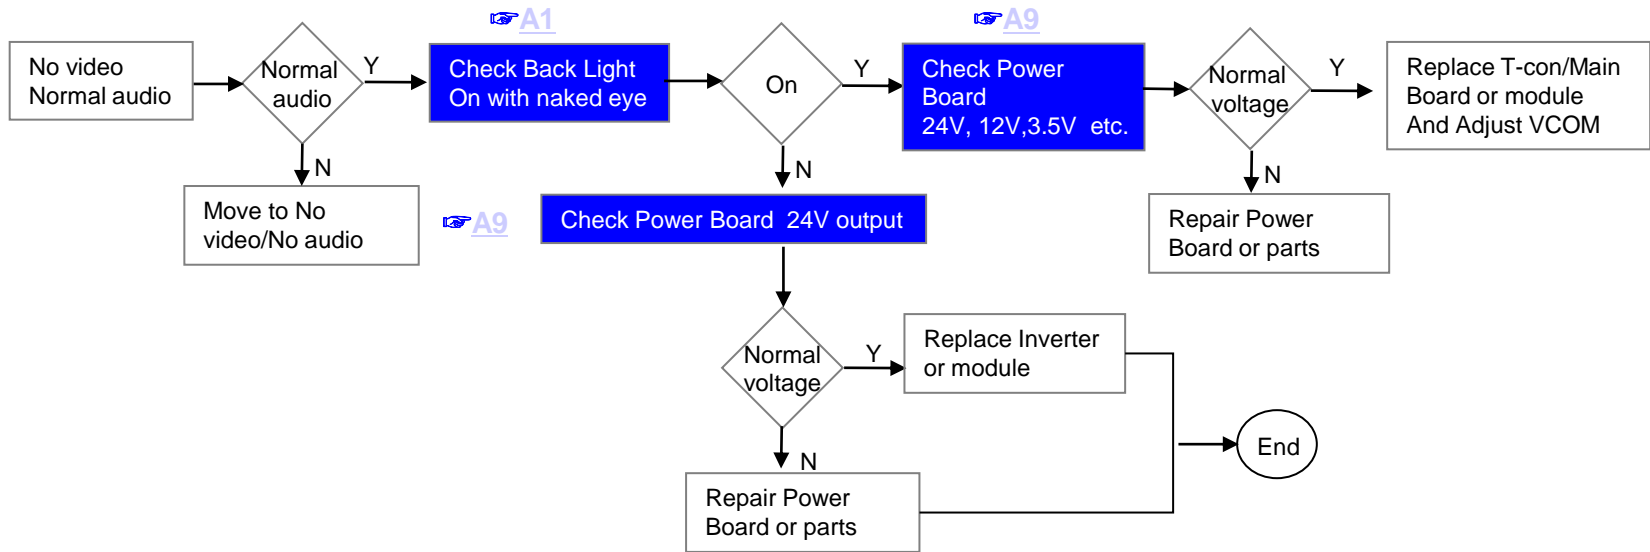


※Precaution A4 & A2

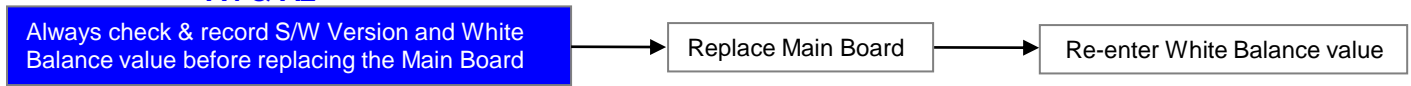

OLED TV	Error symptom	A. Video error	Established date		
		No video/ No audio	Revised date		2/16

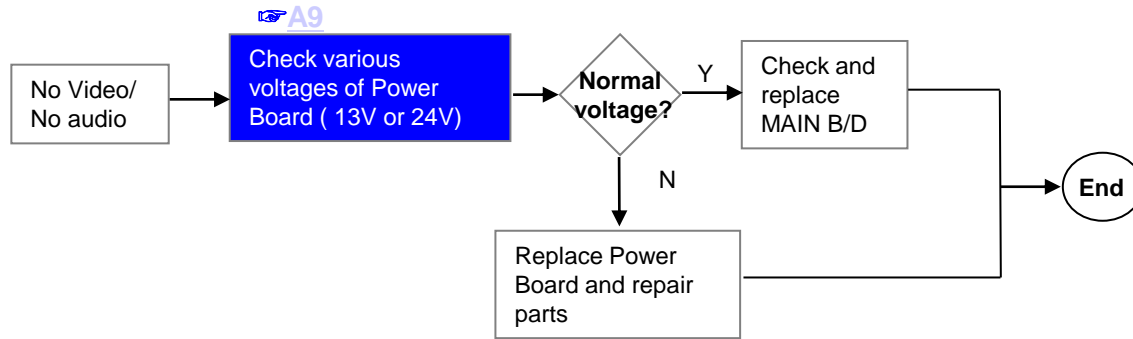

OLED TV	Error symptom	A. Video error	Established date	
		Picture broken/ Freezing	Revised date	3/16

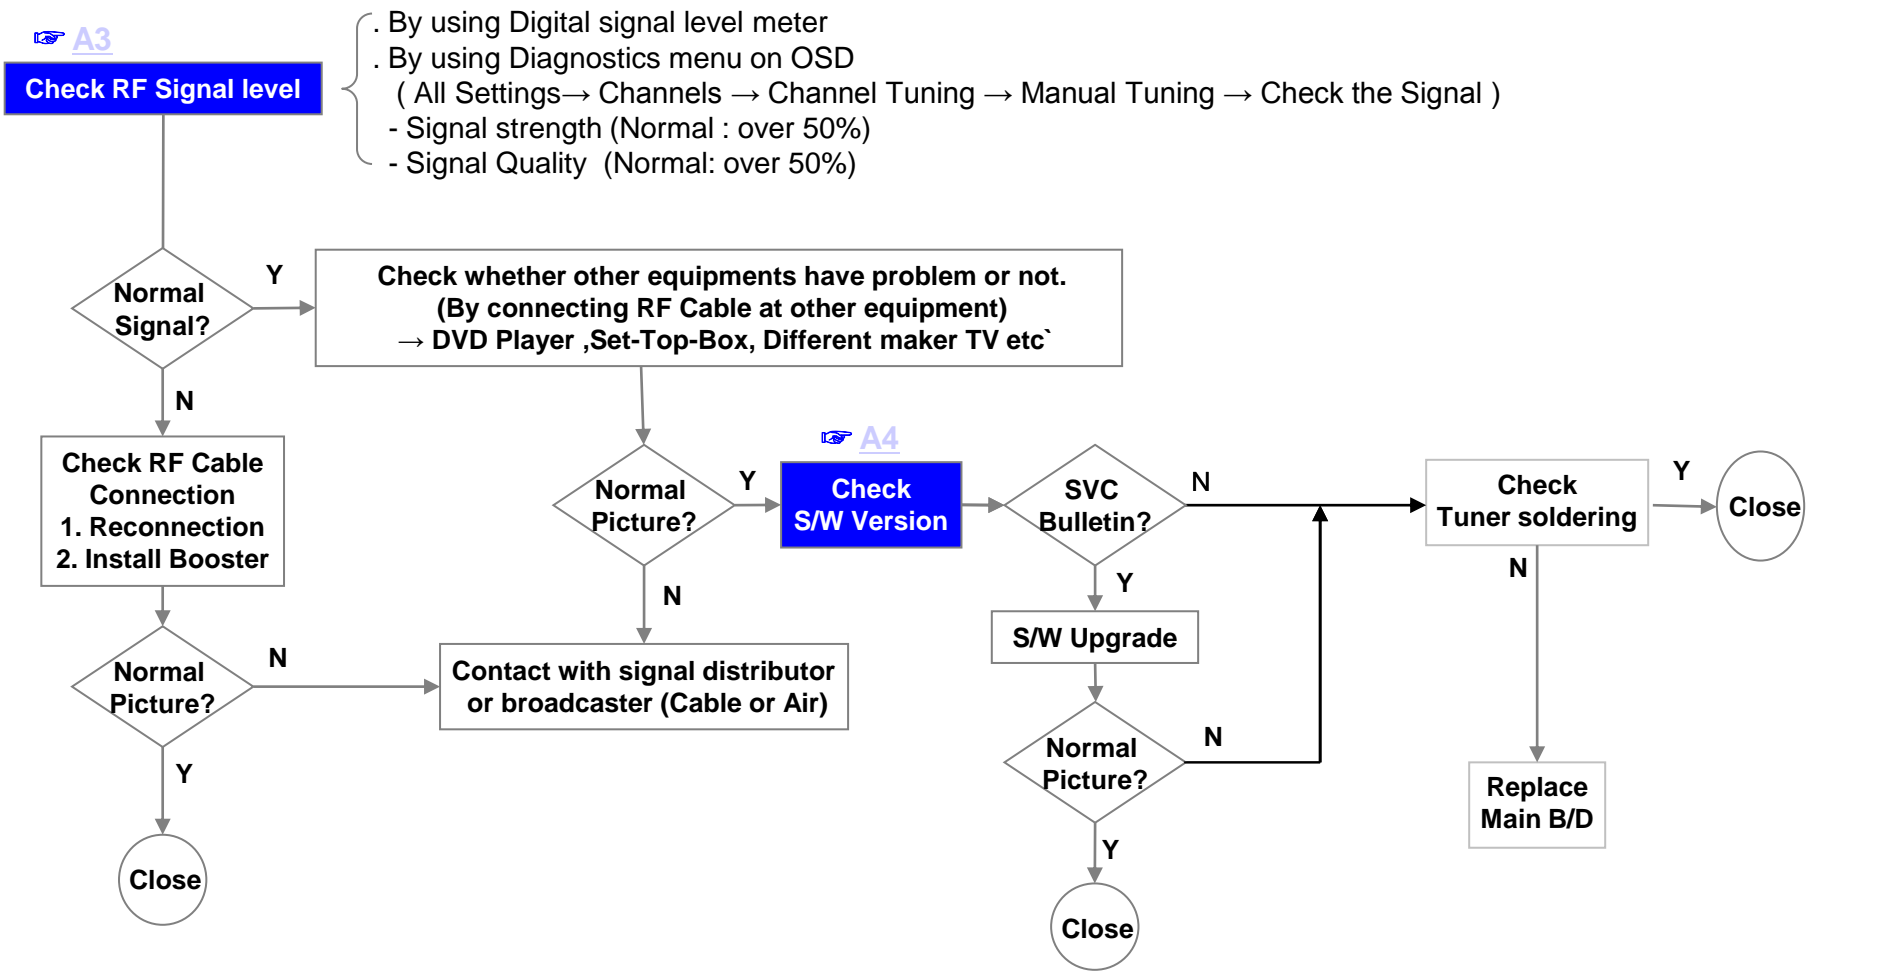


OLED TV	Error symptom	A. Video error	Established date	
		Color error	Revised date	4/16

A6

Check color by input
 -External Input
 -COMPONENT
 -AV
 -HDMI

A7

※ Check and replace Link Cable (V by one) and contact condition

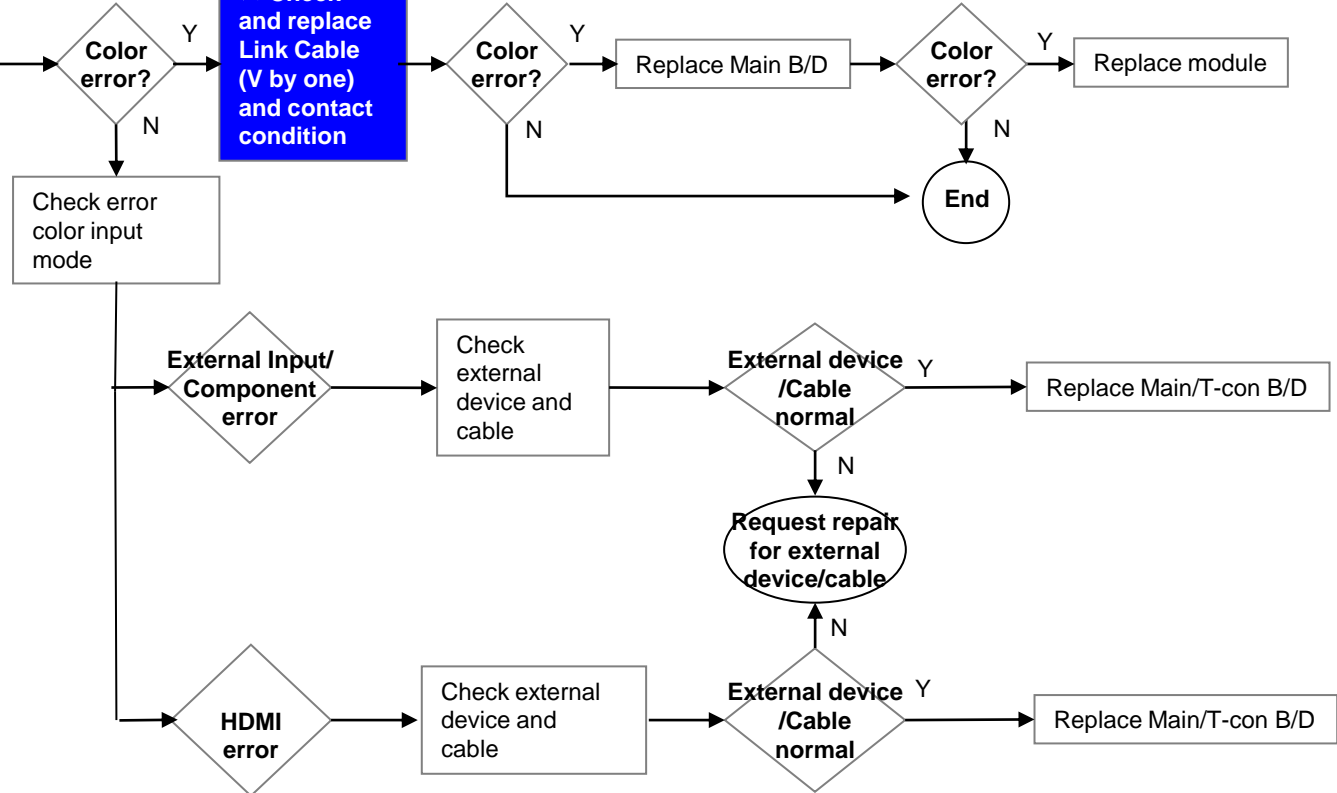


OLED TV	Error symptom	A. Video error	Established date	
		Vertical / Horizontal bar, residual image, light spot, external device color error	Revised date	5/16


Vertical/Horizontal bar, residual image, light spot

A6

Check color condition by input
-External Input
-Component
-HDMI

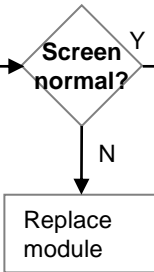


Check external device connection condition

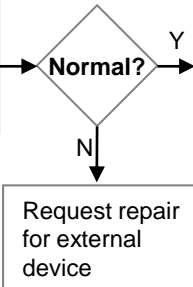


A7


Check and replace Link Cable

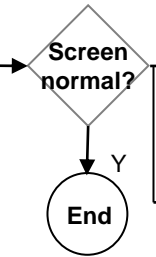

For LGD panel
For other panel

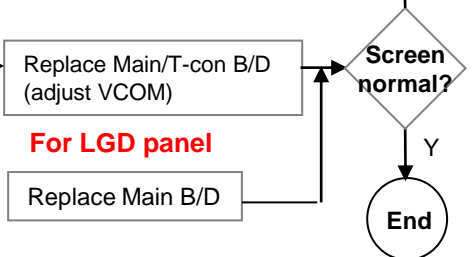

External device screen error-Color error

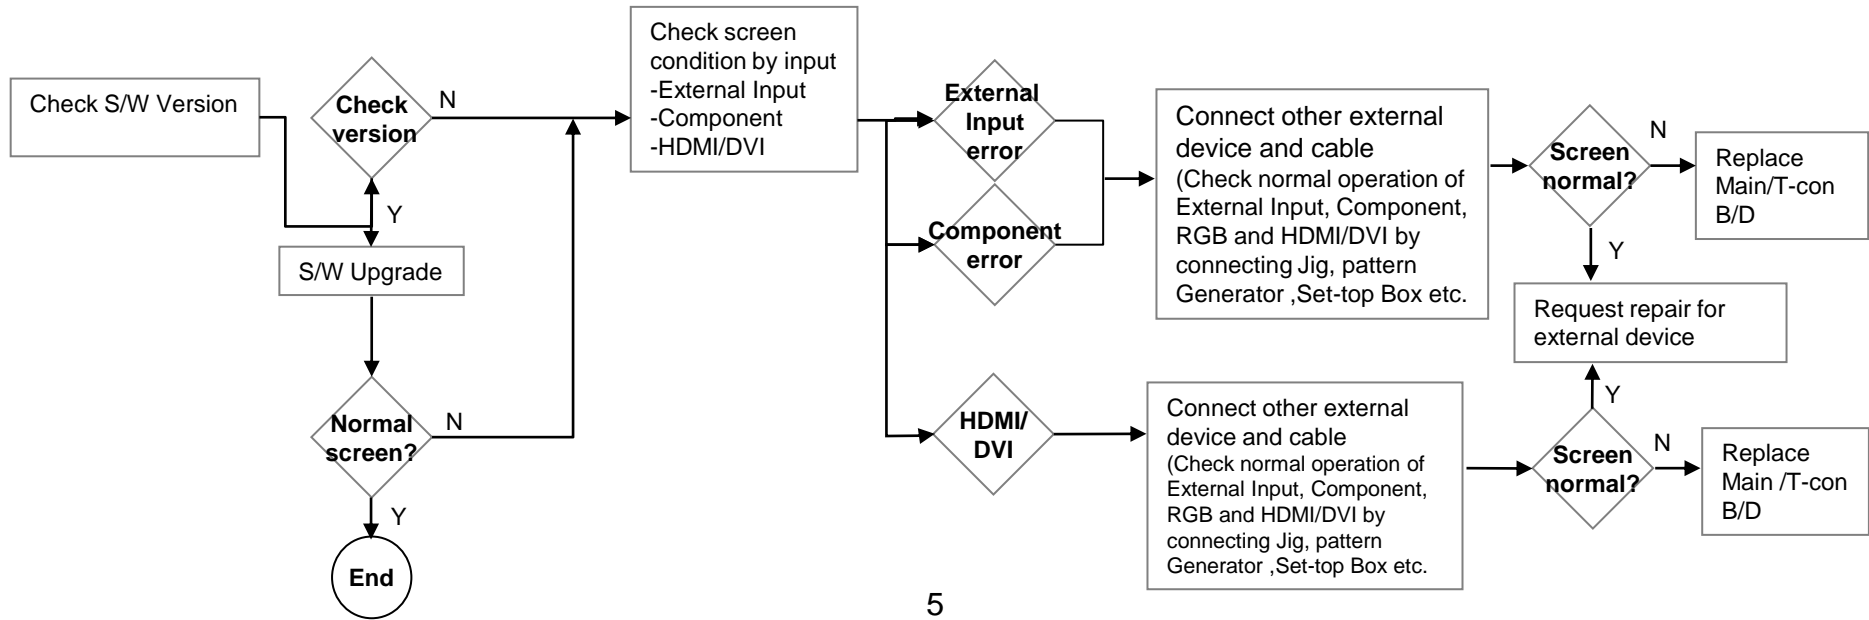

OLED TV

Error symptom


B. Power error

Established date


No power

Revised date

6/16

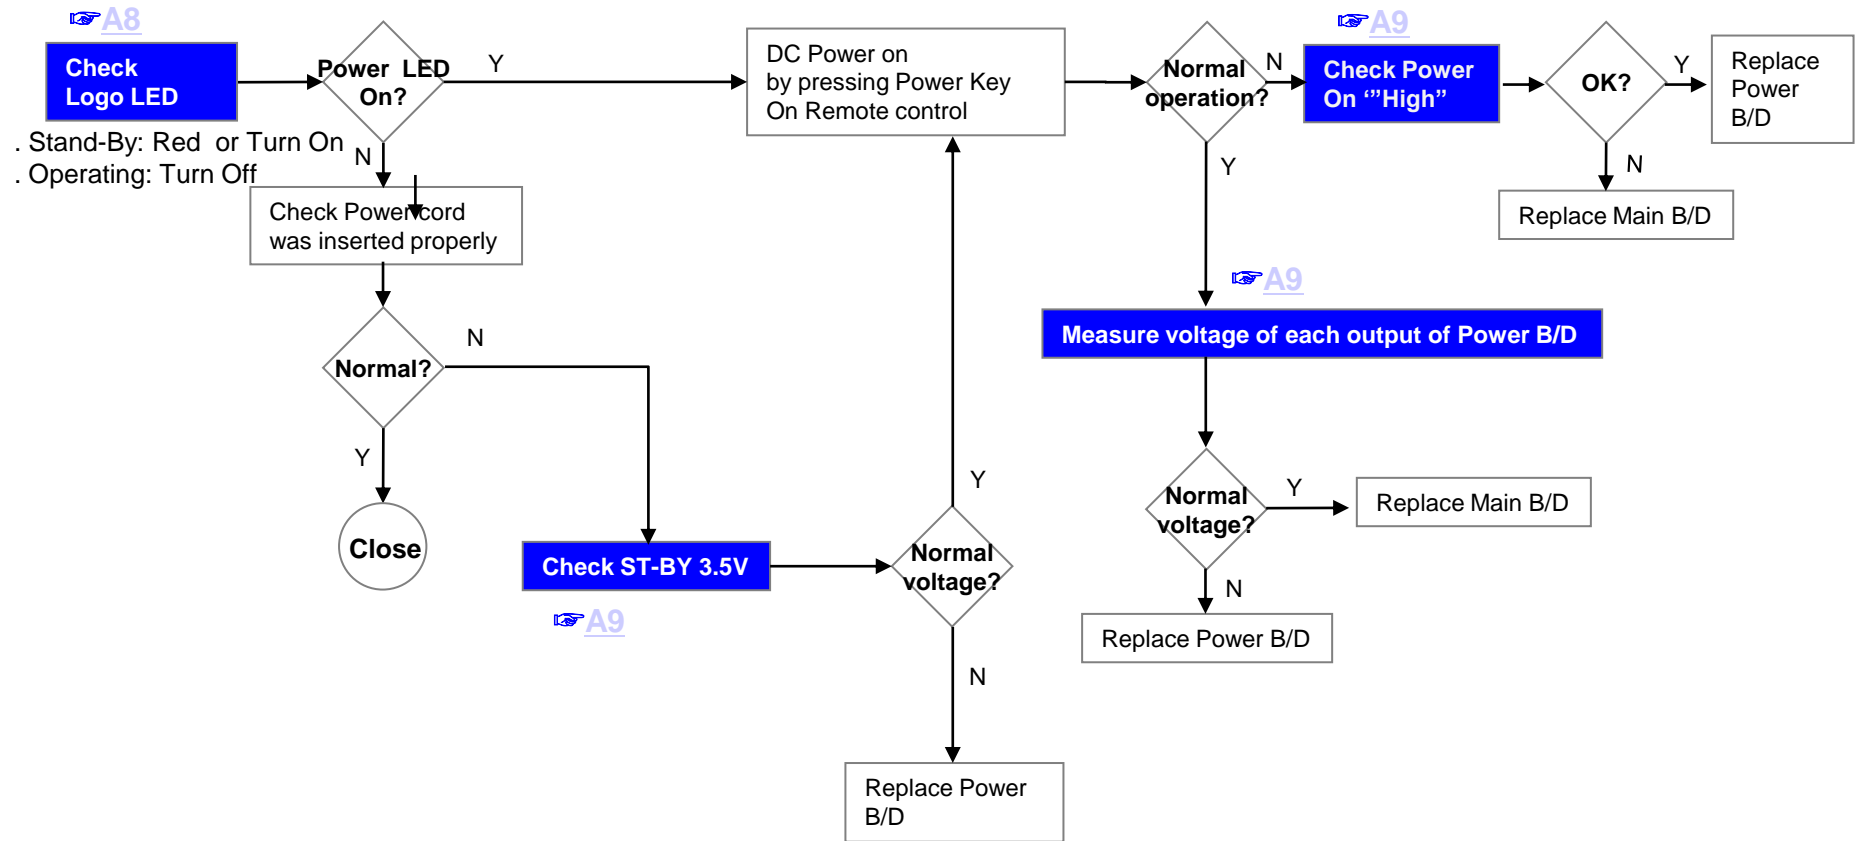


OLED TV	Error symptom	B. Power error	Established date	
		Off when on, off while viewing, power auto on/off	Revised date	7/16

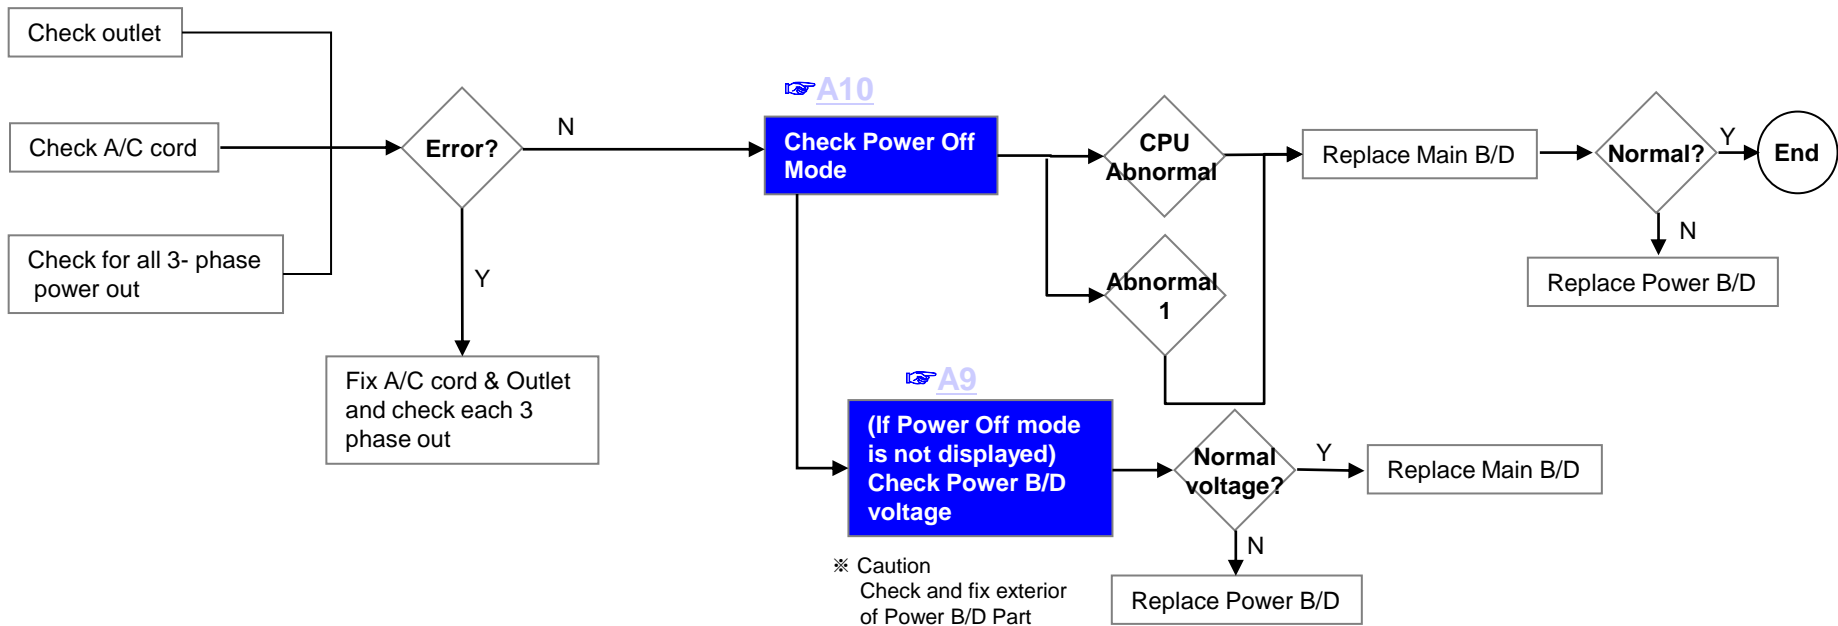

* Please refer to the all cases which can be displayed on power off mode.


Status	Power off List	Explanation
Normal	"POWER_OFF_BY_REMOTE_KEY"	Power off by REMOTE CONTROL
	"POWER_OFF_BY_OFF_TIMER"	Power off by OFF TIMER
	"POWER_OFF_BY_SLEEP_TIMER"	Power off by SLEEP TIMER
	"POWER_OFF_BY_INSTOP"	Power off by INSTOP KEY
	"POWER_OFF_BY_AUTO_OFF"	Power off by AUTO OFF
	"POWER_OFF_BY_ON_TIMER"	Power off by ON TIMER
	"POWER_OFF_BY_RS232C"	Power off by RS232C
	"POWER_OFF_BY_RESREC"	Power off by Reserved Record
	"POWER_OFF_BY_RECEND"	Power off by End of Recording
	"POWER_OFF_BY_SW_DW"	Power off by S/W Download
	"POWER_OFF_BY_UNKNOWN"	Power off by unknown status except listed case
Abnormal	"POWER_OFF_BY_CPU_ABN"	Power off by CPU Abnormal

OLED TV	Error symptom	C. Audio error	Established date		
		No audio/ Normal video	Revised date		8/16

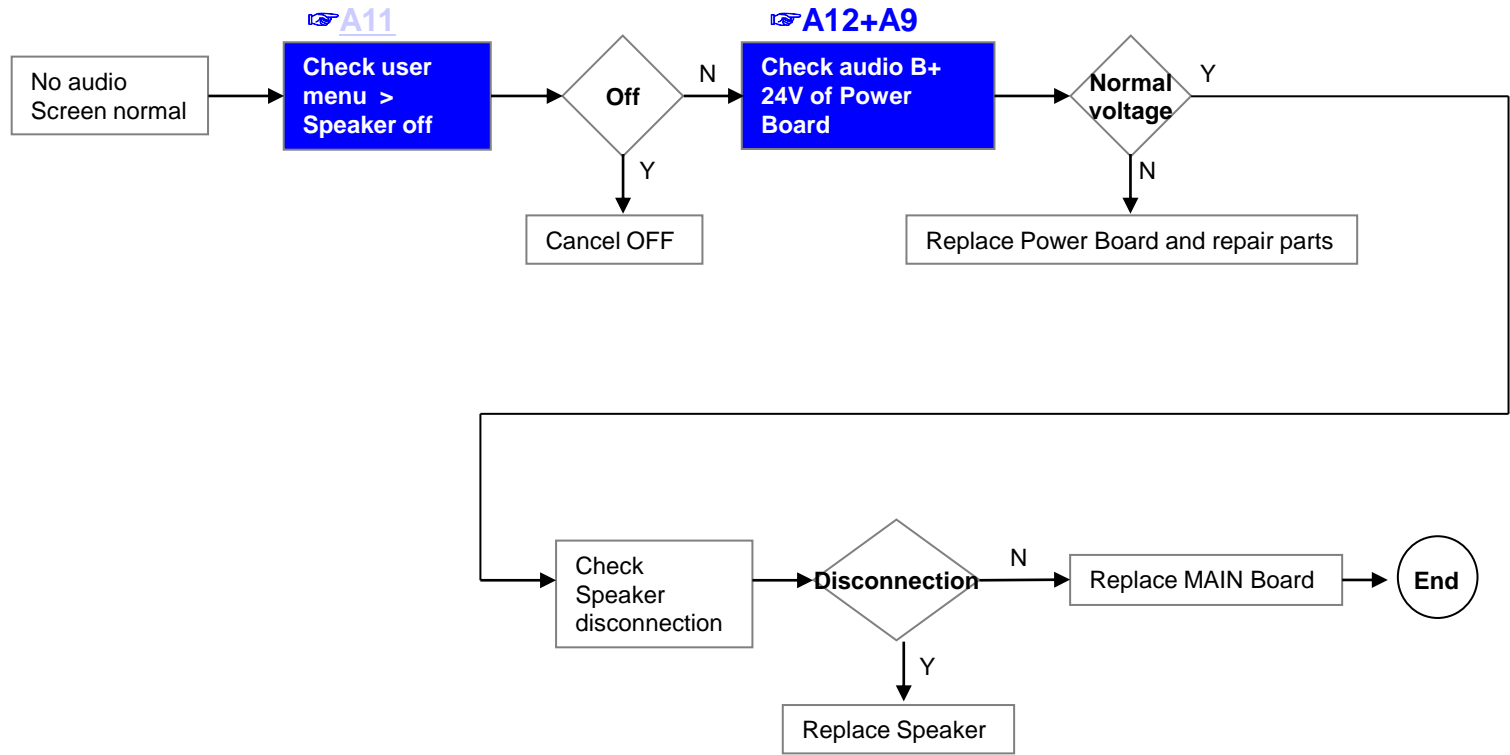


OLED TV	Error symptom	C. Audio error	Established date	
		Wrecked audio/ discontinuation/noise	Revised date	9/16

→ abnormal audio/discontinuation/noise is same after “Check input signal” compared to No audio

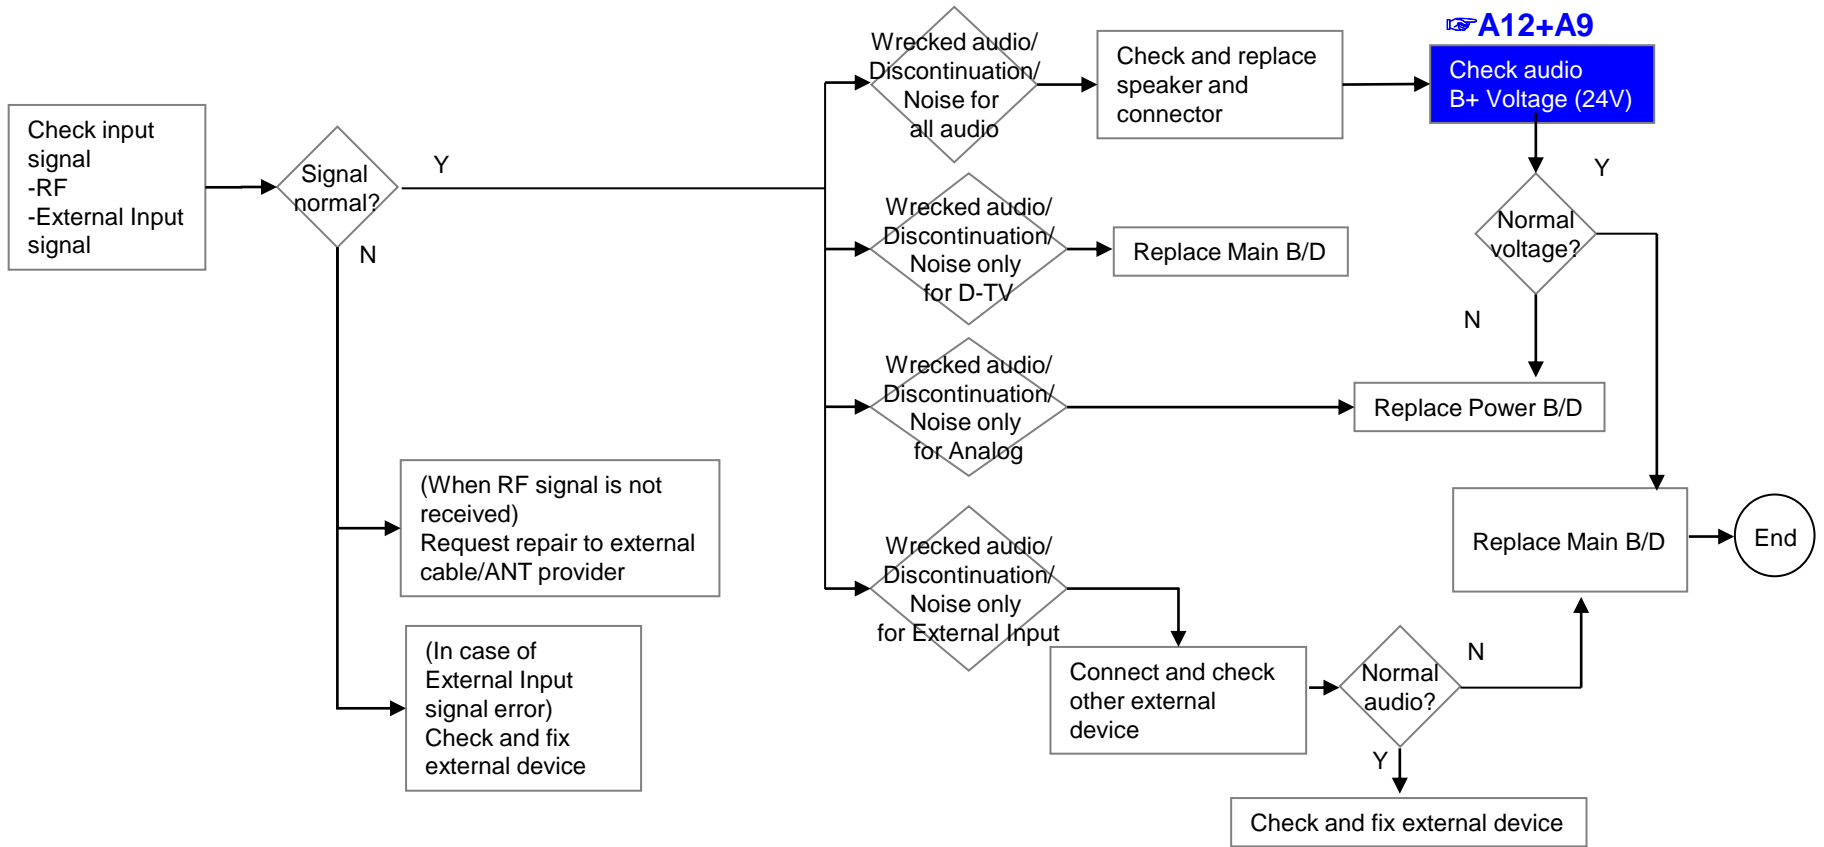


OLED TV	Error symptom	D. Function error	Established date	
		Remote control & Local switch checking	Revised date	10/16

1. Remote control(R/C) operating error

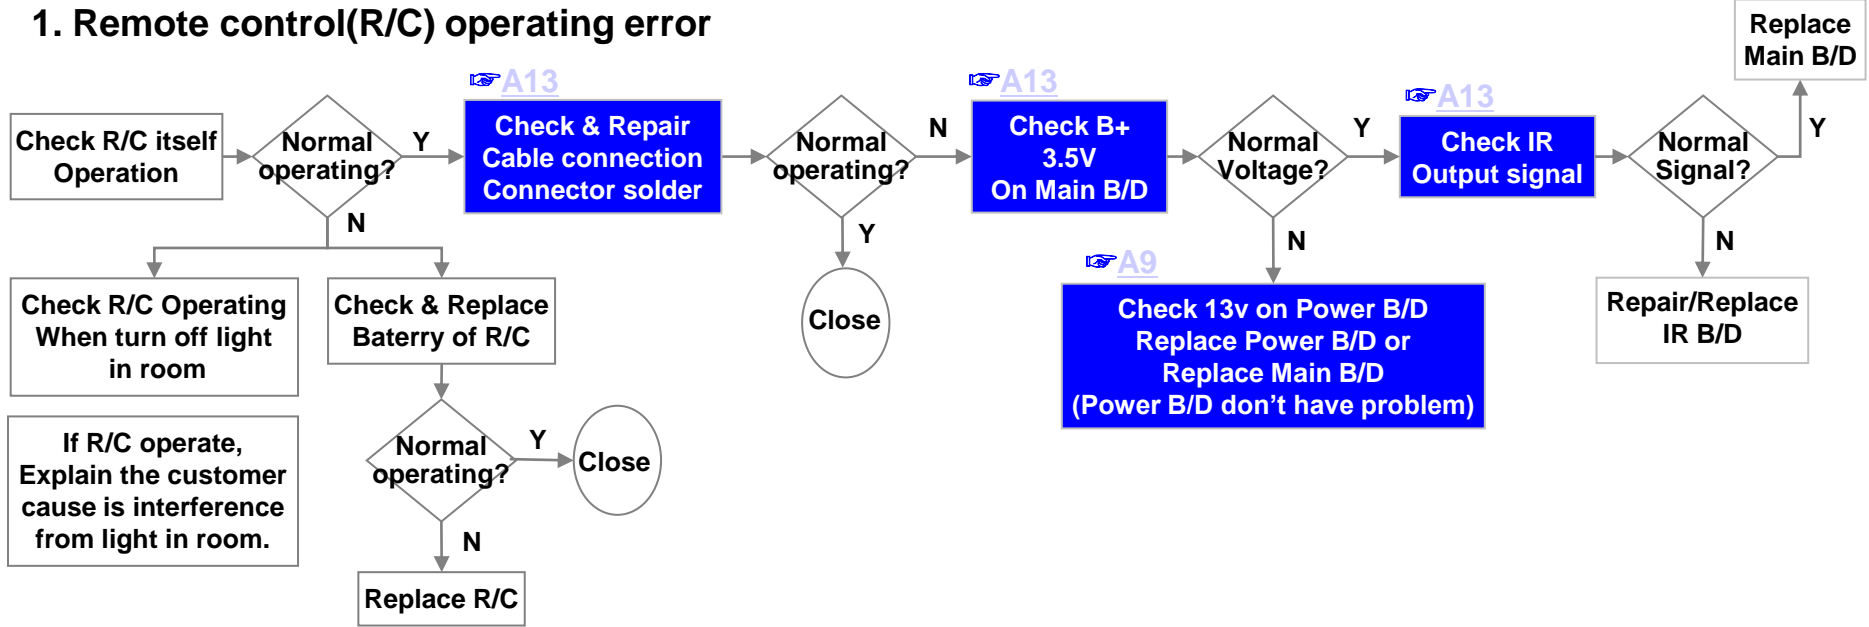


OLED TV	Error symptom	D. Function error	Established date	
		MR15R operating checking	Revised date	11/15

2. MR15R (Magic Remocon) operating error

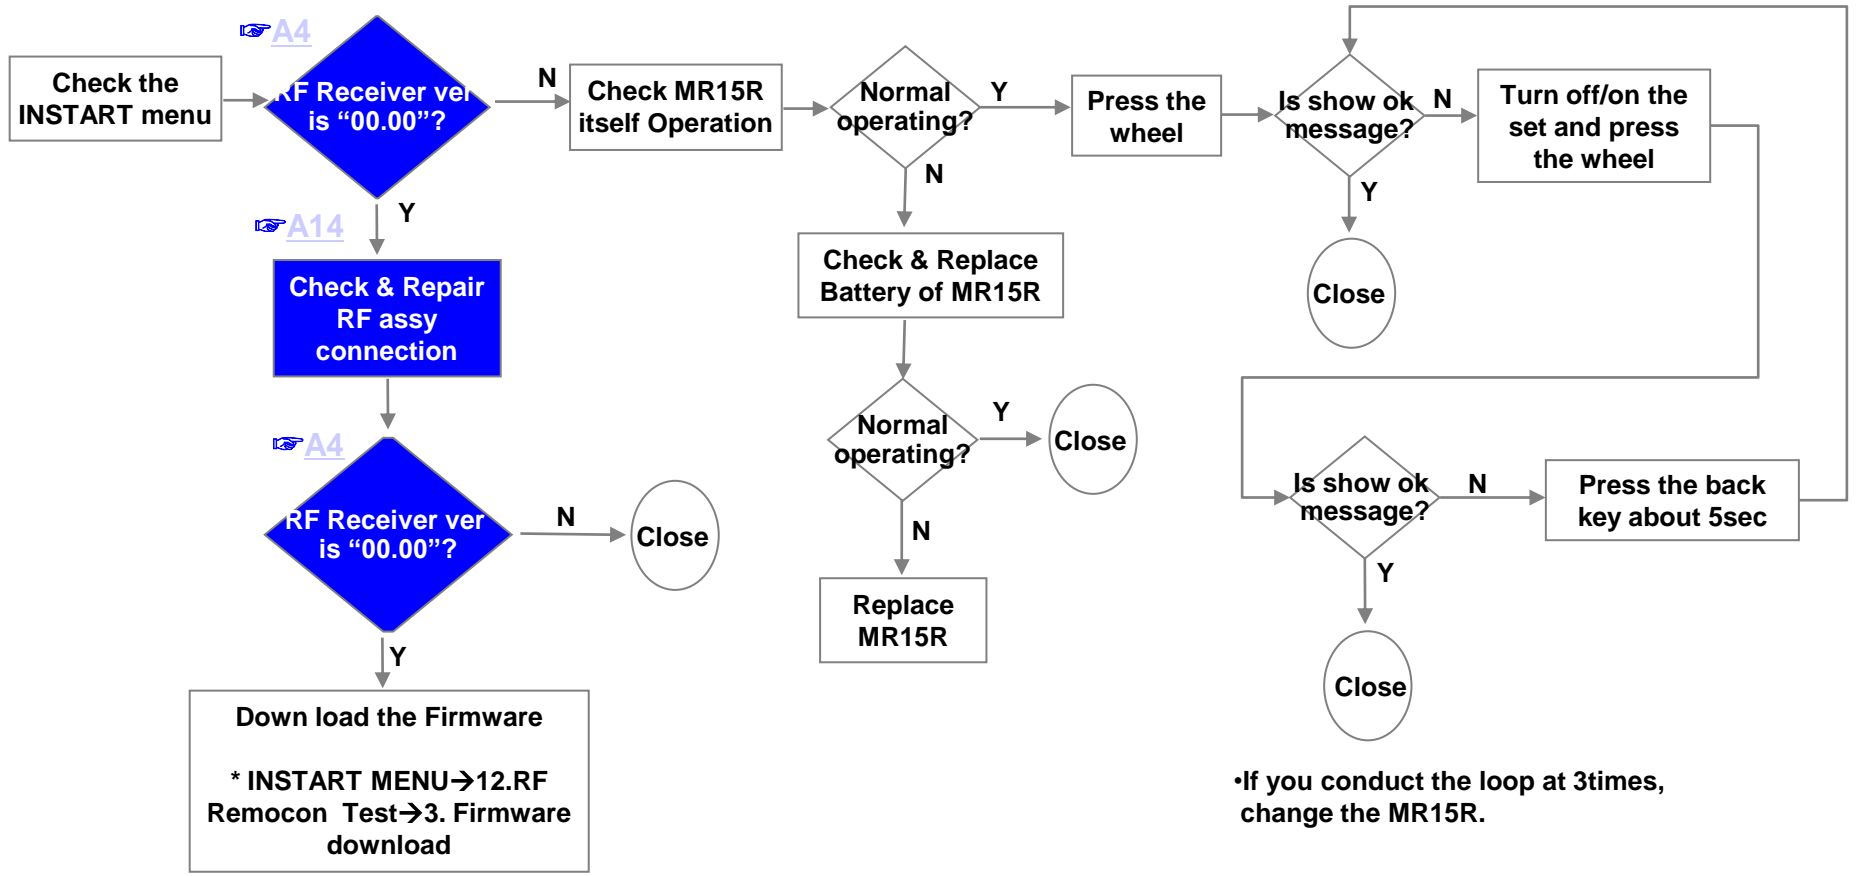


OLED TV	Error symptom	D. Function error	Established date	
		Wifi operating checking	Revised date	12/16


3.Wifi operating error

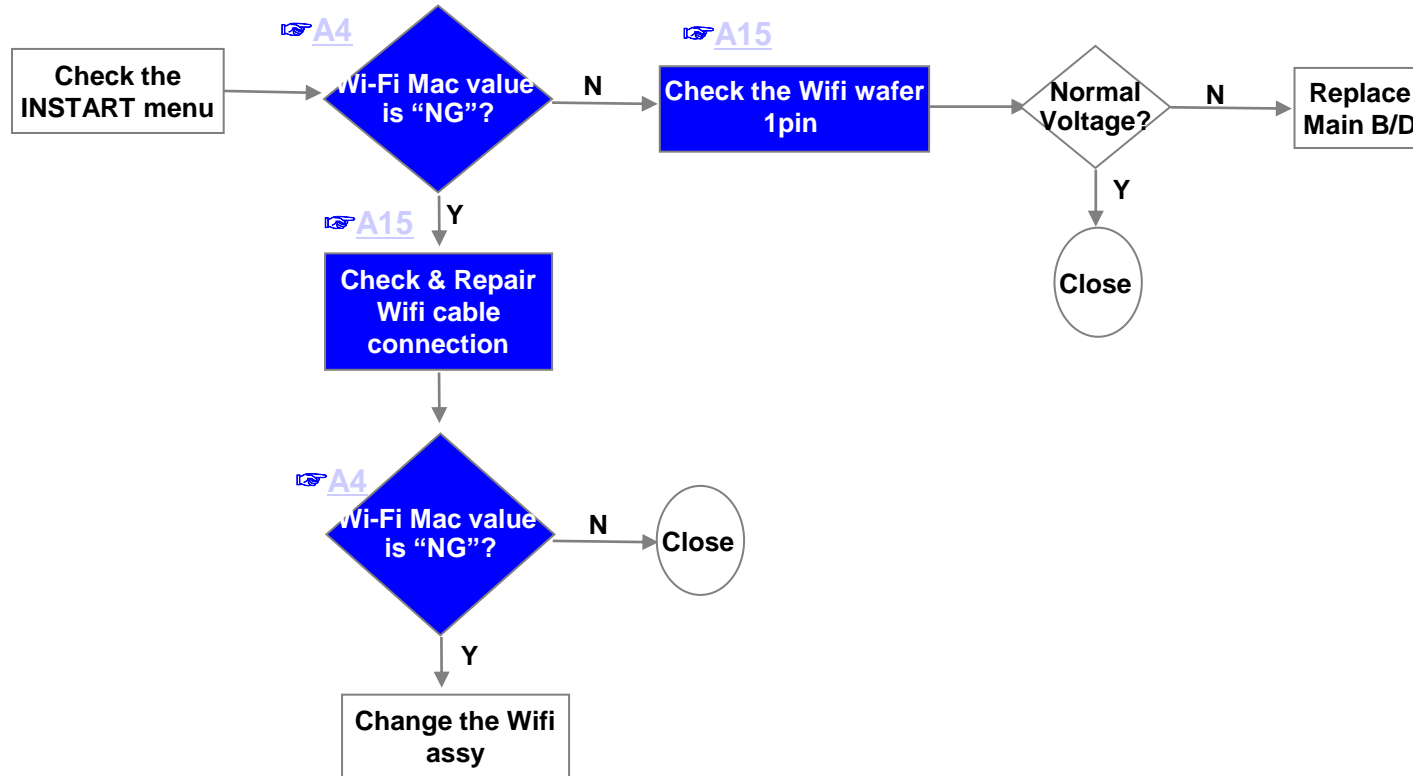


OLED TV	Error symptom	D. Function error	Established date		
		External device recognition error	Revised date		14/16

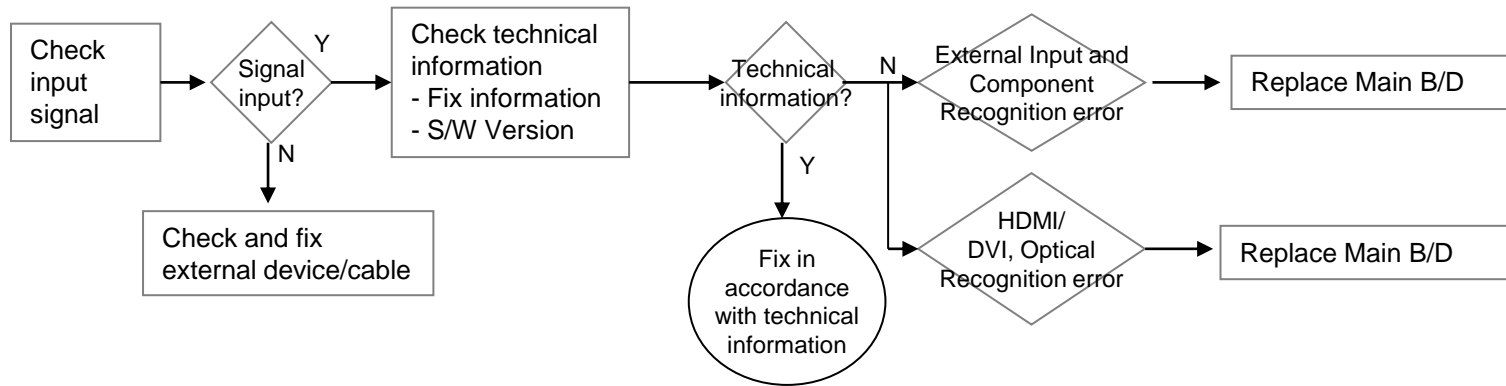

OLED TV	Error symptom	E. Noise	Established date		
		Circuit noise, mechanical noise	Revised date		15/16

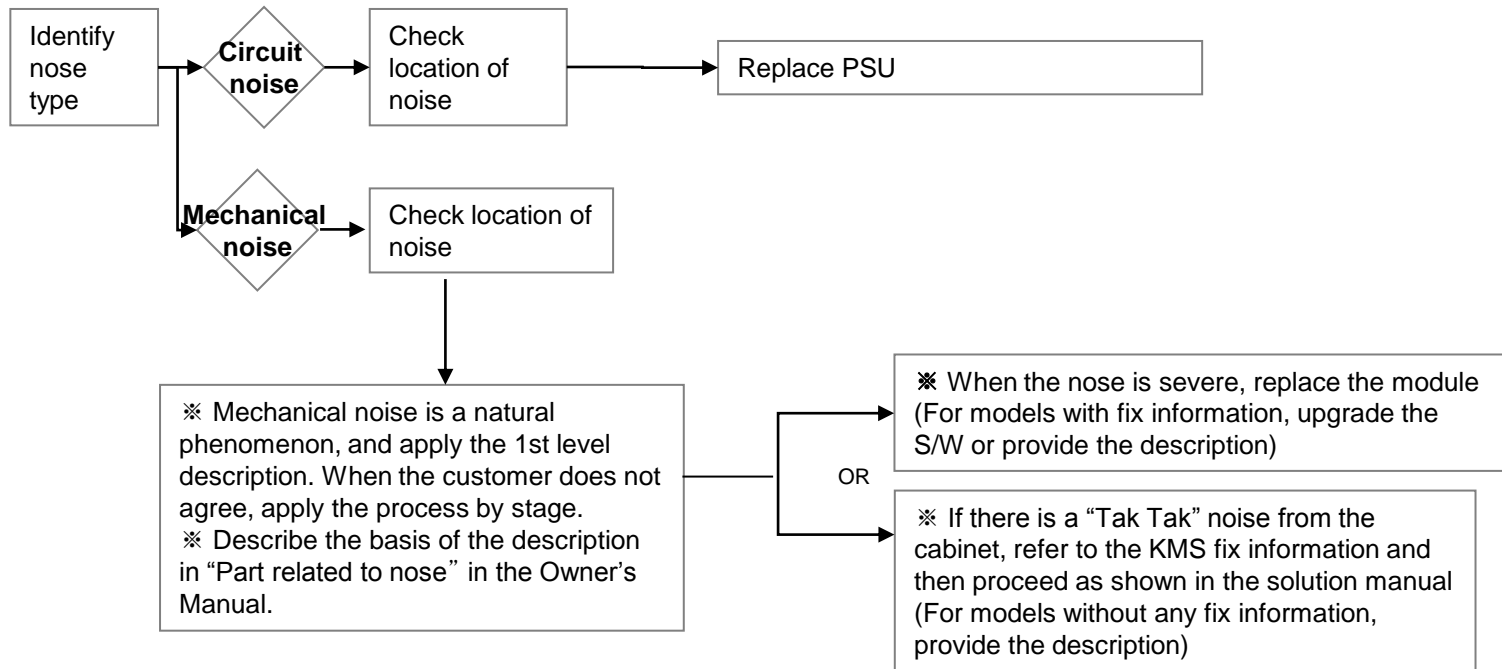

OLED TV	Error symptom	F. Exterior defect	Established date		
		Exterior defect	Revised date		16/16

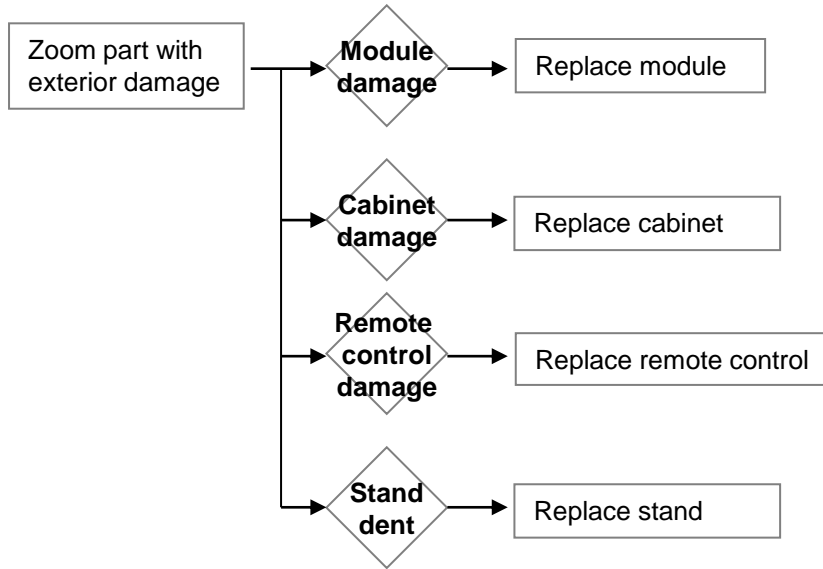

Contents of Standard Repair Process Detail Technical Manual



No.	Error symptom	Content	Page	Remarks
1	A. Video error_ No video/Normal audio	Check Vx1 lock LED light with naked eye	A1	
2		Check White Balance value	A2	
3	A. Video error_ video error /Video lag/stop	TUNER input signal strength checking method	A3	
4		Version checking method	A4	
5		Tuner Checking Part	A5	
6	A. Video error _Vertical/Horizontal bar, residual image, light spot	Connection diagram	A6	
7	A. Video error_ Color error	Check Link Cable (EPI) reconnection condition	A7	
8	<Appendix> Defected Type caused by T-Con/ Inverter/ Module	Exchange Module (1)	A-1/2	
		Exchange Module (2)	A-2/2	

Contents of Standard Repair Process Detail Technical Manual

No.	Error symptom	Content	Page	Remarks
9	B. Power error_ No power	Check front display Logo	A8	
10		Check power input Voltage & ST-BY 3.5V	A9	
11	B. Power error_Off when on, off while viewing	POWER OFF MODE checking method	A10	
12	C. Audio error_ No audio/Normal video	Checking method in menu when there is no audio	A11	
13		Voltage and speaker checking method when there is no audio	A12	
14	D. Function error	Remote control operation checking method	A13	
15		Motion Remote operation checking method	A14	
16		Wifi operation checking method	A15	
17	E. Etc	Tool option changing method	A16	

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	A. Video error_No video/Normal audio	Established date		
	Content	Check Vx1 lock LED light with naked eye	Revised date		A1

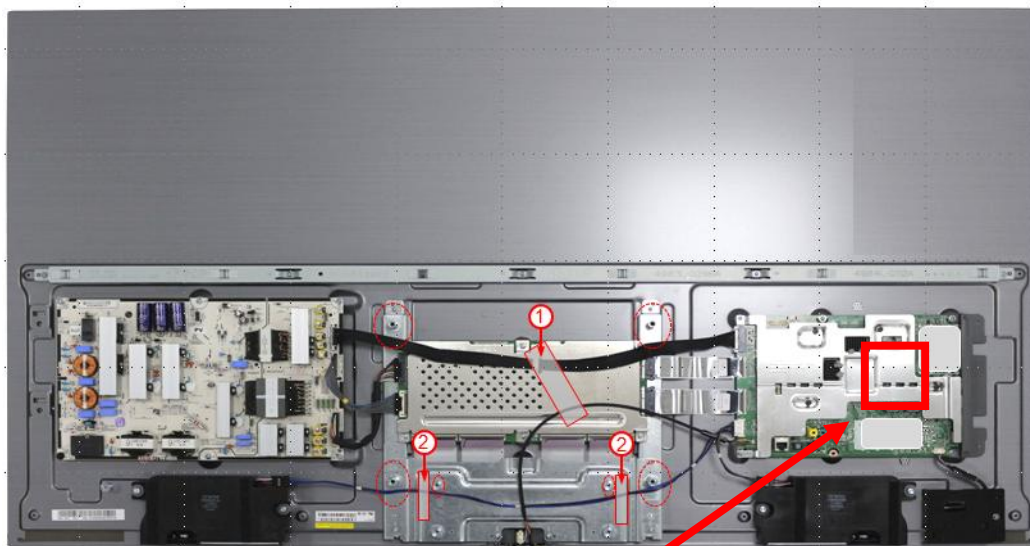
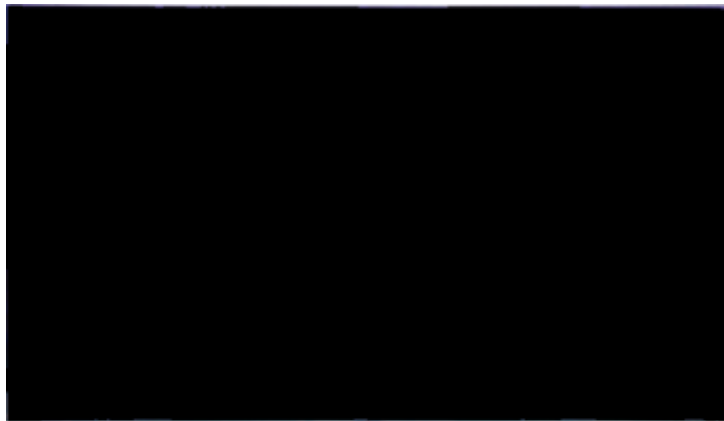


After Remove the Rear Cover, turning on the power and check with the naked eye, Whetehr you can see light from locations.

A1

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	A. Video error_No video/Normal audio	Established date		
	Content	Check White Balance value	Revised date		A2

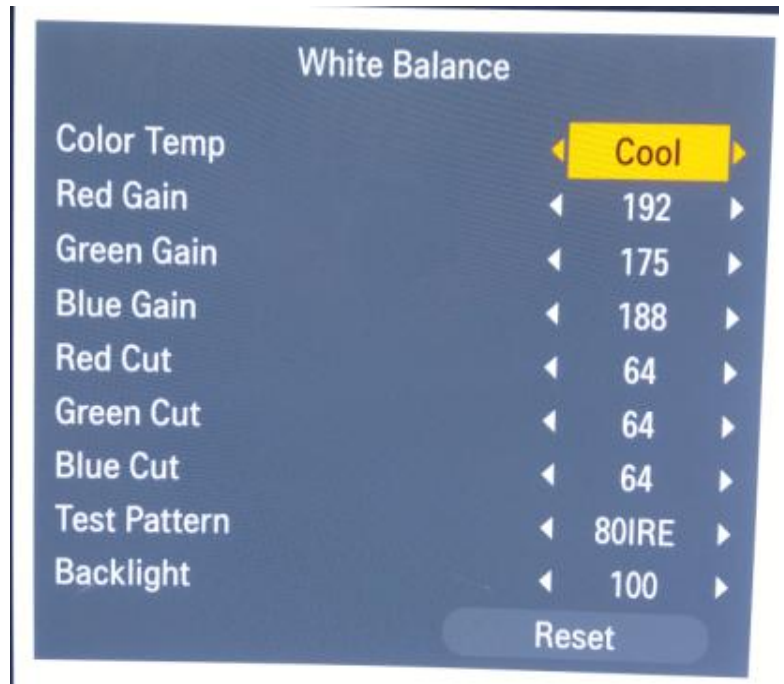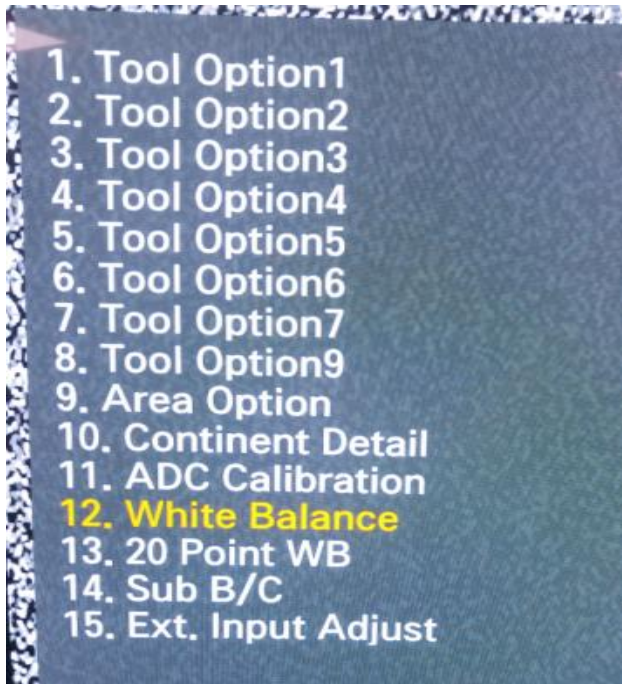

Entry method

1. Press the ADJ button on the remote control for adjustment.
2. Enter into White Balance of item 12.
3. After recording the R, G, B (GAIN, Cut) value of Color Temp (Cool/Medium/Warm), re-enter the value after replacing the MAIN BOARD.


A2

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	TUNER input signal strength checking method	Revised date		A3



All Settings → Channels → Channel Tuning

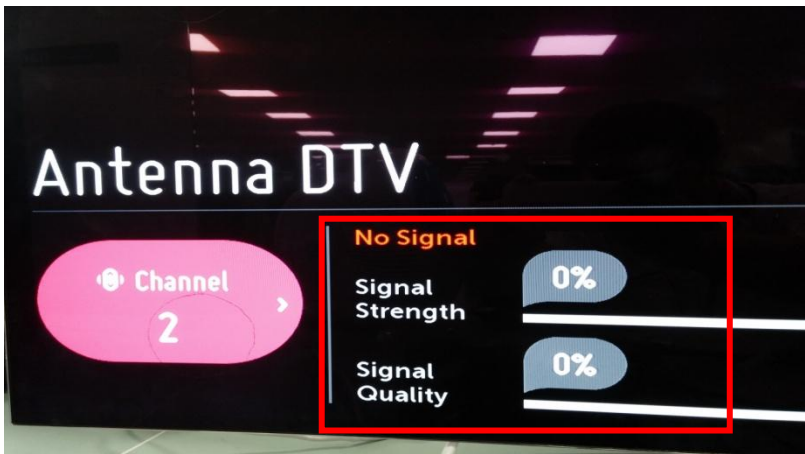

When the signal is strong, use the attenuator (-10dB, -15dB, -20dB etc.)



Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	Version checking method	Revised date		A4

1. Checking method for remote control for adjustment

Version




```

Instart
Model Name : OLED55C6P-U
Serial Number : 512KCCV64619
S/W Version : 02.01.71.01
Micom Version : V3.02.1
Boot Version : 4.02.11/4.02.11
UHD BE Version : OK(40.03.01.00)
Chip Type : LG1312
Wi-Fi Channel : 1
Wi-Fi MAC : E8:F2:E2:73:15:DA
Wi-Fi Speed : USB 2.0
MAC Address : C8:08:E9:6A:FD:15
IP Address : 0.0.0.0
SFU Key : OK
Widevine : LGTV16CLGE000006708
ESN Num. : LGTV20162=21001004419
HDCP1.4 : OK
HDCP2(Miracast/HDMI) : OK/OK
BTCP : 00000000000000000000000000000000
RF Receiver Version : 1.3.4.110
Wi-Fi/Magic Search : OK/OK
Camera Ver. : NULL
Debug Status : RELEASE
SIGN Key : DEVELKEY
Eye Check : OK
Control Key : OK
Access USB Status : 1/-1(T)/-1(C)
UTT : 3
OLED Comp. Count(OffRS/JB) : 0/0
App History Version : 171 (deathvalley)
PQL DB : LGD_OLED_SI2178B_XXXX55
Video : NULL
    
```

Press the IN-START with the remote control for adjustment

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	TUNER checking part	Revised date		A5

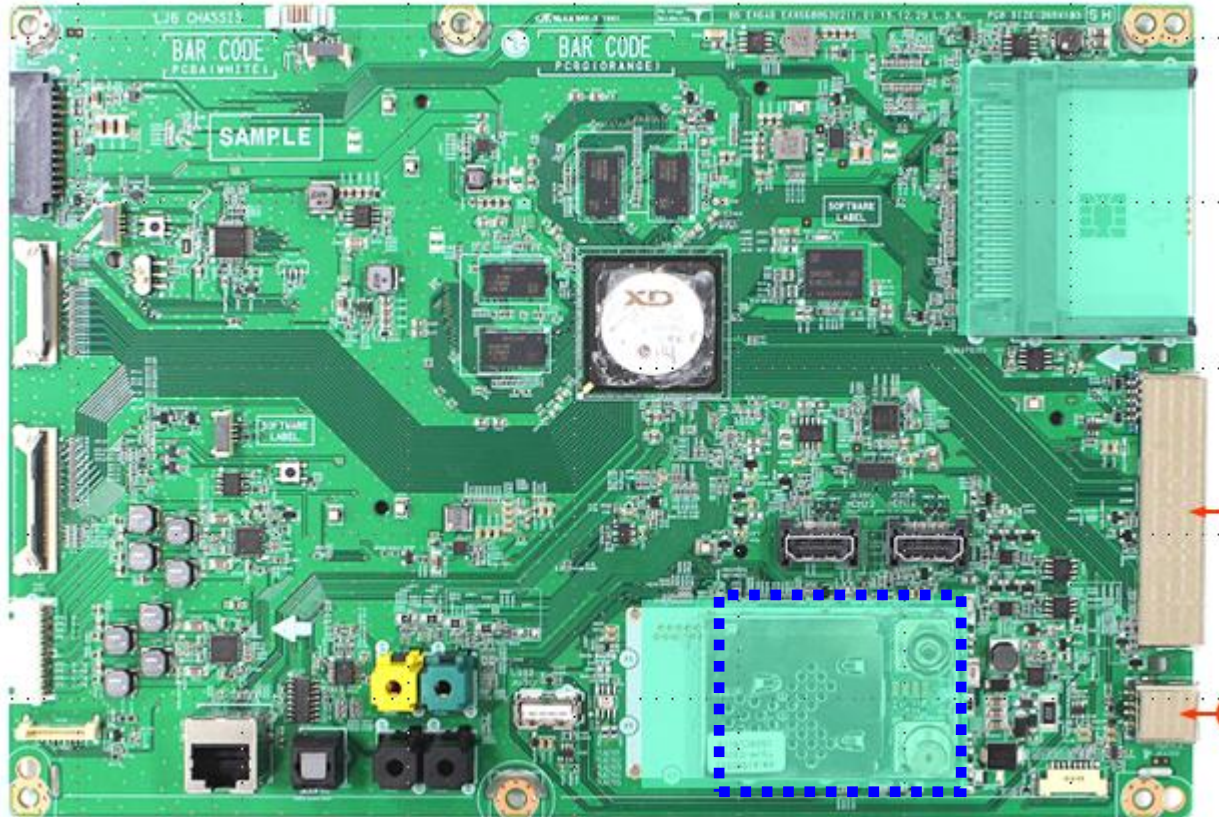


Checking method:

1. Check the signal strength or check whether the screen is normal when the external device is connected.
2. After measuring each voltage from power supply, finally replace the MAIN BOARD.

Standard Repair Process Detail Technical Manual


OLED TV	Error symptom	A. Video error _ Vertical/Horizontal bar, residual image, light spot	Established date		
	Content	Connection diagram	Revised date		A6

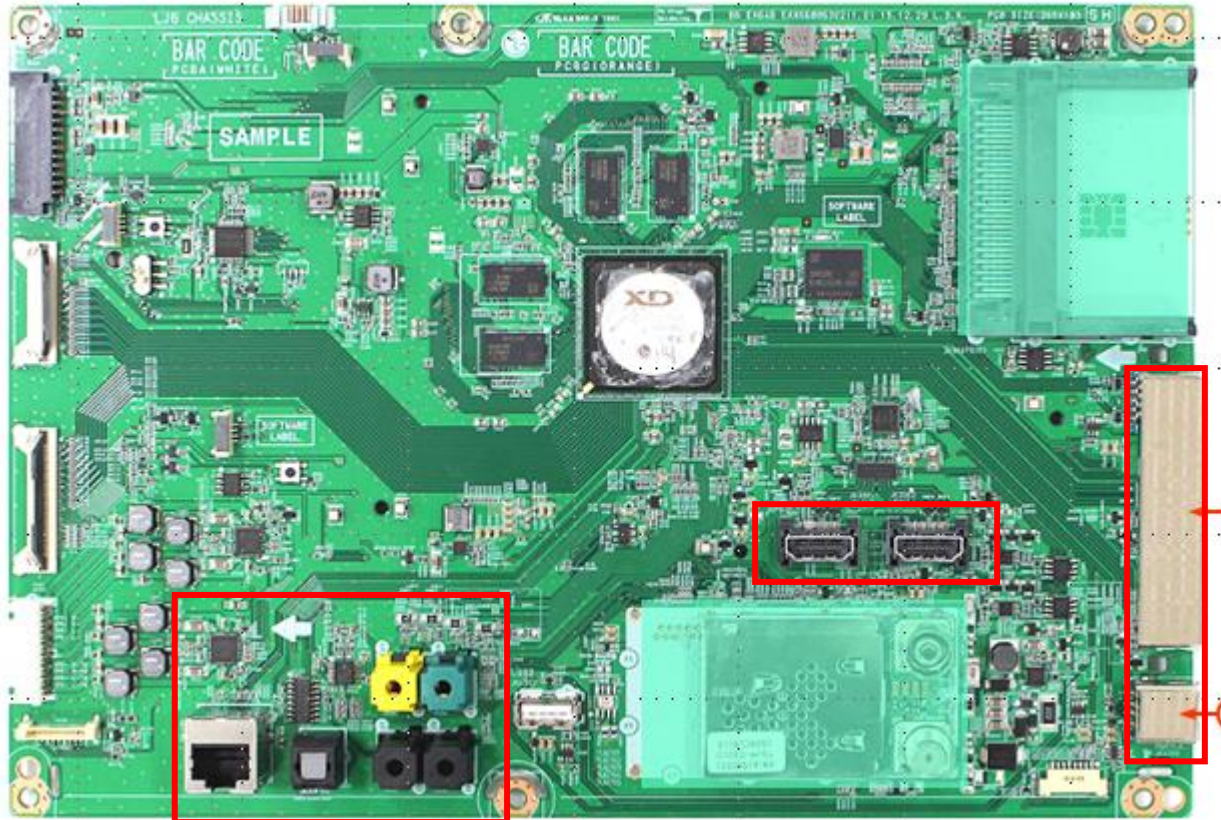

As the part connecting to the external input, check the screen condition by signal

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	A. Video error_Color error	Established date		
	Content	Check Link Cable (EPI) reconnection condition	Revised date		A7

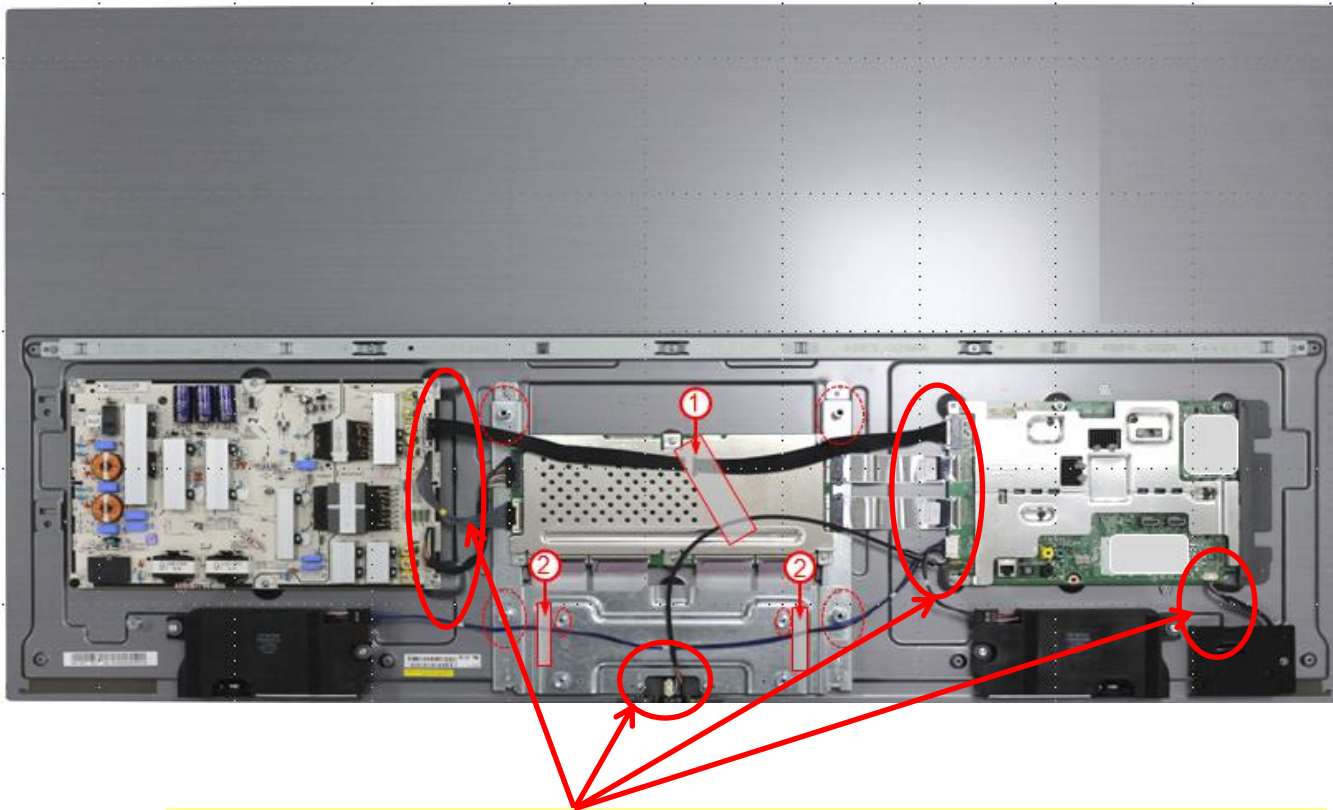

Check the contact condition of the Link Cable, especially dust or mis insertion.

Appendix : Exchange the Module (1)




Vertical abnormal display



Brightness difference



Line Dim

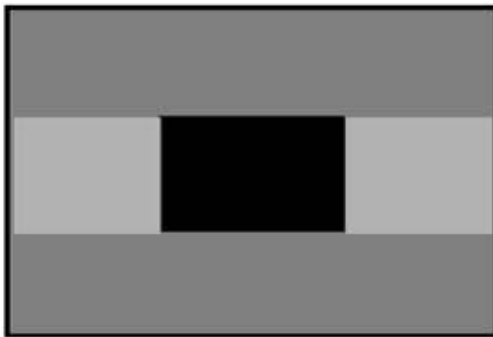

Crosstalk



Press damage



Crosstalk



Burnt

Un-repairable Cases
In this case please exchange the module.

Appendix : Exchange the Module (2)



Angle view Color difference




Brightness dot noise



Half dead




Brightness difference

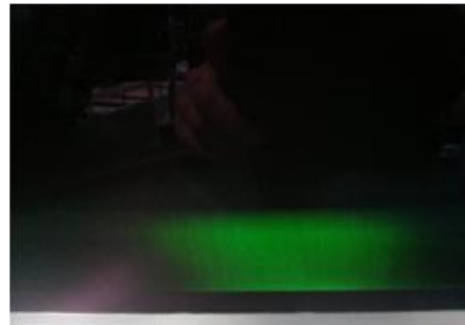

Green Noise on power on/off time



Line Defect


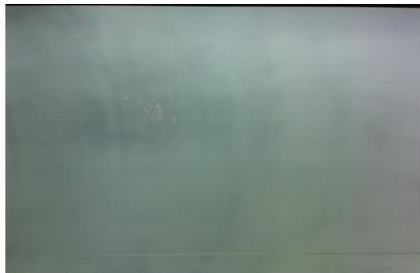


Mura

Un-repairable Cases
In this case please exchange the module.

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	B. Power error _No power	Established date		
	Content	Check front display Logo	Revised date		A8

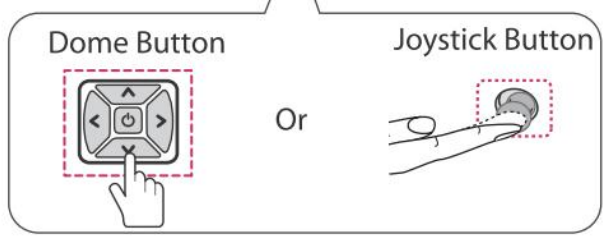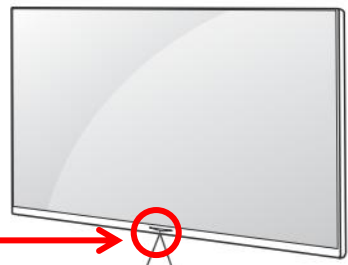

NOTE

- You can set the LG Logo Light or power indicator light to on or off by selecting **GENERAL** in the main menus.

ST-BY condition: On or Off
Power ON condition: Turn Off

Basic Functions

		Power On (Press) Power Off (Press and Hold)
		Volume Control
		Channels Control

NOTE

- When the TV is turned on, place your finger on the power button, press it once for a few seconds, and release it. All running apps will close.

Adjusting the Menu


When the TV is turned on, press button one time. You can adjust the Menu items pressing or moving the buttons.

	Turns the power off.
	Accesses the setting menu.
	Clears on-screen displays and returns to TV viewing.
	Changes the input source.

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	B. Power error _No power	Established date		
	Content	Check power input voltage	Revised date		A9

Check the DC 24V, 13V

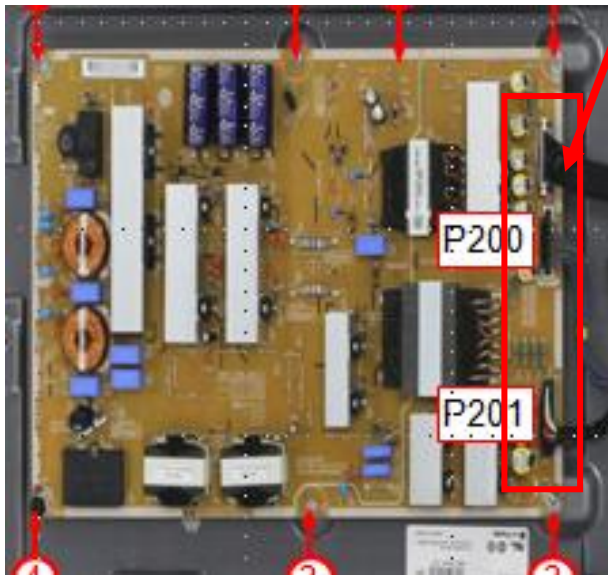


P201			
Type : SMW200-H24S5K Maker : YEON-HO			
Pin No.	Signal	Pin No.	Signal
1	POWER_ON	2	DRV_ON
3	N.C	4	ACD
5	12VM	6	GND
7	12VM	8	12VM
9	GND	10	GND
11	12VM	12	12VM
13	12VM	14	12VM
15	12VM	16	GND
17	GND	18	12VT_ON
19	24VS	20	24VS
21	24VS	22	24VS
23	GND	24	GND

P202	
Type : 20022WS-H15JB Maker : YEON-HO	
Pin No.	Signal
1~7	GND
8 ~ 15	24VD

P203	
Type : 20022WS-H14JB Maker : YEON-HO	
Pin No.	Signal
1~6	GND
7 ~ 12	12VT
13	N.C
14	GND

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	B. Power error _Off when on, off whiling viewing	Established date		
	Content	POWER OFF MODE checking method	Revised date		A10

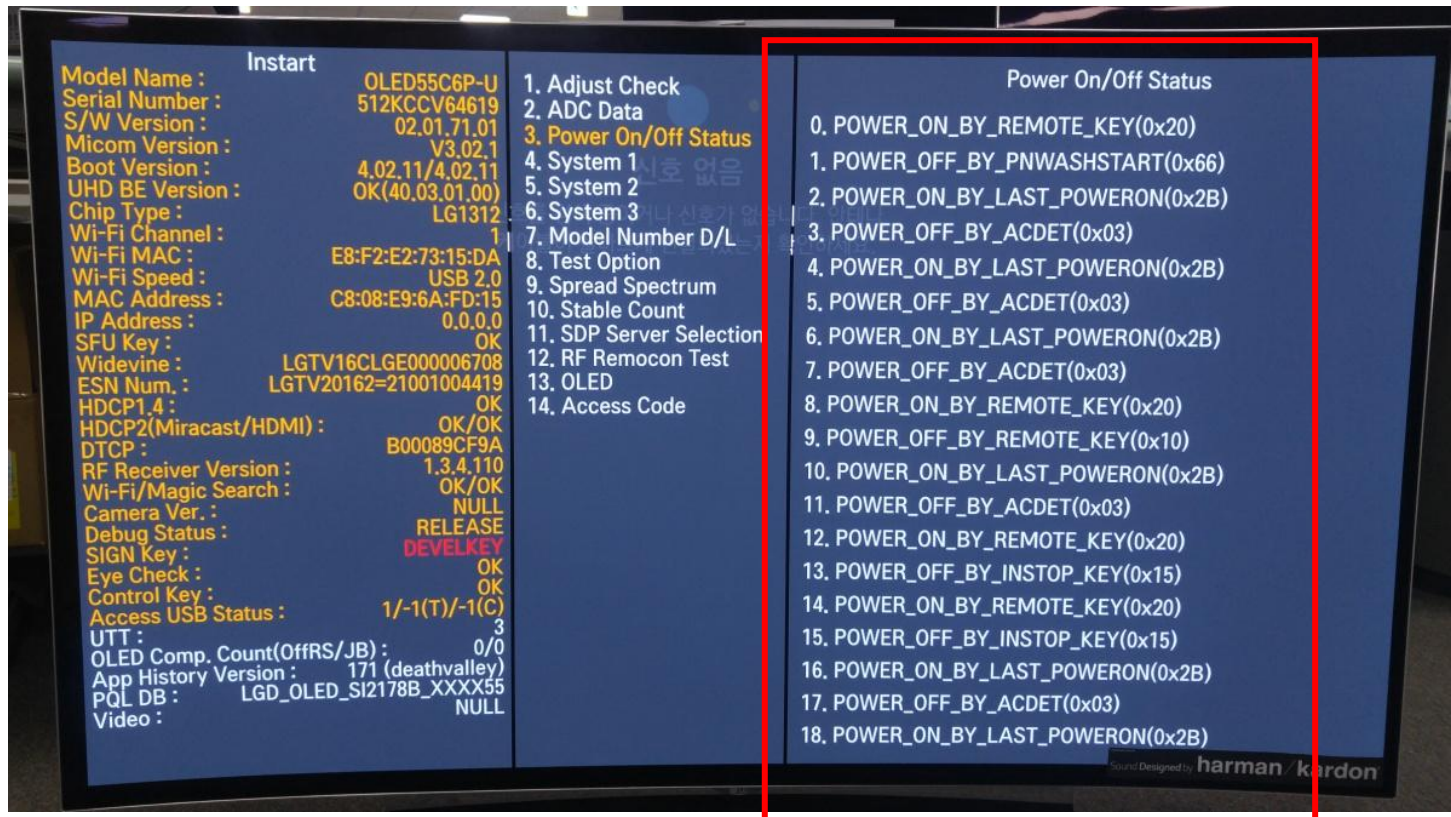

Entry method

1. Press the IN-START button of the remote control for adjustment
2. Check the entry into adjustment item 3(power On/Off Status)

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	C. Audio error_No audio/Normal video	Established date		
	Content	Checking method in menu when there is no audio	Revised date		A11




Checking method

1. Press the Setting button on the remote control
2. Select the Sound function of the Menu
3. Select the Sound Out
4. Select TV Speaker

A11

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	C. Audio error_No audio/Normal video	Established date		
	Content	Voltage and speaker checking method when there is no audio	Revised date		A12

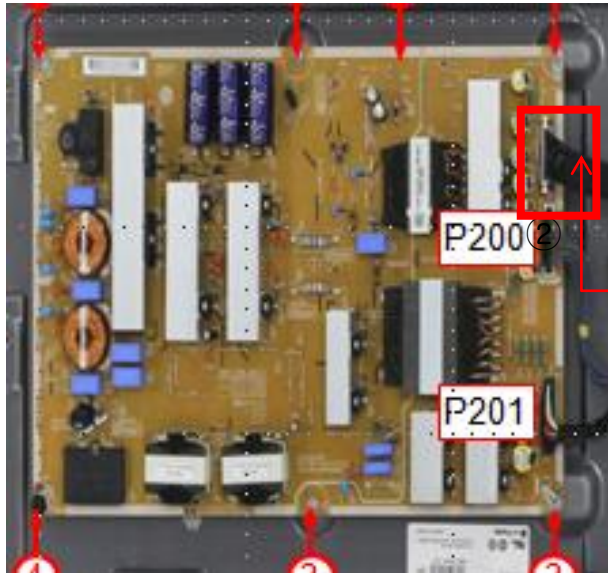

P201			
Type : SMW200-H24S5K			
Maker : YEON-HO			
Pin No.	Signal	Pin No.	Signal
1	POWER_ON	2	DRV_ON
3	N.C	4	ACD
5	12VM	6	GND
7	12VM	8	12VM
9	GND	10	GND
11	12VM	12	12VM
13	12VM	14	12VM
15	12VM	16	GND
17	GND	18	12VT_ON
19	24VS	20	24VS
21	24VS	22	24VS
23	GND	24	GND



1	SPK_R-_FT	2	SPK_R+_FT
3	SPK_L-_FT	4	SPK_L+_FT
5	SPK_R-_TW	6	SPK_R+_TW
7	SPK_L-_TW	8	SPK_L+_TW

Checking order when there is no audio


① Check the contact condition of or 24V connector of Main Board

② Measure the 24V input voltage supplied from Power Board
(If there is no input voltage, remove and check the connector)


③ Connect the tester RX1 to the speaker terminal and if you hear the Chik Chik sound when you touch the GND and output terminal, the speaker is normal.

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	D. Function error	Established date		
	Content	Remote control operation checking method	Revised date		A13

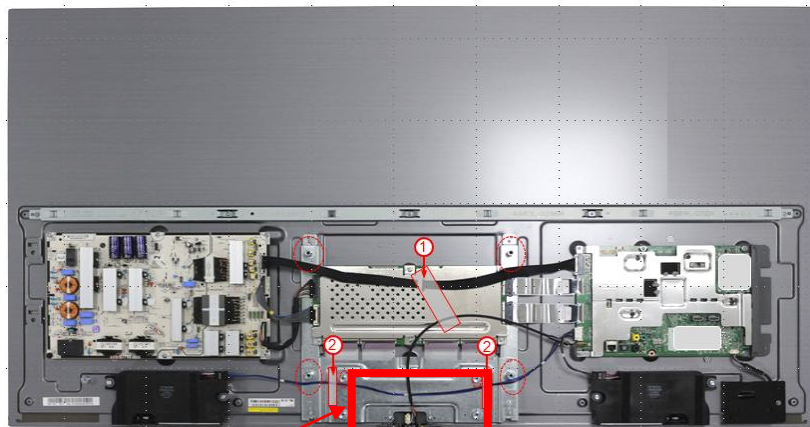

①

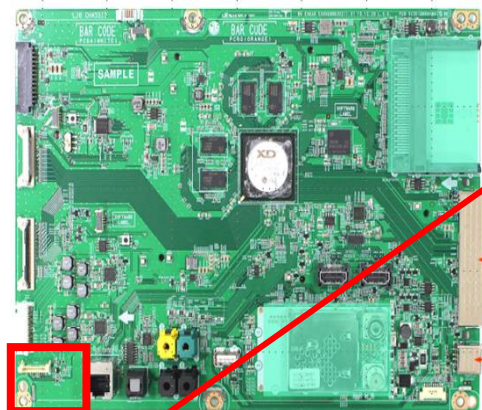

②

③


P4001	
1	GND
2	KEY1
3	KEY2
4	3.5V_ST
5	GND
6	LOGO_LIGHT
7	IR
8	GND
9	EYE_SCL
10	EYE_SDA

Checking order

- 1, 2. Check IR cable condition between IR & Main board.
3. Check the st-by 3.5V on the terminal 4


Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	D. Function error	Established date		
	Content	Motion Remote operation checking method	Revised date		A14

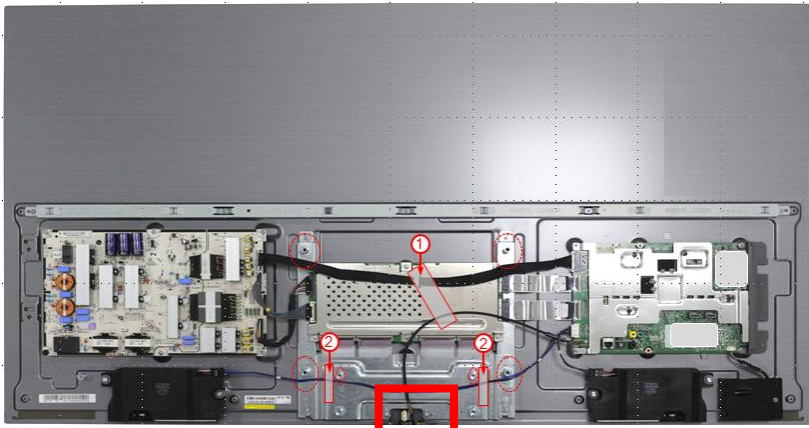

①

②

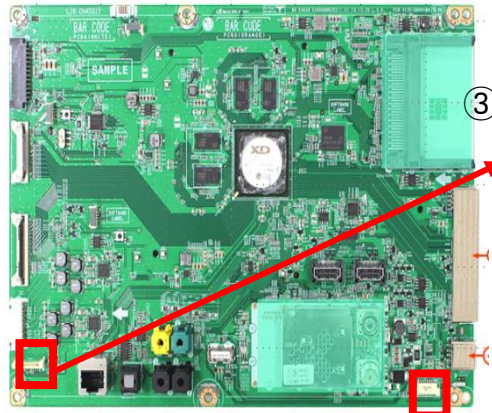

③

③

P4102	
1	GND
2	KEY1
3	KEY2
4	3.5V_ST
5	GND
6	LED_R
7	IR
8	GND
9	EYE_SCL
10	EYE_SDA

P4101	
1	GND
2	BT_RESET
3	3D_SYNC_RF
4	WOL/WIFI_POWER_ON
5	GND
6	WIFI_DP
7	WIFI_DM
8	3.5V_WIFI



Checking order

1. Check IR cable condition between IR & Main board.
2. Check WIFI Combo cable condition between WIFI Combo Assy & Main board.
3. Check the st-by 3.5V P4102 on the terminal 4
4. Check the 3.5V_WIFI P4101 on the terminal 8

A14

Standard Repair Process Detail Technical Manual

OLED TV	Error symptom	D. Function error	Established date		
	Content	Wifi operation checking method	Revised date		A15

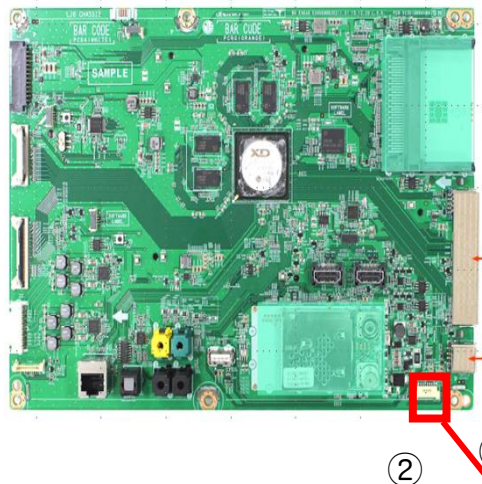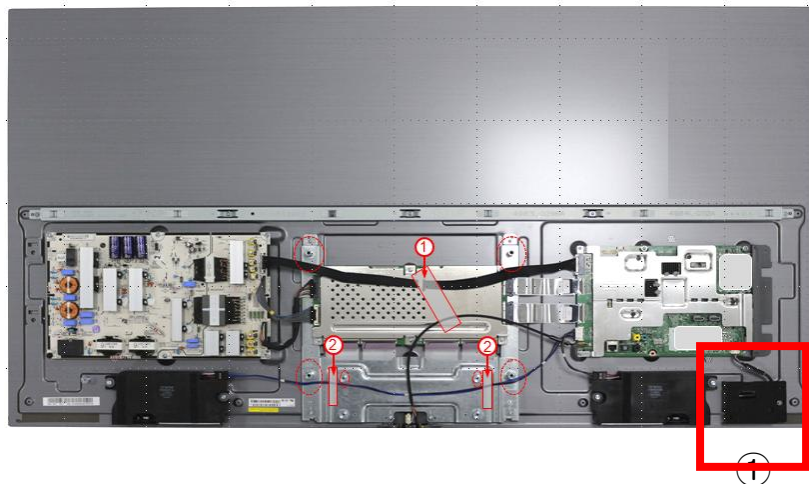

P4000	
1	GND
2	M_RFModule_RESET
3	NOT USE
4	WOL/WIFI_POWER_ON
5	GND
6	WIFI_DP
7	WIFI_DM
8	3.5V_WIFI

Checking order

- 1, 2. Check Wifi cable condition between Wifi assy & Main board.
3. Check the 3.3V on the terminal 8.