


# Special Documentation

## Proline Promass 300

### Functional Safety Manual

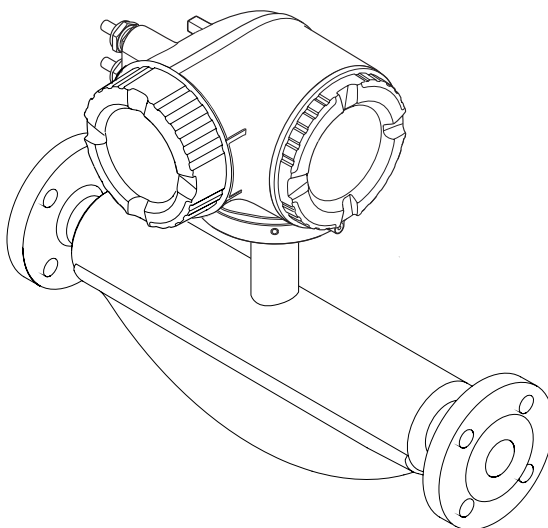

---

# Table of contents

<b>1</b>	<b>Manufacturer's Declaration ....</b>	<b>4</b>
1.1	Safety-related characteristic values .....	5
<b>2</b>	<b>Certificate .....</b>	<b>8</b>
<b>3</b>	<b>About this document .....</b>	<b>9</b>
3.1	Document function .....	9
3.2	Using this document .....	9
3.3	Symbols .....	9
3.4	Supplementary device documentation ..	10
<b>4</b>	<b>Permitted device types .....</b>	<b>13</b>
4.1	SIL label on the nameplate .....	15
<b>5</b>	<b>Safety function .....</b>	<b>15</b>
5.1	Definition of the safety function .....	15
5.2	Restrictions for use in safety-related applications .....	17
<b>6</b>	<b>Use in protective systems .....</b>	<b>20</b>
6.1	Device behavior during operation .....	20
6.2	Parameter configuration for safety-related applications .....	21
6.3	Proof testing .....	31
<b>7</b>	<b>Life cycle .....</b>	<b>44</b>
7.1	Requirements for the personnel .....	44
7.2	Installation .....	45
7.3	Commissioning .....	45
7.4	Operation .....	45
7.5	Maintenance .....	45
7.6	Repair .....	45
7.7	Modification .....	46
7.8	Decommissioning .....	46
<b>8</b>	<b>Appendix .....</b>	<b>47</b>
8.1	Structure of the measuring system .....	47
8.2	Verification or calibration .....	48
8.3	Notes on the redundant use of multiple sensors .....	48
8.4	Version history .....	49

# 1 Manufacturer's Declaration

Products

Solutions

Services

HE\_61508\_Promass\_300\_500\_de\_en\_V2018.docx

## Herstellererklärung - Manufacturer Declaration Funktionale Sicherheit / Functional Safety (IEC 61508)

**Endress+Hauser Flowtec AG, Kägenstrasse 7, 4153 Reinach**

erklärt als Hersteller, dass die Durchflussmessgeräte aus der Serie  
declares as a manufacturer, that the flow meters of the product line

Proline Promass 300 ( 8a3b )  
Proline Promass 500 ( 8a5b )  
Proline Cubemass 300 ( 8C3b )  
Proline Cubemass 500 ( 8C5b )

a = A, E, F, H, I, O, P, Q, S, X  
b = B, C

in sicherheitsrelevanten Anwendungen SIL 2 (HFT=0) bzw. SIL 3 (HFT=1) nach IEC 61508:2010  
eingesetzt werden können.  
are suitable for use in safety relevant applications up to SIL 2 (HFT=0) resp. SIL 3 (HFT=1)  
acc. IEC 61508:2010.

Für einen Einsatz in sicherheitsrelevanten Anwendungen entsprechend IEC 61508 sind die Angaben  
des Handbuchs zur Funktionalen Sicherheit zu beachten. Die Installation muß konform zu diesem  
Handbuch ausgeführt werden und die Sicherheitshinweise sind zu beachten.  
For safety relevant applications according to IEC 61508, we refer to our hand-book named functional  
safety. The installation has to be conform to our descriptions in our handbook in consideration of our  
safety instructions.

Die Kenngrößen für die Verwendung des Produktes in sicherheitsrelevanten Anwendungen können  
dem Handbuch zur Funktionalen Sicherheit entnommen werden.  
The characteristics for use of these products in safety relevant applications can be found in the  
functional safety manual.

Reinach, 29. Juni 2018

Endress+Hauser Flowtec AG

ppa.   
Dr.-Ing. Christian Jarms  
Head of Division Quality Management

i.V.   
Dipl.-Ing. Michael Karolzak  
Senior Expert Functional Safety

**Endress+Hauser**   
People for Process Automation

## 1.1 Safety-related characteristic values

General	
Device designation and permitted versions	8A3B (Promass A 300) 8A3C (Promass A 300) 8E3B (Promass E 300) 8F3B (Promass F 300) 8H3B (Promass H 300) 8I3B (Promass I 300) 8O3B (Promass O 300) 8P3B (Promass P 300) 8Q3B (Promass Q 300) 8S3B (Promass S 300) 8X3B (Promass X 300)
	Order code for "Output; input 1": <ul style="list-style-type: none"> <li>■ Option BA "4-20mA HART"</li> <li>■ Option BB "4-20mA + Wireless HART"</li> <li>■ Option CA "4-20mA HART Ex-i passive"</li> <li>■ Option CB "4-20mA Ex-i + Wireless HART"</li> <li>■ Option CC "4-20mA HART Ex-i active"</li> </ul> Order code for "Output; input 2": All options  Order code for "Output; input 3": All options  Order code for "Additional approval": Option LA "SIL"
Safety-related output signal	4 to 20 mA (output; input 1)
Failure current	$\leq 3.6 \text{ mA}$ or $\geq 21 \text{ mA}$
Assessed measured variable/function	Monitoring of mass flow, volume flow or density
Safety function(s)	Min., Max., Range
Device type according to IEC 61508-2	<input type="checkbox"/> Type A <input checked="" type="checkbox"/> Type B
Mode	<input checked="" type="checkbox"/> Low Demand Mode <input checked="" type="checkbox"/> High Demand Mode <input type="checkbox"/> Continuous Mode <sup>1)</sup>
Valid hardware version (main electronics)	From delivery date October 1, 2017
Valid firmware version	01.01.zz and higher (HART; from delivery date October 1, 2017)
Safety manual	SD01727D
Type of assessment (only 1 version can be selected)	<input checked="" type="checkbox"/> Complete HW/SW assessment in the context of development including FMEDA and change process according to IEC 61508-2, 3  <input type="checkbox"/> Assessment of evidence for proven-in-use HW/SW including FMEDA and change process according to IEC 61508-2, 3  <input type="checkbox"/> Analysis of HW/SW field data for evidence of "prior use" according to IEC 61511

	<input type="checkbox"/> Assessment by FMEDA according to IEC 61508-2 for devices without software
Assessment by (including report no. + FMEDA data source)	TÜV Rheinland Industrie Service GmbH – Certificate No. 968/FSP 1407.00/17
Test documents	Development documents, test reports, data sheets

1) No continuous operation as per IEC 61508: 2011 (section 3.5.16)

SIL integrity			
Systematic safety integrity		<input type="checkbox"/> SIL 2 capability	<input checked="" type="checkbox"/> SIL 3 capability
Hardware safety integrity	Single-channel service (HFT = 0)	<input checked="" type="checkbox"/> SIL 2 capability	<input type="checkbox"/> SIL 3 capability
	Multi-channel service (HFT ≥ 1)	<input type="checkbox"/> SIL 2 capability	<input checked="" type="checkbox"/> SIL 3 capability

FMEDA				
Safety function(s)	Min., Max., Range			
Device model	A1		A2	
	Option BA, BB	Option CA, CB	Option BA, BB	Option CA, CB, CC
$\lambda_{DU}^{1)}$	121 FIT	117 FIT	139 FIT	135 FIT
$\lambda_{DD}$	1366 FIT	1346 FIT	2058 FIT	2038 FIT
$\lambda_{SU}$	871 FIT	1067 FIT	1086 FIT	1283 FIT
$\lambda_{SD}$	1308 FIT	1295 FIT	2092 FIT	2078 FIT
SFF - Safe Failure Fraction	97 %		97 %	
PPD <sub>avg</sub> for T <sub>1</sub> = 1 year <sup>2)</sup> (single-channel architecture)	5.3 · 10 <sup>-4</sup>	5.1 · 10 <sup>-4</sup>	6.1 · 10 <sup>-4</sup>	5.9 · 10 <sup>-4</sup>
PPD <sub>avg</sub> for T <sub>1</sub> = 4 years (single-channel architecture)	2.1 · 10 <sup>-3</sup>	2.0 · 10 <sup>-3</sup>	2.4 · 10 <sup>-3</sup>	2.3 · 10 <sup>-3</sup>
PFH	6.1 · 10 <sup>-8</sup>	5.8 · 10 <sup>-8</sup>	6.9 · 10 <sup>-8</sup>	6.7 · 10 <sup>-8</sup>
PTC <sup>3)</sup>	Up to 99 %		Up to 99 %	
MTBF <sub>tot</sub> <sup>4)</sup>	66 years	55 years	54 years	47 years
Diagnostic test interval <sup>5)</sup>	30 min		30 min	
Fault response time <sup>6)</sup>	30 s		30 s	
Process safety time <sup>7)</sup>	50 h		50 h	

Recommended test interval T <sub>1</sub>	4 years		3 years	
MTTF <sub>d</sub> <sup>8)</sup>	77 years	78 years	51 years	52 years

- 1) FIT = Failure In Time, number of failures per 10<sup>9</sup> h
- 2) Valid for averaged ambient temperatures up to 40 °C (104 °F) in accordance with general standard for devices with SIL capability.
- 3) PTC = Proof Test Coverage (diagnostic coverage achieved by device failure detection during manual proof testing)
- 4) This value takes into account all failure types of the electronic components as per Siemens SN29500
- 5) All diagnostic functions are carried out at least once during this time.
- 6) Maximum time between fault detection and fault response.
- 7) The process safety time amounts to the diagnostic test interval \* 100 (calculation as per IEC 61508).
- 8) MTTF<sub>d</sub> as per ISO 13849/IEC 62061 also includes soft errors (sporadic bit errors in data memories).

<b>Note</b>
The measuring device has been developed for use in "Low Demand" and "High Demand" mode.
<b>Explanation</b>
<input checked="" type="checkbox"/> Our in-house quality management system saves information on safety-related systematic errors that will become known in the future.

# 2 Certificate

## Certificate



Product Safety  
Functional  
Safety

www.tuv.com  
ID 0600000000

**Nr./No.: 968/FSP 1407.00/17**

**Prüfgegenstand  
Product tested**

Messgeräte für die sichere Messung des  
Massedurchflusses einer Flüssigkeit  
Meters for the safe measurement of  
mass flow of a liquid

**Zertifikats-  
Inhaber  
Certificate  
holder**

Endress + Hauser Flowtec AG  
Klagenfurt, 7  
4153 Reineck BL 1  
Switzerland

**Typbezeichnung  
Type designation**

Proline Promass 300,  
Proline Promass 500,  
Proline Cubemass 300,  
Proline Cubemass 500

**Prüfgrundlagen  
Codes and standards**

IEC 61508 Parts 1-7:2010 IEC 61326-3-2:2008  
IEC 61010-1:2010 + Corr.1:2011 +  
Corr.2:2013

**Bestimmungsgemäße  
Verwendung  
Intended application**

Die Messgeräte erfüllen die Anforderungen der Prüfgrundlagen (HW Sicherheitsintegrität SIL 2 und systematische Sicherheitsintegrität SIL 3 nach IEC 61508) für die Sicherheitsfunktion Messung von Massedurchflusses am Stromausgang 1 (4-20mA). Sie können in Anwendungen bis SIL 2 (HFT=0) bzw. SIL 3 (HFT=1) eingesetzt werden. In der Betriebsart mit hoher Anforderungsrate und in einer HFT=0 Struktur ist die sichere Verwendung der Geräte auf eine Anforderungsrate der Sicherheitsfunktion von  $\leq 1/50$  h beschränkt.

The measurement devices comply with the requirements of the relevant standards (HW Safety Integrity SIL 2 and Systematic Safety Integrity SIL 3 acc. to IEC 61508) for the safety function measurement of mass flow rate at current output 1 (4-20mA). They can be used in applications up to SIL 2 (HFT=0) resp. SIL 3 (HFT=1).

In high demand mode and HFT=0 architecture the safe use of the device is limited to a demand rate of the safety function  $\leq 1/50$  h.

**Besondere Bedingungen  
Specific requirements**

Die Hinweise in dem zugehörigen Handbuch zur Funktionalen Sicherheit, der Technischen Information und der Betriebsanleitung sind zu beachten. The Functional Safety Handbook, the technical information and the Operating Manual shall be considered.

Gültig bis / Valid until 2022-03-07

Der Ausstellung dieses Zertifikates liegt eine Prüfung zugrunde, deren Ergebnisse im Bericht Nr. 968/FSP 1407.00/17 vom 07.03.2017 dokumentiert sind.

Dieses Zertifikat ist nur gültig für Erzeugnisse, die mit dem Prüfgegenstand übereinstimmen. Es wird ungültig bei jeglicher Änderung der Prüfgrundlagen für den angegebenen Verwendungszweck.

The issue of this certificate is based upon an examination, whose results are documented in Report No. 968/FSP 1407.00/17 dated 2017-03-07.

This certificate is valid only for products which are identical with the product tested. It becomes invalid at any change of the codes and standards forming the basis of testing for the intended application.

TÜV Rheinland Industrie Service GmbH  
Bereich Automation  
Funktionale Sicherheit  
Am Grauen Stein, 51105 Köln

Köln, 2017-03-07

Certification Body Safety & Security for Automation & Grid

Dr.-Ing. Thorsten Gantevoort

www.fs-products.com  
www.tuv.com



**TÜVRheinland®**  
Precisely Right.

10/222 12, 12 IE 44 © TÜV: TÜV and TÜV are registered trademarks. Utilization and application requires prior approval.

TÜV Rheinland Industrie Service GmbH, Am Grauen Stein, 51105 Köln / Germany  
Tel.: +49 221 9005-1790, Fax: +49 221 850-1530, E-Mail: industrie-service@tu-koeln.de

## 3 About this document

### 3.1 Document function

The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.



- General information about functional safety: **SIL**
- General information about SIL is available:  
In the Downloads area of the Endress+Hauser website: [www.endress.com/SIL](http://www.endress.com/SIL)

### 3.2 Using this document

#### 3.2.1 Information on the document structure



Additional information regarding:

- The arrangement of the parameters, along with a short description, according to the **Operation** menu, **Setup** menu, **Diagnostics** menu: Operating Instructions
- Operating concept: Operating Instructions

### 3.3 Symbols

#### 3.3.1 Safety symbols



This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.



This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.











This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.



This symbol contains information on procedures and other facts which do not result in personal injury.

#### 3.3.2 Symbols for certain types of information


Symbol	Meaning
	<b>Allowed</b> Procedures, processes or actions that are permitted.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.

Symbol	Meaning
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
1, 2, 3...	Series of steps
	Result of a step
 A0028662	Operation via local display
 A0028663	Operation via operating tool
 A0028665	Write-protected parameter

3.3.3 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections

3.4 Supplementary device documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from nameplate
  - *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

3.4.1      Standard documentation

Operating Instructions

Measuring device	Documentation code
Promass A 300 (8A3B**-...)	BA01482D
Promass A 300 (8A3C**-...)	BA01816D
Promass E 300	BA01484D
Promass F 300	BA01485D
Promass H 300	BA01486D
Promass I 300	BA01487D
Promass O 300	BA01488D
Promass P 300	BA01489D
Promass Q 300	BA01490D
Promass S 300	BA01491D
Promass X 300	BA01492D

Description of Device Parameters

Measuring device	Documentation code
Promass 300	GP01057D

Technical Information

Measuring device	Documentation code
Promass A 300 (8A3B**-...)	TI01270D
Promass A 300 (8A3C**-...)	TI01374D
Promass E 300	TI01272D
Promass F 300	TI01221D
Promass H 300	TI01273D
Promass I 300	TI01274D
Promass O 300	TI01275D
Promass P 300	TI01276D
Promass Q 300	TI01277D
Promass S 300	TI01278D
Promass X 300	TI01279D

3.4.2 Device-dependent additional documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEX Ex d/Ex de	XA01405D
ATEX/IECEX Ex ec	XA01439D
cCSAus XP	XA01373D
cCSAus Ex d/ Ex de	XA01372D
cCSAus Ex nA	XA01507D
INMETRO Ex d/Ex de	XA01468D
INMETRO Ex ec	XA01470D
NEPSI Ex d/Ex de	XA01469D
NEPSI Ex nA	XA01471D
EAC Ex d/Ex de	XA01656D
EAC Ex nA	XA01657D
JPN Ex d	XA01778D

Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEX Ex i	XA01494D
ATEX/IECEX Ex ec	XA01498D
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Functional Safety Manual	SD01727D

Contents	Documentation code
Remote display and operating module DKX001	SD01763D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D

## Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	For an overview of the accessories available for order, see the Operating Instructions for the device

## 4 Permitted device types


The details pertaining to functional safety in this manual relate to the device versions listed below and are valid as of the specified software and hardware versions. Unless otherwise specified, all subsequent versions can also be used for safety functions. A modification process according to IEC 61508 is applied for any device modifications.

Feature	Designation	Option selected
–	Order code	8A3B (Promass A 300) 8A3C (Promass A 300) 8E3B (Promass E 300) 8F3B (Promass F 300) 8H3B (Promass H 300) 8I3B (Promass I 300) 8O3B (Promass O 300) 8P3B (Promass P 300) 8Q3B (Promass Q 300) 8S3B (Promass S 300) 8X3B (Promass X 300)
000	Nominal diameter	All Up to internal diameter 320 mm (12.6 in)
010	Approval; transmitter + sensor	All
015	Power supply	All
020	Output; input 1 <sup>1)</sup>	<ul style="list-style-type: none"> <li>■ Option BA "4-20mA HART"</li> <li>■ Option BB "4-20mA + Wireless HART"</li> <li>■ Option CA "4-20mA HART Ex-i passive"</li> <li>■ Option CB "4-20mA Ex-i + Wireless HART"</li> <li>■ Option CC "4-20mA HART Ex-i active"</li> </ul>
021	Output; input 2	All
022	Output; input 3	All
030	Display; Operation	All

Feature	Designation	Option selected
040	Housing	All
050	Electrical connection	All
060	Measuring tube mat., wetted surface	All
070	Process connection	All
080	Calibration flow	All
480	Device model	All
500	Display operating language	All
520	Sensor option	All
530	Customer-specific configuration	All
540	Application package	All
550 <sup>2)</sup>	Suitability for custody transfer measurement	All
570	Service	All
580	Test, certificate	All
590	Additional approval	LA (= SIL) <sup>3)</sup>
610	Accessory mounted	All
620	Accessory enclosed	All
850	Firmware version	Firmware with SIL capability, e.g. 01.00.zz (HART)
895	Marking	All

- 1) In devices with several outputs, only current output 1 (terminals 26 and 27) is suitable for safety functions. The other outputs can, if necessary, be connected for non-safety-oriented purposes.
- 2) Only for devices with approval for custody transfer
- 3) Additional selection of further approvals is possible.

## 4.1 SIL label on the nameplate

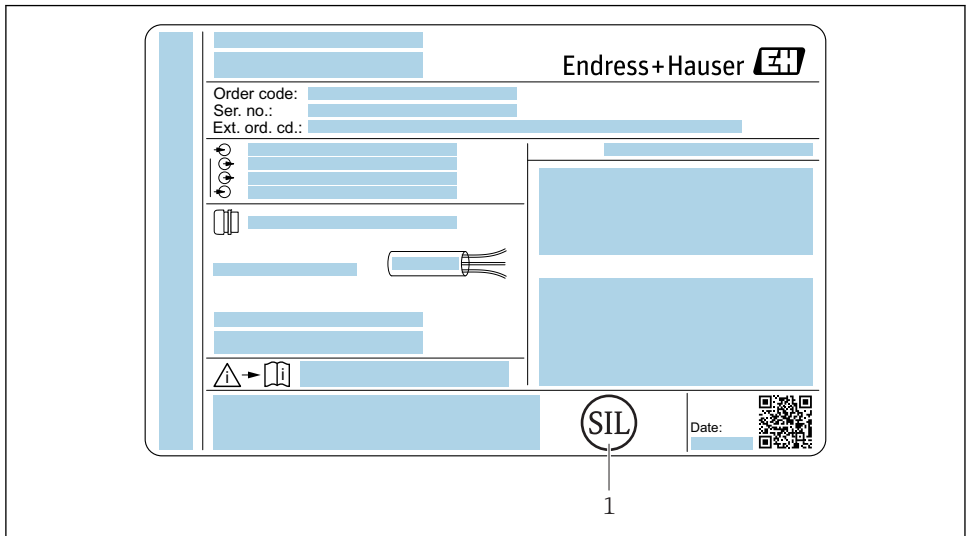

1 SIL logo

A0031473

## 5 Safety function

### 5.1 Definition of the safety function

The measuring device's permitted safety functions are:

- Monitoring of a maximum or minimum mass flow or a mass flow range for liquid or gaseous media
- Monitoring of a maximum or minimum volume flow or a volume flow range for liquid media
 

The safety functions are based on the simultaneous, continuous measurement of the mass flow and the density of a liquid.
- Monitoring of a maximum or minimum density or a density range for liquid media

#### 5.1.1 Safety-related output signal


The measuring device's safety-related signal is the 4–20 mA analog output signal (output; input 1). All safety measures refer to this signal exclusively.

In devices with several outputs, only current output 1 (terminals 26 and 27) is suitable for safety functions. The other outputs can, if necessary, be connected for non-safety-oriented purposes.

- The safety-related output signal is fed to a downstream automation system where it is monitored for the following:
- Overshooting and/or undershooting of a specified limit value for the flow or the density of the medium
  - The occurrence of a fault: e.g. failure current ( $\leq 3.6\text{ mA}$ ,  $\geq 21\text{ mA}$ ), interruption or short-circuit of the signal line

The safety-related errors are broken down in accordance with IEC/EN 61508 into different categories and implications for the safety-related output signal.

Safety related error	Explanation	Item no.→ 17	Implication for safety-related output signal
No device error	Safe: No error	1	Within specification
$\lambda_{SD}$	Safe detected: Safe, detectable failure present	3	Device assumes a signal on alarm
$\lambda_{SU}$	Safe undetected: Safe, undetectable failure present	2	Is within the specified tolerance range
$\lambda_{DD}$	Dangerous detected: Dangerous but detectable failure present (diagnosis in device)	3	Device assumes a signal on alarm
$\lambda_{DU}$	Dangerous undetected: Dangerous, undetectable failure present	4	May be outside the specified tolerance range

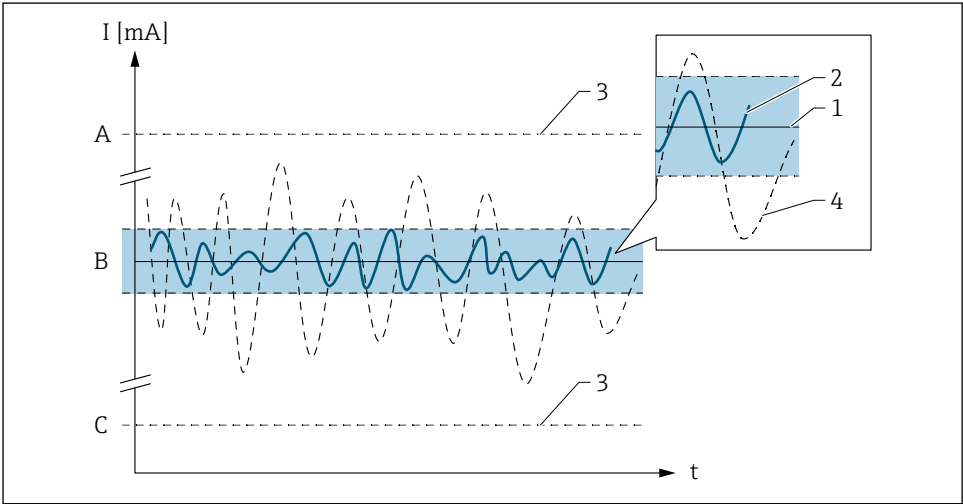


A0034924

- A Failure current  $\geq 21\text{ mA}$
- B Measuring uncertainty in accordance with Technical Information
- C Failure current  $\leq 3.6\text{ mA}$

## 5.2 Restrictions for use in safety-related applications

1. The measuring device must be used correctly for the specific application, taking into account the medium properties and ambient conditions.
2. Carefully follow safety instructions pertaining to critical process situations and installation conditions, which can be found in the device documentation.
3. Observe application-specific limits.
4. Do not exceed technical specifications of measuring device.

Information on the safety-related signal →  15

For detailed information on the technical specifications, see the device documentation →  10.


### 5.2.1 Dangerous undetected failures in this scenario

An incorrect output signal that deviates from the value specified in the Operating Instructions but is still in the range of 4 to 20 mA, is considered a dangerous, undetected failure.



Information on measured error →  19



For detailed information on the maximum measured error, see the Operating Instructions. →  11

5.2.2 Useful lifetime of electric components

The established failure rates of electrical components apply for a useful lifetime of 12 years as per IEC 61508-2: 2010, section 7.4.9.5, note 3.

The device's year of manufacture is coded in the first character of the serial number (→ table below).

Example: serial number L5ABBF02000 → year of manufacture 2016

ASCII character	Meaning	ASCII character	Meaning	ASCII character	Meaning
D	2010	K	2015	R	2020
E	2011	L	2016	S	2021
F	2012	M	2017	T	2022
H	2013	N	2018	V	2023
J	2014	P	2019	W	2024

5.2.3 Suitability of the measuring device


1. Carefully select the nominal diameter of the measuring device in accordance with the application's expected flow rates.

↳ The maximum flow rate during operation must not exceed the specified maximum value for the sensor.
2. In safety-related applications, it is advisable to select a limit value for monitoring the minimum flow that is not less than 5 % of the specified maximum value of the sensor.

NOTICE

Use the measuring device according to the specifications.

- Pay attention to the medium properties and the environmental conditions.
- Carefully follow instructions pertaining to critical process situations and installation conditions.

 Detailed information on:

- Installation
- Electrical connection
- Medium properties
- Environment
- Process

Operating Instructions and Technical Information →  11

**⚠ CAUTION****Pay particular attention to the following:**

- ▶ It is the responsibility of the user to assess the influence of the process conditions and the medium on the measurement result in safety equipment, particularly the occurrence of two-phase mixtures, buildup, abrasion and corrosion, for example.
- ▶ In the case of liquids with a low boiling point or liquids in suction lines, it is important to ensure that the vapor pressure is not undershot and that the liquid does not start to boil.
- ▶ Please ensure that there is never any outgassing of the gases naturally contained in many liquids. Sufficiently high system pressure prevents the occurrence of these effects.
- ▶ Make sure that cavitation does not occur as it can affect the operating life of the measuring tubes.
- ▶ If gaseous media are used, turbulences can occur at high flow velocity rates, e.g. if valves are half-closed. This can cause the measured values to fluctuate.

No special measures need to be taken into consideration for single-phase, liquid media with properties similar to water.




Further information on the suitability of the measuring device for safety-related operation is available from your Endress+Hauser sales center.

**5.2.4 Information on measured errors**

When the measured value is transmitted via the 4–20 mA current output, the measuring device's relative measured error is made up of the contribution of the digitally determined measured value and the accuracy of the analog current output. These contributions, which are listed in the device documentation, apply under reference operating conditions and can depend on the sensor version ordered. If process or ambient conditions are different, there are additional contributions, e.g. temperature or pressure, which are also listed.



For further information on calculating the measured error, see the Technical Information. →  11

**5.2.5 Power supply to the 4–20 mA current output**


Overvoltages at the 4–20 mA current output (passive, output; input 1) - caused by a fault in the supply unit, for example - can result in a leak current in the device's input protection unit. This may lead to falsification of the output signal by more than the specified error or the minimum failure current (3.6 mA) can no longer be set due to the leak current.

- ▶ Use a 4–20 mA power supply unit with either voltage limitation or voltage monitoring.

**NOTICE****The safety-related connection values depend on the Ex approval.**

- ▶ Pay attention to the safety-related connection values.



For detailed information on the connection values, see the Safety Instructions. →  12


**5.2.6 HART communication**

The measuring device also communicates via HART or WirelessHART in the SIL mode. This comprises all the HART features with additional device information.

**NOTICE**

**The measuring device's safety-related signal is the 4–20 mA analog output signal (output; input 1).**


All safety measures refer to this signal exclusively.

► Please note the following: →  15.

**NOTICE**

**When the SIL locking code is entered, the device parameters that affect the safety-related output signal are locked and write-protected. It is still possible to read the parameters.**

When SIL locking is enabled, restrictions apply on all communication options, such as the service interface (CDI-RJ45), HART protocol and WirelessHART protocol, local display and WLAN.

► Deactivation of the SIL mode →  29.

## 6 Use in protective systems

### 6.1 Device behavior during operation

#### 6.1.1 Device behavior during power-up

Once switched on, the device runs through a start-up phase. The current output is set to failure current during this time. This current is  $\leq 3.6$  mA in the initial seconds of this start-up phase.

No communication with the device is possible via the interfaces during the start-up phase. After the start-up phase the device switches to the normal mode (measuring operation).

#### 6.1.2 Behavior of device during operation

The device outputs a current value which corresponds to the measured value to be monitored. This value must be monitored and processed further in an attached automation system.

#### 6.1.3 Device behavior in safety function demand mode

Depending on the setting of the **Failure mode** parameter, the current is as follows in demand mode:

- For **Min.** option:  $\leq 3.6$  mA
- For **Max.** option:  $\geq 21$  mA

#### 6.1.4 Device behavior in event of alarms and warnings

The output current on alarm can be set to a value  $\leq 3.6$  mA or  $\geq 21$  mA.

In some cases (e.g. a cable open circuit or faults in the current output itself, where it is not possible to set the failure current  $\geq 21$  mA) output currents of  $\leq 3.6$  mA occur irrespective of the configured failure current.

In some other cases (e.g. short circuit of cabling), output currents of  $\geq 21$  mA occur irrespective of the configured failure current.

For alarm monitoring, the downstream automation system must be able to recognize both maximum alarms ( $\geq 21$  mA) and minimum alarms ( $\leq 3.6$  mA).

### 6.1.5 Alarm and warning messages

Additional information is provided by the alarm and warning messages output in the form of diagnostic events and associated event texts.

#### NOTICE

**A diagnostic message is displayed even though the diagnostic event is no longer active in the unlocked SIL mode.**

When SIL mode is activated, additional diagnostics are activated. If a diagnostic event is pending and the locked SIL mode is deactivated, the diagnostic message remains as long as the error is still present.

- ▶ In this case, the device must be disconnected briefly from the power supply .
- ▶ When the device is then restarted, a self-check is carried out, and the diagnostics event is reset where applicable.

This behavior occurs in the case of the following diagnostic messages:

**803 Current loop** diagnostic message

## 6.2 Parameter configuration for safety-related applications


### 6.2.1 Calibration of the measuring point

The measuring point is calibrated via the operating interfaces. A wizard guides you systematically through all the submenus and parameters that have to be set for configuring the measuring device.



For detailed information on the operating options, see the Operating Instructions. →  11



For detailed information on configuring the measuring device, see the Operating Instructions and Description of Device Parameters →  11

To activate the SIL mode, the device must run through a confirmation sequence. While running through this sequence, critical parameters are either set automatically by the device to standard values or transferred to the local display/operating tool to enable verification of the setting. On completion of parameter configuration, the SIL mode of the device must be enabled with a SIL locking code.

## Availability of the SIL mode function

### NOTICE

The SIL confirmation sequence is only visible on the local display and in the operating tools for devices with the order code for "Additional approval", option LA "SIL".



- ▶ For this reason, the SIL mode can also only be activated on these measuring devices.
- ▶ If the LA "SIL" option was ordered for the flowmeter ex works, this option is available when the measuring device is delivered to the customer. Access is via the operating interfaces of the measuring device.
- ▶ If the order option cannot be accessed in the measuring device, the function cannot be retrofitted during the life cycle of the device. If you have any questions please contact your Endress+Hauser service or sales organization.

Ways to check function availability in the measuring device:

Using the serial number:

W@M Device viewer<sup>1)</sup> → Order code for "Additional approval", option LA "SIL"

Detailed information concerning the SIL label:

- Permitted device types →  13
- SIL label on the transmitter nameplate →  15

## Overview of the SIL mode

The SIL mode enables the following steps:

1. Makes sure that the preconditions are met.
  - ↳ The measuring device checks whether the user has correctly configured a predefined set of parameters for the safety function.  
If the result is positive, the device continues with the activation of the SIL mode.  
If the result is negative, the sequence is not permitted or is aborted, and the device does not continue with the activation of the SIL mode.
2. Automatically switches a predefined set of parameters to the default values specified by the manufacturer.
  - ↳ This parameter set ensures that the flowmeter works in the safety mode.
3. Guides the user through the preconfigured parameters for checking.
  - ↳ This ensures that the user actively checks all the important pre-settings.
4. Activates write protection for all the relevant parameters in the SIL mode.

All this ensures that the parameter settings that are required for the safety function are configured correctly. (These settings cannot be circumvented either deliberately or by accident.)

### 6.2.2 Locking a SIL device

When locking a SIL device, all safety-related parameter settings are shown to the operator individually and must be confirmed explicitly. Parameter settings not permitted in the locked SIL mode are reset to their default values where necessary. A SIL locking code is then entered

---

1) [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)

to lock the device software to ensure that parameters cannot be changed. Non-safety-related parameters remain unchanged.


### NOTICE

**Once the SIL device has been locked, the process-related parameters are write protected, and thereby locked, for security reasons.**

It is still possible to read the parameters. When SIL locking is enabled, restrictions apply on all communication options, such as the service interface, HART protocol and WirelessHART protocol, local display and WLAN.

► Follow the specified locking sequence.

#### 1. Ensure preconditions are met.

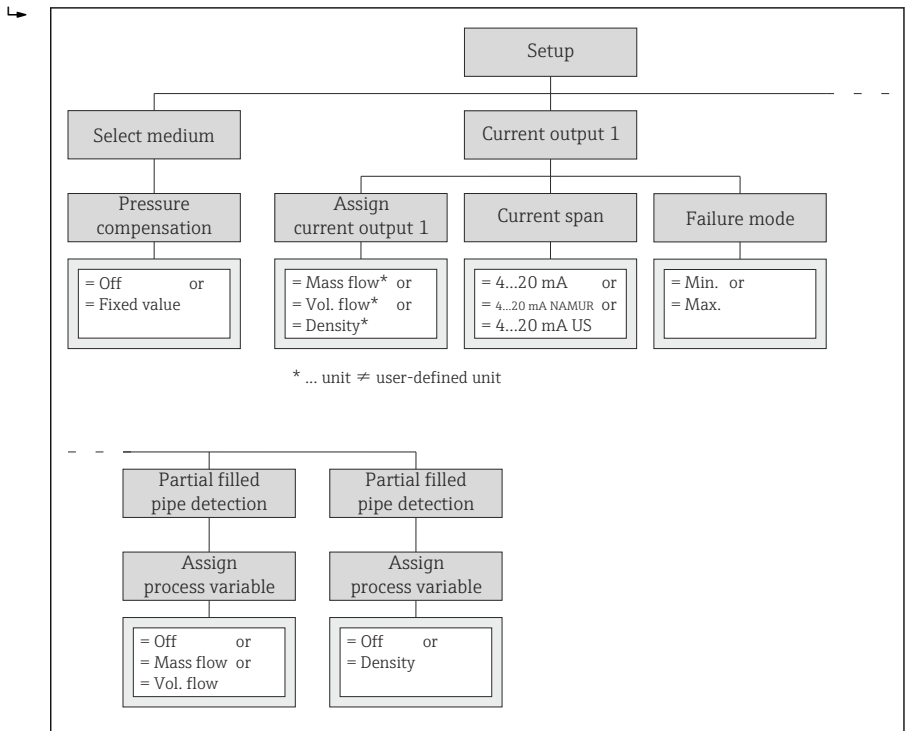

A0015325-EN

2. In the **Setup** menu → **Advanced setup** submenu, select the **SIL confirmation** wizard.

3. Select **Set write protection** parameter.

4. Enter the SIL locking code **7452**.


► The device first checks the preconditions listed under item 1.

**NOTICE**


If these preconditions are not met, the message "SIL preparation = failed" appears on the display along with the parameter that failed to meet the preconditions under 1.  
The SIL confirmation sequence is not continued.

- Check preconditions.

If the preconditions are met, the message **SIL preparation = finished** appears on the display.  
Once the preconditions have been met, the device automatically switches the following parameters to safety-oriented settings:

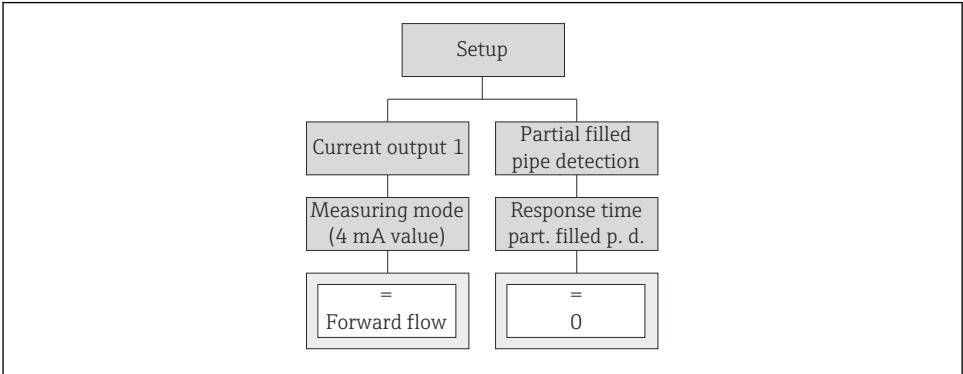


A0015326-EN

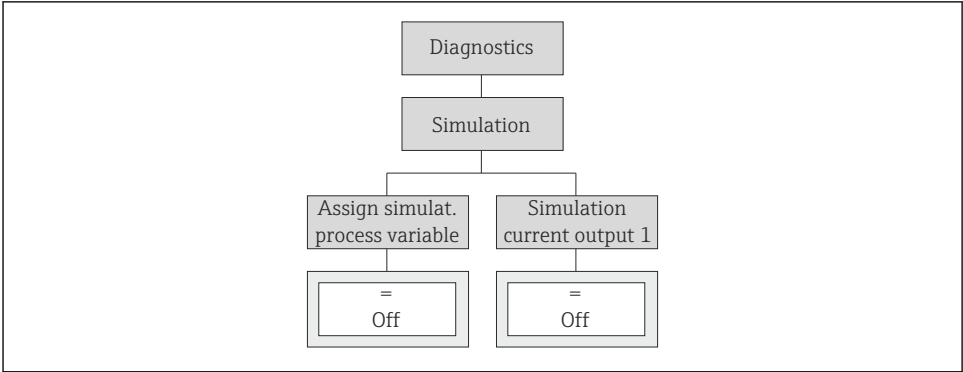


A0015327-EN

The diagnostic behavior is set in such a way that the measuring device is set to the safe state when an error occurs. This means that the diagnostic messages listed in the graphic are set to alarm and the current output adopts the configured failsafe mode → 20.

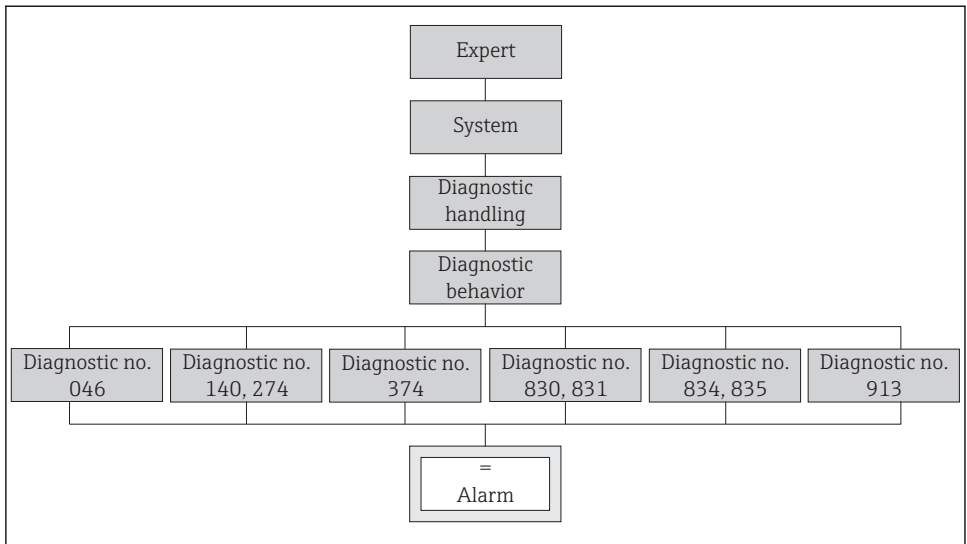


A0031622-EN


- **046 Sensor limit exceeded** diagnostic message
- **140 Sensor signal** diagnostic message
- **274 Main electronic failure** diagnostic message
- **374 Sensor electronic (ISEM) faulty** diagnostic message
- **830 Sensor temperature too high** diagnostic message
- **831 Sensor temperature too low** diagnostic message
- **834 Process temperature too high** diagnostic message
- **835 Process temperature too low** diagnostic message
- **913 Medium unsuitable** diagnostic message

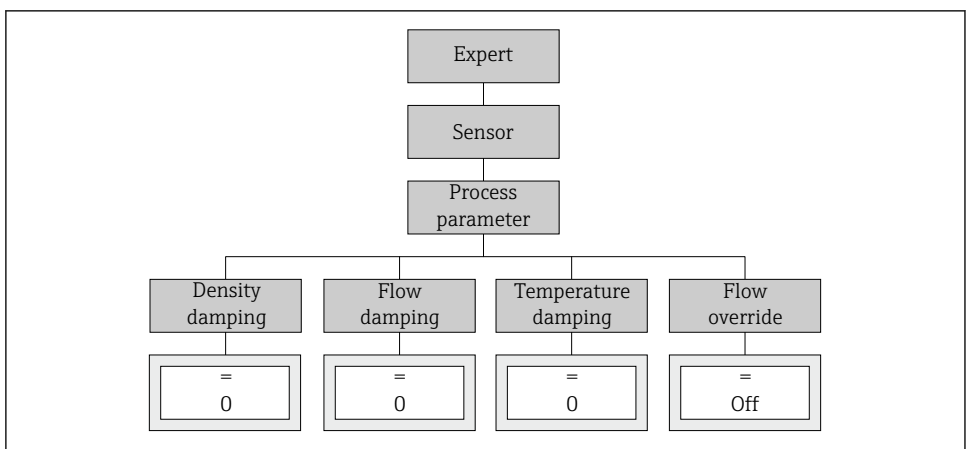


A0043346-EN

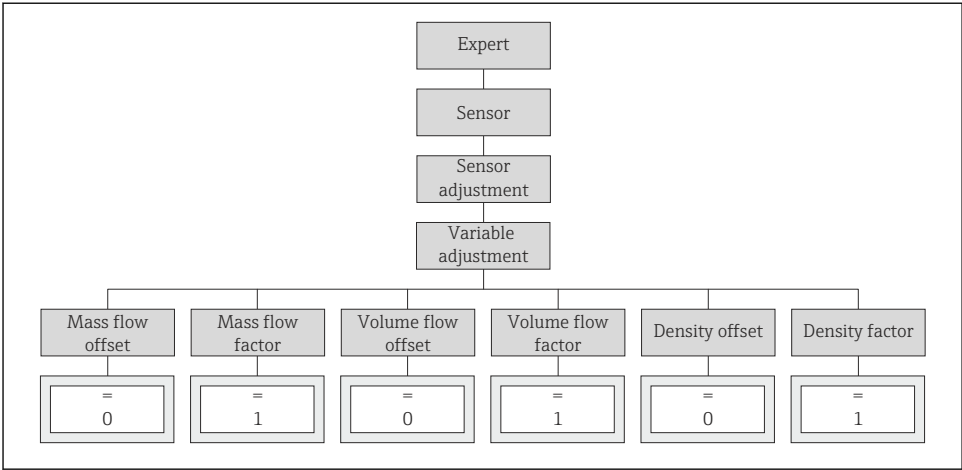

A0023070-EN

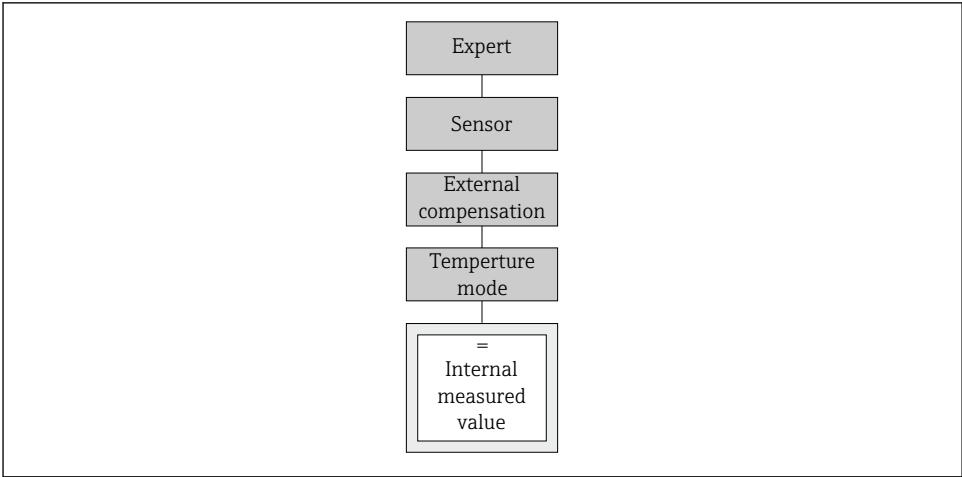


A0031477-EN

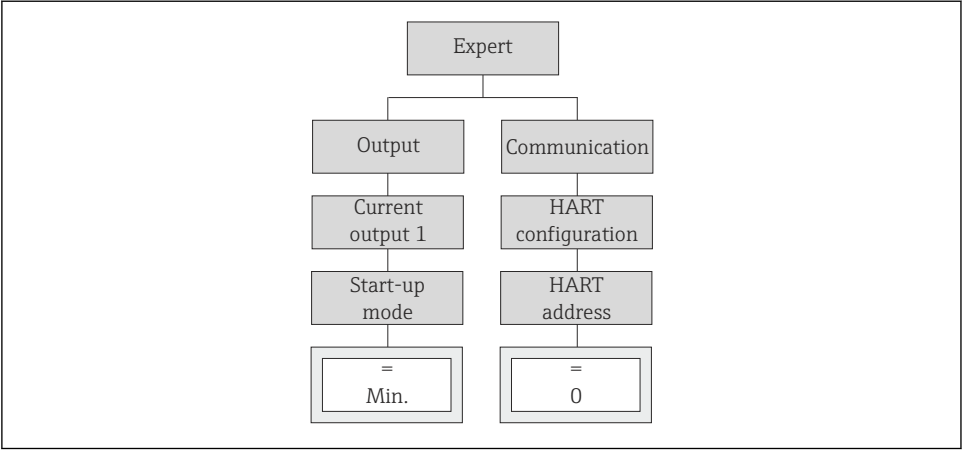

A0015328-EN

To check that values are displayed correctly, the following string appears on the device display or operating tool: **0123456789+.-**.

5. The user must confirm that the values are displayed correctly.
  - ↳ The device displays the current settings for the following parameters one after another for the user to confirm each of them:

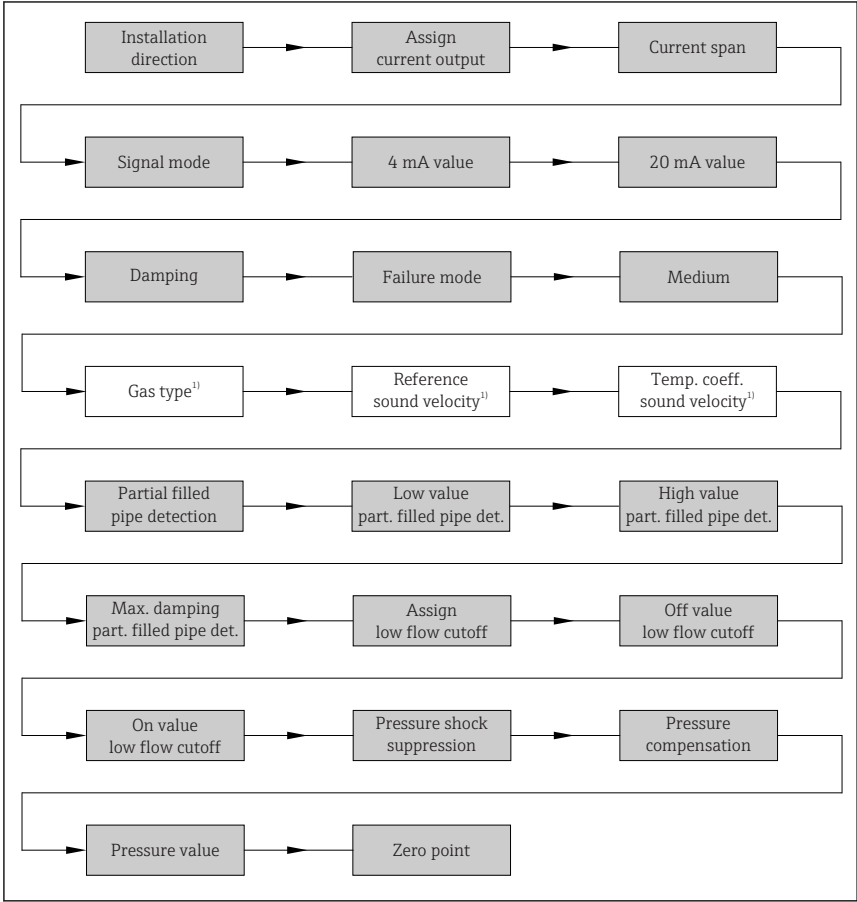

A0031475-EN

1) This parameter is only displayed if the "Gas" option is selected in the "Medium" parameter.


 For detailed information on the parameters in the graphic, see the Operating Instructions. →  11

6. At the end of the verification, the SIL locking code **7452** must be entered in the **Set write protection** parameter again to confirm that all the parameter values have been defined correctly.
  - ↳ If the SIL locking code has been entered correctly, the message **"End of sequence"** appears on the display.

7. Press the  key to confirm.

The SIL mode is now activated.

Recommendation:

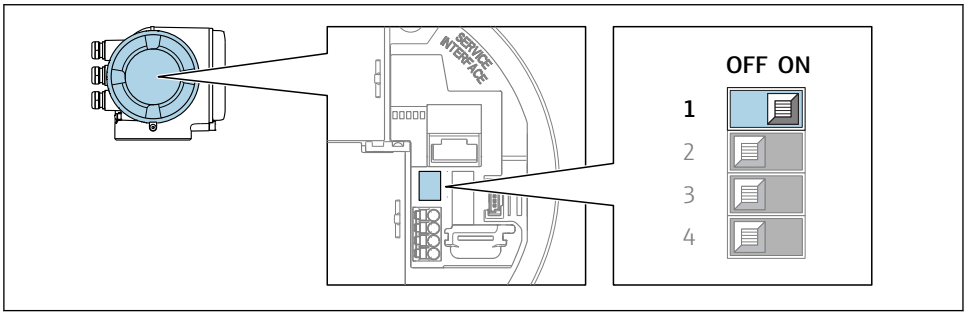

A0029630

1. Check the write protection switch (WP) in the connection compartment.
2. Set this switch to the **ON** position where necessary.
  - ↳ Hardware write protection enabled.
3. Restart the device on completion of the SIL confirmation sequence.

#### NOTICE

**If the SIL confirmation sequence is aborted before the "End of sequence" message is displayed, the SIL device is not locked. The safety-oriented parameter settings have been made but the SIL device has not been locked.**

- ▶ Perform SIL device locking again.

### 6.2.3 Unlocking a SIL device

A device in the locked SIL mode is protected against unauthorized operation by means of a SIL locking code and, where applicable, by means of a user-specific release code and a hardware write protection switch. The device must be unlocked in order to change parameters, for proof-tests as well as to reset self-holding diagnostic messages.

#### NOTICE

**Unlocking the device deactivates diagnostic functions, and the device may not be able to carry out its safety function in the unlocked SIL mode.**

- ▶ Therefore, independent measures must be taken to ensure that there is no risk of danger while the SIL device is unlocked.

Unlocking procedure:

1. Check the write protection switch (WP) in the connection compartment.
2. Set this switch to the **OFF** position where necessary.
  - ↳ Hardware write protection disabled.
3. Enter the user-specific release code if necessary.
4. In the **Setup** menu → **Advanced setup** submenu, select the **Deactivate SIL** wizard.
5. Select **Reset write protection** parameter.
6. Enter the SIL locking code **7452**.
  - ↳ If the SIL locking code has been entered correctly, the message "**End of sequence**" appears on the display.
7. Press the **↵** key to confirm.

The SIL mode is now deactivated.

## 6.3 Proof testing

### NOTICE

**The safety function is not guaranteed during a proof test.**

Nevertheless, process safety must be guaranteed during proof testing.

- ▶ The safety-related output signal 4 to 20 mA (output; input 1) may not be used for the protective system.
- ▶ Take alternative monitoring measures if necessary.

### 6.3.1 Proof-testing the safety function of the entire system

1. Check the functional integrity of the safety function at appropriate intervals.
2. The operator specifies the testing interval and this must be taken into account when determining the probability of failure  $\text{PFD}_{\text{avg}}$  of the sensor system.
  - ↳ In the case of a single-channel system architecture, the average probability of failure ( $\text{PFD}_{\text{avg}}$ ) of the sensor is derived from the proof-test interval  $T_i$ , the failure rate for dangerous undetected failures  $\lambda_{\text{du}}$ , the proof test coverage PTC and the assumed mission time by close approximation as follows:

$$\text{PFD}_{\text{avg}} \approx \lambda_{\text{du}} \times (\text{PTC}/2 \times T_i + (1 - \text{PTC}) / 2 \times \text{MT})$$

A0023571

*MT* Mission time

*PTC* Proof test coverage

*T<sub>i</sub>* Test interval

3. The operator also specifies the procedure for proof-testing.


↳ **NOTE!**

In accordance with IEC 61511, an independent proof test of the subsystems → 33, e.g. sensor, is permitted as an alternative to testing the safety function of the entire system.

Average probability of failure and mission time


$PFD_{avg}$  for a single-channel system:

SIL2 - 1001

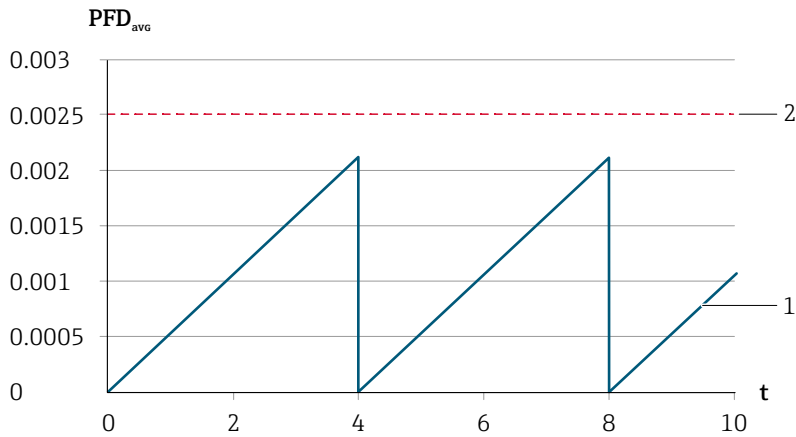

A0031604

1 Option BA "4-20mA HART", option BB "4-20mA + Wireless HART"

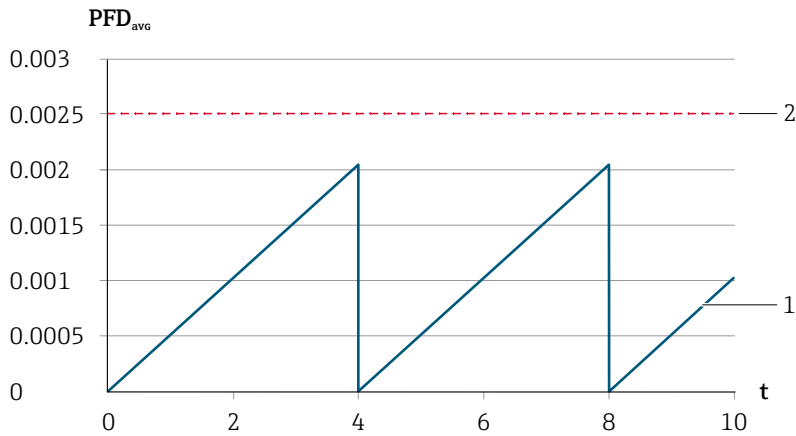

A0031605

2 Option CA "4-20mA HART Ex-i", option CB "4-20mA Ex-i + Wireless HART", option CC "4-20mA HART Ex-i active"

$t$  Mission time in years

1  $PFD_{avg}$  - Average probability of dangerous failure on demand

2 Limit value for average probability of failure

1001 Single-channel architecture

6.3.2 Proof testing the sensor subsystem

If there are no operator-specific requirements for the proof test, the following alternatives are available for testing the sensor subsystem <sup>2)</sup> depending on the "mass flow/volume flow" or "density" measured variable used for the safety function.

PTC <sup>1)</sup>	Proof testing	
52 %	Device restart and testing of current output 1	→ 34
98 %	Testing with a secondary standard (volume flow and mass flow)	→ 37
98 %	Testing with a secondary standard (density)	→ 39
99 %	Testing with a secondary standard and testing of current output 1	→ 41

1) Proof Test Coverage

Other recommendations

It is advisable to perform a visual inspection on site.

- As part of the visual inspection of the transmitter, ensure that all of the electronics compartment cover seals and cable entries are providing adequate sealing.


2) Under IEC 61508 the sensor is synonymous with the entire flowmeter.

### 6.3.3 Device restart and testing of current output 1

- Part 1 - Device restart
- Part 2 - Testing of current output 1

#### Preparation

Bypassing of safety function of process control system, to prevent accidental activation of the safety function.

- Deactivate the locked SIL mode →  29.

#### Test sequence - Part 1: Device restart

The device restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

The device can be restarted using one of the following methods:

- Disconnecting and reconnecting the terminal voltage.
- Selecting the **Restart device** option in the **Device reset** parameter.  
Setup → Advanced setup → Administration
- Restart the device.

#### NOTICE

**Wrong option selected in the "Reset device" parameter.**

If the "To factory defaults" or "To delivery settings" option is selected, the device configuration is reset and the device must be reconfigured!

- In the **Device reset** parameter, select only the **Restart device** option.

#### Evaluating the results - Part 1: Device restart



- Test restart of device.
  - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display. If the device restarts and no diagnostic message is displayed, this step has been completed successfully.  
If nothing appears on the local display or if a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" in the Operating Instructions for the device.

#### Test step - Part 2 - Testing of current output 1

The **Simulation** submenu (Diagnostics → Simulation) enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

#### Performing the test



For proof testing, use only the **Current output simulation** parameter (→  36) and the **Value current output** parameter (→  36), as these are the only parameters approved for testing the safety-related characteristics.

1. In the **Value current output** parameter, select the defined default values one after the other.

2. Compare current at output 1 with this default value.

### Comparing the current values

The current values can be compared using one of the following methods:

- Measure the current of the DUT at the logic subsystem (process control system or safety-related PLC).
- Measure the current at the DUT using an external, traceably-calibrated ammeter.
- Compare the current values.


### Connecting the measuring equipment and external testing

- Connecting the measuring equipment in the measuring circuit
- External check of the passive current output



Requirements for the measuring equipment:

- DC current measuring uncertainty  $\pm 0.2\%$
- DC current resolution  $10\ \mu\text{A}$

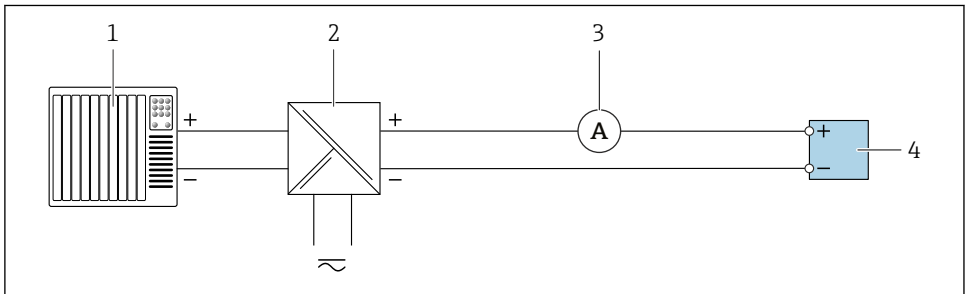

A0034446

3 External verification taking the example of a passive current output

- 1 Automation system with current input (e.. g. PLC)
- 2 Power supply unit
- 3 Ammeter
- 4 Transmitter

1. Connect the ammeter to the transmitter by looping it in series into the circuit.
2. Connect the power supply unit.

### Evaluation of results - Part 2: Testing of current output 1

The amount of deviation between the measured current and the set point must not exceed the measured error specified for the safety function. The deviation should not exceed  $\pm 1\%$  /  $\pm 300\ \mu\text{A}$ .

- Note data relating to measured error → 19.

### Connecting the test

1. Re-activate the locked SIL mode → 22.
2. Deactivate bypassing of safety function of process control system.

3.
- Document results of proof test in accordance with the safety management guidelines applicable to the system.

NOTICE

With the test sequences described, at least 52 % of the undetected dangerous failures can be detected. The influence of systematic errors on the safety function is not fully covered by the test. Systematic errors can be caused, for example, by medium properties, operating conditions, build-up or corrosion.

- ▶ If one of the test criteria from the test sequences described above is not fulfilled, the device may no longer be used as part of a protective system.
- ▶ Take measures to reduce systematic errors.

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Current output 1 to n simulation	–	Switch the simulation of the current output on and off.	On	Off
Value current output 1 to n	In the <b>Current output 1 to n simulation</b> parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	<div><div>■ 1. Default value: Select 4.0 mA.</div><div>■ 2. Default value: Select 20.0 mA.</div></div> 3.59 to 22.5 mA	3.59 mA

### 6.3.4 Testing with a secondary standard (mass flow or volume flow)

Check measured value for liquid and gaseous mass or volume flow by comparing with a secondary standard

#### Test sequence

The measured values (3 to 5 measuring points) are checked with a secondary standard on an installed device (mobile calibration rig or calibrated reference device) or on a factory calibration rig following device removal.

The measured values of the secondary standard and the device under test (DUT) are compared using one of the following methods:

#### Comparison by reading off the digital measured value

- ▶ Compare the digital measured value of the secondary standard against the measured value display of the DUT at the logic subsystem (process control system or safety-related PLC).

#### Comparison of the measured value by measuring the current



Requirements for the measuring equipment:

- DC current measuring uncertainty  $\pm 0.2\%$
- DC current resolution  $10\ \mu\text{A}$


1. Measure the current at the DUT using an external, traceably-calibrated ammeter.
2. Measure the current of the DUT at the logic subsystem (process control system or safety-related PLC).

#### Evaluation of the results

The amount of deviation between the measured flow rate and the set point must not exceed the measured error specified for the safety function.



For information on the required measured error for the device, see the "Performance characteristics" section of the Operating Instructions

- ▶ Carefully follow the information in the section on "Restrictions for use in safety-related applications – information on measured errors" →  17.

**NOTICE**


**At least 98 % of dangerous, undetected failures are detected using these test sequences (PTC = 0.98). The influence of systematic errors on the safety function is not fully covered by the test. Systematic faults can be caused, for example, by medium properties, operating conditions, build-up or corrosion.**

- ▶ If one of the test criteria from the test sequences described above is not fulfilled, the device may no longer be used as part of a protective system.
- ▶ Take measures to reduce systematic errors.



Detailed information on:

- Orientation
- Medium properties
- Operating conditions

Operating Instructions →  11

### 6.3.5 Testing with a secondary standard (density)

Check measured value for density by comparing with a secondary standard. The measuring device is checked consecutively in the empty state and with a medium of known density (e.g. process medium or water).

#### I. Test sequence:

Check the measured values with a reference value (secondary standard or value from the literature) when the device is installed, or check on a factory calibration rig once the device has been removed.

The density measured values determined in each case are compared against the real density of the media.

The reference values are compared against the measured values of the device under test (DUT) using one of the following methods:

#### a. Comparison by reading off the digital measured value

Compare the digital measured value of the secondary standard against the measured value display of the DUT at the logic subsystem (process control system or safety-related PLC).

#### b. Comparison of the measured value by measuring the current

1. Measure the current at the DUT using an external, traceably-calibrated ammeter.
  - ↳ Note: measuring equipment requirements:
    - DC current measuring uncertainty  $\pm 0.2\%$
    - DC current resolution  $10\ \mu\text{A}$
2. Measure the current of the DUT at the logic subsystem (process control system or safety-related PLC).

#### II. Assessment of the results:

The amount of deviation between the measured density and the reference value must not exceed the measured error specified for the safety function.

- ▶ Follow the information in the section on "Restrictions for use in safety-related applications – information on measured errors" →  17.

**NOTICE**

**At least 98 % of dangerous, undetected failures are detected using these test sequences (PTC = 0.98). The influence of systematic errors on the safety function is not fully covered by the test. Systematic faults can be caused, for example, by medium properties, operating conditions, build-up or corrosion.**

- ▶ If one of the test criteria from the test sequences described above is not fulfilled, the device may no longer be used as part of a protective system.
- ▶ Take measures to reduce systematic errors.



Detailed information on:

- Orientation
- Medium properties
- Operating conditions


Operating Instructions →  11

### 6.3.6 Testing with a secondary standard and testing of current output 1

- Part 1: Testing with a secondary standard
- Part 2 - Testing of current output 1

#### Preparation

Byassing of safety function of process control system, to prevent accidental activation of the safety function.

- ▶ Deactivate the locked SIL mode →  29.

#### Test sequence - Part 1: Testing with a secondary standard

The measured values (3 to 5 measuring points) are checked with a secondary standard on an installed device (mobile calibration rig or calibrated reference device) or on a factory calibration rig following device removal.

The measured values of the secondary standard and the device under test (DUT) are compared using one of the following methods:

#### Comparison by reading off the digital measured value

- ▶ Compare the digital measured value of the secondary standard against the measured value display of the DUT at the logic subsystem (process control system or safety-related PLC).

#### Comparison of the measured value by measuring the current



Requirements for the measuring equipment:

- DC current measuring uncertainty  $\pm 0.2\%$
- DC current resolution  $10\ \mu\text{A}$


1. Measure the current at the DUT using an external, traceably-calibrated ammeter.
2. Measure the current of the DUT at the logic subsystem (process control system or safety-related PLC).

#### Evaluation of results - Part 1: Testing with a secondary standard

The amount of deviation between the measured flow rate and the set point must not exceed the measured error specified for the safety function.



For information on the required measured error for the device, see the "Performance characteristics" section of the Operating Instructions

- ▶ Carefully follow the information in the section on "Restrictions for use in safety-related applications – information on measured errors" →  17.

#### Test step - Part 2 - Testing of current output 1

The **Simulation** submenu (Diagnostics → Simulation) enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

## Performing the test

**i** For proof testing, use only the **Current output simulation** parameter (→ 36) and the **Value current output** parameter (→ 36), as these are the only parameters approved for testing the safety-related characteristics.

1. In the **Value current output** parameter, select the defined default values one after the other.
2. Compare current at output 1 with this default value.

## Comparing the current values

The current values can be compared using one of the following methods:


- Measure the current of the DUT at the logic subsystem (process control system or safety-related PLC).
- Measure the current at the DUT using an external, traceably-calibrated ammeter.
- Compare the current values.

## Connecting the measuring equipment and external testing

- Connecting the measuring equipment in the measuring circuit
- External check of the passive current output

**i** Requirements for the measuring equipment:

- DC current measuring uncertainty  $\pm 0.2\%$
- DC current resolution  $10\ \mu\text{A}$

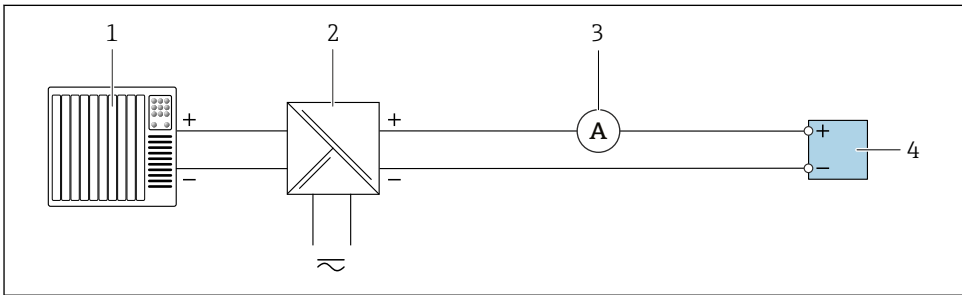

A0034446


**4** External verification taking the example of a passive current output

- 1 Automation system with current input (e.. g. PLC)
- 2 Power supply unit
- 3 Ammeter
- 4 Transmitter


1. Connect the ammeter to the transmitter by looping it in series into the circuit.
2. Connect the power supply unit.

## Evaluation of results - Part 2: Testing of current output 1

The amount of deviation between the measured current and the set point must not exceed the measured error specified for the safety function. The deviation should not exceed  $\pm 1\%$  /  $\pm 300\ \mu\text{A}$ .

- Note data relating to measured error →  19.

### Connecting the test

1. Re-activate the locked SIL mode →  22.
2. Deactivate bypassing of safety function of process control system.
3. Document results of proof test in accordance with the safety management guidelines applicable to the system.

### NOTICE

**At least 99 % of dangerous, undetected failures are detected using these test sequences (PTC = 0.99). The influence of systematic errors on the safety function is not fully covered by the test. Systematic faults can be caused, for example, by medium properties, operating conditions, build-up or corrosion.**

- If one of the test criteria from the test sequences described above is not fulfilled, the device may no longer be used as part of a protective system.
- Take measures to reduce systematic errors.



Detailed information on:

- Orientation
- Medium properties
- Operating conditions

Operating Instructions →  11

### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Current output 1 to n simulation	–	Switch the simulation of the current output on and off.	On	Off
Value current output 1 to n	In the <b>Current output 1 to n simulation</b> parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	<ul style="list-style-type: none"> <li>■ 1. Default value: Select 4.0 mA.</li> <li>■ 2. Default value: Select 20.0 mA.</li> </ul> 3.59 to 22.5 mA	3.59 mA

### 6.3.7 Heartbeat Technology

Heartbeat Technology continuously diagnoses whether failures have occurred. The scope of the diagnostics in the SIL mode corresponds to the SFF.

Heartbeat Technology also allows operators to create documented proof that diagnostic checks have been carried out and thereby supports the documentation of proof testing in accordance with IEC 61511-1, Section 16.3.3, "Documentation of proof testing and inspections".

#### NOTICE

**The SIL mode needs to be disabled temporarily in order to perform heartbeat verification.**

- ▶ On completion of the verification, the SIL mode must be enabled again .



The **Heartbeat Verification** application package is available as an order option and can be retrofitted on all measuring devices.

Please contact your Endress+Hauser service or sales organization to retrofit the device.

## 7 Life cycle

### 7.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

## 7.2 Installation

### 7.2.1 Installation and electrical connection




Detailed information on:

- Installation
- Electrical connection
- Medium properties
- Environment
- Process

Operating Instructions and Technical Information →  11


### 7.2.2 Orientation



For detailed information on the orientation, see the Operating Instructions. →  11

## 7.3 Commissioning



For detailed information on commissioning, see the Operating Instructions. →  11


## 7.4 Operation



For detailed information on the operating options, see the Operating Instructions. →  11

## 7.5 Maintenance



For detailed information on maintenance, see the Operating Instructions. →  11




Alternative monitoring measures must be taken to ensure process safety during configuration, proof-testing and maintenance work on the device.

## 7.6 Repair



Repair means restoring functional integrity by replacing defective components. Components of the same type must be used for this purpose. It is recommended to document the repair. This includes specifying the device serial number, the repair date, the type of repair and the individual who performed the repair.



For detailed information on returns, see the Operating Instructions. →  11

### 7.6.1 Replacing device components

The following components may be replaced by the customer's technical staff if genuine spare parts are used and the appropriate installation instructions are followed:

- Sensor
- Transmitter without a sensor
- Display module

- Power unit
- Main electronics module
- I/O-Module
- Terminals
- Connection compartment cover
- Electronics compartment cover
- Seal sets for electronics compartment cover
- Securing clamps for electronics compartment cover
- Cable glands

Installation Instructions: see the Download Area at [www.endress.com](http://www.endress.com).

The replaced component must be sent to Endress+Hauser for the purpose of fault analysis if the device has been operated in a protective system and a device error cannot be ruled out. In this case, always enclose the "Declaration of Hazardous Material and Decontamination" with the note "Used as SIL device in protection system" when returning the defective device. Please also refer to the "Return" section in the Operating Instructions. .


## 7.7 Modification

Modifications are changes to devices with SIL capability already delivered or installed.

- ▶ Modifications to devices with SIL capability are usually performed in the Endress+Hauser manufacturing center.
- ▶ Modifications to devices with SIL capability onsite at the user's plant are possible following approval by the Endress+Hauser manufacturing center. In this case, the modifications must be performed and documented by an Endress+Hauser service technician.
- ▶ Modifications to devices with SIL capability by the user are not permitted.

## 7.8 Decommissioning




For detailed information on decommissioning, see the Operating Instructions for the device →  11


## 8 Appendix

### 8.1 Structure of the measuring system

#### 8.1.1 System components

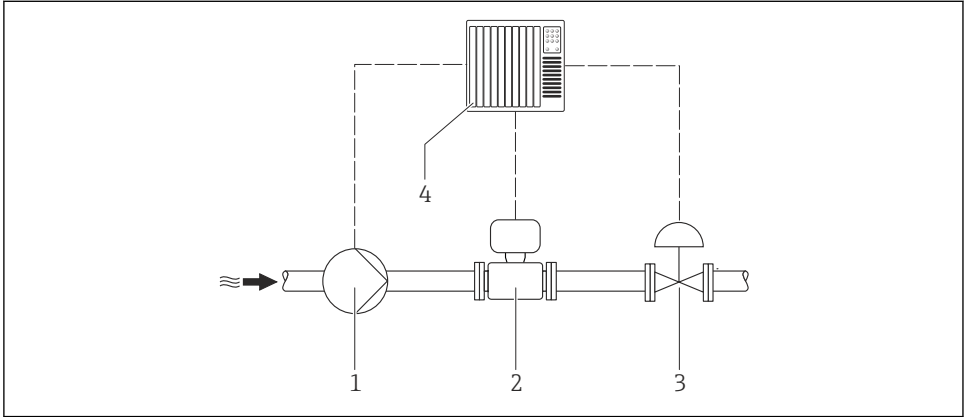

A0015443

 5 System components

- 1 Pump
- 2 Measuring device
- 3 Valve
- 4 Automation system

An analog signal (4–20 mA) proportional to the flow or density is generated in the transmitter. This is sent to a downstream automation system where it is monitored to determine whether it falls below or exceeds a specified limit value. The safety function (mass flow, volume flow or density monitoring) is implemented in this way.

8.1.2 Description of use of protective system



The measuring device can be used in protective systems to monitor the following (Min., Max. and range):


- Volume flow
- Mass flow
- Density

NOTICE


The device must be correctly mounted to guarantee safe operation.

- Observe the mounting instructions.

 For detailed information on mounting, see the Operating Instructions →  11

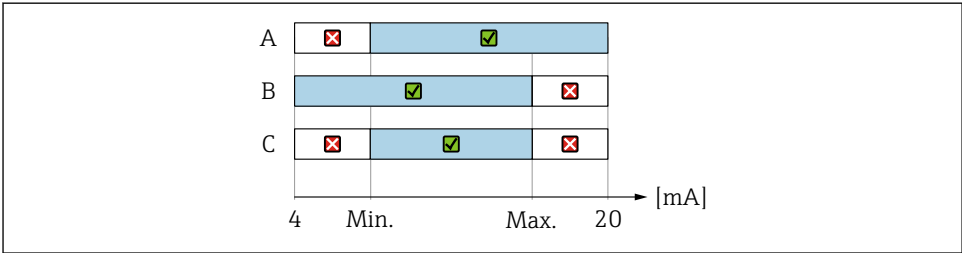


A0015277

 6 Monitoring options in protective systems

- A Min. alarm
- B Max. alarm
- C Range monitoring

 = Safety function is triggered

 = Permitted operating status

8.2 Verification or calibration

The SIL mode must be disabled in order to verify the measuring point with Heartbeat Technology or calibrate the measuring point.

NOTICE

To use the device in a safety function again following a verification or calibration, the configuration of the measuring point must be checked and the SIL mode must be enabled again.

- Activation of the SIL mode →  22.

8.3 Notes on the redundant use of multiple sensors

This section provides additional information regarding the use of homogeneously redundant sensors e.g. 1oo2 or 2oo3 architectures.

The common cause factors  $\beta$  and  $\beta_D$  indicated below are minimum values for the device. These must be used when designing the sensor subsystem:

- Minimum value  $\beta$  for homogeneously redundant use: 2 %
- Minimum value  $\beta_D$  for homogeneously redundant use: 1 %

The device meets the requirements for SIL 3 in homogeneously redundant applications.


If two sensors with an identical design (same type and same nominal diameter) are directly connected to one another flange-to-flange, mutual acoustic interference cannot be entirely ruled out. To fully rule out potential interference, it is recommended to install the sensors at different points of the pipe or to insert a spacer between the two sensors. The spacer must be at least half as long as the sensor.

#### NOTICE

**Note the following if a fault is detected in one of the redundantly operated devices during the proof test:**

- Check the other devices to see if the same fault occurs there.

## 8.4 Version history

Version	Changes	Valid as of firmware version
SD01727D/06/xx/08.20	Addition, Device Model A1/A2 & option CC (4 to 20mA HART Ex-i active)	01.05.zz (HART; from delivery date September 16, 2019)
SD01727D/06/xx/05.18	Proof test modified.	01.01.zz (HART; from delivery date October 1, 2017)
SD01727D/06/xx/04.18	Amendment concerning 8A3C (new sensor generation A)	01.01.zz (HART; from delivery date October 1, 2017)
SD01727D/06/xx/02.17	Changes: Operating Instructions for the device →  11	01.01.zz (HART; from delivery date October 1, 2017)
SD01727D/06/xx/01.16	First version	01.0.zz (HART; from delivery date August 2, 2016)

---

---

[www.addresses.endress.com](http://www.addresses.endress.com)

---